

Valkyrie2889 Test Report

Test Summary

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2023-11-28, 16:27 Test Duration: 00:46:25 (h:m:s)

Generated By: Valkyrie2889 v1.41, running on 'Microsoft Windows 10 Enterprise'

Comments: DM broadcast, up to 4 timing events, 4 layers:

- host: aconbg027

- chassis: Xenabay (140.181.139.228)

DUT:

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/16/296/297

- fw: v6.1

- dot-config: production

Test Setup

Test Configuration

Subtest Selection

Rate Test: Full Mesh
Rate Test: Part.Mesh, 1:N
Disabled
Rate Test: Part.Mesh, N->N
- Throughput
- Forwarding
Disabled
Disabled
Enabled
Enabled

Congestion Control: Disabled
Forward Pressure: Disabled
Maximum Forwarding Rate: Disabled
Address Caching Capacity: Disabled
Address Learning Rate: Disabled
Errored Frames Filtering: Disabled
Broadcast Forwarding: Disabled

Test Options

Packet Sizes Used: 90,134,178,222

Rate Type: Fraction Fraction per Port: 100,00%

Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

Traffic Configuration

Used Chassis

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:2260

Used Ports



Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



Rate Test: Part.Mesh, N->N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: West-to-East

Throughput Options

Initial Rate: 0,01%
Maximum Rate: 1,00%
Minimum Rate: 0,01%
Resolution: 0,01%

Used Ports

Port ID	Port Role
P-0-0-0	East
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results


Frame Size	90	134	178	222
Result State	PASS	FAIL	PASS	FAIL
Iter. #	1	1	1	1
Tx Rate (Percent)	0,043 %	0,01 %	0,244 %	0,01 %
Tx Rate (L1) (Bit/s)	3,43 M	799,98 K	19,52 M	799,7 K
Tx Rate (Fps)	3.897	649	12.321	413
Rx Rate (Percent)	0,04 %	0,01 %	0,24 %	0,01 %
Rx Rate (L1) (Bit/s)	3,43 M	796,94 K	19,52 M	799,31 K
Rx Rate (Fps)	3,9 K	646,87	12,32 K	412,87
Loss Rate (Percent)	0 %	0,38 %	0 %	0,05 %
Loss (Frames)	0	74	0	6
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	116.920	19.406	369.640	12.386
- Rx Rate (L1) (Bit/s)	3,43 M	796,94 K	19,52 M	799,31 K
- Rx Rate (Fps)	3.897	647	12.321	413
- Flood Count (Frames)	58	56	58	56
P-0-2-4				
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



P-0-4-0				
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	-			
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99.96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3	0	-	•	
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4	0	0	0	0
- Tx (Frames)	14.615	2.435	46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (E1) (Bit/s)	487	81	1.540	52 52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	U	U	U	0
- Tx (Frames)	14.615	2.435	46 OOF	1 510
			46.205	1.549
- Tx Rate (L1) (Bit/s)	428,71 K	100 K	2,44 M	99,96 K
- Tx Rate (Fps)	487	81	1.540	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

Note: One or more of the rate tests did not pass the test criteria!



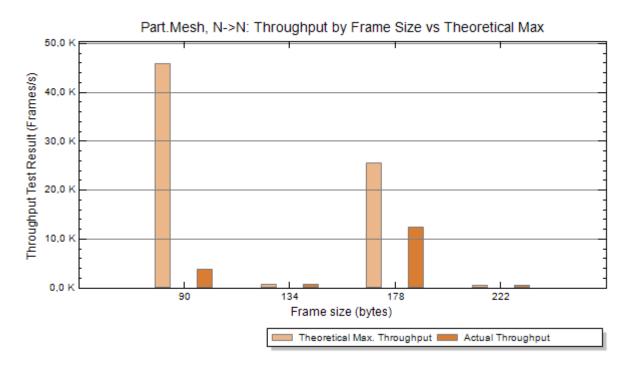

Forwarding Test Results


Results for 0,01% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0.01 %	0,01 %	0,01 %	0,01 %
Tx Rate (L1) (Bit/s)	799,98 K	799,98 K	799,6 K	799,7 K
Tx Rate (Fps)	909	649	505	413
Rx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Rx Rate (L1) (Bit/s)	797,51 K	788,48 K	799,6 K	799,7 K
Rx Rate (Fps)	906,27	640	504,8	413,07
Loss Rate (Percent)	0,31 %	1,44 %	0 %	0 %
Loss (Frames)	84	280	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	27.188	19.200	15.144	12.392
- Rx Rate (L1) (Bit/s)	797,51 K	788,48 K	799,6 K	799,7 K
- Rx Rate (Fps)	906	640	505	413
- Flood Count (Frames)	60	60	60	60
P-0-2-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	3.409	2.435	1.893	1.549



- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



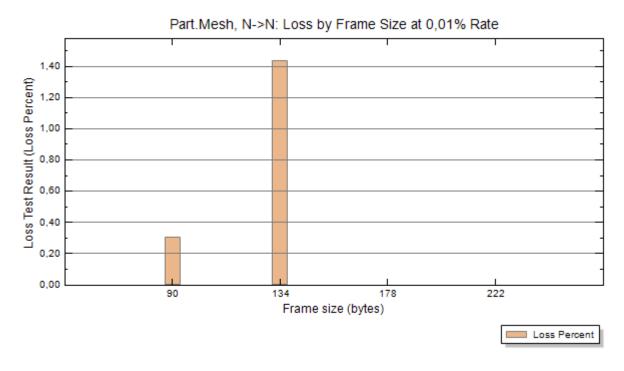


Results for 0,11% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Tx Rate (L1) (Bit/s)	8,8 M	8,8 M	8,8 M	8,8 M
Tx Rate (Fps)	10.000	7.143	5.555	4.545
Rx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Rx Rate (L1) (Bit/s)	8,8 M	8,8 M	8,8 M	8,8 M
Rx Rate (Fps)	10 K	7,14 K	5,56 K	4,55 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	300.000	214.280	166.664	136.360
- Rx Rate (L1) (Bit/s)	8,8 M	8,8 M	8,8 M	8,8 M
- Rx Rate (Fps)	10.000	7.143	5.555	4.545
- Flood Count (Frames)	58	58	58	56
P-0-2-4				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0



	7.045 1,1 M 568
- Flood Count (Frames) 0 0 0 0 P-0-4-1	7.045 1,1 M 568
P-0-4-1 - Tx (Frames) 37.500 26.785 20.833 1	7.045 1,1 M 568
- Tx (Frames) 37.500 26.785 20.833 1	1,1 M 568
	1,1 M 568
Tr. Deta (1.4) (Dit/a) 4.4.84 4.4.84	568
- Tx Rate (L1) (Bit/s) 1,1 M 1,1 M 1,1 M	
- Tx Rate (Fps) 1.250 893 694	Λ
- Rx (Frames) 0 0	U
- Rx Rate (L1) (Bit/s) 0 0	0
- Rx Rate (Fps) 0 0	0
- Flood Count (Frames) 0 0	0
P-0-4-2	
- Tx (Frames) 37.500 26.785 20.833 1	7.045
	1,1 M
- Tx Rate (Fps) 1.250 893 694	568
- Rx (Frames) 0 0	0
- Rx Rate (L1) (Bit/s) 0 0	0
- Rx Rate (Fps) 0 0	0
- Flood Count (Frames) 0 0	0
P-0-4-3	
- Tx (Frames) 37.500 26.785 20.833 1	7.045
	1,1 M
- Tx Rate (Fps) 1.250 893 694	568
- Rx (Frames) 0 0 0	0
- Rx Rate (L1) (Bit/s) 0 0	0
- Rx Rate (Fps) 0 0	0
- Flood Count (Frames) 0 0	0
P-0-4-4	
- Tx (Frames) 37.500 26.785 20.833 1	7.045
	1,1 M
- Tx Rate (Fps) 1.250 893 694	568
- Rx (Frames) 0 0 0	0
- Rx Rate (L1) (Bit/s) 0 0	0
- Rx Rate (Fps) 0 0	0
- Flood Count (Frames) 0 0	0
P-0-4-5	
- Tx (Frames) 37.500 26.785 20.833 1	7.045
- Tx Rate (L1) (Bit/s) 1,1 M 1,1 M	1,1 M
- Tx Rate (Fps) 1.250 893 694	568
- Rx (Frames) 0 0 0	0
- Rx Rate (L1) (Bit/s) 0 0	0
- Rx Rate (Fps) 0 0	0
- Flood Count (Frames) 0 0	0



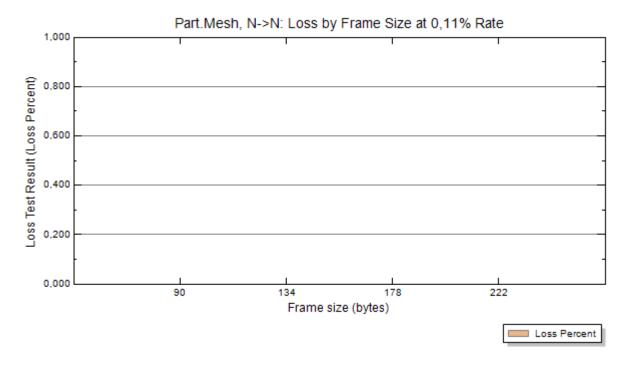


Results for 0,21% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Tx Rate (L1) (Bit/s)	16,8 M	16,8 M	16,8 M	16,8 M
Tx Rate (Fps)	19.091	13.636	10.606	8.678
Rx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Rx Rate (L1) (Bit/s)	16,8 M	16,8 M	16,8 M	16,8 M
Rx Rate (Fps)	19,09 K	13,64 K	10,61 K	8,68 K
Loss Rate (Percent)	0,01 %	0 %	0 %	0 %
Loss (Frames)	59	1	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	572.661	409.087	318.176	260.328
- Rx Rate (L1) (Bit/s)	16,8 M	16,8 M	16,8 M	16,8 M
- Rx Rate (Fps)	19.089	13.636	10.606	8.678
- Flood Count (Frames)	59	61	58	55
P-0-2-4				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



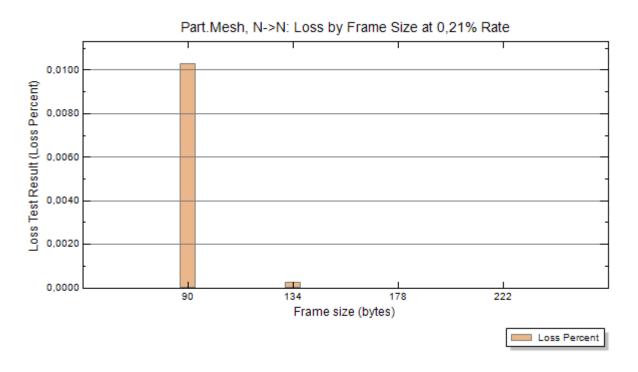


Results for 0,31% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Tx Rate (L1) (Bit/s)	24,8 M	24,8 M	24,8 M	24,8 M
Tx Rate (Fps)	28.182	20.130	15.657	12.810
Rx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Rx Rate (L1) (Bit/s)	24,68 M	24,8 M	24,8 M	24,8 M
Rx Rate (Fps)	28,05 K	20,13 K	15,66 K	12,81 K
Loss Rate (Percent)	0,48 %	0 %	0 %	0 %
Loss (Frames)	4.063	1	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	841.385	603.895	469.696	384.296
- Rx Rate (L1) (Bit/s)	24,68 M	24,8 M	24,8 M	24,8 M
- Rx Rate (Fps)	28.046	20.130	15.657	12.810
- Flood Count (Frames)	62	59	58	61
P-0-2-4				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



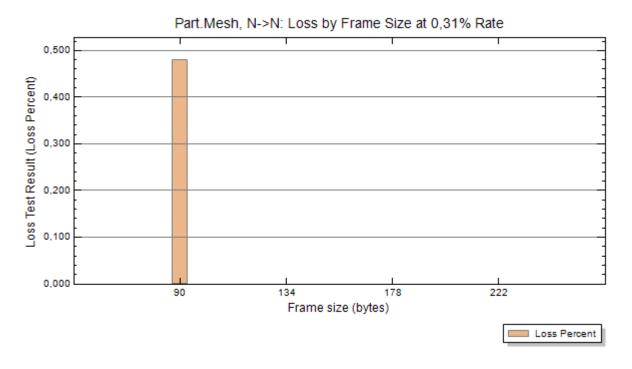


Results for 0,41% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Tx Rate (L1) (Bit/s)	32,8 M	32,8 M	32,8 M	32,8 M
Tx Rate (Fps)	37.273	26.623	20.707	16.942
Rx Rate (Percent)	0,41 %	0,41 %	0,4 %	0,41 %
Rx Rate (L1) (Bit/s)	32,8 M	32,51 M	32,27 M	32,8 M
Rx Rate (Fps)	37,27 K	26,39 K	20,37 K	16,94 K
Loss Rate (Percent)	0 %	0,87 %	1,62 %	0 %
Loss (Frames)	20	6.967	10.049	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.118.156	791.729	611.159	508.264
- Rx Rate (L1) (Bit/s)	32,8 M	32,51 M	32,27 M	32,8 M
- Rx Rate (Fps)	37.272	26.391	20.372	16.942
- Flood Count (Frames)	60	62	57	61
P-0-2-4				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



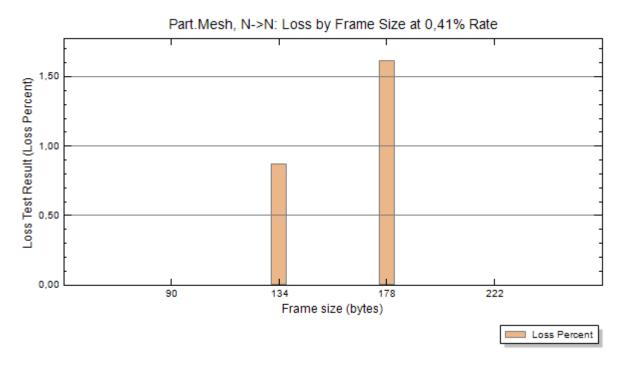


Results for 0,51% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Tx Rate (L1) (Bit/s)	40,8 M	40,8 M	40,8 M	40,8 M
Tx Rate (Fps)	46.363	33.117	25.757	21.074
Rx Rate (Percent)	0,51 %	0,5 %	0,51 %	0,51 %
Rx Rate (L1) (Bit/s)	40,49 M	40,13 M	40,8 M	40,78 M
Rx Rate (Fps)	46,01 K	32,57 K	25,76 K	21,07 K
Loss Rate (Percent)	0,77 %	1,64 %	0 %	0,04 %
Loss (Frames)	10.692	16.259	0	236
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.380.212	977.245	772.720	631.988
- Rx Rate (L1) (Bit/s)	40,49 M	40,13 M	40,8 M	40,78 M
- Rx Rate (Fps)	46.007	32.575	25.757	21.066
- Flood Count (Frames)	63	58	55	60
P-0-2-4				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



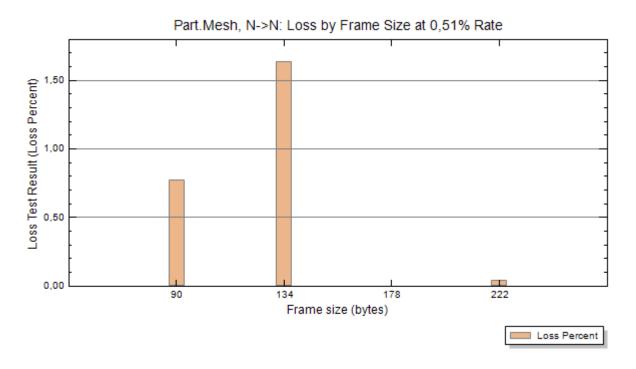


Results for 0,61% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,61 %
Tx Rate (L1) (Bit/s)	48,8 M	48,8 M	48,8 M	48,8 M
Tx Rate (Fps)	55.454	39.610	30.808	25.206
Rx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,6 %
Rx Rate (L1) (Bit/s)	48,79 M	48,8 M	48,8 M	48,23 M
Rx Rate (Fps)	55,44 K	39,61 K	30,81 K	24,91 K
Loss Rate (Percent)	0,03 %	0 %	0 %	1,17 %
Loss (Frames)	428	0	0	8.819
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.663.204	1.188.304	924.240	747.373
- Rx Rate (L1) (Bit/s)	48,79 M	48,8 M	48,8 M	48,23 M
- Rx Rate (Fps)	55.440	39.610	30.808	24.912
- Flood Count (Frames)	60	59	57	62
P-0-2-4				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (E1) (Bil/s)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
	U	U	U	U
P-0-4-1	007.054	440.500	445 500	04.504
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	-	-	-	-
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



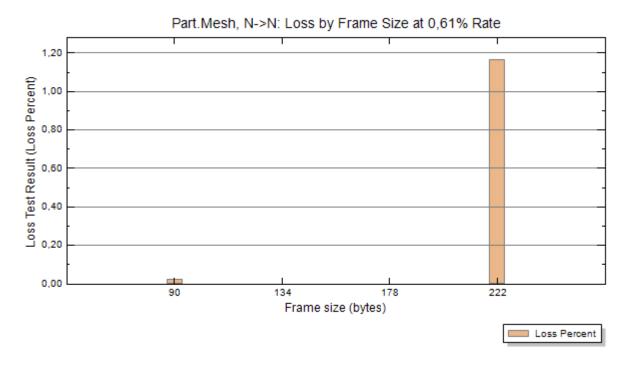


Results for 0,71% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Tx Rate (L1) (Bit/s)	56,8 M	56,8 M	56,8 M	56,8 M
Tx Rate (Fps)	64.545	46.104	35.858	29.339
Rx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,7 %
Rx Rate (L1) (Bit/s)	56,8 M	56,47 M	56,8 M	55,73 M
Rx Rate (Fps)	64,54 K	45,84 K	35,86 K	28,79 K
Loss Rate (Percent)	0 %	0,58 %	0 %	1,89 %
Loss (Frames)	27	8.033	0	16.593
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.936.333	1.375.079	1.075.752	863.567
- Rx Rate (L1) (Bit/s)	56,8 M	56,47 M	56,8 M	55,73 M
- Rx Rate (Fps)	64.544	45.836	35.858	28.786
- Flood Count (Frames)	59	57	59	58
P-0-2-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



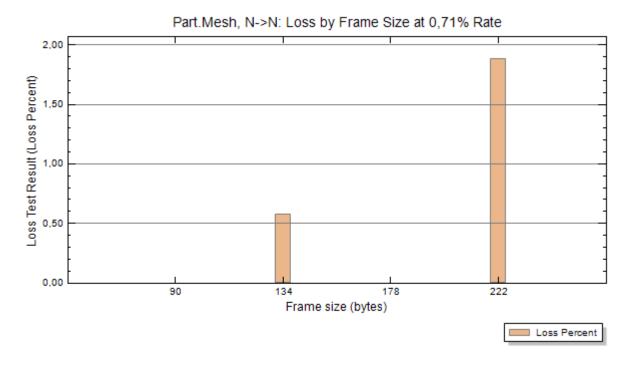


Results for 0,81% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Tx Rate (L1) (Bit/s)	64,8 M	64,8 M	64,8 M	64,8 M
Tx Rate (Fps)	73.636	52.597	40.909	33.471
Rx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,8 %
Rx Rate (L1) (Bit/s)	64,8 M	64,8 M	64,8 M	64,39 M
Rx Rate (Fps)	73,64 K	52,6 K	40,91 K	33,26 K
Loss Rate (Percent)	0 %	0 %	0 %	0,64 %
Loss (Frames)	0	0	0	6.401
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.209.088	1.577.920	1.227.272	997.727
- Rx Rate (L1) (Bit/s)	64,8 M	64,8 M	64,8 M	64,39 M
- Rx Rate (Fps)	73.636	52.597	40.909	33.258
- Flood Count (Frames)	61	58	58	58
P-0-2-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



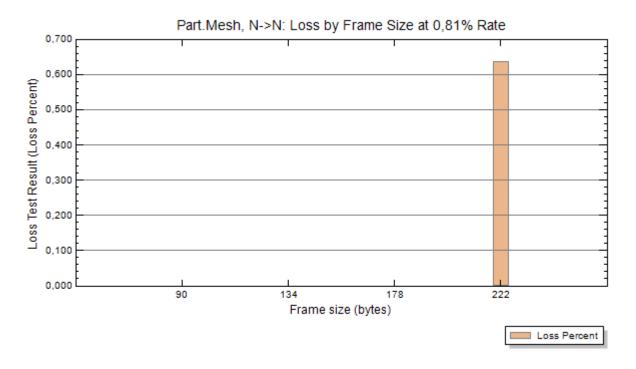


Results for 0,91% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Tx Rate (L1) (Bit/s)	72,8 M	72,8 M	72,8 M	72,8 M
Tx Rate (Fps)	82.727	59.091	45.959	37.603
Rx Rate (Percent)	0,89 %	0,91 %	0,91 %	0,91 %
Rx Rate (L1) (Bit/s)	71,13 M	72,8 M	72,49 M	72,8 M
Rx Rate (Fps)	80,83 K	59,09 K	45,76 K	37,6 K
Loss Rate (Percent)	2,3 %	0 %	0,43 %	0 %
Loss (Frames)	57.064	9	5.870	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.424.752	1.772.711	1.372.914	1.128.096
- Rx Rate (L1) (Bit/s)	71,13 M	72,8 M	72,49 M	72,8 M
- Rx Rate (Fps)	80.825	59.090	45.764	37.603
- Flood Count (Frames)	60	60	62	62
P-0-2-4				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



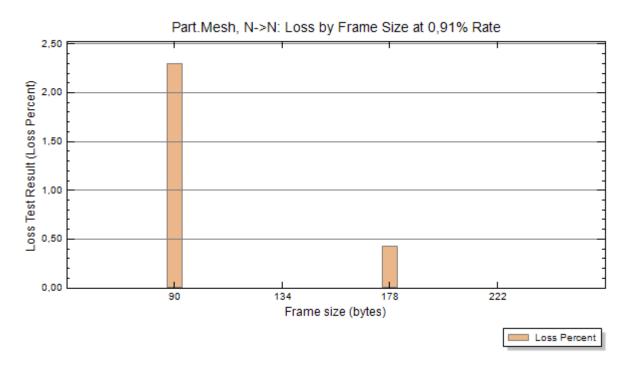

Results for 1,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	1 %	1 %	1 %	1 %
Tx Rate (L1) (Bit/s)	80 M	80 M	80 M	80 M
Tx Rate (Fps)	90.909	64.935	50.505	41.322
Rx Rate (Percent)	0,98 %	1 %	1 %	1 %
Rx Rate (L1) (Bit/s)	78,63 M	80 M	79,65 M	79,75 M
Rx Rate (Fps)	89,35 K	64,93 K	50,28 K	41,19 K
Loss Rate (Percent)	1,71 %	0 %	0,44 %	0,31 %
Loss (Frames)	46.721	0	6.603	3.865
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.680.551	1.948.048	1.508.541	1.235.799
- Rx Rate (L1) (Bit/s)	78,63 M	80 M	79,65 M	79,75 M
- Rx Rate (Fps)	89.352	64.935	50.285	41.193
- Flood Count (Frames)	60	60	60	59
P-0-2-4				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0



- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0					
- Flood Count (Frames)	- Rx Rate (L1) (Bit/s)	0	0	0	0
P-0-4-1		-		0	-
- Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10		0	0	0	0
- Tx Rate (L1) (Bit/s)	P-0-4-1				
- Tx Rate (Fps)	- Tx (Frames)	340.909	243.506	189.393	154.958
- RX (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx (Frames)	0	0	0	0
- Flood Count (Frames)	- Rx Rate (L1) (Bit/s)	0	0	0	0
- Flood Count (Frames)	- Rx Rate (Fps)	0	0	0	0
- Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10		0	0	0	0
- Tx Rate (L1) (Bit/s)	P-0-4-2				
- Tx Rate (Fps)	- Tx (Frames)	340.909	243.506	189.393	154.958
- Rx (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx (Frames)	0	0	0	0
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx Rate (L1) (Bit/s)	0	0	0	0
- Flood Count (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	` , ` ,	0	0	0	0
P-0-4-3		0	0	0	0
- Tx Rate (L1) (Bit/s)					-
- Tx Rate (L1) (Bit/s)	- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (Fps)		10 M	10 M	10 M	10 M
- Rx (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		11.364	8.117	6.313	5.165
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		0	0	0	0
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx Rate (L1) (Bit/s)	0	0	0	0
- Flood Count (Frames) 0 0 0 0 0 0 0 P-0-4-4 - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx Rate (Fps)	0	0	0	0
- Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 0 0 - Flood Count (Frames) 0 0 0 0 0 - Flood Count (Frames) 0 0 0 0 0 - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx (Frames) 10 M 10 M 10 M 10 M - Tx Rate (L1) (Bit/s) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0		0	0	0	0
- Tx Rate (L1) (Bit/s)	P-0-4-4				
- Tx Rate (L1) (Bit/s) 10 M 10	- Tx (Frames)	340.909	243.506	189.393	154.958
- Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 - Flood Count (Frames) 0 0 0 0 P-0-4-5 - - - - - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 - Flood Count (Frames) 0 0 0 0 P-0-4-5 - - - - - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 - Flood Count (Frames) 0 0 0 0 P-0-4-5 - - - - - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Rx (Frames)	0	0	0	0
- Rx Rate (Fps) 0 0 0 0 - Flood Count (Frames) 0 0 0 0 P-0-4-5 - - - - - - Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0		0	0	0	0
P-0-4-5 340.909 243.506 189.393 154.958 - Tx (Frames) 10 M 10 M 10 M 10 M - Tx Rate (L1) (Bit/s) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Rx Rate (Fps)	0	0	0	0
- Tx (Frames) 340.909 243.506 189.393 154.958 - Tx Rate (L1) (Bit/s) 10 M 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Flood Count (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s) 10 M 10 M 10 M - Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	P-0-4-5				
- Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (Fps) 11.364 8.117 6.313 5.165 - Rx (Frames) 0 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 0 - Rx Rate (Fps) 0 0 0 0	` '		10 M	10 M	10 M
- Rx (Frames) 0 0 0 - Rx Rate (L1) (Bit/s) 0 0 0 - Rx Rate (Fps) 0 0 0		11.364	8.117	6.313	5.165
- Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 - Rx Rate (Fps) 0 0 0 0 0		0			0
- Rx Rate (Fps) 0 0 0		0	0	0	0
		0	0	0	0
- Flood Count (Frames) 0 0 0	- Flood Count (Frames)	0	0	0	0



