

# Xena2889 Test Report

### **Test Summary**

Test company: Teledyne LeCroy
Customer: Xena Networks

Test Date and Time: 2025-04-08, 09:15
Test Duration: 17:09:32 (h:m:s)

Generated By: Xena2889 v1.46, running on 'Microsoft Windows 10 Enterprise LTSC 2021'

Comments: Components:

- host: aconbg027 (Windows 10 Enterprise LTSC)

- chassis: XenaBay (140.181.139.228) - configuration: github.com/GSI-CS-

CO/network\_testing/wr\_RFC\_2889/xena\_cfg/RFC\_2889\_1\_switch\_Xena.x2889

DUT:

- WRS: scb v3.4, Creotech

- name: nwt0297 - fw: v8.0

- dot-config: default

### **Test Setup**

#### **Test Configuration**

#### **Subtest Selection**

Rate Test: Full Mesh Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, 1:N Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, N->N Enabled
- Throughput Enabled
- Forwarding Enabled

Congestion Control: Enabled
Forward Pressure: Enabled
Maximum Forwarding Rate: Enabled
Address Caching Capacity: Enabled
Address Learning Rate: Enabled
Errored Frames Filtering: Enabled
Broadcast Forwarding: Enabled

#### **Test Options**

Packet Sizes Used: 64,128,256,512,1024,1280,1518

Rate Type: Fraction
Fraction per Port: 100,00%

Latency Measurement Mode: Last-To-Last
Toggle Port Sync States: Yes

#### **Traffic Configuration**



## **Used Chassis**

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:22606

### **Used Ports**

Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



### **Rate Test: Full Mesh Results**

### **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Mesh Direction: Bidirectional

#### **Throughput Options**

 Initial Rate:
 1,00%

 Maximum Rate:
 100,00%

 Minimum Rate:
 0,01%

 Resolution:
 0,01%

#### **Used Ports**

Port ID
P-0-0-0
P-0-0-1
P-0-0-2
P-0-0-3
P-0-0-4
P-0-0-5
P-0-2-0
P-0-2-1
P-0-2-2
P-0-2-3
P-0-2-4
P-0-2-5
P-0-4-0
P-0-4-1
P-0-4-2
P-0-4-3
P-0-4-4
P-0-4-5

## **Throughput Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	FAIL	PASS	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0,018 %	0,018 %	0,072 %	0,018 %	0,018 %	0,018 %
Tx Rate (L1) (Bit/s)	3,19 M	3,19 M	12,93 M	3,17 M	3,15 M	3,18 M
Tx Rate (Fps)	4.743	2.693	5.855	745	377	306
Rx Rate (Percent)	0,02 %	0,02 %	0,07 %	0,02 %	0,02 %	0,02 %
Rx Rate (L1) (Bit/s)	3,19 M	3,09 M	12,93 M	3,04 M	3,09 M	3,1 M
Rx Rate (Fps)	4,74 K	2,61 K	5,85 K	715,13	369,97	297,67
Loss Rate (Percent)	0 %	3,08 %	0 %	3,96 %	1,97 %	2,72 %
Loss (Frames)	0	2.489	0	884	223	250
P-0-0-0						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.352	9.758	1.216	623	466
- Rx Rate (L1) (Bit/s)	177,07 K	171,76 K	718,19 K	172,51 K	173,44 K	161,55 K
- Rx Rate (Fps)	264	145	325	41	21	16
- Flood Count (Frames)	28	28	25	29	31	26
P-0-0-1						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.414	9.758	1.205	623	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,21 K	718,19 K	170,95 K	173,44 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	21	17



- Flood Count (Frames)	59	60	59	60	62	58
P-0-0-2	7.005	4.400	0.750	4.044	000	F40
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.414	9.758	1.194	623	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,21 K	718,19 K	169,39 K	173,44 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	63	60	56	58	62	61
P-0-0-3						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.217	9.758	1.166	616	500
- Rx Rate (L1) (Bit/s)	177,07 K	166,43 K	718,19 K	165,42 K	171,49 K	173,33 K
- Rx Rate (Fps)	264	141	325	39	21	17
- Flood Count (Frames)	57	60	59	59	60	62
P-0-0-4	31	00	39	39	00	02
	7.005	4 400	0.750	4 044	000	F40
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.413	9.758	1.214	622	501
- Rx Rate (L1) (Bit/s)	177,07 K	174,17 K	718,19 K	172,23 K	173,16 K	173,68 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	59	60	59	58	59	59
P-0-0-5						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	170,010
` ` '	7.905	3.530	9.758	947	620	501
- Rx (Frames)						
- Rx Rate (L1) (Bit/s)	177,07 K	139,32 K	718,19 K	134,35 K	172,61 K	173,68 K
- Rx Rate (Fps)	264	118	325	32	21	17
- Flood Count (Frames)	59	58	59	56	57	61
P-0-2-0						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.412	9.758	1.213	621	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,13 K	718,19 K	172,08 K	172,89 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	61	61	60	60	58	60
P-0-2-1	01	01				- 00
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.412	9.758	1.213	621	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,13 K	718,19 K	172,08 K	172,89 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	60	58	61	58	59	62
P-0-2-2						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.412	9.758	1.213	588	459
	177,07 K	174,13 K	718,19 K	172,08 K		159,12 K
- Rx Rate (L1) (Bit/s)					163,7 K	
- Rx Rate (Fps)	264	147	325	40	20	15
- Flood Count (Frames)	58	62	59	57	61	61
P-0-2-3						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.412	9.758	1.213	621	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,13 K	718,19 K	172,08 K	172,89 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	57	61	61	58	63	61
P-0-2-4	<u> </u>					31
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
		4 449	0.750	1.166	622	473
- Rx (Frames) - Rx Rate (L1) (Bit/s)	7.905 177,07 K	4.412 174,13 K	9.758 718,19 K	165,42 K	173,16 K	163,97 K



- Rx Rate (Fps)	264	147	325	39	21	16
- Flood Count (Frames)	61	58	59	58	61	60
P-0-2-5						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.412	9.758	1.209	562	502
- Rx Rate (L1) (Bit/s)	177,07 K	174,13 K	718,19 K	171,52 K	156,46 K	174,03 K
- Rx Rate (Fps)	264	147	325	40	19	174,0010
- Flood Count (Frames)	59	60	62	60	58	61
P-0-4-0	33	00	02	00	30	01
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (ET) (Bit/s)	264	150	325	41	21	170,6 K
( 1 )	7.905	4.413	9.758	1.212	622	503
- Rx (Frames)						
- Rx Rate (L1) (Bit/s)	177,07 K	174,17 K	718,19 K	171,94 K	173,16 K	174,37 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	59	57	59	57	59	59
P-0-4-1						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.413	9.758	1.212	623	503
- Rx Rate (L1) (Bit/s)	177,07 K	174,17 K	718,19 K	171,94 K	173,44 K	174,37 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	59	59	56	60	60	55
P-0-4-2						
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.413	9.758	1.214	623	503
- Rx Rate (L1) (Bit/s)	177,07 K	174,17 K	718,19 K	172,23 K	173,44 K	174,37 K
- Rx Rate (Fps)	264	147	325	40	21	17
- Flood Count (Frames)	58	57	61	58	59	58
P-0-4-3		4.				
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.414	9.758	1.215	623	503
- Rx Rate (L1) (Bit/s)	177,07 K	174,21 K	718,19 K	172,37 K	173,44 K	174,37 K
- Rx Rate (Fps)	264	147	325	41	21	174,0710
- Flood Count (Frames)	61	60	57	59	63	58
P-0-4-4	01	00	31		00	- 30
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (E1) (Blus)						
	264	150	325	41	21	17
- Rx (Frames)	7.905	4.415	9.758	1.216	623	503
- Rx Rate (L1) (Bit/s)	177,07 K	174,25 K	718,19 K	172,51 K	173,44 K	174,37 K
- Rx Rate (Fps)	264	147	325	41	21	17
- Flood Count (Frames)	59	60	57	58	60	60
P-0-4-5		4 400				
- Tx (Frames)	7.905	4.488	9.758	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	718,19 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	325	41	21	17
- Rx (Frames)	7.905	4.415	9.758	1.216	623	503
- Rx Rate (L1) (Bit/s)	177,07 K	174,25 K	718,19 K	172,51 K	173,44 K	174,37 K
- Rx Rate (Fps)	264	147	325	41	21	17
- Flood Count (Frames)	57	59	58	59	58	55

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0,018 %
Tx Rate (L1) (Bit/s)	3,14 M
Tx Rate (Fps)	255
Rx Rate (Percent)	0,02 %
Rx Rate (L1) (Bit/s)	3,04 M
Rx Rate (Fps)	247,23
Loss Rate (Percent)	3,05 %
Loss (Frames)	233



P-0-0-0 - Tx (Frames)	125
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174,31 K
- Tx Rate (Fps)	14
- Rx (Frames)	419
- Rx Rate (L1) (Bit/s)	171,85 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	29
P-0-0-1	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174,31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172,26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-0-2	125
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174,31 K
- Tx Rate (Fps)	14,511
- Rx (Frames)	390
- Rx Rate (L1) (Bit/s)	159,95 K
- Rx Rate (Fps)	13
- Flood Count (Frames)	57
P-0-0-3	405
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	174,31 K
- Rx (Frames)	364
- Rx Rate (L1) (Bit/s)	149,29 K
- Rx Rate (Fps)	12
- Flood Count (Frames)	56
P-0-0-4	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174,31 K
- Tx Rate (Fps) - Rx (Frames)	14 418
- Rx Rate (L1) (Bit/s)	171,44 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	60
P-0-0-5	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174,31 K
- Tx Rate (Fps)	14
- Rx (Frames) - Rx Rate (L1) (Bit/s)	412 168,97 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-2-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174,31 K
- Tx Rate (Fps)	14
- Rx (Frames)	402
- Rx Rate (L1) (Bit/s)	164,87 K
- Rx Rate (Fps) - Flood Count (Frames)	57
P-0-2-1	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174,31 K
- Tx Rate (Fps)	14
- Rx (Frames)	416
- Rx Rate (L1) (Bit/s)	170,62 K
- Rx Rate (Fps) - Flood Count (Frames)	14
P-0-2-2	60
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174,31 K
- Tx Rate (Fps)	14
- Rx (Frames)	416
- Rx Rate (L1) (Bit/s)	170,62 K
- Rx Rate (Fps)	14




P-0-2-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 416 - Rx Rate (L1) (Bit/s) 170,62 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - 0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 147 - Rx Rate (Fps) 14 - Rx (Frames) 140 - Rx (Frames) 141 - Rx (Frames) 141 - Rx (Frames) 142 - Rx (Frames) 141 - Rx (Frames) 142 - Rx (Frames) 141 - Rx (Frames) 141 - Rx (Frames) 142 - Rx (Frames) 141 - Rx (Frames	- Flood Count (Frames)	60
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 416 - Rx Rate (L1) (Bit/s) 170,62 K - Rx Rate (L1) (Bit/s) 170,62 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 174,31 K - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s		
- Tx Rate (Fps)	- Tx (Frames)	425
- Rx (Frames) 416 - Rx Rate (L1) (Bit/s) 170,62 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 170,62 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fp		
- Rx Rate (Fps) 14     - Flood Count (Frames) 58     P-0-2-4     - Tx (Frames) 425     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (Fps) 14     - Rx (Frames) 417     - Rx Rate (Fps) 14     - Rx Rate (Fps) 14     - Flood Count (Frames) 58     P-0-2-5     - Tx (Frames) 425     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (L1) (Bit/s) 171,03 K     - Rx Rate (Fps) 14     - Rx Rate (Fps) 14     - Flood Count (Frames) 57     P-0-4-0 - Tx (Frames) 425     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (Fps) 14     - Rx (Frames) 425     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (Fps) 14     - Rx (Frames) 417     - Rx Rate (L1) (Bit/s) 171,03 K     - Rx Rate (Fps) 14     - Rx (Frames) 417     - Rx Rate (Fps) 14     - Flood Count (Frames) 55     P-0-4-1 - Tx (Frames) 425     - Tx Rate (Fps) 14     - Rx (Frames) 425     - Tx Rate (L1) (Bit/s) 174,31 K     - Tx Rate (Fps) 14     - Rx (Frames) 425     - Tx Rate (Fps) 14     - Rx (Frames) 417     - Rx Rate (Fps) 14     - Rx (Frames) 425     - Tx Rate (Fps) 14     - Rx (Fr		
- Flood Count (Frames) 58 P-0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-4 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (Fps) 14 -		
P-0-2-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/	- Flood Count (Frames)	
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 55 - Tx Rate (Fps) 14 - Flood Count (Frames) 55 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Fram		30
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K		425
- Tx Rate (Fps)		
- Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (E1) (Bit/s) 171,03 K - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 14 - Flood Count		
- Rx Rate (Fps)		
- Flood Count (Frames) 58 P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,3	- Rx Rate (L1) (Bit/s)	
P-0-2-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,35 K - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps)		
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 171,03 K - Rx Rate (Fps) 14 - Rx (Frames) 171,03 K - Rx Rate (Fps) 174,31 K - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 14 - Fl		58
- Tx Rate (L1) (Bit/s)		405
- Tx Rate (Fps)		
- Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - D-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 147 - Rx Rate (Fps) 14 - Rx (Frames) 147 - Rx Rate (Fps) 14 - Rx (Frames) 155 - Tx Rate (Fps) 14 - Flood Count (Frames) 55 - Tx Rate (Fps) 14 - Flood Count (Frames) 155 - Tx Rate (Fps) 14 - Rx (Frames) 155 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 158 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx Ra		
- Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 155 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,03 K - Tx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Rx Rate (Fps)		
- Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149		
P-0-4-0 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 55 - Tx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - O-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149		
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - O-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 14 - Flood Count (Frame		<u> </u>
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Eps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - O-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149 - Rx Rate (Fps) 14 - Flood Count (Frames) 149		425
- Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (Fps) 14 - Rx (Frames) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 14 - Flood		174,31 K
- Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx Rate (Fps) 14 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425	- Tx Rate (Fps)	
- Rx Rate (Fps)	- Rx (Frames)	
- Flood Count (Frames) 55 P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (Fps) 14 - Flood Count (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 149		
P-0-4-1 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14		
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 14 - Flood Count (Frames) 58 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx (Frames) 425		55
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - O-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 - O-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - O-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		405
- Tx Rate (Fps) 14 - Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425	, ,	
- Rx (Frames) 417 - Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Rx Rate (L1) (Bit/s) 171,03 K - Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Rx Rate (Fps) 14 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 40 - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Flood Count (Frames) 55  P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 40 - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
P-0-4-2 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 40 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 - P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 - P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 149		
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 149		
- Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 149	- Tx (Frames)	425
- Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 149		174,31 K
- Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 14 - Flood Count (Frames) 14 - Flood Count (Frames) 14 - Flood Count (Frames) 158 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 171,85 K - Tx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx Rate (Fps) 14 - Rx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425		
P-0-4-3 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425		58
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		125
- Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425	- Tx Rate (I 1) (Rit/e)	
- Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425	- Tx Rate (Fps)	
- Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Rx Rate (Fps) 14 - Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Tx Rate (Fps) 14 - Rx (Frames) 425		
- Flood Count (Frames) 60 P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Rx Rate (Fps) 14 - Rx (Frames) 419		
P-0-4-4 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 425 - Rx Rate (Fps) 14 - Rx (Frames) 425		
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Tx Rate (Fps) 14 - Rx (Frames) 419 - Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 171,85 K - Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Rx Rate (Fps) 14 - Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Flood Count (Frames) 58 P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
P-0-4-5 - Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		
- Tx (Frames) 425 - Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		58
- Tx Rate (L1) (Bit/s) 174,31 K - Tx Rate (Fps) 14 - Rx (Frames) 419		125
- Tx Rate (Fps) 14 - Rx (Frames) 419		
- Rx (Frames) 419		
, ,		



- Rx Rate (Fps)	14
- Flood Count (Frames)	57

Note: One or more of the rate tests did not pass the test criteria!

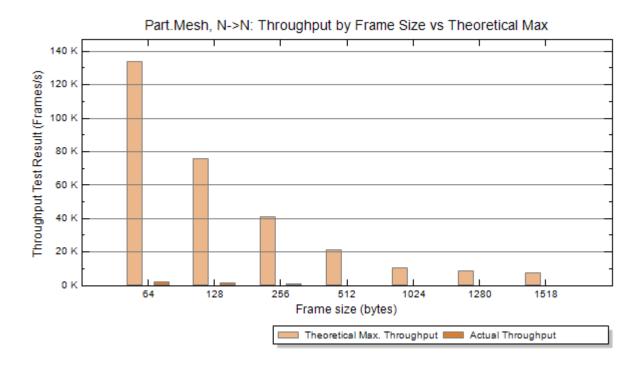

## **Forwarding Test Results**

### Results for 10,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G
Tx Rate (Fps)	2.678.571	1.520.269	815.215	422.923	215.516	173.074
Rx Rate (Percent)	7,6 %	7,77 %	7,82 %	8,02 %	8,03 %	7,91 %
Rx Rate (L1) (Bit/s)	1,37 G	1,4 G	1,41 G	1,44 G	1,44 G	1,42 G
Rx Rate (Fps)	2,04 M	1,18 M	637,56 K	339,39 K	172,98 K	136,89 K
Loss Rate (Percent)	24 %	22,26 %	21,79 %	19,75 %	19,74 %	20,91 %
Loss (Frames)	19.284.957	10.154.248	5.329.547	2.505.998	1.276.070	1.085.532
P-0-0-0						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.983	1.767.648	1.078.447	566.256	292.971	227.931
- Rx Rate (L1) (Bit/s)	77,08 M	69,76 M	79,37 M	80,33 M	81,56 M	79,02 M
- Rx Rate (Fps)	114.699	58.922	35.948	18.875	9.766	7.598
- Flood Count (Frames)	27	25	25	26	21	22
P-0-0-1						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.257	1.996.349	1.098.961	554.494	294.072	227.808
- Rx Rate (L1) (Bit/s)	77,06 M	78,79 M	80,88 M	78,66 M	81,87 M	78,97 M
- Rx Rate (Fps)	114.675	66.545	36.632	18.483	9.802	7.594
- Flood Count (Frames)	60	58	59	66	59	59
P-0-0-2						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.935	2.007.114	1.069.452	565.025	289.590	227.308
- Rx Rate (L1) (Bit/s)	77,08 M	79,21 M	78,71 M	80,16 M	80,62 M	78,8 M
- Rx Rate (Fps)	114.698	66.904	35.648	18.834	9.653	7.577
- Flood Count (Frames) P-0-0-3	58	63	60	57	56	73
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	1.336.691 100 M	100 M	100 M	200.430 100 M
- Tx Rate (Er) (Blus)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.441.050	2.040.657	1.065.953	566.237	292.573	227.260
- Rx Rate (L1) (Bit/s)	77,08 M	80,54 M	78,45 M	80,33 M	81,45 M	78,78 M
- Rx Rate (Fps)	114.702	68.022	35.532	18.875	9.752	7.575
- Flood Count (Frames)	61	63	56	60	55	58
P-0-0-4	0.					
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.441.410	2.003.171	959.245	550.650	294.823	228.734
- Rx Rate (L1) (Bit/s)	77,09 M	79,06 M	70,6 M	78,12 M	82,08 M	79,29 M
- Rx Rate (Fps)	114.714	66.772	31.975	18.355	9.827	7.624
- Flood Count (Frames)	57	58	56	58	56	56
P-0-0-5						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.383.658	1.979.271	1.060.323	564.938	295.230	229.734
- Rx Rate (L1) (Bit/s)	75,79 M	78,12 M	78,04 M	80,15 M	82,19 M	79,64 M
- Rx Rate (Fps)	112.789	65.976	35.344	18.831	9.841	7.658
- Flood Count (Frames)	59	58	69	72	60	56
P-0-2-0						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.802	1.996.989	1.064.503	553.909	254.571	229.293
- Rx Rate (L1) (Bit/s)	77,07 M	78,81 M	78,35 M	78,58 M	70,87 M	79,49 M
- Rx Rate (Fps)	114.693	66.566	35.483	18.464	8.486	7.643
- Flood Count (Frames)	62	61	58	60	57	59
P-0-2-1						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.078	1.904.555	1.067.680	558.266	293.314	228.866
- Rx Rate (L1) (Bit/s)	77,06 M	75,17 M	78,58 M	79,2 M	81,66 M	79,34 M
- Rx Rate (Fps)	114.669	63.485	35.589	18.609	9.777	7.629
- Flood Count (Frames) P-0-2-2	59	66	59	64	62	58
	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M	100 M	1.336.691 100 M	100 M	100 M	200.430 100 M
- Tx Rate (ET) (Bl/s)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.224.205	1.817.499	1.068.870	560.987	291.070	227.942
- Rx Rate (L1) (Bit/s)	72,22 M	71,73 M	78,67 M	79,59 M	81,03 M	79,02 M
- Rx Rate (Fps)	107.474	60.583	35.629	18.700	9.702	7.598
- Flood Count (Frames)	57	59	59	58	70	58
P-0-2-3	- 01					
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.439.379	1.985.596	1.008.088	564.414	269.481	226.945
- Rx Rate (L1) (Bit/s)	77,04 M	78,36 M	74,2 M	80,07 M	75,02 M	78,67 M
- Rx Rate (Fps)	114.646	66.187	33.603	18.814	8.983	7.565
- Flood Count (Frames)	60	58	73	59	70	58
P-0-2-4						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	2.860.625	1.995.030	1.058.978	573.743	293.517	227.103
- Rx Rate (L1) (Bit/s)	64,08 M	78,74 M	77,94 M	81,4 M	81,72 M	78,73 M
- Rx Rate (Fps)	95.354	66.501	35.299	19.125	9.784	7.570
- Flood Count (Frames)	61	61	60	59	60	65
P-0-2-5						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.439.472	1.976.389	1.084.904	570.953	288.508	226.771
- Rx Rate (L1) (Bit/s)	77,04 M	78 M	79,85 M	81 M	80,32 M	78,61 M
- Rx Rate (Fps)	114.649	65.880	36.163	19.032	9.617	7.559
- Flood Count (Frames)	61	73	60	58	73	59
P-0-4-0						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.438.497	1.985.510	1.074.294	571.550	288.795	228.167
- Rx Rate (L1) (Bit/s)	77,02 M	78,36 M	79,07 M	81,08 M	80,4 M	79.1 M
- Rx Rate (Fps)	114.617	66.184	35.810	19.052	9.627	7.606
- Flood Count (Frames)	56	58	54	58	56	58
P-0-4-1						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.428	2.011.883	1.076.774	566.522	292.106	229.744
- Rx Rate (L1) (Bit/s)	77,07 M	79,4 M	79,25 M	80,37 M	81.32 M	79.64 M
- Rx Rate (Fps)	114.681	67.063	35.892	18.884	9.737	7.658
- Flood Count (Frames)	58	54	54	58	62	56
P-0-4-2	30	J-1	J-T	30	02	30
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	1.00 M	100 M	100 M	100 M
- Tx Rate (E1) (Bit/s)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.439.352	1.998.192	1.080.961	579.039	289.365	228.504
- Rx Rate (L1) (Bit/s)	77,04 M	78,86 M	79,56 M	82,15 M	80,56 M	79,21 M
- Rx Rate (ET) (Blus)	114.645	66.606	36.032	19.301	9.646	7.617
- Flood Count (Frames)	59	57	57	59	58	56
P-0-4-3	39	31	31	39	30	30
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (ET) (blus)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.439.931	2.001.504	1.073.910	581.259	288.103	226.614
- Rx (Flames)	77,05 M	78,99 M	79,04 M	82,46 M	80,21 M	78,56 M
	114.664	66.717	35.797	19.375	9.603	7.554
- Rx Rate (Fps) - Flood Count (Frames)	57	62	55.797	19.373	58	7.554
P-0-4-4	37	02	34	37	36	00
-	4 404 005	0.500.700	4 250 604	704.074	250 402	200 450
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.690	1.984.093	1.073.984	564.811	290.550	228.881
- Rx Rate (L1) (Bit/s)	77,07 M	78,31 M	79,05 M	80,13 M	80,89 M	79,35 M
- Rx Rate (Fps)	114.690	66.136	35.799	18.827	9.685	7.629
- Flood Count (Frames)	58	59	52	58	59	58
P-0-4-5	4 40 4 00 =	0.500.500	4.050.004	704.074	050 100	000 15-
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	3.440.421	2.002.378	1.061.564	568.627	290.765	229.071
- Rx Rate (L1) (Bit/s)	77,07 M	79,03 M	78,13 M	80,67 M	80,95 M	79,41 M
- Rx Rate (Fps)	114.681	66.746	35.385	18.954	9.692	7.636
- Flood Count (Frames)	58	58	56	57	58	59

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1,8 G
Tx Rate (Fps)	146.288
Rx Rate (Percent)	7,62 %
Rx Rate (L1) (Bit/s)	1,37 G
Rx Rate (Fps)	111,44 K
Loss Rate (Percent)	23,82 %
Loss (Frames)	1.045.496
P-0-0-0	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127




- Rx (Frames)	187.925
- Rx Rate (L1) (Bit/s)	77,07 M 6.264
- Rx Rate (Fps) - Flood Count (Frames)	32
P-0-0-1	02
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	186.950
- Rx Rate (L1) (Bit/s)	76,67 M
- Rx Rate (Fps)	6.232
- Flood Count (Frames) P-0-0-2	57
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	186.421
- Rx Rate (L1) (Bit/s)	76,46 M
- Rx Rate (Fps)	6.214
- Flood Count (Frames)	60
P-0-0-3	040.044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.814 100 M
- Tx Rate (LT) (Bit/s)	8.127
- Rx (Frames)	175.523
- Rx Rate (L1) (Bit/s)	71,99 M
- Rx Rate (Fps)	5.851
- Flood Count (Frames)	60
P-0-0-4	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames) - Rx Rate (L1) (Bit/s)	187.163 76,76 M
- Rx Rate (Fps)	6.239
- Flood Count (Frames)	61
P-0-0-5	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	189.149 77,58 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6.305
- Flood Count (Frames)	55
P-0-2-0	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	186.431
- Rx Rate (L1) (Bit/s)	76,46 M
- Rx Rate (Fps) - Flood Count (Frames)	6.214
P-0-2-1	39
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	191.557
- Rx Rate (L1) (Bit/s)	78,56 M
- Rx Rate (Fps)	6.385
- Flood Count (Frames) P-0-2-2	63
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	189.748
- Rx Rate (L1) (Bit/s)	77,82 M
- Rx Rate (Fps)	6.325
- Flood Count (Frames)	60
P-0-2-3	040 044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.814 100 M
	I UU IVI



Tu Data (Fra)	0.407
- Tx Rate (Fps)	8.127
- Rx (Frames)	166.271
- Rx Rate (L1) (Bit/s)	68,19 M
- Rx Rate (Fps)	5.542
- Flood Count (Frames)	61
P-0-2-4	242 044
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	188.696
- Rx Rate (L1) (Bit/s)	77,39 M
- Rx Rate (Fps)	6.290
- Flood Count (Frames) P-0-2-5	58
- Tx (Frames)	242 044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.814 100 M
	8.127
- Tx Rate (Fps)	168.451
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	69,09 M
- Rx Rate (Fps)	5.615
- Flood Count (Frames) P-0-4-0	73
- Tx (Frames)	2/12 01/
	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames) - Rx Rate (L1) (Bit/s)	188.928
	77,49 M
- Rx Rate (Fps)	6.298
- Flood Count (Frames) P-0-4-1	59
	242 044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.814
	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	191.470
- Rx Rate (L1) (Bit/s)	78,53 M 6.382
- Rx Rate (Fps) - Flood Count (Frames)	57
P-0-4-2	31
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	190.259
- Rx Rate (L1) (Bit/s)	78,03 M
- Rx Rate (Fps)	6.342
- Flood Count (Frames)	55
P-0-4-3	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	188.390
- Rx Rate (L1) (Bit/s)	77,27 M
- Rx Rate (Fps)	6.280
- Flood Count (Frames)	60
P-0-4-4	- 30
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (E1) (Bit/s)	8.127
- Rx (Frames)	189.590
- Rx Rate (L1) (Bit/s)	77,76 M
- Rx Rate (Fps)	6.320
- Flood Count (Frames)	58
P-0-4-5	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	190.234
- Rx Rate (L1) (Bit/s)	78,02 M
- Rx Rate (Fps)	6.341
- Flood Count (Frames)	57
(	



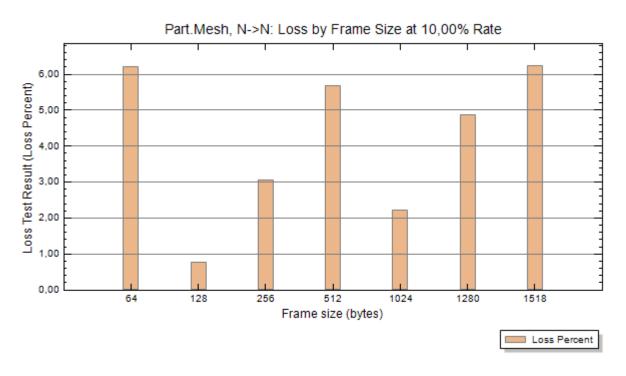

#### Results for 20,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G
Tx Rate (Fps)	5.357.142	3.040.538	1.630.429	845.855	431.032	346.147
Rx Rate (Percent)	0,03 %	12,11 %	12,02 %	12,15 %	12,17 %	12,06 %
Rx Rate (L1) (Bit/s)	4,56 M	2,18 G	2,16 G	2,19 G	2,19 G	2,17 G
Rx Rate (Fps)	6,79 K	1,84 M	979,62 K	513,76 K	262,26 K	208,72 K
Loss Rate (Percent)	99,87 %	39,47 %	39,92 %	39,26 %	39,15 %	39,7 %
Loss (Frames)	160.510.498	36.001.491	19.524.345	9.962.999	5.063.020	4.122.913
P-0-0-0						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	7.994	3.098.423	1.653.080	857.358	436.069	348.737
- Rx Rate (L1) (Bit/s)	179,07 K	122,28 M	121,67 M	121,63 M	121,4 M	120,9 M
- Rx Rate (Fps)	266	103.281	55.103	28.579	14.536	11.625
- Flood Count (Frames)	33	28	26	21	22	24
P-0-0-1						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.949	3.099.259	1.645.391	857.122	437.506	350.591
- Rx Rate (L1) (Bit/s)	267,66 K	122,32 M	121,1 M	121,6 M	121,8 M	121,54 M
- Rx Rate (Fps)	398	103.309	54.846	28.571	14.584	11.686
- Flood Count (Frames)	59	60	55	58	57	56
P-0-0-2						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.845	3.088.901	1.593.840	857.859	437.711	349.009
- Rx Rate (L1) (Bit/s)	265,33 K	121,91 M	117,31 M	121,7 M	121,86 M	120,99 M
- Rx Rate (Fps)	395	102.963	53.128	28.595	14.590	11.634
- Flood Count (Frames)	59	59	56	56	57	57
P-0-0-3						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.994	3.074.886	1.649.778	858.950	436.845	350.964



- Rx Rate (L1) (Bit/s)	268,67 K	121,36 M	121,42 M	121,86 M	121,62 M	121,67 M
- Rx Rate (Fps)	400	102.496	54.993	28.632	14.562	11.699
- Flood Count (Frames)	59	56	57	56	56	56
P-0-0-4			0 = 1 = 000		-10.000	
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	12.002	3.090.789	1.506.014	856.207	435.646	348.126
- Rx Rate (L1) (Bit/s)	268,84 K	121,98 M	110,84 M	121,47 M	121,28 M	120,68 M
- Rx Rate (Fps)	400	103.026	50.200	28.540	14.522	11.604
- Flood Count (Frames)	61	57	55	55	55	59
P-0-0-5						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	12.024	2.974.569	1.654.992	855.059	436.746	351.328
- Rx Rate (L1) (Bit/s)	269,34 K	117,4 M	121,81 M	121,3 M	121,59 M	121,79 M
- Rx Rate (Fps)	401	99.152	55.166	28.502	14.558	11.711
- Flood Count (Frames)	60	58	55	57	57	57
P-0-2-0						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	12.054	3.093.719	1.648.519	841.002	437.578	348.805
- Rx Rate (L1) (Bit/s)	270,01 K	122,1 M	121,33 M	119,31 M	121,82 M	120,92 M
- Rx Rate (Fps)	402	103.124	54.951	28.033	14.586	11.627
- Flood Count (Frames)	57	57	56	58	55	55
P-0-2-1						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.972	3.088.819	1.648.880	854.732	436.734	349.997
- Rx Rate (L1) (Bit/s)	268,17 K	121,91 M	121,36 M	121,26 M	121,59 M	121,33 N
- Rx Rate (Fps)	399	102.961	54.963	28.491	14.558	11.667
- Flood Count (Frames)	60	61	57	57	61	54
P-0-2-2						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.893	2.995.424	1.474.640	855.018	436.643	345.499
- Rx Rate (L1) (Bit/s)	266,4 K	118,22 M	108,53 M	121,3 M	121,56 M	119,77 M
- Rx Rate (Fps)	396	99.847	49.155	28.501	14.555	11.517
- Flood Count (Frames)	60	60	54	59	59	61
P-0-2-3						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.894	3.095.621	1.652.071	855.941	437.475	350.477
- Rx Rate (L1) (Bit/s)	266,43 K	122,17 M	121,59 M	121,43 M	121,79 M	121,5 M
- Rx Rate (Fps)	396	103.187	55.069	28.531	14.583	11.683
- Flood Count (Frames)	59	55	58	57	60	58
P-0-2-4						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.815	3.095.366	1.661.943	856.677	438.009	350.290
- Rx Rate (L1) (Bit/s)	264,66 K	122,16 M	122,32 M	121,53 M	121,94 M	121,43 N
- Rx Rate (Fps)	394	103.179	55.398	28.556	14.600	11.676
- Flood Count (Frames)	61	58	57	55	53	57
P-0-2-5						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	7.398	2.813.623	1.648.707	855.713	436.960	317.937
- Rx Rate (L1) (Bit/s)	165,72 K	111,04 M	121,34 M	121,4 M	121,65 M	110,22 N
- Rx Rate (Fps)	247	93.787	54.957	28.524	14.565	10.598
- Flood Count (Frames)	60	59	58	56	56	10.590
P-0-4-0	00	33	30	30	30	J4
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M	200 M	2.717.382 200 M	1.409.759 200 M	200 M	200 M
- Tx Rate (LT) (BIVS)						
- LX Date (EDS)	297.619	168.919	90.579	46.992	23.946	19.230



- Rx (Frames)	11.693	3.102.180	1.652.285	858.116	437.755	349.594
- Rx Rate (L1) (Bit/s)	261,92 K	122,43 M	121,61 M	121,74 M	121,87 M	121,19 M
- Rx Rate (Fps)	390	103.406	55.076	28.604	14.592	11.653
- Flood Count (Frames)	59	56	55	57	57	56
P-0-4-1						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.618	3.088.260	1.657.408	857.911	436.499	350.355
- Rx Rate (L1) (Bit/s)	260,24 K	121,88 M	121,99 M	121,71 M	121,52 M	121,46 M
- Rx Rate (Fps)	387	102.942	55.247	28.597	14.550	11.679
- Flood Count (Frames)	55	58	55	56	58	55
P-0-4-2						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.451	3.099.737	1.656.735	859.451	436.993	349.975
- Rx Rate (L1) (Bit/s)	256,5 K	122,34 M	121,94 M	121,93 M	121,66 M	121,32 M
- Rx Rate (Fps)	382	103.325	55.225	28.648	14.566	11.666
- Flood Count (Frames)	59	57	59	55	55	51
P-0-4-3						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.414	3.102.409	1.656.873	857.797	436.932	351.073
- Rx Rate (L1) (Bit/s)	255,67 K	122,44 M	121,95 M	121,69 M	121,64 M	121,71 M
- Rx Rate (Fps)	380	103.414	55.229	28.593	14.564	11.702
- Flood Count (Frames)	59	55	56	59	58	55
P-0-4-4						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.359	3.106.577	1.664.547	858.558	438.145	348.339
- Rx Rate (L1) (Bit/s)	254,44 K	122,61 M	122,51 M	121,8 M	121,98 M	120,76 M
- Rx Rate (Fps)	379	103.553	55.485	28.619	14.605	11.611
- Flood Count (Frames)	63	57	55	58	55	55
P-0-4-5						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	11.393	3.106.099	1.662.828	859.192	437.682	350.407
- Rx Rate (L1) (Bit/s)	255,2 K	122,59 M	122,38 M	121,89 M	121,85 M	121,47 M
- Rx Rate (Fps)	380	103.537	55.428	28.640	14.589	11.680
- Flood Count (Frames)	58	55	58	60	58	53

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3,6 G
Tx Rate (Fps)	292.587
Rx Rate (Percent)	12,08 %
Rx Rate (L1) (Bit/s)	2,17 G
Rx Rate (Fps)	176,72 K
Loss Rate (Percent)	39,6 %
Loss (Frames)	3.476.150
P-0-0-0	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.368
- Rx Rate (L1) (Bit/s)	121,96 M
- Rx Rate (Fps)	9.912
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.809
- Rx Rate (L1) (Bit/s)	122,14 M




5.5. (5.)	
- Rx Rate (Fps)	9.927
- Flood Count (Frames)	54
P-0-0-2 - Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Er) (Bit/s)	16.255
- Rx (Frames)	275.255
- Rx Rate (L1) (Bit/s)	112,89 M
- Rx Rate (Fps)	9.175
- Flood Count (Frames)	59
P-0-0-3	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.862
- Rx Rate (L1) (Bit/s)	122,16 M
- Rx Rate (Fps)	9.929
- Flood Count (Frames)	56
P-0-0-4	407.045
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames) - Rx Rate (L1) (Bit/s)	292.828 120,1 M
Py Pata (Ens)	9.761
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-0-5	59
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.518
- Rx Rate (L1) (Bit/s)	122,02 M
- Rx Rate (Fps)	9.917
- Flood Count (Frames)	56
P-0-2-0	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.530
- Rx Rate (L1) (Bit/s)	122,03 M
- Rx Rate (Fps)	9.918
- Flood Count (Frames)	57
P-0-2-1	407 C4E
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	200 M 16.255
	298.065
- Rx (Frames) - Rx Rate (L1) (Bit/s)	122,25 M
- Rx Rate (Fps)	9.936
- Flood Count (Frames)	57
P-0-2-2	<u> </u>
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	298.884
- Rx Rate (L1) (Bit/s)	122,58 M
- Rx Rate (Fps)	9.963
- Flood Count (Frames)	57
P-0-2-3	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	290.881
- Rx Rate (L1) (Bit/s)	119,3 M
- Rx Rate (Fps)	9.696
- Flood Count (Frames)	60
P-0-2-4	407.045
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.540



- Rx Rate (L1) (Bit/s)	122,03 M
- Rx Rate (Fps)	9.918
- Flood Count (Frames)	56
P-0-2-5	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	294.762
- Rx Rate (L1) (Bit/s)	120,89 M
- Rx Rate (Fps)	9.825
- Flood Count (Frames)	58
P-0-4-0	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	291.109
- Rx Rate (L1) (Bit/s)	119,39 M
	9.704
- Rx Rate (Fps)	
- Flood Count (Frames)	59
P-0-4-1	407.045
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	289.938
- Rx Rate (L1) (Bit/s)	118,91 M
- Rx Rate (Fps)	9.665
- Flood Count (Frames)	60
P-0-4-2	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	296.572
- Rx Rate (L1) (Bit/s)	121,63 M
- Rx Rate (Fps)	9.886
- Flood Count (Frames)	54
P-0-4-3	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	297.770
- Rx Rate (L1) (Bit/s)	122,13 M
- Rx Rate (Fps)	9.926
- Flood Count (Frames)	5.520
P-0-4-4	31
	407 G4E
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	294.514
- Rx Rate (L1) (Bit/s)	120,79 M
- Rx Rate (Fps)	9.817
- Flood Count (Frames)	56
P-0-4-5	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	295.255
- Rx Rate (L1) (Bit/s)	121,09 M
- Rx Rate (Fps)	9.842
- Flood Count (Frames)	54



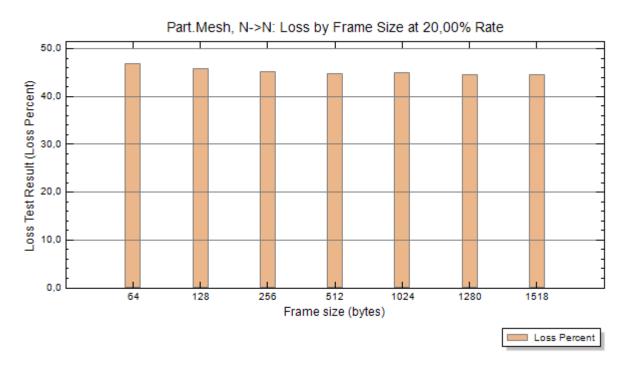

#### Results for 30,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G
Tx Rate (Fps)	8.035.713	4.560.808	2.445.644	1.268.788	646.547	519.221
Rx Rate (Percent)	0,02 %	16,37 %	16,66 %	16,69 %	16,57 %	16,72 %
Rx Rate (L1) (Bit/s)	2,83 M	2,95 G	3 G	3 G	2,98 G	3,01 G
Rx Rate (Fps)	4,21 K	2,49 M	1,36 M	705,84 K	357,04 K	289,35 K
Loss Rate (Percent)	99,95 %	45,42 %	44,46 %	44,37 %	44,78 %	44,27 %
Loss (Frames)	240.945.227	62.150.777	32.616.368	16.888.547	8.685.337	6.896.210
P-0-0-0						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	5.083	4.147.289	2.213.580	1.178.767	596.051	484.980
- Rx Rate (L1) (Bit/s)	113,86 K	163,68 M	162,92 M	167,23 M	165,94 M	168,13 M
- Rx Rate (Fps)	169	138.243	73.786	39.292	19.868	16.166
- Flood Count (Frames)	30	29	28	23	28	28
P-0-0-1						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	5.084	4.148.329	2.276.258	1.182.875	595.772	486.348
- Rx Rate (L1) (Bit/s)	113,88 K	163,72 M	167,53 M	167,81 M	165,86 M	168,6 M
- Rx Rate (Fps)	169	138.278	75.875	39.429	19.859	16.212
- Flood Count (Frames)	58	56	56	55	56	56
P-0-0-2						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	5.080	4.143.827	2.271.132	1.182.663	596.139	486.739
- Rx Rate (L1) (Bit/s)	113,79 K	163,54 M	167,16 M	167,78 M	165,97 M	168,74 M
- Rx Rate (Fps)	169	138.128	75.704	39.422	19.871	16.225
- Flood Count (Frames)	56	58	57	56	60	53
P-0-0-3						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.446	4.137.038	2.268.726	1.149.348	595.993	432.301



- Rx Rate (L1) (Bit/s)	166,79 K	163,28 M	166,98 M	163,05 M	165,92 M	149,86 M
- Rx Rate (Fps)	248	137.901	75.624	38.312	19.866	14.410
- Flood Count (Frames)	60	56	56	59	60	55
P-0-0-4	40.000.0==		4.0=0.0=0	0.444.04=		
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.539	4.143.236	2.266.570	1.177.011	596.729	486.708
- Rx Rate (L1) (Bit/s)	168,87 K	163,52 M	166,82 M	166,98 M	166,13 M	168,73 M
- Rx Rate (Fps)	251	138.108	75.552	39.234	19.891	16.224
- Flood Count (Frames)	61	56	55	57	58	55
P-0-0-5	40 000 055	7 004 040	4.070.070	0.444.047	4 077 570	005.000
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps) - Rx (Frames)	446.429 7.670	253.378 4.140.549	135.869 2.199.007	70.488 1.180.148	35.919 596.128	28.846 486.637
- Rx Rate (L1) (Bit/s)	171,81 K	163,41 M	161,85 M	167,42 M	165,96 M	168,7 M
- Rx Rate (LT) (Bit/s)	256	138.018	73.300	39.338	19.871	16.221
- Flood Count (Frames)	61					
P-0-2-0	01	55	52	56	57	59
- Tx (Frames)	12 202 055	7 601 246	4.076.072	2.114.647	1.077.579	06E 260
- Tx (Frames) - Tx Rate (L1) (Bit/s)	13.392.855 300 M	7.601.346 300 M	4.076.073 300 M	2.114.647 300 M	300 M	865.368 299,99 M
- Tx Rate (LT) (Bit/s)	446.429	253.378	135.869	70.488	35.919	299,99 M 28.846
	7.750		2.265.079	1.178.870	587.066	486.616
- Rx (Frames)		4.146.148				
- Rx Rate (L1) (Bit/s)	173,6 K	163,63 M	166,71 M	167,24 M	163,44 M	168,69 M
- Rx Rate (Fps)	258	138.205	75.503	39.296	19.569	16.221
- Flood Count (Frames) P-0-2-1	57	54	52	58	55	60
- Tx (Frames)	13.392.855	7 604 246	4.076.072	2 114 647	1 077 570	865.368
,		7.601.346	4.076.073	2.114.647	1.077.579	
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.778	4.149.629	2.265.738	1.177.777	595.857	486.694
- Rx Rate (L1) (Bit/s)	174,23 K	163,77 M	166,76 M	167,09 M	165,89 M	168,72 M
- Rx Rate (Fps) - Flood Count (Frames)	259 61	138.321 54	75.525 58	39.259 57	19.862 54	16.223 58
P-0-2-2	01	54	36	37	54	36
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.650	4.153.159	2.263.074	1.176.210	595.594	466.120
- Rx Rate (L1) (Bit/s)	171,36 K	163,91 M	166,56 M	166,86 M	165,81 M	161,59 M
- Rx Rate (Fps)	255	138.439	75.436	39.207	19.853	15.537
- Flood Count (Frames)	58	57	57	55	54	56
P-0-2-3		01	01		0-1	- 00
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.571	4.147.983	2.263.920	1.149.700	595.426	486.196
- Rx Rate (L1) (Bit/s)	169,59 K	163,71 M	166,62 M	163,1 M	165,77 M	168,55 M
- Rx Rate (Fps)	252	138.266	75.464	38.323	19.848	16.207
- Flood Count (Frames)	61	59	59	56	57	56
P-0-2-4	01	- 33	- 33	30	- 01	- 30
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.509	4.149.463	2.270.111	1.176.827	591.841	485.034
- Rx Rate (L1) (Bit/s)	168,2 K	163,77 M	167,08 M	166,95 M	164,77 M	168,15 M
- Rx Rate (Fps)	250	138.315	75.670	39.228	19.728	16.168
- Flood Count (Frames)	61	55	57	56	55	59
P-0-2-5	01	33	- 01	30	33	- 33
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.399	4.082.499	2.265.859	1.178.813	595.259	486.444
- Rx Rate (L1) (Bit/s)	165,74 K	161,12 M	166,77 M	167,23 M	165,72 M	168,63 M
- Rx Rate (Fps)	247	136.083	75.529	39.294	19.842	16.215
- Flood Count (Frames)	63	58	55	55	55	57
P-0-4-0	0.0	30	33	33	33	31
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (ET) (Bit/s)	446.429	253.378	135.869	70.488	35.919	28.846
- IN Nate (Fps)	440.429	200.010	133.009	10.400	33.313	20.040



- Rx (Frames)	7.331	4.143.655	2.267.784	1.178.934	595.598	486.352
- Rx Rate (L1) (Bit/s)	164,21 K	163,54 M	166,91 M	167,25 M	165,81 M	168,6 M
- Rx Rate (Fps)	244	138.122	75.593	39.298	19.853	16.212
- Flood Count (Frames)	58	56	53	53	54	55
P-0-4-1						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.248	4.163.309	2.274.401	1.179.315	595.441	486.311
- Rx Rate (L1) (Bit/s)	162,36 K	164,31 M	167,4 M	167,31 M	165,77 M	168,59 M
- Rx Rate (Fps)	242	138.777	75.813	39.311	19.848	16.210
- Flood Count (Frames)	58	57	55	55	56	57
P-0-4-2						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.142	4.167.667	2.282.029	1.181.105	594.847	486.914
- Rx Rate (L1) (Bit/s)	159,98 K	164,48 M	167,96 M	167,56 M	165,61 M	168,8 M
- Rx Rate (Fps)	238	138.922	76.068	39.370	19.828	16.230
- Flood Count (Frames)	59	56	56	52	55	56
P-0-4-3						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	7.044	4.174.076	2.276.938	1.179.778	595.649	487.306
- Rx Rate (L1) (Bit/s)	157,79 K	164,74 M	167,58 M	167,37 M	165,83 M	168,93 M
- Rx Rate (Fps)	235	139.136	75.898	39.326	19.855	16.244
- Flood Count (Frames)	58	56	55	54	52	56
P-0-4-4						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	6.969	4.174.372	2.282.523	1.181.987	596.724	486.444
- Rx Rate (L1) (Bit/s)	156,11 K	164,75 M	167,99 M	167,68 M	166,13 M	168,63 M
- Rx Rate (Fps)	232	139.146	76.084	39.400	19.891	16.215
- Flood Count (Frames)	58	56	52	58	52	55
P-0-4-5						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	6.870	4.161.223	2.280.217	1.184.971	594.971	486.270
- Rx Rate (L1) (Bit/s)	153,89 K	164,23 M	167,82 M	168,11 M	165,64 M	168,57 M
- Rx Rate (Fps)	229	138.707	76.007	39.499	19.832	16.209
- Flood Count (Frames)	57	54	53	55	55	56

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5,4 G
Tx Rate (Fps)	438.875
Rx Rate (Percent)	16,43 %
Rx Rate (L1) (Bit/s)	2,96 G
Rx Rate (Fps)	240,39 K
Loss Rate (Percent)	45,23 %
Loss (Frames)	5.954.560
P-0-0-0	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	401.266
- Rx Rate (L1) (Bit/s)	164,57 M
- Rx Rate (Fps)	13.376
- Flood Count (Frames)	23
P-0-0-1	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	402.353
- Rx Rate (L1) (Bit/s)	165,02 M




- Rx Rate (Fps)	13.412
- Flood Count (Frames) P-0-0-2	59
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (ET) (Bl/s)	24.382
- Rx (Frames)	402.396
- Rx Rate (L1) (Bit/s)	165,04 M
- Rx Rate (Fps)	13.413
- Flood Count (Frames)	54
P-0-0-3	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	399.937
- Rx Rate (L1) (Bit/s)	164,03 M
- Rx Rate (Fps)	13.331
- Flood Count (Frames)	54
P-0-0-4	704 450
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M 24.382
- Tx Rate (Fps)	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	391.698 160,65 M
	13.057
- Rx Rate (Fps) - Flood Count (Frames)	13.057
P-0-0-5	55
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	402.308
- Rx Rate (L1) (Bit/s)	165 M
- Rx Rate (Fps)	13.410
- Flood Count (Frames)	56
P-0-2-0	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	403.924
- Rx Rate (L1) (Bit/s)	165,66 M
- Rx Rate (Fps)	13.464
- Flood Count (Frames)	56
P-0-2-1	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	400.567
- Rx Rate (L1) (Bit/s)	164,29 M 13.352
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-2-2	54
- Tx (Frames)	731.459
- Tx (Frames) - Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (ET) (Blus)	24.382
- Rx (Frames)	400.208
- Rx Rate (L1) (Bit/s)	164,14 M
- Rx Rate (Fps)	13.340
- Flood Count (Frames)	54
P-0-2-3	<u> </u>
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	401.375
- Rx Rate (L1) (Bit/s)	164,62 M
- Rx Rate (Fps)	13.379
- Flood Count (Frames)	56
P-0-2-4	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	393.629



- Rx Rate (L1) (Bit/s)	161,44 M
- Rx Rate (Fps)	13.121
- Flood Count (Frames)	56
P-0-2-5	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	401.779
- Rx Rate (L1) (Bit/s)	164,78 M
- Rx Rate (Fps)	13.393
- Flood Count (Frames) P-0-4-0	54
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	401.395
- Rx Rate (L1) (Bit/s)	164,63 M
- Rx Rate (Fps)	13.380
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	400.294
- Rx Rate (L1) (Bit/s)	164,17 M
- Rx Rate (Fps)	13.343
- Flood Count (Frames)	56
P-0-4-2	704 450
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps) - Rx (Frames)	24.382 402.566
- Rx (Frames) - Rx Rate (L1) (Bit/s)	165,11 M
- Rx Rate (Fps)	13.419
- Flood Count (Frames)	56
P-0-4-3	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	401.731
- Rx Rate (L1) (Bit/s)	164,76 M
- Rx Rate (Fps)	13.391
- Flood Count (Frames)	57
P-0-4-4	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	403.100
- Rx Rate (L1) (Bit/s)	165,32 M
- Rx Rate (Fps)	13.437
- Flood Count (Frames)	54
P-0-4-5	724 450
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731.459 300 M
- Tx Rate (ET) (Blus)	24.382
- Rx (Frames)	401.176
- Rx Rate (L1) (Bit/s)	164,54 M
- Rx Rate (Fps)	13.373
- Flood Count (Frames)	56
count (i lamos)	30



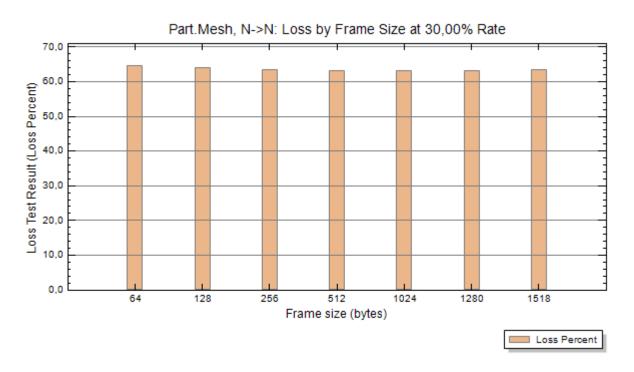

#### Results for 40,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G
Tx Rate (Fps)	10.714.284	6.081.077	3.260.869	1.691.721	862.063	692.305
Rx Rate (Percent)	0,01 %	0.03 %	20,57 %	20,59 %	20,58 %	20,49 %
Rx Rate (L1) (Bit/s)	2,38 M	5,78 M	3,7 G	3,71 G	3,7 G	3,69 G
Rx Rate (Fps)	3,54 K	4,88 K	1,68 M	870,71 K	443,59 K	354,68 K
Loss Rate (Percent)	99,97 %	99,92 %	48,57 %	48,53 %	48,54 %	48,77 %
Loss (Frames)	321.322.265	182.285.963	47.512.821	24.630.461	12.554.101	10.128.628
P-0-0-0						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.013	8.386	2.810.643	1.375.342	745.177	582.491
- Rx Rate (L1) (Bit/s)	134,69 K	330,97 K	206,86 M	195,12 M	207,46 M	201,93 M
- Rx Rate (Fps)	200	280	93.688	45.845	24.839	19.416
- Flood Count (Frames)	31	28	19	23	25	21
P-0-0-1						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.229	8.498	2.755.876	1.458.992	744.182	596.327
- Rx Rate (L1) (Bit/s)	139,53 K	335,39 K	202,83 M	206,98 M	207,18 M	206,73 M
- Rx Rate (Fps)	208	283	91.863	48.633	24.806	19.878
- Flood Count (Frames)	58	61	56	54	57	56
P-0-0-2						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.410	8.542	2.780.783	1.454.334	744.655	595.404
- Rx Rate (L1) (Bit/s)	143,58 K	337,12 K	204,67 M	206,32 M	207,31 M	206,41 M
- Rx Rate (Fps)	214	285	92.693	48.478	24.822	19.847
- Flood Count (Frames)	59	61	57	54	55	56
P-0-0-3						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.442	6.346	2.799.587	1.454.214	744.541	595.571



- Rx Rate (L1) (Bit/s)	144,3 K	250,46 K	206,05 M	206,3 M	207,28 M	206,46 M
- Rx Rate (Fps)	215	212	93.320	48.474	24.818	19.852
- Flood Count (Frames)	61	59	58	55	56	56
P-0-0-4						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.401	8.649	2.788.564	1.456.216	746.029	583.476
- Rx Rate (L1) (Bit/s)	143,38 K	341,35 K	205,24 M	206,59 M	207,69 M	202,27 M
- Rx Rate (Fps)	213	288	92.952	48.541	24.868	19.449
- Flood Count (Frames)	60	60	56	55	56	52
P-0-0-5	47.057.440	10 105 100	5 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.464	8.602	2.798.059	1.454.856	745.263	589.582
- Rx Rate (L1) (Bit/s)	144,79 K	339,49 K	205,94 M	206,4 M	207,48 M	204,39 M
- Rx Rate (Fps)	215	287	93.269	48.495	24.842	19.653
- Flood Count (Frames)	60	61	55	57	56	54
P-0-2-0	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.494	8.483	2.797.144	1.455.487	745.478	596.164
- Rx Rate (L1) (Bit/s)	145,47 K	334,8 K	205,87 M	206,49 M	207,54 M	206,67 M
- Rx Rate (Fps)	216	283	93.238	48.516	24.849	19.872
- Flood Count (Frames)	61	61	54	55	55	57
P-0-2-1	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.460	8.406	2.798.894	1.455.322	745.700	595.770
- Rx Rate (L1) (Bit/s)	144,7 K	331,76 K	206 M	206,46 M	207,6 M	206,53 M
- Rx Rate (Fps)	215	280	93.296	48.511	24.857	19.859
- Flood Count (Frames)	61	61	53	56	52	58
P-0-2-2	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames) - Rx Rate (L1) (Bit/s)	3.561	8.354	2.799.169	1.453.688	740.243	552.903
. , , ,	79,77 K 119	329,7 K	206,02 M	206,23 M	206,08 M	191,67 M
- Rx Rate (Fps) - Flood Count (Frames)	62	278 60	93.306 56	48.456 56	24.675 58	18.430 54
P-0-2-3	02	00	30	30	36	
	17.857.140	10 125 120	5.434.781	2 040 525	1.436.772	1 152 041
- Tx (Frames)		10.135.128		2.819.535		1.153.841
- Tx Rate (L1) (Bit/s)	400 M 595.238	400 M 337.838	400 M	400 M	400 M	400 M
- Tx Rate (Fps)			181.159	93.985	47.892	38.461
- Rx (Frames)	6.451	8.308	2.750.804	1.458.520 206,92 M	644.070	596.429
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	144,5 K 215	327,89 K	202,46 M 91.693	48.617	179,31 M 21.469	206,76 M 19.881
- Flood Count (Frames)	59	277 59				
P-0-2-4	39	39	54	57	57	55
	17.057.140	10 125 120	E 424 701	2 040 525	1 126 772	1 152 041
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535 400 M	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M 181.159		400 M	400 M
- Tx Rate (Fps) - Rx (Frames)	595.238	337.838		93.985 1.454.528	47.892	38.461
, ,	3.560	8.243	2.800.836		745.967	596.731
- Rx Rate (L1) (Bit/s)	79,74 K	325,32 K	206,14 M	206,35 M 48.484	207,68 M	206,87 M
- Rx Rate (Fps)	119	275	93.361		24.866	19.891
- Flood Count (Frames)	62	59	56	57	58	56
P-0-2-5	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.346	8.133	2.780.233	1.446.728	745.961	579.221
- Rx Rate (L1) (Bit/s)	142,15 K	320,98 K	204,63 M	205,24 M	207,68 M	200,8 M
- Rx Rate (Fps)	212	271	92.674	48.224	24.865	19.307
- Flood Count (Frames)	62	61	53	58	58	55
P-0-4-0	17 057 110	10 105 100	E 404 704	0.040.505	1 400 770	1 450 044
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461



- Rx (Frames)	6.205	8.047	2.812.750	1.457.588	745.850	597.458
- Rx Rate (L1) (Bit/s)	138,99 K	317,59 K	207,02 M	206,78 M	207,64 M	207,12 M
- Rx Rate (Fps)	207	268	93.758	48.586	24.862	19.915
- Flood Count (Frames)	58	59	55	56	55	56
P-0-4-1						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	6.180	7.983	2.811.906	1.458.092	745.326	596.915
- Rx Rate (L1) (Bit/s)	138,43 K	315,06 K	206,96 M	206,85 M	207,5 M	206,93 M
- Rx Rate (Fps)	206	266	93.730	48.603	24.844	19.897
- Flood Count (Frames)	59	58	59	54	55	56
P-0-4-2						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	5.926	7.908	2.809.202	1.454.169	744.450	596.980
- Rx Rate (L1) (Bit/s)	132.74 K	312.1 K	206.76 M	206,3 M	207,25 M	206,95 M
- Rx Rate (Fps)	198	264	93.640	48.472	24.815	19.899
- Flood Count (Frames)	57	61	54	59	56	53
P-0-4-3						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	5.871	7.898	2.808.779	1.457.798	745.368	596.283
- Rx Rate (L1) (Bit/s)	131,51 K	311,71 K	206,73 M	206,81 M	207,51 M	206,71 M
- Rx Rate (Fps)	196	263	93.626	48.593	24.846	19.876
- Flood Count (Frames)	58	60	53	55	56	54
P-0-4-4						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	5.661	7.819	2.802.926	1.457.672	744.340	596.567
- Rx Rate (L1) (Bit/s)	126,81 K	308,59 K	206,3 M	206,8 M	207,22 M	206,81 M
- Rx Rate (Fps)	189	261	93.431	48.589	24.811	19.886
- Flood Count (Frames)	60	56	57	55	57	55
P-0-4-5			-			
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	5.581	7.736	2.807.082	1.457.623	745.195	596.238
- Rx Rate (L1) (Bit/s)	125,01 K	305,31 K	206,6 M	206,79 M	207,46 M	206,7 M
- Rx Rate (Fps)	186	258	93.569	48.587	24.840	19.875
- Flood Count (Frames)	57	57	57	53	56	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7,2 G
Tx Rate (Fps)	585.174
Rx Rate (Percent)	20,59 %
Rx Rate (L1) (Bit/s)	3,71 G
Rx Rate (Fps)	301,29 K
Loss Rate (Percent)	48,51 %
Loss (Frames)	8.516.529
P-0-0-0	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	501.665
- Rx Rate (L1) (Bit/s)	205,75 M
- Rx Rate (Fps)	16.722
- Flood Count (Frames)	23
P-0-0-1	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	502.356
- Rx Rate (L1) (Bit/s)	206,03 M




	10 = 1=
- Rx Rate (Fps)	16.745
- Flood Count (Frames) P-0-0-2	58
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (E1) (Bit/s)	32.510
- Rx (Frames)	497.396
- Rx Rate (L1) (Bit/s)	204 M
- Rx Rate (Fps)	16.580
- Flood Count (Frames)	55
P-0-0-3	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	502.307
- Rx Rate (L1) (Bit/s)	206,01 M
- Rx Rate (Fps)	16.744
- Flood Count (Frames)	55
P-0-0-4	075 000
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M 32.510
- TX Rate (Fps) - Rx (Frames)	503.892
- Rx (Frames) - Rx Rate (L1) (Bit/s)	206,66 M
- Rx Rate (Fps)	16.796
- RX Rate (Fps) - Flood Count (Frames)	52
P-0-0-5	32
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	500.433
- Rx Rate (L1) (Bit/s)	205,24 M
- Rx Rate (Fps)	16.681
- Flood Count (Frames)	59
P-0-2-0	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	502.973
- Rx Rate (L1) (Bit/s)	206,29 M
- Rx Rate (Fps)	16.766
- Flood Count (Frames)	58
P-0-2-1	075 200
- Tx (Frames) - Tx Rate (L1) (Bit/s)	975.290 400 M
- Tx Rate (ET) (Blus)	32.510
- Rx (Frames)	503.603
- Rx Rate (L1) (Bit/s)	206,54 M
- Rx Rate (Fps)	16.787
- Flood Count (Frames)	54
P-0-2-2	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	503.769
- Rx Rate (L1) (Bit/s)	206,61 M
- Rx Rate (Fps)	16.792
- Flood Count (Frames)	56
P-0-2-3	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	501.950
- Rx Rate (L1) (Bit/s)	205,87 M
- Rx Rate (Fps)	16.732
- Flood Count (Frames)	52
P-0-2-4	075 200
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M 32.510
- Tx Rate (Fps) - Rx (Frames)	503.596
i w (i idilica)	303.330



	202 = 4 14
- Rx Rate (L1) (Bit/s)	206,54 M
- Rx Rate (Fps)	16.787
- Flood Count (Frames)	56
P-0-2-5	075 000
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	502.484
- Rx Rate (L1) (Bit/s)	206,09 M
- Rx Rate (Fps)	16.749
- Flood Count (Frames) P-0-4-0	55
- Tx (Frames)	975.290
- Tx (Frames)	400 M
- Tx Rate (ET) (Blus)	32.510
- Rx (Frames)	503.582
- Rx Rate (L1) (Bit/s)	206,54 M 16.786
- Rx Rate (Fps)	
- Flood Count (Frames)	51
P-0-4-1 - Tx (Frames)	975.290
- Tx (Frames) - Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (ET) (Bl/s)	32.510
- Rx (Frames)	
	501.672
- Rx Rate (L1) (Bit/s)	205,75 M
- Rx Rate (Fps)	16.722
- Flood Count (Frames) P-0-4-2	56
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
	32.510
- Tx Rate (Fps) - Rx (Frames)	501.728
- Rx Rate (L1) (Bit/s)	205,78 M 16.724
- Rx Rate (Fps) - Flood Count (Frames)	52
P-0-4-3	52
- Tx (Frames)	975.290
- Tx (Frames)	400 M
- Tx Rate (ET) (Blus)	32.510
- Rx (Frames)	502.477
- Rx Rate (L1) (Bit/s)	206,08 M
- Rx Rate (Fps)	16.749
- Flood Count (Frames)	54
P-0-4-4	<u> </u>
- Tx (Frames)	975.290
- Tx (Frames)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	501.390
- Rx Rate (L1) (Bit/s)	205,64 M
- Rx Rate (Fps)	16.713
- Flood Count (Frames)	55
P-0-4-5	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	501.418
- Rx Rate (L1) (Bit/s)	205,65 M
- Rx Rate (Fps)	16.714
- Flood Count (Frames)	56
()	



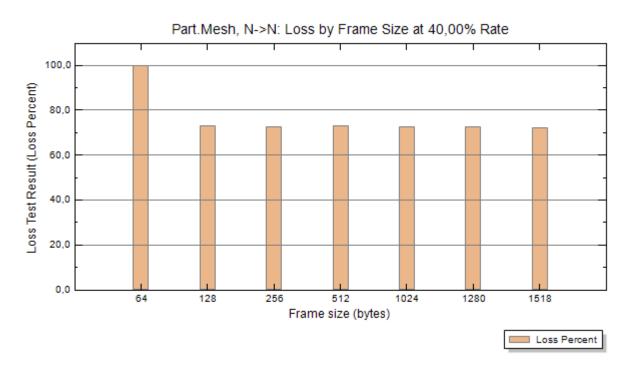

#### Results for 50,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13.392.855	7.601.346	4.076.083	2.114.654	1.077.579	865.378
Rx Rate (Percent)	0,01 %	0,03 %	25,35 %	25,35 %	25,57 %	25,68 %
Rx Rate (L1) (Bit/s)	1,95 M	4,69 M	4,56 G	4,56 G	4,6 G	4,62 G
Rx Rate (Fps)	2,91 K	3,96 K	2,07 M	1,07 M	551,01 K	444,41 K
Loss Rate (Percent)	99,98 %	99,95 %	49,29 %	49,29 %	48,87 %	48,65 %
Loss (Frames)	401.698.416	227.921.541	60.276.000	31.271.919	15.796.922	12.628.906
P-0-0-0						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	4.611	7.083	3.453.338	1.725.668	918.826	735.799
- Rx Rate (L1) (Bit/s)	103,29 K	279,54 K	254,17 M	244,81 M	255,8 M	255,08 M
- Rx Rate (Fps)	154	236	115.111	57.522	30.628	24.527
- Flood Count (Frames)	29	26	26	21	26	29
P-0-0-1						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	2.848	7.248	3.454.274	1.793.889	918.463	731.980
- Rx Rate (L1) (Bit/s)	63,8 K	286,05 K	254,23 M	254,49 M	255,7 M	253,75 M
- Rx Rate (Fps)	95	242	115.142	59.796	30.615	24.399
- Flood Count (Frames)	58	60	56	55	59	60
P-0-0-2						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	5.012	7.281	3.454.681	1.792.837	918.441	742.810
- Rx Rate (L1) (Bit/s)	112,27 K	287,36 K	254,26 M	254,34 M	255,69 M	257,51 M
- Rx Rate (Fps)	167	243	115.156	59.761	30.615	24.760
- Flood Count (Frames)	57	60	56	54	56	55
P-0-0-3						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	2.858	4.825	3.456.817	1.785.948	918.420	743.138



- Rx Rate (L1) (Bit/s)	64,02 K	190,43 K	254,42 M	253,37 M	255,69 M	257,62 M
- Rx Rate (Fps)	95	161	115.227	59.532	30.614	24.771
- Flood Count (Frames)	58	61	58	55	57	56
P-0-0-4	00 004 405	40,000,040	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M 422.297	500 M	500 M	500 M	500 M 48.077
- Tx Rate (Fps)	744.048	7.314	226.449	117.481	59.866	
- Rx (Frames)	5.329		3.456.460	1.791.359	918.346	743.083
- Rx Rate (L1) (Bit/s)	119,37 K	288,66 K	254,4 M	254,13 M	255,67 M	257,6 M
- Rx Rate (Fps)	178	244	115.215	59.712	30.612	24.769
- Flood Count (Frames) P-0-0-5	58	58	58	57	57	58
- Tx (Frames)	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1 110 007
- Tx (Frames) - Tx Rate (L1) (Bit/s)	22.321.425	12.668.910	6.793.472 500 M	3.524.423	1.795.965	1.442.297 500 M
, , , ,	500 M	500 M 422.297		500 M	500 M	
- Tx Rate (Fps) - Rx (Frames)	744.048 5.353	7.268	226.449 3.456.038	117.481 1.792.083	59.866 918.483	48.077 742.280
		286,84 K				
- Rx Rate (L1) (Bit/s)	119,91 K		254,36 M	254,24 M	255,71 M	257,32 M
- Rx Rate (Fps)	178 57	242	115.201	59.736	30.616	24.743
- Flood Count (Frames) P-0-2-0	3/	58	55	57	58	56
	22 224 425	12 669 010	6 702 472	2 524 422	1.795.965	1 110 007
- Tx (Frames)	22.321.425	12.668.910 500 M	6.793.472	3.524.423	1.795.965 500 M	1.442.297
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	500 M	422.297	500 M	500 M		500 M
( 1 /	744.048	-	226.449	117.481	59.866	48.077
- Rx (Frames)	5.312	4.830	3.455.353	1.792.745	918.592	743.176
- Rx Rate (L1) (Bit/s)	118,99 K	190,62 K	254,31 M 115.178	254,33 M	255,74 M	257,63 M
- Rx Rate (Fps)	177	161		59.758	30.620	24.773
- Flood Count (Frames) P-0-2-1	62	61	54	55	56	54
	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1.442.297
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297 500 M
- Tx Rate (L1) (Bit/s)	500 M 744.048	500 M 422.297	500 M	500 M	500 M	
- Tx Rate (Fps)			226.449	117.481	59.866	48.077
- Rx (Frames)	5.353	4.828	3.454.974	1.783.221	916.772	742.063
- Rx Rate (L1) (Bit/s)	119,91 K	190,55 K	254,29 M	252,98 M	255,23 M	257,25 M
- Rx Rate (Fps) - Flood Count (Frames)	178 59	161 59	115.166 57	59.441 60	30.559 56	24.735
P-0-2-2	39	39	31	00	30	57
-	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1 110 007
- Tx (Frames) - Tx Rate (L1) (Bit/s)	22.321.425 500 M	12.668.910 500 M	6.793.472 500 M	3.524.423 500 M	1.795.965 500 M	1.442.297 500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	5.333	7.202	3.288.813	1.796.989	917.886	727.601
- Rx Rate (L1) (Bit/s)	119,46 K	284,24 K	242,06 M	254,93 M	255,54 M	252,24 M
- Rx Rate (Fps)	178	240	109.627	59.900	30.596	24.253
- Flood Count (Frames)	57	60	54	58	54	24.255 55
P-0-2-3	31	00	34	30	34	- 33
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx (Frames)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	5.353	7.099	3.455.072	1.793.052	918.428	742.669
- Rx Rate (L1) (Bit/s)	119,91 K	280,17 K	254,29 M	254,37 M	255,69 M	257,46 M
- Rx Rate (Fps)	178	237	115.169	59.768	30.614	24.756
- Flood Count (Frames)	61	60	56	57	59	24.730 55
P-0-2-4	01	00	30	31	39	- 33
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (ET) (Blus)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	5.325	7.042	3.455.682	1.794.461	919.058	733.758
- Rx Rate (L1) (Bit/s)	119,28 K	277,92 K	254,34 M	254,57 M	255,87 M	254,37 M
- Rx Rate (E1) (Bit/s)	178	277,92 K	115.189	59.815	30.635	24.459
- Flood Count (Frames)	59	58	54	57	55	24.439
P-0-2-5	39	30	34	31	33	01
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
	744.048	422.297	226.449	117.481	59.866	48.077
- Tx Rate (Fps) - Rx (Frames)	5.382	6.953	3.456.081	1.761.154	918.249	742.535
- Rx (Frames)	120,56 K	274,41 K	254,37 M	249,85 M	255,64 M	257,41 M
- Rx Rate (ET) (Bit/s)	120,36 K	274,41 K	115.203	58.705	30.608	24.751
- Flood Count (Frames)	61	61	57	55.705	56	24.751 57
P-0-4-0	01	O I	31	ეე	00	37
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx (Frames) - Tx Rate (L1) (Bit/s)	22.321.425 500 M	12.668.910 500 M	500 M	500 M	500 M	1.442.297 500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077



- Rx (Frames)	5.264	6.873	3.453.484	1.791.425	918.609	743.887
- Rx Rate (L1) (Bit/s)	117,91 K	271,25 K	254,18 M	254,14 M	255,74 M	257,88 M
- Rx Rate (Fps)	175	229	115.116	59.714	30.620	24.796
- Flood Count (Frames)	58	60	54	55	55	55
P-0-4-1						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	5.145	6.761	3.453.343	1.793.575	918.422	743.901
- Rx Rate (L1) (Bit/s)	115,25 K	266,83 K	254,17 M	254,45 M	255,69 M	257,89 M
- Rx Rate (Fps)	172	225	115.111	59.786	30.614	24.797
- Flood Count (Frames)	57	59	54	54	55	55
P-0-4-2						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	4.912	6.753	3.450.409	1.792.199	918.476	743.784
- Rx Rate (L1) (Bit/s)	110,03 K	266,52 K	253,95 M	254,25 M	255,7 M	257,85 M
- Rx Rate (Fps)	164	225	115.014	59.740	30.616	24.793
- Flood Count (Frames)	59	60	54	53	58	58
P-0-4-3						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	4.779	6.537	3.451.406	1.795.920	918.621	743.307
- Rx Rate (L1) (Bit/s)	107,05 K	257,99 K	254,02 M	254,78 M	255,74 M	257,68 M
- Rx Rate (Fps)	159	218	115.047	59.864	30.621	24.777
- Flood Count (Frames)	60	59	52	53	55	58
P-0-4-4						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	4.618	6.511	3.450.716	1.795.389	917.988	743.423
- Rx Rate (L1) (Bit/s)	103,44 K	256,97 K	253,97 M	254,71 M	255,57 M	257,72 M
- Rx Rate (Fps)	154	217	115.024	59.846	30.600	24.781
- Flood Count (Frames)	61	59	58	55	58	56
P-0-4-5						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	4.447	6.431	3.449.555	1.795.781	918.368	743.246
- Rx Rate (L1) (Bit/s)	99,61 K	253,81 K	253,89 M	254,76 M	255,67 M	257,66 M
- Rx Rate (Fps)	148	214	114.985	59.859	30.612	24.775
- Flood Count (Frames)	61	58	56	55	57	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731.462
Rx Rate (Percent)	25,43 %
Rx Rate (L1) (Bit/s)	4,58 G
Rx Rate (Fps)	371,96 K
Loss Rate (Percent)	49,15 %
Loss (Frames)	10.785.210
P-0-0-0	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.466
- Rx Rate (L1) (Bit/s)	254,88 M
- Rx Rate (Fps)	20.716
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	620.376
- Rx Rate (L1) (Bit/s)	254,44 M




- Rx Rate (Fps)	20.679
- Flood Count (Frames) P-0-0-2	56
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Bit/s)	40.637
- Rx (Frames)	621.793
- Rx Rate (L1) (Bit/s)	255,02 M
- Rx Rate (Fps)	20.726
- Flood Count (Frames)	56
P-0-0-3	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.462
- Rx Rate (L1) (Bit/s)	254,88 M
- Rx Rate (Fps)	20.715
- Flood Count (Frames)	57
P-0-0-4	4 040 404
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps) - Rx (Frames)	40.637 622.605
- Rx Rate (L1) (Bit/s)	255,35 M
- Rx Rate (E1) (Bit/s)	20.754
- RX Rate (Fps) - Flood Count (Frames)	20.754
P-0-0-5	31
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	618.111
- Rx Rate (L1) (Bit/s)	253,51 M
- Rx Rate (Fps)	20.604
- Flood Count (Frames)	59
P-0-2-0	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	622.236
- Rx Rate (L1) (Bit/s)	255,2 M
- Rx Rate (Fps)	20.741
- Flood Count (Frames)	57
P-0-2-1 - Tx (Frames)	1.219.104
- Tx (Frames) - Tx Rate (L1) (Bit/s)	
- Tx Rate (ET) (Blus)	500 M 40.637
- Rx (Frames)	622.000
- Rx Rate (L1) (Bit/s)	255,1 M
- Rx Rate (Fps)	20.733
- Flood Count (Frames)	55
P-0-2-2	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	622.619
- Rx Rate (L1) (Bit/s)	255,36 M
- Rx Rate (Fps)	20.754
- Flood Count (Frames)	52
P-0-2-3	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	589.920
- Rx Rate (L1) (Bit/s)	241,95 M
- Rx Rate (Fps)	19.664
- Flood Count (Frames)	57
P-0-2-4	1 210 104
- Tx (Frames)	1.219.104 500 M
- Tx Rate (L1) (Bit/s)	500 M 40.637
- Tx Rate (Fps) - Rx (Frames)	622.744
in (i idilios)	022.144



- Rx Rate (L1) (Bit/s)	255,41 M
- Rx Rate (Fps)	20.758
- Flood Count (Frames)	54
P-0-2-5	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	623.111
- Rx Rate (L1) (Bit/s)	255,56 M
- Rx Rate (Fps)	20.770
- Flood Count (Frames) P-0-4-0	55
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	623.021
- Rx Rate (L1) (Bit/s)	255,52 M
- Rx Rate (Fps)	20.767
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.921
- Rx Rate (L1) (Bit/s)	255,07 M
- Rx Rate (Fps)	20.731
- Flood Count (Frames) P-0-4-2	56
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.809
- Rx Rate (L1) (Bit/s)	255,02 M
- Rx Rate (Fps)	20.727
- Flood Count (Frames)	53
P-0-4-3	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.501
- Rx Rate (L1) (Bit/s)	254,9 M
- Rx Rate (Fps)	20.717
- Flood Count (Frames) P-0-4-4	59
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	620.937
- Rx Rate (L1) (Bit/s)	254,67 M
- Rx Rate (Fps)	20.698
- Flood Count (Frames)	54
P-0-4-5	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	621.030
- Rx Rate (L1) (Bit/s)	254,71 M
- Rx Rate (Fps)	20.701
- Flood Count (Frames)	55



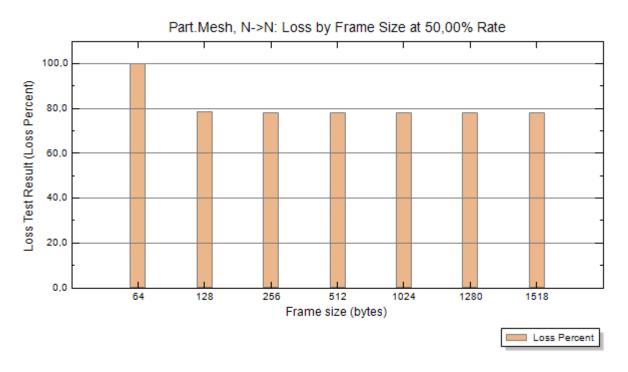

#### Results for 60,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10,8 G	10,8 G	10,8 G	10,8 G	10,8 G	10,8 G
Tx Rate (Fps)	16.071.426	9.121.615	4.891.298	2.537.587	1.293.095	1.038.452
Rx Rate (Percent)	0,01 %	0,02 %	1,77 %	29,23 %	29,19 %	29,49 %
Rx Rate (L1) (Bit/s)	1,51 M	3,82 M	318,58 M	5,26 G	5,25 G	5,31 G
Rx Rate (Fps)	2,25 K	3,22 K	144,29 K	1,24 M	629,02 K	510,39 K
Loss Rate (Percent)	99,99 %	99,96 %	97,05 %	51,28 %	51,36 %	50,85 %
Loss (Frames)	482.075.161	273.551.791	142.410.339	39.035.925	19.922.260	15.841.940
P-0-0-0						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.650	5.380	77.831	2.066.226	1.050.652	851.057
- Rx Rate (L1) (Bit/s)	81,76 K	212,33 K	5,73 M	293,13 M	292,5 M	295,03 M
- Rx Rate (Fps)	122	179	2.594	68.874	35.022	28.369
- Flood Count (Frames)	29	28	26	19	21	31
P-0-0-1						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.006	5.537	279.176	2.066.544	1.014.206	851.528
- Rx Rate (L1) (Bit/s)	89,73 K	218,53 K	20,55 M	293,17 M	282,35 M	295,2 M
- Rx Rate (Fps)	134	185	9.306	68.885	33.807	28.384
- Flood Count (Frames)	59	58	58	53	55	57
P-0-0-2						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.055	5.581	279.590	2.067.181	1.050.502	850.994
- Rx Rate (L1) (Bit/s)	90,83 K	220,26 K	20,58 M	293,26 M	292,46 M	295,01 M
- Rx Rate (Fps)	135	186	9.320	68.906	35.017	28.366
- Flood Count (Frames)	59	60	58	54	58	58
P-0-0-3						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.077	5.584	279.533	2.065.429	1.049.785	851.875



- Rx Rate (L1) (Bit/s)	91,32 K	220,38 K	20,57 M	293,02 M	292,26 M	295,32 M
- Rx Rate (Fps)	136	186	9.318	68.848	34.993	28.396
- Flood Count (Frames)	61	61	58	55	54	57
P-0-0-4	00 705 740	45 000 000	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.058	5.605	184.516	2.064.902	1.050.150	851.359
- Rx Rate (L1) (Bit/s)	90,9 K	221,21 K	13,58 M	292,94 M	292,36 M	295,14 M
- Rx Rate (Fps)	135	187	6.151	68.830	35.005	28.379
- Flood Count (Frames)	61	60	60	55	57	55
P-0-0-5 - Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx (Frames)	600 M	600 M	6.132.103 600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.092	5.607	278.892	2.064.946	1.050.276	845.725
- Rx Rate (L1) (Bit/s)	91,66 K	221,29 K	20,53 M	292,95 M	292,4 M	293,18 M
- Rx Rate (Fps)	136	187	9.296	68.832	35.009	28.191
- Flood Count (Frames)	61	61	59	55	54	59
P-0-2-0	01	01			34	- 33
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (ET) (Bld's)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.117	5.632	280.969	1.989.610	1.050.872	851.838
- Rx Rate (L1) (Bit/s)	92,22 K	222.28 K	20,68 M	282,26 M	292,56 M	295,3 M
- Rx Rate (Fps)	137	188	9.366	66.320	35.029	28.395
- Flood Count (Frames)	60	59	61	56	54	56
P-0-2-1			0.1		01	
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.143	5.624	280.559	2.062.645	1.049.968	851.239
- Rx Rate (L1) (Bit/s)	92,8 K	221,96 K	20,65 M	292,62 M	292,31 M	295,1 M
- Rx Rate (Fps)	138	187	9.352	68.755	34.999	28.375
- Flood Count (Frames)	58	58	59	55	55	57
P-0-2-2						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.092	5.627	281.086	2.062.877	1.050.412	850.658
- Rx Rate (L1) (Bit/s)	91,66 K	222,08 K	20,69 M	292,65 M	292,43 M	294,89 M
- Rx Rate (Fps)	136	188	9.370	68.763	35.014	28.355
- Flood Count (Frames)	59	60	58	54	57	57
P-0-2-3						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	4.132	5.561	159.217	2.063.843	1.050.300	845.050
- Rx Rate (L1) (Bit/s)	92,56 K	219,47 K	11,72 M	292,79 M	292,4 M	292,95 M
- Rx Rate (Fps)	138	185	5.307	68.795	35.010	28.168
- Flood Count (Frames)	61	61	60	57	53	56
P-0-2-4	00 -010	4= 000 000	0.450.400	1 000 011	0.1==.1=0	4 = 2 2 = 2 = 2
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	2.666	5.479	280.751	2.062.720	1.050.837	849.439
- Rx Rate (L1) (Bit/s)	59,72 K	216,24 K	20,66 M	292,63 M	292,55 M	294,47 M
- Rx Rate (Fps)	89	183	9.358	68.757	35.028	28.315
- Flood Count (Frames)	62	59	58	55	56	57
P-0-2-5	00 705 740	45 000 000	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	2.659	5.432	8.804	2.063.616	1.050.137	851.877
- Rx Rate (L1) (Bit/s)	59,56 K	214,38 K	647,97 K	292,76 M	292,36 M	295,32 M
- Rx Rate (Fps) - Flood Count (Frames)	89 59	181	293	68.787	35.005	28.396
	59	60	59	53	56	59
P-0-4-0	26 705 740	15 202 602	0 150 160	A 220 244	2 155 150	1 720 752
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692



- Rx (Frames)	4.065	5.250	278.811	2.063.837	1.050.553	851.962
- Rx Rate (L1) (Bit/s)	91,06 K	207,2 K	20,52 M	292,79 M	292,47 M	295,35 M
- Rx Rate (Fps)	136	175	9.294	68.795	35.018	28.399
- Flood Count (Frames)	56	56	58	54	56	54
P-0-4-1						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.960	5.169	277.429	2.064.218	1.049.847	852.035
- Rx Rate (L1) (Bit/s)	88,7 K	204 K	20,42 M	292,84 M	292,28 M	295,37 M
- Rx Rate (Fps)	132	172	9.248	68.807	34.995	28.401
- Flood Count (Frames)	56	57	57	53	53	54
P-0-4-2						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.771	5.050	275.106	2.064.351	1.050.281	851.350
- Rx Rate (L1) (Bit/s)	84,47 K	199.31 K	20,25 M	292.86 M	292,4 M	295,13 M
- Rx Rate (Fps)	126	168	9.170	68.812	35.009	28.378
- Flood Count (Frames)	57	57	58	54	56	56
P-0-4-3						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.550	4.942	274.928	2.064.411	1.050.964	851.552
- Rx Rate (L1) (Bit/s)	79,52 K	195,04 K	20,23 M	292,87 M	292,59 M	295,2 M
- Rx Rate (Fps)	118	165	9.164	68.814	35.032	28.385
- Flood Count (Frames)	61	59	55	57	57	55
P-0-4-4						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.308	4.851	275.796	2.066.790	1.050.205	851.532
- Rx Rate (L1) (Bit/s)	74,1 K	191,45 K	20,3 M	293,21 M	292,38 M	295,2 M
- Rx Rate (Fps)	110	162	9.193	68.893	35.007	28.384
- Flood Count (Frames)	58	58	57	56	57	59
P-0-4-5			-			
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	3.218	4.754	275.601	2.067.527	1.050.637	850.544
- Rx Rate (L1) (Bit/s)	72,08 K	187,62 K	20,28 M	293,31 M	292,5 M	294,86 M
- Rx Rate (Fps)	107	158	9.187	68.918	35.021	28.351
- Flood Count (Frames)	58	58	61	53	54	53

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10,8 G
Tx Rate (Fps)	877.761
Rx Rate (Percent)	28,94 %
Rx Rate (L1) (Bit/s)	5,21 G
Rx Rate (Fps)	423,34 K
Loss Rate (Percent)	51,77 %
Loss (Frames)	13.632.518
P-0-0-0	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	710.828
- Rx Rate (L1) (Bit/s)	291,53 M
- Rx Rate (Fps)	23.694
- Flood Count (Frames)	25
P-0-0-1	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	710.933
- Rx Rate (L1) (Bit/s)	291,58 M




- Rx Rate (Fps)
P-0-0-2 - Tx (Frames)
- Tx (Frames)
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.861 - Rx Rate (L1) (Bit/s) 291,55 M - Rx Rate (Fps) 23.695 - Flood Count (Frames) 52 P-0-0-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 696.887 - Rx Rate (L1) (Bit/s) 285,82 M - Rx Rate (Fps) 23.230 - Flood Count (Frames) 52 P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 32.616 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 32.667 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 32.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 32.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 710.005 - Rx Rate (Fps) 32.667 - Flood Count (Frames) 52 P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 32.667 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 32.667 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 32.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 32.668 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 32.668 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 709.724 - Rx Rate
- Tx Rate (Fps) 48.765   - Rx (Frames) 710.861   - Rx Rate (L1) (Bit/s) 291,55 M   - Rx Rate (L1) (Bit/s) 23.695   - Flood Count (Frames) 52   - O-O-3   - Tx (Frames) 1.462.935   - Tx Rate (L1) (Bit/s) 600 M   - Tx Rate (Fps) 48.765   - Rx (Frames) 696.887   - Rx Rate (L1) (Bit/s) 285,82 M   - Rx Rate (L1) (Bit/s) 285,82 M   - Rx Rate (Fps) 23.230   - Flood Count (Frames) 52   - P-O-O-4   - Tx (Frames) 1.462.935   - Tx Rate (L1) (Bit/s) 600 M   - Tx Rate (Fps) 48.765   - Rx (Frames) 708.467   - Rx Rate (L1) (Bit/s) 290,57 M   - Rx Rate (Fps) 23.616   - Rx (Frames) 708.467   - Rx Rate (Fps) 709.467   - Rx Rate (Fps) 709.47   - Rx Rate (Fps) 709.74   - Rx Rate (Fps) 709.72   - Tx (Frames) 710.005   - Rx (Frames) 710.005   - Rx Rate (Fps) 709.72   - Rx Rate (
- Rx (Frames) 710.861 - Rx Rate (L1) (Bit/s) 291,55 M - Rx Rate (Fps) 23.695 - Flood Count (Frames) 52 - P-0-0-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 696.887 - Rx Rate (L1) (Bit/s) 285.82 M - Rx Rate (Fps) 23.230 - Flood Count (Frames) 52 - P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 - P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.616 - Flood Count (Frames) 54 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Rx (Frames) 53 - Flood Count (Frames) 53 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,0 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,0 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,0 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 23.667 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.668 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.688
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rat
- Rx Rate (Fps) - 52  P-0-0-3  - Tx (Frames)
- Flood Count (Frames) 52 P-0-0-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 696.887 - Rx Rate (L1) (Bit/s) 285,82 M - Rx Rate (Fps) 23.230 - Flood Count (Frames) 52 P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.658 - Rx (Frames) 704.465 - Rx (Frames) 704.465 -
P-0-0-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 696.887 - Rx Rate (L1) (Bit/s) 285,82 M - Rx Rate (Fps) 23.230 - Flood Count (Frames) 52 P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.616 - Rx (Frames) 708.467 - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 52 - Flood Count (Frames) 52 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 52 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 52 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 52 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 54 - Rx Rate (Fps) 56 - Rx (Frames) 700.724 - Rx Rate (Fps) 56 - Rx (Frames) 700.724 - Rx Rate (Fps)
- Tx (Frames)
- Tx Rate (L1) (Bit/s)
- Tx Rate (Fps)
- Rx (Frames) 696.887 - Rx Rate (L1) (Bit/s) 285,82 M - Rx Rate (Fps) 23.230 - Flood Count (Frames) 52 P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.667 - Rx (Frames) 54 P-0-2-3 - Tx (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps)
- Rx Rate (Fps)
- Flood Count (Frames) 52 P-0-0-4 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 23.616 - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 - P-0-0-5 - Tx (Frames) 1.462.935 - Tx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - Tx (Frames) 1.462.935 - Tx (Frames) 1.462.935 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 33.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s)
- Tx Rate (Fps) 48.765 - Rx (Frames) 708.467 - Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 740.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps)
- Rx Rate (L1) (Bit/s) 290,57 M - Rx Rate (Fps) 23.616 - Flood Count (Frames) 54 P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 53 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 74.662.935 - Tx Rate (L1) (Bit/s) 291,21 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 74.662.935 - Tx Rate (L1) (Bit/s) 291,21 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 74.465 - Rx Rate (Fps) 23.482
- Rx Rate (Fps)
- Rx Rate (Fps)
P-0-0-5 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 - Flood Count (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 3.657 - Flood Count (Frames) 54 - P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 700.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 704.465 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps) 48.765 - Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - P-0-2-3 - Tx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx (Frames) 658.989 - Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 - P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 - Rx (Frames) 71.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (L1) (Bit/s) 270,27 M - Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.667 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps) 21.966 - Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,08 M - Tx Rate (Fps) 3.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Flood Count (Frames) 53 P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
P-0-2-0 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 - P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - Rx Rate (Fps) 548.765 - Tx (Frames) 709.724 - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 - Tx (Frames) 1.462.935 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 1.462.935 - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 - Rx (Frames) 710.029 - Rx Rate (Fps) 710.029
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps) 48.765 - Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.657 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (Fps) 23.482
- Rx (Frames) 710.005 - Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (L1) (Bit/s) 291,2 M - Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 3.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps) 23.667 - Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Flood Count (Frames) 52 P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
P-0-2-1 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 3.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 700 M - Tx Rate (Fps) 700 M - Tx Rate (Fps) 700 M - Tx Rate (Fps) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps) 48.765 - Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx (Frames) 709.724 - Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (L1) (Bit/s) 291,08 M - Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps) 23.657 - Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Flood Count (Frames) 54 P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
P-0-2-2 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps) 48.765 - Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx (Frames) 710.029 - Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (L1) (Bit/s) 291,21 M - Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps) 23.668 - Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Flood Count (Frames) 56 P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
P-0-2-3 - Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx (Frames) 1.462.935 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Tx Rate (Fps) 48.765 - Rx (Frames) 704.465 - Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx (Frames)       704.465         - Rx Rate (L1) (Bit/s)       288,92 M         - Rx Rate (Fps)       23.482
- Rx Rate (L1) (Bit/s) 288,92 M - Rx Rate (Fps) 23.482
- Rx Rate (Fps) 23.482
- Flood Count (Frames) 57
P-0-2-4
- Tx (Frames) 1.462.935
- Tx Rate (L1) (Bit/s) 600 M
- Tx Rate (Fps) 48.765
- Rx (Frames) 710.089



- Rx Rate (L1) (Bit/s)	291,23 M
- Rx Rate (Fps)	23.670
- Flood Count (Frames)	54
P-0-2-5	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	698.399
- Rx Rate (L1) (Bit/s)	286,44 M
- Rx Rate (Fps)	23.280
- Flood Count (Frames) P-0-4-0	55
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	709.403
- Rx Rate (L1) (Bit/s)	290,95 M
- Rx Rate (Fps)	23.647
- Flood Count (Frames)	58
P-0-4-1	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	711.337
- Rx Rate (L1) (Bit/s)	291,74 M
- Rx Rate (Fps)	23.711
- Flood Count (Frames)	53
P-0-4-2	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	711.191
- Rx Rate (L1) (Bit/s)	291,68 M 23.706
- Rx Rate (Fps) - Flood Count (Frames)	23.700
P-0-4-3	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	707.753
- Rx Rate (L1) (Bit/s)	290,27 M
- Rx Rate (Fps)	23.592
- Flood Count (Frames)	54
P-0-4-4	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	710.678
- Rx Rate (L1) (Bit/s)	291,47 M
- Rx Rate (Fps)	23.689
- Flood Count (Frames)	55
P-0-4-5	1 100 05=
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	710.274
- Rx Rate (L1) (Bit/s)	291,31 M 23.676
- Rx Rate (Fps) - Flood Count (Frames)	23.076
- 1 1000 Count (Frames)	30



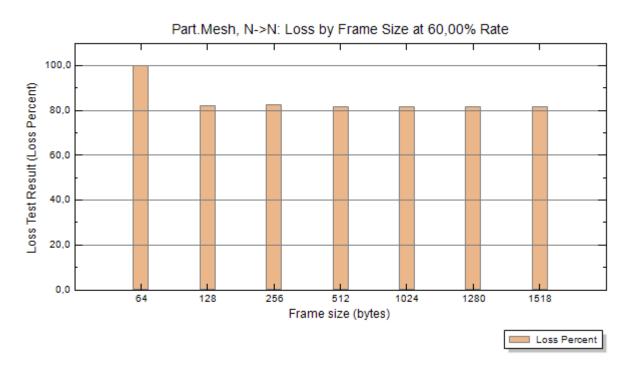

### Results for 70,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12,6 G	12,6 G	12,6 G	12,6 G	12,6 G	12,6 G
Tx Rate (Fps)	18.749.997	10.641.884	5.706.512	2.960.519	1.508.611	1.211.536
Rx Rate (Percent)	0,01 %	0,02 %	0,06 %	34,25 %	34,5 %	32,8 %
Rx Rate (L1) (Bit/s)	1,43 M	3,5 M	10,58 M	6,17 G	6,21 G	5,9 G
Rx Rate (Fps)	2,13 K	2,95 K	4,79 K	1,45 M	743,58 K	567,62 K
Loss Rate (Percent)	99,99 %	99,97 %	99,92 %	51,07 %	50,71 %	53,15 %
Loss (Frames)	562.436.007	319.167.882	171.051.630	45.358.301	22.951.057	19.317.538
P-0-0-0						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.288	4.947	8.524	2.363.879	1.239.593	948.205
- Rx Rate (L1) (Bit/s)	73,65 K	195,24 K	627,37 K	335,36 M	345,1 M	328,71 M
- Rx Rate (Fps)	110	165	284	78.796	41.320	31.607
- Flood Count (Frames)	29	29	26	25	23	24
P-0-0-1						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.876	5.300	8.499	2.423.115	1.239.480	947.639
- Rx Rate (L1) (Bit/s)	86,82 K	209,17 K	625,53 K	343,76 M	345,07 M	328,51 M
- Rx Rate (Fps)	129	177	283	80.771	41.316	31.588
- Flood Count (Frames)	62	61	59	52	54	56
P-0-0-2						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	2.217	5.339	8.424	2.422.826	1.239.632	947.833
- Rx Rate (L1) (Bit/s)	49,66 K	210,71 K	620,01 K	343,72 M	345,11 M	328,58 M
- Rx Rate (Fps)	74	178	281	80.761	41.321	31.594
- Flood Count (Frames)	56	59	59	57	58	52
P-0-0-3						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	4.053	5.341	8.376	2.424.026	1.239.480	948.500



- Rx Rate (L1) (Bit/s)	90,79 K	210,79 K	616,47 K	343,89 M	345,07 M	328,81 M
- Rx Rate (Fps)	135	178	279	80.801	41.316	31.617
- Flood Count (Frames)	61	61	59	54	56	55
P-0-0-4						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	4.007	5.371	8.186	2.325.651	1.239.189	947.531
- Rx Rate (L1) (Bit/s)	89,76 K	211,98 K	602,49 K	329,93 M	344,99 M	328,48 M
- Rx Rate (Fps)	134	179	273	77.522	41.306	31.584
- Flood Count (Frames)	59	61	59	55	57	56
P-0-0-5	04 040 005	47 700 474	0.540.054	4.004.400	0.544.054	0.040.000
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226 700 M
- Tx Rate (L1) (Bit/s)	700 M	700 M 591.216	700 M 317.028	700 M	700 M 83.812	67.308
- Tx Rate (Fps) - Rx (Frames)	1.041.667 4.004	5.379	8.564	164.473 2.420.042	1.239.721	948.104
- Rx Rate (L1) (Bit/s)	89,69 K	212,29 K	630,31 K			
- Rx Rate (LT) (Bil/S)	133	212,29 K	285	343,32 M 80.668	345,14 M 41.324	328,68 M 31.603
- Flood Count (Frames)	58	63	58	56	57	
P-0-2-0	36	03	36	30	57	54
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M 1.041.667	700 M 591.216	700 M 317.028	700 M 164.473	700 M 83.812	700 M 67.308
- Tx Rate (Fps) - Rx (Frames)		591.216	6.845	2.422.748	1.238.961	947.923
	4.053		503.79 K	-		
- Rx Rate (L1) (Bit/s)	90,79 K	210,95 K	, -	343,71 M	344,93 M	328,61 M
- Rx Rate (Fps)	135	178	228	80.758	41.299	31.597
- Flood Count (Frames) P-0-2-1	60	59	59	54	54	52
- Tx (Frames)	24 240 005	17 726 474	0.510.054	4.024.400	0.514.054	2.040.226
,	31.249.995	17.736.474	9.510.854 700 M	4.934.199	2.514.351 700 M	2.019.226 700 M
- Tx Rate (L1) (Bit/s)	700 M	700 M		700 M	83.812	
- Tx Rate (Fps)	1.041.667	591.216 5.367	317.028	164.473		67.308
- Rx (Frames)	2.216		8.242	2.421.496	1.238.906	948.095
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	49,64 K	211,82 K	606,61 K	343,53 M	344,91 M	328,67 M
- Flood Count (Frames)	74 58	179 60	275 59	80.717 54	41.297 55	31.603 54
P-0-2-2	36	00	39	54	33	
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Er) (Bit/s)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	2.216	3.525	7.859	2.423.621	1.238.894	948.597
- Rx Rate (L1) (Bit/s)	49.64 K	139,12 K	578,42 K	343,83 M	344,91 M	328,85 M
- Rx Rate (Fps)	74	118	262	80.787	41.296	31.620
- Flood Count (Frames)	60	57	59	53	55	53
P-0-2-3		0.				
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	4.023	5.355	8.397	2.424.273	1.239.541	941.615
- Rx Rate (L1) (Bit/s)	90,12 K	211,34 K	618,02 K	343,92 M	345,09 M	326,43 M
- Rx Rate (Fps)	134	179	280	80.809	41.318	31.387
- Flood Count (Frames)	61	59	61	58	57	53
P-0-2-4			0.		0.	
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.998	3.524	7.881	2.422.207	1.239.196	948.211
- Rx Rate (L1) (Bit/s)	89,56 K	139,08 K	580,04 K	343,63 M	344,99 M	328,71 M
- Rx Rate (Fps)	133	117	263	80.740	41.307	31.607
- Flood Count (Frames)	57	60	60	53	55	55
P-0-2-5						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	4.024	5.224	8.014	2.423.969	1.238.991	916.850
- Rx Rate (L1) (Bit/s)	90,14 K	206,17 K	589,83 K	343,88 M	344,94 M	317,84 M
- Rx Rate (Fps)	134	174	267	80.799	41.300	30.562
- Flood Count (Frames)	61	64	57	54	56	56.502
P-0-4-0	01	04	31	J4	30	30
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (ET) (Bit/S)	1.041.667	591.216	317.028	164.473	83.812	67.308
- 17 Mare (Lhs)	1.041.007	J8 1.2 10	317.020	104.473	03.012	01.300



- Rx (Frames)	4.005	5.063	7.707	2.423.071	1.240.340	948.668
- Rx Rate (L1) (Bit/s)	89,71 K	199,82 K	567,24 K	343,75 M	345,31 M	328,87 M
- Rx Rate (Fps)	134	169	257	80.769	41.345	31.622
- Flood Count (Frames)	57	55	58	57	52	53
P-0-4-1						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	4.014	4.940	7.607	2.424.077	1.239.357	948.269
- Rx Rate (L1) (Bit/s)	89,91 K	194,97 K	559,88 K	343,9 M	345,04 M	328,73 M
- Rx Rate (Fps)	134	165	254	80.803	41.312	31.609
- Flood Count (Frames)	58	57	56	58	53	52
P-0-4-2						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.795	4.850	7.996	2.423.416	1.238.936	947.617
- Rx Rate (L1) (Bit/s)	85,01 K	191,41 K	588,51 K	343,8 M	344,92 M	328,51 M
- Rx Rate (Fps)	127	162	267	80.781	41.298	31.587
- Flood Count (Frames)	59	59	59	56	56	52
P-0-4-3						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.595	4.670	7.523	2.424.746	1.239.058	948.259
- Rx Rate (L1) (Bit/s)	80,53 K	184,31 K	553,69 K	343,99 M	344,95 M	328,73 M
- Rx Rate (Fps)	120	156	251	80.825	41.302	31.609
- Flood Count (Frames)	60	57	61	58	56	54
P-0-4-4						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.388	4.593	7.734	2.423.095	1.238.906	948.012
- Rx Rate (L1) (Bit/s)	75,89 K	181,27 K	569,22 K	343,76 M	344,91 M	328,64 M
- Rx Rate (Fps)	113	153	258	80.770	41.297	31.600
- Flood Count (Frames)	56	55	56	58	54	54
P-0-4-5						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	3.131	4.517	7.364	2.421.023	1.239.080	948.602
- Rx Rate (L1) (Bit/s)	70,13 K	178,27 K	541,99 K	343,46 M	344,96 M	328,85 M
- Rx Rate (Fps)	104	151	245	80.701	41.303	31.620
- Flood Count (Frames)	58	57	53	56	57	56

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12,6 G
Tx Rate (Fps)	1.024.049
Rx Rate (Percent)	34,19 %
Rx Rate (L1) (Bit/s)	6,15 G
Rx Rate (Fps)	500,21 K
Loss Rate (Percent)	51,15 %
Loss (Frames)	15.715.287
P-0-0-0	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	832.309
- Rx Rate (L1) (Bit/s)	341,36 M
- Rx Rate (Fps)	27.744
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	833.676
- Rx Rate (L1) (Bit/s)	341,92 M




- Rx Rate (Fps)	27.789
- Flood Count (Frames)	55
P-0-0-2 - Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	830.505
- Rx Rate (L1) (Bit/s)	340,62 M
- Rx Rate (Fps)	27.684
- Flood Count (Frames)	53
P-0-0-3	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames) - Rx Rate (L1) (Bit/s)	837.203 343,36 M
- Rx Rate (E1) (Bit/s)	27.907
- Flood Count (Frames)	53
P-0-0-4	- 33
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	833.998
- Rx Rate (L1) (Bit/s)	342,05 M
- Rx Rate (Fps)	27.800
- Flood Count (Frames)	54
P-0-0-5	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892 837.298
- Rx (Frames) - Rx Rate (L1) (Bit/s)	343,4 M
- Rx Rate (E1) (Bit/s)	27.910
- Flood Count (Frames)	55
P-0-2-0	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	837.287
- Rx Rate (L1) (Bit/s)	343,4 M
- Rx Rate (Fps)	27.910
- Flood Count (Frames)	54
P-0-2-1	4 700 740
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	699,99 M 56.892
- Rx (Frames)	807.435
- Rx Rate (L1) (Bit/s)	331,16 M
- Rx Rate (Fps)	26.915
- Flood Count (Frames)	55
P-0-2-2	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	836.964
- Rx Rate (L1) (Bit/s)	343,27 M
- Rx Rate (Fps)	27.899
- Flood Count (Frames)	57
P-0-2-3	1 706 740
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.706.749 699,99 M
- Tx Rate (ET) (Bit/s)	56.892
- Rx (Frames)	833.578
- Rx Rate (L1) (Bit/s)	341,88 M
- Rx Rate (Fps)	27.786
- Flood Count (Frames)	56
P-0-2-4	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps) - Rx (Frames)	56.892
	836.382



- Rx Rate (L1) (Bit/s) 343,03 M - Rx Rate (Fps) 27.879 - Flood Count (Frames) 56 P-0-2-5 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 33.483 - Rx Rate (L1) (Bit/s) 341,84 M - Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (Fps) 27.869 - Rx (Frames) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 35.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 36.723 - Tx (Frames) 56.892 - Rx (Frames) 57.790 - Flood Count (Frames) 55 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 57.790 - Flood Count (Frames) 55
- Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - S6.892 - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rat
P-0-2-5 - Tx (Frames)
- Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.483 - Rx Rate (L1) (Bit/s) 341,84 M - Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 - P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.890 - Flood Count (Frames) 56 - P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 56.8
- Tx Rate (L1) (Bit/s) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 833.483 - Rx Rate (L1) (Bit/s) 341,84 M - Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 - P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (Fps) 27.869 - Flood Count (Frames) 756 - Flood Count (Frames) 757 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frame
- Tx Rate (Fps) 56.892 - Rx (Frames) 833.483 - Rx Rate (L1) (Bit/s) 341,84 M - Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 54 - P-0-4-4 - Tx (Frames) 56.892 - Rx (Frames)
- Rx (Frames) 833.483 - Rx Rate (L1) (Bit/s) 341,84 M - Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 -0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56.892 - Rx (Frames) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 -0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 -0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55.892 - Rx (Frames) 56.892 - Rx (Frames) 5
- Rx Rate (L1) (Bit/s)
- Rx Rate (Fps) 27.783 - Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (Fps) 27.869 - Rx (Frames) 836.081 - Rx Rate (Fps) 27.869 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892
- Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps
P-0-4-0 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 - P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (Fps) 27.869 - Rx (Frames) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.869 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 33.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892
- Tx Rate (L1) (Bit/s) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 - P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 355 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 27.864 - Flood Count (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55.892 - Rx (Frames) 56.892
- Tx Rate (Fps) 56.892 - Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.869 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-8 - Tx (Frames) 55 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Rx (Frames) 836.688 - Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.869 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-7 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Rx Rate (L1) (Bit/s) 343,15 M - Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.869 - Rx (Frames) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 55 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-7 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Rx Rate (Fps) 27.890 - Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 342,9 M - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 363.723 - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-7 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Flood Count (Frames) 56 P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 363.723 - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-4 - Tx (Frames) 56.892 - Rx (Frames) 56.892 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 56.892 - Rx (Frames) 56.892
P-0-4-1 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Flood Count (Frames) 55 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (Fps) 56.892 - Rx (Frames) 54 - Rx Rate (Fps) 56.892 - Rx (Frames) 54 - Rx Rate (Fps) 56.892 - Rx (Frames) 54 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 343,708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 55.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - Rx (Frames) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 54.991 - Flood Count (Frames) 54 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 54 - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 - Respond From State (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 342,84 M - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - Respond From State (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 54 - Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Tx Rate (Fps) 56.892 - Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Rx (Frames) 835.914 - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 27.864 - Flood Count (Frames) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-8 - Tx (Frames) 54 P-0-4-9 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892
- Rx (Frames) 836.081 - Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-7 - Tx (Frames) 56.892 - Rx (Frames) 56.892
- Rx Rate (L1) (Bit/s) 342,9 M - Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 342,84 M - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-0-4-7 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 333.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx Rate (Fps) 27.869 - Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 333.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Flood Count (Frames) 55 P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 54 P-0-4-4 - Tx (Frames) 54 P-1-4-4 - Tx (Frames) 55 Rx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
P-0-4-2 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 -0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 - Tx (Frames) 54 - Tx (Frames) 54 - Tx Rate (Fps) 56.892 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 - Tx (Frames) 56.892 - Rx (Frames) 56.892
- Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 - P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 - P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 - P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 37.891 - Rx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (Fps) 56.892 - Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx (Frames) 835.914 - Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.749 - Tx Rate (Fps) 56.892 - Rx (Frames) 33.708 - Rx Rate (Fps) 56.892 - Rx (Frames) 55.892 - Rx (Frames) 55.893
- Rx Rate (L1) (Bit/s) 342,84 M - Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx Rate (Fps) 27.864 - Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Flood Count (Frames) 55 P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
P-0-4-3 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 33.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (Fps) 56.892 - Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx (Frames) 836.723 - Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx Rate (L1) (Bit/s) 343,17 M - Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx Rate (Fps) 27.891 - Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Flood Count (Frames) 54 P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
P-0-4-4 - Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx (Frames) 1.706.749 - Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (L1) (Bit/s) 699,99 M - Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Tx Rate (Fps) 56.892 - Rx (Frames) 833.708 - Rx Rate (L1) (Bit/s) 341,93 M - Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Rx (Frames)       833.708         - Rx Rate (L1) (Bit/s)       341,93 M         - Rx Rate (Fps)       27.790         - Flood Count (Frames)       55
- Rx Rate (L1) (Bit/s)       341,93 M         - Rx Rate (Fps)       27.790         - Flood Count (Frames)       55
- Rx Rate (Fps) 27.790 - Flood Count (Frames) 55
- Flood Count (Frames) 55
P-0-4-5
- Tx (Frames) 1.706.749
- Tx Rate (L1) (Bit/s) 699,99 M
- Tx Rate (Fps) 56.892
- Rx (Frames) 836.963
- Rx Rate (L1) (Bit/s) 343,27 M
- Rx Rate (Fps) 27.899
- Flood Count (Frames) 55



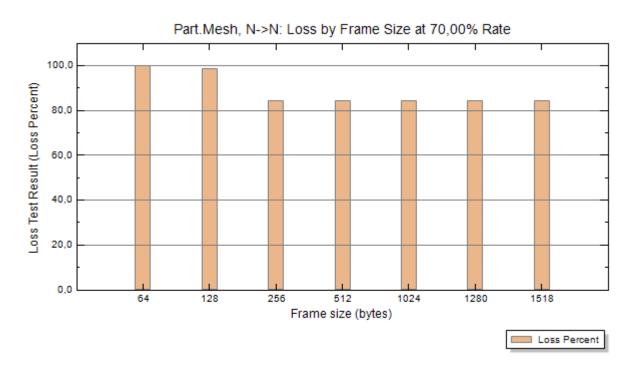

#### Results for 80,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14,4 G	14,4 G	14,4 G	14,4 G	14,4 G	14,4 G
Tx Rate (Fps)	21.428.568	12.162.154	6.521.737	3.383.452	1.724.137	1.384.609
Rx Rate (Percent)	0,01 %	0,02 %	0,05 %	37,7 %	37,92 %	38,4 %
Rx Rate (L1) (Bit/s)	1,12 M	2,92 M	9,11 M	6,79 G	6,82 G	6,91 G
Rx Rate (Fps)	1,67 K	2,46 K	4,12 K	1,59 M	817,14 K	664,7 K
Loss Rate (Percent)	99,99 %	99,98 %	99,94 %	52,88 %	52,61 %	51,99 %
Loss (Frames)	642.806.829	364.790.720	195.528.387	53.675.801	27.209.933	21.597.419
P-0-0-0						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	1.509	3.018	6.115	2.669.986	1.363.936	1.109.360
- Rx Rate (L1) (Bit/s)	33,8 K	119,11 K	450,06 K	378,78 M	379,72 M	384,58 M
- Rx Rate (Fps)	50	101	204	89.000	45.465	36.979
- Flood Count (Frames)	33	30	25	27	25	22
P-0-0-1						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.623	3.019	7.426	2.669.451	1.363.818	1.109.506
- Rx Rate (L1) (Bit/s)	58,76 K	119,15 K	546,55 K	378,71 M	379,69 M	384,63 M
- Rx Rate (Fps)	87	101	248	88.982	45.461	36.984
- Flood Count (Frames)	59	58	59	58	55	54
P-0-0-2						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.899	4.539	6.116	2.589.983	1.364.247	1.109.270
- Rx Rate (L1) (Bit/s)	64,94 K	179,14 K	450,14 K	367,43 M	379,81 M	384,55 M
- Rx Rate (Fps)	97	151	204	86.333	45.475	36.976
- Flood Count (Frames)	61	59	59	55	54	54
P-0-0-3						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.936	3.020	7.580	2.669.365	1.365.208	1.109.246



- Rx Rate (L1) (Bit/s)	65,77 K	119,19 K	557,89 K	378,69 M	380,07 M	384,54 M
- Rx Rate (Fps)	98	101	253	88.979	45.507	36.975
- Flood Count (Frames)	61	60	59	56	57	53
P-0-0-4	05 744 000	00 070 050	40,000,500	5 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.966	4.878	6.118	2.668.933	1.364.102	1.109.319
- Rx Rate (L1) (Bit/s)	66,44 K	192,52 K	450,28 K	378,63 M	379,77 M	384,56 M
- Rx Rate (Fps)	99	163	204	88.964	45.470	36.977
- Flood Count (Frames)	59	63	60	52	55	55
P-0-0-5	05 744 000	00.070.050	10 000 500	5 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.981	3.020	7.655	2.670.166	1.364.019	1.109.715
- Rx Rate (L1) (Bit/s)	66,77 K	119,19 K	563,41 K	378,81 M	379,74 M	384,7 M
- Rx Rate (Fps)	99	101	255	89.006	45.467	36.991
- Flood Count (Frames)	60	58	58	55	54	55
P-0-2-0	25 744 200	20 270 250	40,000,500	F 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.990	4.972	7.620	2.553.903	1.364.953	1.109.481
- Rx Rate (L1) (Bit/s)	66,98 K	196,23 K	560,83 K	362,31 M	380 M	384,62 M
- Rx Rate (Fps)	100	166	254	85.130	45.498	36.983
- Flood Count (Frames)	59	61	59	55	55	55
P-0-2-1	05 744 000	00 070 050	40,000,500	5 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.981	4.918	7.472	2.667.839	1.313.281	1.082.290
- Rx Rate (L1) (Bit/s)	66,77 K	194,1 K	549,94 K	378,48 M	365,62 M	375,19 M
- Rx Rate (Fps)	99	164	249	88.928	43.776	36.076
- Flood Count (Frames)	61	61	58	54	56	54
P-0-2-2	05 744 000	00.070.050	40,000,500	5 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	3.003	4.933	7.416	2.668.068	1.365.449	1.109.464
- Rx Rate (L1) (Bit/s)	67,27 K	194,69 K	545,82 K	378,51 M	380,14 M	384,61 M
- Rx Rate (Fps)	100	164	247	88.936	45.515	36.982
- Flood Count (Frames) P-0-2-3	56	59	59	53	55	54
	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx (Frames)						
- Tx Rate (L1) (Bit/s)	800 M	800 M 675.675	800 M 362.319	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476			187.970	95.785	76.923
- Rx (Frames)	2.988 66,93 K	3.020	7.346	2.657.754	1.364.821 379,97 M	1.105.508 383,24 M
- Rx Rate (L1) (Bit/s)		119,19 K	540,67 K	377,05 M		
- Rx Rate (Fps)	100	101	245	88.592	45.494	36.850
- Flood Count (Frames) P-0-2-4	60	58	61	55	55	56
	25 714 200	20 270 256	10.000.500	E 620 007	0 070 FG1	2 207 602
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.984	3.022	5.724	2.669.177	1.365.379	1.108.714
- Rx Rate (L1) (Bit/s)	66,84 K	119,27 K	421,29 K	378,67 M	380,12 M	384,35 M
- Rx Rate (Fps)	99	101	191	88.973	45.513	36.957
- Flood Count (Frames)	59	55	59	56	57	54
P-0-2-5	05 744 000	00 070 050	40,000,500	5 000 007	0.070.504	0.007.000
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	3.000	4.932	5.646	2.662.314	1.365.339	1.109.724
- Rx Rate (L1) (Bit/s)	67,2 K	194,65 K	415,55 K	377,69 M	380,11 M	384,7 M
- Rx Rate (Fps)	100	164	188	88.744	45.511	36.991
- Flood Count (Frames)	63	60	57	55	55	57
P-0-4-0	05.744.000	00.070.070	10.000 =00	F 000 00=	0.070.70	0.00= 0==
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923



- Rx (Frames)	2.992	4.812	7.103	2.667.624	1.365.355	1.110.456
- Rx Rate (L1) (Bit/s)	67,02 K	189,91 K	522,78 K	378,45 M	380,11 M	384,96 M
- Rx Rate (Fps)	100	160	237	88.921	45.512	37.015
- Flood Count (Frames)	57	58	58	60	54	55
P-0-4-1						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.984	4.644	7.128	2.669.347	1.365.174	1.110.096
- Rx Rate (L1) (Bit/s)	66,84 K	183,28 K	524,62 K	378,69 M	380,06 M	384,83 M
- Rx Rate (Fps)	99	155	238	88.978	45.506	37.003
- Flood Count (Frames)	56	60	58	55	54	55
P-0-4-2						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.953	4.522	6.991	2.668.386	1.365.112	1.109.616
- Rx Rate (L1) (Bit/s)	66,15 K	178,47 K	514,54 K	378,56 M	380,05 M	384,67 M
- Rx Rate (Fps)	98	151	233	88.946	45.504	36.987
- Flood Count (Frames)	58	57	62	55	54	55
P-0-4-3						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.729	4.357	6.753	2.668.192	1.364.214	1.109.233
- Rx Rate (L1) (Bit/s)	61,13 K	171,96 K	497,02 K	378,53 M	379,8 M	384,53 M
- Rx Rate (Fps)	91	145	225	88.940	45.474	36.974
- Flood Count (Frames)	60	56	59	58	56	55
P-0-4-4						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.471	4.201	6.785	2.668.169	1.364.996	1.109.701
- Rx Rate (L1) (Bit/s)	55,35 K	165,8 K	499,38 K	378,52 M	380,01 M	384,7 M
- Rx Rate (Fps)	82	140	226	88.939	45.500	36.990
- Flood Count (Frames)	58	61	57	54	56	55
P-0-4-5						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	2.222	4.061	6.735	2.669.108	1.364.762	1.110.158
- Rx Rate (L1) (Bit/s)	49,77 K	160,27 K	495,7 K	378,66 M	379,95 M	384,85 M
- Rx Rate (Fps)	74	135	225	88.970	45.492	37.005
- Flood Count (Frames)	60	59	58	54	56	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14,4 G
Tx Rate (Fps)	1.170.348
Rx Rate (Percent)	38 %
Rx Rate (L1) (Bit/s)	6,84 G
Rx Rate (Fps)	555,91 K
Loss Rate (Percent)	52,5 %
Loss (Frames)	18.432.993
P-0-0-0	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	926.171
- Rx Rate (L1) (Bit/s)	379,85 M
- Rx Rate (Fps)	30.872
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	926.324
- Rx Rate (L1) (Bit/s)	379,92 M




- Rx Rate (Fps)	30.877
- Flood Count (Frames)	54
P-0-0-2	4 050 500
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 65.019
- Rx (Frames)	926.413
- Rx Rate (L1) (Bit/s)	379,95 M
- Rx Rate (Fps)	30.880
- Flood Count (Frames)	57
P-0-0-3	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.044
- Rx Rate (L1) (Bit/s)	380,21 M
- Rx Rate (Fps)	30.901
- Flood Count (Frames)	58
P-0-0-4	4 050 500
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M 65.019
- Tx Rate (Fps) - Rx (Frames)	926.347
- Rx (Flames)	379,93 M
- Rx Rate (ET) (Bit/s)	379,93 M
- Flood Count (Frames)	50.070
P-0-0-5	34
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.161
- Rx Rate (L1) (Bit/s)	380,26 M
- Rx Rate (Fps)	30.905
- Flood Count (Frames)	55
P-0-2-0	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.603
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	380,44 M 30.920
- Flood Count (Frames)	50.920
P-0-2-1	30
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	926.662
- Rx Rate (L1) (Bit/s)	380,05 M
- Rx Rate (Fps)	30.889
- Flood Count (Frames)	54
P-0-2-2	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.972
- Rx Rate (L1) (Bit/s)	380,59 M
- Rx Rate (Fps)	30.932
- Flood Count (Frames) P-0-2-3	54
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (ET) (Bit/s)	65.019
- Rx (Frames)	927.663
- Rx Rate (L1) (Bit/s)	380,47 M
- Rx Rate (Fps)	30.922
- Flood Count (Frames)	54
P-0-2-4	
- Tx (Frames)	1.950.580
	800 M
- Tx Rate (L1) (Bit/s)	000 101
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	65.019 927.691



Dv Data (L4) (Dit/a)	200 40 14
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	380,48 M 30.923
- Flood Count (Frames)	56
P-0-2-5	30
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	921.164
- Rx Rate (L1) (Bit/s)	377,8 M
- Rx Rate (Fps)	30.705
- Flood Count (Frames)	58
P-0-4-0	30
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	926.755
- Rx Rate (L1) (Bit/s)	380,09 M
	30.892
- Rx Rate (Fps)	
- Flood Count (Frames) P-0-4-1	56
	1 050 500
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	926.711
- Rx Rate (L1) (Bit/s)	380,08 M
- Rx Rate (Fps)	30.890
- Flood Count (Frames)	55
P-0-4-2	4.050.500
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	925.763
- Rx Rate (L1) (Bit/s)	379,69 M
- Rx Rate (Fps)	30.859
- Flood Count (Frames)	54
P-0-4-3	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.248
- Rx Rate (L1) (Bit/s)	380,3 M
- Rx Rate (Fps)	30.908
- Flood Count (Frames)	56
P-0-4-4	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	925.713
- Rx Rate (L1) (Bit/s)	379,67 M
- Rx Rate (Fps)	30.857
- Flood Count (Frames)	54
P-0-4-5	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	927.042
- Rx Rate (L1) (Bit/s)	380,21 M
- Rx Rate (Fps)	30.901
- Flood Count (Frames)	52
(	



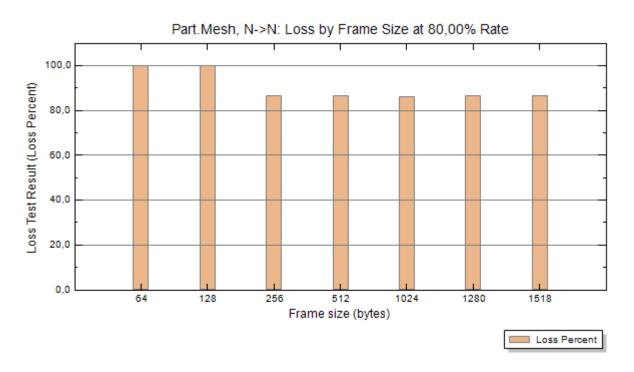

#### Results for 90,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16,2 G	16,2 G	16,2 G	16,2 G	16,2 G	16,2 G
Tx Rate (Fps)	24.107.139	13.682.423	7.336.952	3.806.385	1.939.652	1.557.683
Rx Rate (Percent)	0.01 %	0,01 %	0.03 %	11,89 %	11,97 %	15,55 %
Rx Rate (L1) (Bit/s)	976,77 K	2,49 M	5,55 M	2,14 G	2,16 G	2,8 G
Rx Rate (Fps)	1,45 K	2,1 K	2,51 K	502,77 K	258,06 K	269,07 K
Loss Rate (Percent)	99,99 %	99,98 %	99,97 %	86,79 %	86,7 %	82,73 %
Loss (Frames)	723.170.564	410.409.610	220.033.177	99.108.403	50.447.718	38.658.505
P-0-0-0						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	1.706	3.374	4.961	1.011.438	0	503.436
- Rx Rate (L1) (Bit/s)	38,21 K	133,16 K	365,13 K	143,49 M	0	174,52 M
- Rx Rate (Fps)	57	112	165	33.715	0	16.781
- Flood Count (Frames)	30	31	28	16	1	17
P-0-0-1						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.577	0	0	1.012.169	516.827	508.207
- Rx Rate (L1) (Bit/s)	57,72 K	0	0	143,59 M	143,88 M	176,18 M
- Rx Rate (Fps)	86	0	0	33.739	17.228	16.940
- Flood Count (Frames)	61	1	1	29	30	38
P-0-0-2						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.880	0	5.175	1.011.221	511.908	0
- Rx Rate (L1) (Bit/s)	64,51 K	0	380,88 K	143,46 M	142,52 M	0
- Rx Rate (Fps)	96	0	173	33.707	17.064	0
- Flood Count (Frames)	61	1	58	25	30	1
P-0-0-3						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	1.706	0	0	1.011.619	516.861	510.105



- Rx Rate (L1) (Bit/s)	38,21 K	0	0	143,52 M	143,89 M	176,84 M
- Rx Rate (Fps)	57	0	0	33.721	17.229	17.004
- Flood Count (Frames)	59	1	1	26	30	30
P-0-0-4	10 1=0 =0=	22 22 4 222	10.000.000	0.040.0==	2 222 == 1	0 -00 100
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.900	4.400	5.330	1.009.929	513.667	502.949
- Rx Rate (L1) (Bit/s)	64,96 K	173,65 K	392,29 K	143,28 M	143 M	174,36 M
- Rx Rate (Fps)	97	147	178	33.664	17.122	16.765
- Flood Count (Frames)	59	61	59	29	29	31
P-0-0-5	40 470 505	00 004 000	40,000,050	0.040.075	0.000.754	0.500.400
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.928	4.382	0	0	517.148	503.270
- Rx Rate (L1) (Bit/s)	65,59 K	172,94 K	0	0	143,97 M	174,47 M
- Rx Rate (Fps)	98	146	0	0	17.238	16.776
- Flood Count (Frames) P-0-2-0	01	59	I	I	33	36
	40 470 EGE	22 004 020	10 000 050	6.343.975	2 222 754	2 506 120
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40.178.565 900 M	22.804.038 900 M	12.228.253 900 M	900 M	3.232.754 900 M	2.596.138 899,99 M
- Tx Rate (LT) (Bit/s)	1.339.286	760.135	407.608	211.466	107.758	86.538
	1.339.286	4.382	5.440		517.620	501.920
- Rx (Frames)				0		
- Rx Rate (L1) (Bit/s)	0	172,94 K	400,38 K	0	144,11 M	174 M
- Rx Rate (Fps)		146	181	0	17.254	16.731
- Flood Count (Frames) P-0-2-1	1	59	59	1	32	27
-	40.178.565	22.804.038	10 000 050	6 242 075	2 222 754	2 506 120
- Tx (Frames) - Tx Rate (L1) (Bit/s)			12.228.253	6.343.975	3.232.754 900 M	2.596.138
	900 M 1.339.286	900 M	900 M	900 M		899,99 M
- Tx Rate (Fps)		760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.901	4.352	5.501	1.008.508	0	501.952
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	64,98 K 97	171,76 K 145	404,87 K 183	143,07 M 33.617	0	174,01 M 16.732
- Flood Count (Frames)	61	57	59	33.017	1	30
P-0-2-2	01	37	39	34	- I	30
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx (Frames)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (E1) (Bit/s)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	1.707	4.441	0	1.002.223	517.885	506.528
- Rx Rate (L1) (Bit/s)	38,24 K	175,27 K	0	142,18 M	144,18 M	175,6 M
- Rx Rate (Fps)	57	148	0	33.407	17.263	16.884
- Flood Count (Frames)	62	59	1	29	32	35
P-0-2-3						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.892	4.426	5.605	1.007.020	0	503.925
- Rx Rate (L1) (Bit/s)	64,78 K	174,68 K	412,53 K	142,86 M	0	174,69 M
- Rx Rate (Fps)	96	148	187	33.567	0	16.798
- Flood Count (Frames)	63	59	61	30	1	27
P-0-2-4						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.908	4.427	5.772	0	519.718	500.472
- Rx Rate (L1) (Bit/s)	65,14 K	174,72 K	424,82 K	0	144,69 M	173,5 M
- Rx Rate (Fps)	97	148	192	0	17.324	16.682
- Flood Count (Frames)	61	56	59	1	31	37
P-0-2-5					01	
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.872	4.475	5.728	1.002.049	514.774	0
- Rx Rate (L1) (Bit/s)	64,33 K	176,61 K	421,58 K	142,16 M	143,31 M	0
- Rx Rate (Fps)	96	149	191	33.402	17.159	0
- Flood Count (Frames)	62	61	58	35	31	1
- FIOOG Conniterames	02	01	50	55	01	<u> </u>
P-0-4-0	40 178 565	22 804 038	12 228 253	6 343 975	3 232 754	2 596 138
	40.178.565 900 M	22.804.038 900 M	12.228.253 900 M	6.343.975 900 M	3.232.754 900 M	2.596.138 899,99 M



- Rx (Frames)	2.866	4.437	5.584	993.369	521.000	506.315
- Rx Rate (L1) (Bit/s)	64,2 K	175,11 K	410,98 K	140,93 M	145,05 M	175,52 M
- Rx Rate (Fps)	96	148	186	33.112	17.367	16.877
- Flood Count (Frames)	58	58	59	29	28	28
P-0-4-1						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.874	4.320	5.668	1.000.925	514.556	504.785
- Rx Rate (L1) (Bit/s)	64,38 K	170,5 K	417,16 K	142 M	143,25 M	174,99 M
- Rx Rate (Fps)	96	144	189	33.364	17.152	16.826
- Flood Count (Frames)	56	59	58	27	33	31
P-0-4-2						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.867	4.193	5.591	1.005.420	517.202	506.592
- Rx Rate (L1) (Bit/s)	64,22 K	165,48 K	411,5 K	142,64 M	143,99 M	175,62 M
- Rx Rate (Fps)	96	140	186	33.514	17.240	16.886
- Flood Count (Frames)	60	59	57	33	30	27
P-0-4-3						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.644	3.962	5.107	1.000.233	514.987	501.327
- Rx Rate (L1) (Bit/s)	59,23 K	156,37 K	375,88 K	141,9 M	143,37 M	173,79 M
- Rx Rate (Fps)	88	132	170	33.341	17.166	16.711
- Flood Count (Frames)	61	60	58	27	39	39
P-0-4-4						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.338	3.832	5.033	1.003.475	514.172	505.472
- Rx Rate (L1) (Bit/s)	52,37 K	151,24 K	370,43 K	142,36 M	143,15 M	175,23 M
- Rx Rate (Fps)	78	128	168	33.449	17.139	16.849
- Flood Count (Frames)	57	58	59	25	28	35
P-0-4-5						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	2.040	3.671	4.882	1.003.549	513.529	504.724
- Rx Rate (L1) (Bit/s)	45,7 K	144,88 K	359,32 K	142,37 M	142,97 M	174,97 M
- Rx Rate (Fps)	68	122	163	33.452	17.118	16.824
- Flood Count (Frames)	59	58	59	30	32	36

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16,2 G
Tx Rate (Fps)	1.316.636
Rx Rate (Percent)	23,64 %
Rx Rate (L1) (Bit/s)	4,25 G
Rx Rate (Fps)	345,77 K
Loss Rate (Percent)	73,74 %
Loss (Frames)	29.126.081
P-0-0-0	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	620.165
- Rx Rate (L1) (Bit/s)	254,35 M
- Rx Rate (Fps)	20.672
- Flood Count (Frames)	21
P-0-0-1	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	626.881
- Rx Rate (L1) (Bit/s)	257,1 M




D D ( /F )	22.222
- Rx Rate (Fps)	20.896
- Flood Count (Frames)	44
P-0-0-2 - Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	619.412
- Rx Rate (L1) (Bit/s)	254,04 M
- Rx Rate (Fps)	20.647
- Flood Count (Frames)	36
P-0-0-3	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	623.236
- Rx Rate (L1) (Bit/s)	255,61 M
- Rx Rate (Fps)	20.775
- Flood Count (Frames)	39
P-0-0-4	0.404.004
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	899,99 M
- TX Rate (Fps) - Rx (Frames)	73.146 610.099
- Rx (Frames) - Rx Rate (L1) (Bit/s)	250,22 M
- Rx Rate (ET) (Blus)	20.337
- Flood Count (Frames)	20.337
P-0-0-5	30
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	616.030
- Rx Rate (L1) (Bit/s)	252,65 M
- Rx Rate (Fps)	20.534
- Flood Count (Frames)	35
P-0-2-0	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	2
P-0-2-1	2 104 204
- Tx (Frames)	2.194.394 899,99 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	73.146
- Rx (Frames)	618.753
- Rx Rate (L1) (Bit/s)	253,77 M
- Rx Rate (Fps)	20.625
- Flood Count (Frames)	39
P-0-2-2	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	600.811
- Rx Rate (L1) (Bit/s)	246,41 M
- Rx Rate (Fps)	20.027
- Flood Count (Frames)	40
P-0-2-3	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	587.624
- Rx Rate (L1) (Bit/s)	241 M
- Rx Rate (Fps)	19.587
- Flood Count (Frames)	34
P-0-2-4	2 104 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2.194.394
- Tx Rate (E1) (Bl/s)	899,99 M 73.146
- Rx (Frames)	597.981
i to (i idilios)	331.301



- Rx Rate (L1) (Bit/s)	245,25 M
- Rx Rate (Fps)	19.933
- Flood Count (Frames)	36
P-0-2-5	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	590.707
- Rx Rate (L1) (Bit/s)	242,27 M
- Rx Rate (Fps)	19.690
- Flood Count (Frames)	33
P-0-4-0	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	593.234
- Rx Rate (L1) (Bit/s)	243,31 M
- Rx Rate (Fps)	19.774
- Flood Count (Frames)	42
P-0-4-1	·
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	613.080
- Rx Rate (L1) (Bit/s)	251,44 M
- Rx Rate (Fps)	20.436
- Flood Count (Frames)	40
P-0-4-2	70
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (ET) (Bl/s)	73.146
- Rx (Frames)	609.236
- Rx Rate (L1) (Bit/s)	249,87 M
- Rx Rate (Er) (Bit/s)	20.308
- Flood Count (Frames)	37
P-0-4-3	31
	2 104 204
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	609.427
- Rx Rate (L1) (Bit/s)	249,95 M
- Rx Rate (Fps)	20.314
- Flood Count (Frames)	37
P-0-4-4	0.404.004
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	623.342
- Rx Rate (L1) (Bit/s)	255,65 M
- Rx Rate (Fps)	20.778
- Flood Count (Frames)	46
P-0-4-5	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	612.993
- Rx Rate (L1) (Bit/s)	251,41 M
- Rx Rate (Fps)	20.433
- Flood Count (Frames)	40



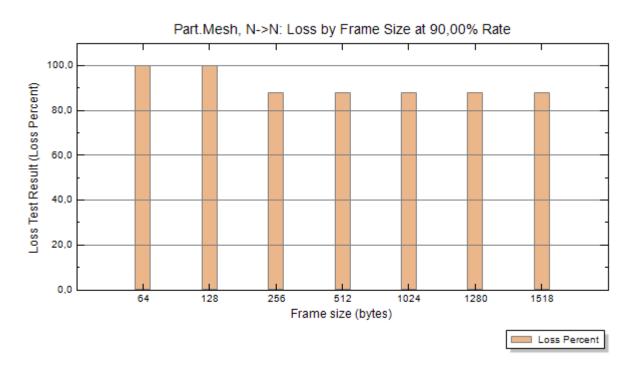

### Results for 100,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26.785.710	15.202.702	8.152.166	4.229.318	2.155.168	1.730.767
Rx Rate (Percent)	0 %	0,01 %	0,03 %	11,84 %	9,44 %	15,76 %
Rx Rate (L1) (Bit/s)	758,04 K	2,6 M	6,16 M	2,13 G	1,7 G	2,84 G
Rx Rate (Fps)	1,13 K	2,19 K	2,79 K	500,65 K	203,39 K	272,69 K
Loss Rate (Percent)	100 %	99,99 %	99,97 %	88,16 %	90,56 %	84,24 %
Loss (Frames)	803.537.459	456.015.270	244.481.359	111.860.138	58.553.452	43.742.278
P-0-0-0						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	1.856	3.679	5.170	1.013.074	441.343	508.924
- Rx Rate (L1) (Bit/s)	41,57 K	145,2 K	380,51 K	143,72 M	122,87 M	176,43 M
- Rx Rate (Fps)	62	123	172	33.769	14.711	16.964
- Flood Count (Frames)	26	29	28	17	14	18
P-0-0-1						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.262	2.668	0	1.002.930	433.080	510.847
- Rx Rate (L1) (Bit/s)	50,67 K	105,3 K	0	142,28 M	120,57 M	177,09 M
- Rx Rate (Fps)	75	89	0	33.431	14.436	17.028
- Flood Count (Frames)	61	79	1	33	28	28
P-0-0-2						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.262	4.458	5.492	1.008.162	0	519.121
- Rx Rate (L1) (Bit/s)	50,67 K	175,94 K	404,21 K	143,02 M	0	179,96 M
- Rx Rate (Fps)	75	149	183	33.605	0	17.304
- Flood Count (Frames)	61	80	59	31	2	37
P-0-0-3						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.265	4.466	4.078	997.904	435.842	512.623



- Rx Rate (L1) (Bit/s)	50,74 K	176,26 K	300,14 K	141,57 M	121,34 M	177,71 M
- Rx Rate (Fps)	76	149	136	33.263	14.528	17.087
- Flood Count (Frames)	63	81	83	38	24	27
P-0-0-4						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.238	4.420	5.455	1.017.912	431.187	516.299
- Rx Rate (L1) (Bit/s)	50,13 K	174,44 K	401,49 K	144,41 M	120,04 M	178,98 M
- Rx Rate (Fps)	75	147	182	33.930	14.373	17.210
- Flood Count (Frames)	60	59	62	29	25	31
P-0-0-5	44.040.0=0		10 -00 011		2 - 2 1 2 1 -	
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.268	0	0	1.002.183	0	517.658
- Rx Rate (L1) (Bit/s)	50,8 K	0	0	142,18 M	0	179,45 M
- Rx Rate (Fps)	76	0	0	33.406	0	17.255
- Flood Count (Frames)	61	1	0	33	1	30
P-0-2-0	11.010.050	05 007 007	10.500.011	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.271	4.422	5.541	997.592	439.759	516.936
- Rx Rate (L1) (Bit/s)	50,87 K	174,52 K	407,82 K	141,53 M	122,43 M	179,2 M
- Rx Rate (Fps)	76	147	185	33.253	14.659	17.231
- Flood Count (Frames)	78	61	59	32	30	29
P-0-2-1	44.040.0=0	25 225 225	10 -00 011		2 - 2 1 2 1 -	
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	4.391	5.492	1.000.028	446.416	514.135
- Rx Rate (L1) (Bit/s)	0	173,3 K	404,21 K	141,87 M	124,28 M	178,23 M
- Rx Rate (Fps)	0	146	183	33.334	14.881	17.138
- Flood Count (Frames)	1	60	61	31	32	26
P-0-2-2	44.040.0=0		10 -00 011		0 -01 01-	
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.256	4.430	5.436	0	430.330	517.788
- Rx Rate (L1) (Bit/s)	50,53 K	174,84 K	400,09 K	0	119,8 M	179,5 M
- Rx Rate (Fps)	75	148	181	0	14.344	17.260
- Flood Count (Frames)	59	62	79	1	27	30
P-0-2-3	44.040.050	05 007 007	40.500.044	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.258	0	5.502	0	0	515.994
- Rx Rate (L1) (Bit/s)	50,58 K	0	404,95 K	0	0	178,88 M
- Rx Rate (Fps)	75 59	0	183	0	0	17.200
- Flood Count (Frames)	59	1	61	1	1	28
P-0-2-4	44.040.050	05 007 007	40 500 044	7.040.000	2 504 047	0.004.044
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.252	4.452	5.431	984.294	0	0
- Rx Rate (L1) (Bit/s)	50,44 K	175,71 K	399,72 K	139,64 M	0	0
- Rx Rate (Fps)	75	148	181	32.810	0	0
- Flood Count (Frames)	61	61	59	28	1	1
P-0-2-5	44.040.050	05 007 007	40 500 044	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	4.462	5.480	0	434.956	0
- Rx Rate (L1) (Bit/s)	0	176,1 K	403,33 K	0	121,09 M	
- Rx Rate (Fps)	0	149	183	0	14.499	
- Flood Count (Frames)	1	62	61	1	26	1
P-0-4-0	11010000	05 005 005	10 500 011	7.046.000	0.504.045	0.001.0::
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
LV Pata (L1) (Rit/c)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154



- Rx (Frames)	2.253	4.453	5.357	1.013.449	431.445	508.599
- Rx Rate (L1) (Bit/s)	50,47 K	175,75 K	394,28 K	143,77 M	120,11 M	176,31 M
- Rx Rate (Fps)	75	148	179	33.782	14.382	16.953
- Flood Count (Frames)	57	58	58	28	31	34
P-0-4-1						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.267	4.270	5.122	1.000.427	435.576	504.900
- Rx Rate (L1) (Bit/s)	50,78 K	168,52 K	376,98 K	141,93 M	121,26 M	175,03 M
- Rx Rate (Fps)	76	142	171	33.348	14.519	16.830
- Flood Count (Frames)	56	56	55	29	27	30
P-0-4-2						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	2.275	4.055	5.153	999.583	437.730	506.280
- Rx Rate (L1) (Bit/s)	50,96 K	160,04 K	379,26 K	141,81 M	121,86 M	175,51 M
- Rx Rate (Fps)	76	135	172	33.319	14.591	16.876
- Flood Count (Frames)	59	55	58	31	28	30
P-0-4-3						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	1.950	3.887	5.137	988.513	434.330	499.913
- Rx Rate (L1) (Bit/s)	43,68 K	153,41 K	378,08 K	140,24 M	120,92 M	173,3 M
- Rx Rate (Fps)	65	130	171	32.950	14.478	16.664
- Flood Count (Frames)	57	61	59	27	24	33
P-0-4-4						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	1.610	3.731	4.943	1.000.195	437.551	505.361
- Rx Rate (L1) (Bit/s)	36,06 K	147,25 K	363,8 K	141,89 M	121,81 M	175,19 M
- Rx Rate (Fps)	54	124	165	33.340	14.585	16.845
- Flood Count (Frames)	59	61	56	29	30	25
P-0-4-5						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	1.298	3.552	4.844	993.150	432.049	505.342
- Rx Rate (L1) (Bit/s)	29,08 K	140,19 K	356,52 K	140,89 M	120,28 M	175,19 M
- Rx Rate (Fps)	43	118	161	33.105	14.402	16.845
- Flood Count (Frames)	57	59	57	26	27	33

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1.462.935
Rx Rate (Percent)	14,76 %
Rx Rate (L1) (Bit/s)	2,66 G
Rx Rate (Fps)	215,93 K
Loss Rate (Percent)	85,24 %
Loss (Frames)	37.410.152
P-0-0-0	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	380.074
- Rx Rate (L1) (Bit/s)	155,88 M
- Rx Rate (Fps)	12.669
- Flood Count (Frames)	11
P-0-0-1	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	413.659
- Rx Rate (L1) (Bit/s)	169,66 M




- Rx Rate (Fps)	13.789
- Flood Count (Frames)	26
P-0-0-2	0.420.005
- Tx (Frames)	2.438.225 1000 M
- Tx Rate (L1) (Bit/s)	
- Tx Rate (Fps)	81.274 439.751
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	180,36 M
- Rx Rate (Fps)	14.658
- Flood Count (Frames)	33
P-0-0-3 - Tx (Frames)	2 420 225
	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M 81.274
- Tx Rate (Fps)	
- Rx (Frames)	448.675
- Rx Rate (L1) (Bit/s)	184,02 M
- Rx Rate (Fps)	14.956
- Flood Count (Frames)	29
P-0-0-4	2 420 225
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1_
P-0-0-5	2 420 005
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-0	0.400.005
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames) - Rx Rate (L1) (Bit/s)	389.706 159,83 M
- Rx Rate (E1) (Bit/s)	12.990
- Flood Count (Frames)	12.990
P-0-2-1	21
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (ET) (Bl/s)	81.274
```	379.640
- Rx (Frames) - Rx Rate (L1) (Bit/s)	155.7 M
	155,7 M 12.655
- Rx Rate (Fps)	33
- Flood Count (Frames) P-0-2-2	
	2 420 225
- Tx (Frames)	2.438.225 1000 M
- Tx Rate (L1) (Bit/s)	
- Tx Rate (Fps)	81.274
- Rx (Frames)	361.335
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	148,2 M 12.045
` ` '	
- Flood Count (Frames)	30
P-0-2-3	0.400.005
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	374.343
- Rx Rate (L1) (Bit/s)	153,53 M
- Rx Rate (Fps)	12.478
- Flood Count (Frames)	30
P-0-2-4	0.400.00=
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps) - Rx (Frames)	81.274 402.481



- Rx Rate (L1) (Bit/s)	165,07 M
- Rx Rate (Fps)	13.416
- Flood Count (Frames)	27
P-0-2-5	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	416.385
- Rx Rate (L1) (Bit/s)	170,77 M
- Rx Rate (Fps)	13.880
- Flood Count (Frames) P-0-4-0	34
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	435.162
- Rx Rate (L1) (Bit/s)	178,47 M
- Rx Rate (Fps)	14.505
- Flood Count (Frames)	31
P-0-4-1	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	450.724
- Rx Rate (L1) (Bit/s)	184,86 M
- Rx Rate (Fps)	15.024 30
- Flood Count (Frames) P-0-4-2	30
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	423.657
- Rx Rate (L1) (Bit/s)	173,76 M
- Rx Rate (Fps)	14.122
- Flood Count (Frames)	26
P-0-4-3	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	407.595 167,17 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	13.587
- Flood Count (Frames)	26
P-0-4-4	20
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	380.575
- Rx Rate (L1) (Bit/s)	156,09 M
- Rx Rate (Fps)	12.686
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	374.136
- Rx Rate (L1) (Bit/s)	153,45 M 12.471
- Rx Rate (Fps) - Flood Count (Frames)	31
- 1 1000 Count (Frames)	31



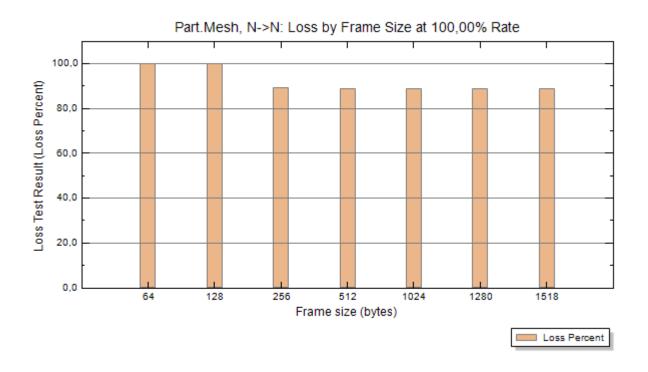



# Rate Test: Part.Mesh, 1:N Results

### **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: Bidirectional

#### **Throughput Options**

Initial Rate: 1,00%
Maximum Rate: 100,00%
Minimum Rate: 0,01%
Resolution: 0,01%

#### **Used Ports**

Port ID	Port Role
P-0-0-0	East
P-0-0-1	West
P-0-0-2	West
P-0-0-3	West
P-0-0-4	West
P-0-0-5	West
P-0-2-0	West
P-0-2-1	West
P-0-2-2	West
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

## **Throughput Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0,018 %	0,018 %	0,018 %	0,018 %	0,018 %	0,018 %
Tx Rate (L1) (Bit/s)	3,19 M					
Tx Rate (Fps)	4.750	2.696	1.445	750	382	307
Rx Rate (Percent)	0,02 %	0,02 %	0,02 %	0,02 %	0,02 %	0,02 %
Rx Rate (L1) (Bit/s)	3,11 M	3,14 M	3,17 M	3,15 M	2,98 M	3,14 M
Rx Rate (Fps)	4,63 K	2,65 K	1,44 K	740,33	356,47	301,63
Loss Rate (Percent)	2,61 %	1,71 %	0,65 %	1,25 %	6,67 %	1,61 %
Loss (Frames)	3.712	1.383	280	281	764	148
P-0-0-0						
- Tx (Frames)	7.905	4.488	2.397	1.241	629	510
- Tx Rate (L1) (Bit/s)	177,07 K	177,13 K	176,42 K	176,06 K	175,11 K	176,8 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	131.078	75.074	40.688	20.985	10.106	8.547
- Rx Rate (L1) (Bit/s)	2,94 M	2,96 M	2,99 M	2,98 M	2,81 M	2,96 M
- Rx Rate (Fps)	4.369	2.502	1.356	700	337	285
- Flood Count (Frames)	26	27	30	49	24	30
P-0-0-1						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	429	197	141	73	34	29
- Rx Rate (L1) (Bit/s)	9,61 K	7,77 K	10,38 K	10,36 K	9,47 K	10,05 K
- Rx Rate (Fps)	14	7	5	2	1	1



- Flood Count (Frames)	58	57	56	60	57	58
P-0-0-2	7.047	4 400	0.400	4.050	207	
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	431	264	141	73	34	29
- Rx Rate (L1) (Bit/s)	9,65 K	10,42 K	10,38 K	10,36 K	9,47 K	10,05 K
- Rx Rate (Fps)	14	9	5	2	1	1
- Flood Count (Frames)	56	59	61	59	61	59
P-0-0-3						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx (Frames)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	263	141	72	34	29
- Rx Rate (L1) (Bit/s)	10,42 K	10,38 K	10,38 K	10,21 K	9,47 K	10,05 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	59	59	59	60	56	59
P-0-0-4						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	177,1010
- Rx (Frames)	465	264	132	73		29
					34	
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	9,72 K	10,36 K	9,47 K	10,05 K
- Rx Rate (Fps)	16	9	4	2	1	1
- Flood Count (Frames)	61	57	56	60	58	62
P-0-0-5						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (E1) (Bit/s)	264	150	80	42	21	177,13 K
```						
- Rx (Frames)	465	264	141	62	34	29
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	8,8 K	9,47 K	10,05 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	58	59	61	60	55	58
P-0-2-0						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	69	33	29
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	9,79 K	9,19 K	10,05 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	59	61	60	60	56	58
P-0-2-1						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Er) (Bit/3)	264	150	80	42	21	177,1310
- Rx (Frames)	465	264	141	73	35	29
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,05 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	59	58	59	56	58	59
P-0-2-2						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Er) (Blus)	264	150	80	42	21	177,1310
\ 1 /	444	256	141	73	35	29
- Rx (Frames)						
- Rx Rate (L1) (Bit/s)	9,95 K	10,1 K	10,38 K	10,36 K	9,74 K	10,05 K
- Rx Rate (Fps)	15	9	5	2	1	1
- Flood Count (Frames)	60	57	58	57	58	59
P-0-2-3						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	177,1310
- Rx (Frames)	459	264	135	73	35	30
- Rx Rate (L1) (Bit/s)	10,28 K	10,42 K	9,94 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	15	9	5	2	1	1
- Flood Count (Frames)	58	59	55	55	58	59
P-0-2-4						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- TX Rate (L1) (Bit/s)	111,UT IX	111,021	177,010			
- Tx Rate (L1) (Bit/s)			20	/O \	21	17
- Tx Rate (Fps)	264	150	80	42	21	17
			80 141 10,38 K	42 73 10,36 K	21 35 9,74 K	17 30 10,4 K



- Rx Rate (Fps)	12	9	5	2	1	1
- Flood Count (Frames)	56	60	58	59	58	57
P-0-2-5						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	59	61	59	56	60	59
P-0-4-0						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	56	55	56	61	58	57
P-0-4-1						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	10,410
- Flood Count (Frames)	58	57	59	59	56	56
P-0-4-2	30		33	33	30	- 50
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	177,1310
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (ET) (Blus)	16	10,42 K	10,36 K	10,30 K	9,74 K	10,4 K
- Flood Count (Frames)	55	58	57	59	57	60
P-0-4-3	33	30	31	39	31	- 00
- Tx (Frames)	7.917	4.493	2.409	1.250	627	E11
, ,	7.917 177,34 K	4.493 177,32 K	177,3 K	1.250 177,33 K	637	511 177,15 K
- Tx Rate (L1) (Bit/s)				177,33 K	177,34 K	
- Tx Rate (Fps)	264 465	150 264	80 141	73	35	17 30
- Rx (Frames)			10,38 K			
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K		10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	58	60	56	58	57	57
P-0-4-4	7.047	4 400	0.400	4.050	007	F44
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	55	57	56	57	55	57
P-0-4-5						
- Tx (Frames)	7.917	4.493	2.409	1.250	637	511
- Tx Rate (L1) (Bit/s)	177,34 K	177,32 K	177,3 K	177,33 K	177,34 K	177,15 K
- Tx Rate (Fps)	264	150	80	42	21	17
- Rx (Frames)	465	264	141	73	35	30
- Rx Rate (L1) (Bit/s)	10,42 K	10,42 K	10,38 K	10,36 K	9,74 K	10,4 K
- Rx Rate (Fps)	16	9	5	2	1	1
- Flood Count (Frames)	55	55	59	58	58	56

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0,018 %
Tx Rate (L1) (Bit/s)	3,19 M
Tx Rate (Fps)	259
Rx Rate (Percent)	0,02 %
Rx Rate (L1) (Bit/s)	3,16 M
Rx Rate (Fps)	256,53
Loss Rate (Percent)	0,94 %
Loss (Frames)	73



P-0-0-0	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174,31 K
- Tx Rate (ET) (Blus)	174,51 K
- Rx (Frames)	7.275
- Rx Rate (L1) (Bit/s)	2,98 M
- Rx Rate (Fps)	243
- Flood Count (Frames)	29
P-0-0-1	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	24
- Rx Rate (L1) (Bit/s)	9,84 K
- Rx Rate (Fps)	1
- Flood Count (Frames) P-0-0-2	58
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	59
P-0-0-3	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames) P-0-0-4	60
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	60
P-0-0-5	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	23
- Rx Rate (L1) (Bit/s)	9,43 K
- Rx Rate (Fps) - Flood Count (Frames)	58
P-0-2-0	30
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	57
P-0-2-1	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25 10.25 K
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps) - Flood Count (Frames)	59
P-0-2-2	39
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1




- Flood Count (Frames)	57
P-0-2-3	01
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	59
P-0-2-4	100
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	177,18 K
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	10,20 1
- Flood Count (Frames)	59
P-0-2-5	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	24
- Rx Rate (L1) (Bit/s)	9,84 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	56
P-0-4-0	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25 10,25 K
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	10,23 K
- Flood Count (Frames)	57
P-0-4-1	01
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	57
P-0-4-2	400
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps) - Rx (Frames)	14 25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	10,23 1
- Flood Count (Frames)	53
P-0-4-3	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	60
P-0-4-4	400
- Tx (Frames)	432 177 19 K
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	177,18 K
- TX Rate (Fps) - Rx (Frames)	25
- Rx (Frames) - Rx Rate (L1) (Bit/s)	10,25 K
- Rx Rate (Fps)	10,23 K
- Flood Count (Frames)	58
P-0-4-5	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177,18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10,25 K



- Rx Rate (Fps)	1
- Flood Count (Frames)	55

Note: One or more of the rate tests did not pass the test criteria!

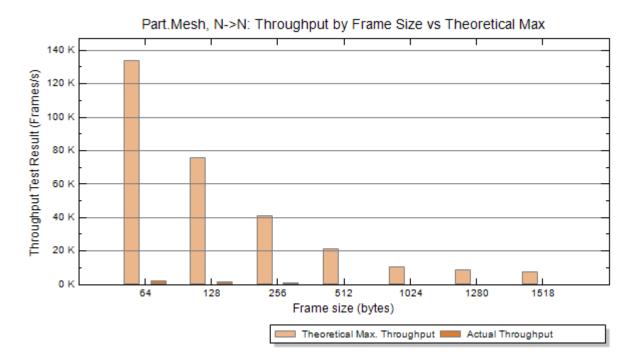

## **Forwarding Test Results**

#### Results for 10,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G
Tx Rate (Fps)	2.678.571	1.520.270	815.217	422.932	215.517	173.076
Rx Rate (Percent)	5,72 %	5,83 %	5,91 %	5,95 %	6,04 %	5,97 %
Rx Rate (L1) (Bit/s)	1,03 G	1,05 G	1,06 G	1,07 G	1,09 G	1,08 G
Rx Rate (Fps)	1,53 M	886,47 K	481,62 K	251,69 K	130,2 K	103,39 K
Loss Rate (Percent)	42,79 %	41,69 %	40,92 %	40,49 %	39,59 %	40,26 %
Loss (Frames)	34.386.862	19.013.907	10.007.809	5.137.129	2.559.485	2.090.532
P-0-0-0						
- Tx (Frames)	4.464.285	2.533.782	1.358.691	704.871	359.193	288.456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	42.671.687	24.684.269	13.400.439	6.999.078	3.580.966	2.877.016
- Rx Rate (L1) (Bit/s)	955,85 M	974,21 M	986,27 M	992,94 M	996,94 M	997,37 M
- Rx Rate (Fps)	1.422.390	822.809	446.681	233.303	119.366	95.901
- Flood Count (Frames)	14	21	14	19	30	22
P-0-0-1						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	195.744	112.785	62.189	31.425	19.012	12.862
- Rx Rate (L1) (Bit/s)	4,38 M	4,45 M	4,58 M	4,46 M	5,29 M	4,46 M
- Rx Rate (Fps)	6.525	3.760	2.073	1.048	634	429
- Flood Count (Frames)	57	57	56	58	59	68
P-0-0-2						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	191.902	114.515	64.551	33.001	19.331	12.563
- Rx Rate (L1) (Bit/s)	4,3 M	4,52 M	4,75 M	4,68 M	5,38 M	4,36 M
- Rx Rate (Fps)	6.397	3.817	2.152	1.100	644	419
- Flood Count (Frames) P-0-0-3	56	56	56	60	58	56
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	1.556.095	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	187.263	114.328	64.839	31.851	18.927	13.375
- Rx Rate (L1) (Bit/s)	4,19 M	4,51 M	4,77 M	4,52 M	5,27 M	4,64 M
- Rx Rate (Fps)	6.242	3.811	2.161	1.062	631	446
- Flood Count (Frames)	55	59	60	58	78	57
P-0-0-4						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	192.749	113.094	64.286	32.437	19.362	13.378
- Rx Rate (L1) (Bit/s)	4,32 M	4,46 M	4,73 M	4,6 M	5,39 M	4,64 M
- Rx Rate (Fps)	6.425	3.770	2.143	1.081	645	446
- Flood Count (Frames)	58	64	55	59	55	55
P-0-0-5	4.464.005	0.522.702	1 250 605	704 007	250 105	200 464
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461 100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 148.810	100 M 84.459	100 M 45.290	100 M 23.496	100 M 11.973	100 M 9.615
- TX Rate (Fps) - Rx (Frames)	191.915	102.653	60.345	32.073	19.389	13.381
- Rx (Frames)	4,3 M	4,05 M	4,44 M	4,55 M	5,4 M	4,64 M
- Rx Rate (ET) (Blus)	6.397	3.422	2.012	1.069	646	4,04 101
- Flood Count (Frames)	61	55	61	57	60	57
P-0-2-0	01	33	01			
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	196.797	100.664	63.483	32.743	19.140	13.345
- Rx Rate (L1) (Bit/s)	4,41 M	3,97 M	4,67 M	4,65 M	5,33 M	4,63 M
- Rx Rate (Fps)	6.560	3.355	2.116	1.091	638	445
- Flood Count (Frames)	59	57	57	59	59	56
P-0-2-1						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	188.757	113.122	60.489	31.662	19.228	13.391
- Rx Rate (L1) (Bit/s)	4,23 M	4,46 M	4,45 M	4,49 M	5,35 M	4,64 M
- Rx Rate (Fps)	6.292	3.771	2.016	1.055	641	446
- Flood Count (Frames)	60	68	56	59	57	56
P-0-2-2	4 404 005	0.500.700	4 050 005	704.007	050 405	000 404
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496 33.173	11.973	9.615
- Rx (Frames) - Rx Rate (L1) (Bit/s)	197.384 4,42 M	112.504 4,44 M	58.078 4,27 M	4,71 M	19.024 5,3 M	13.314 4,62 M
- Rx Rate (ET) (Blus)	6.579	3.750	1.936	1.106	634	4,02 101
- Flood Count (Frames)	59	58	65	57	60	59
P-0-2-3		30	00		- 00	- 33
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	198.171	116.178	63.609	32.697	19.157	12.593
- Rx Rate (L1) (Bit/s)	4,44 M	4,59 M	4,68 M	4,64 M	5,33 M	4,37 M
- Rx Rate (Fps)	6.606	3.873	2.120	1.090	639	420
- Flood Count (Frames)	54	59	54	65	77	55
P-0-2-4						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	192.129	114.011	61.762	32.693	19.235	13.245
- Rx Rate (L1) (Bit/s)	4,3 M	4,5 M	4,55 M	4,64 M	5,36 M	4,59 M
- Rx Rate (Fps)	6.404	3.800	2.059	1.090	641	442
- Flood Count (Frames)	57	59	68	58	59	56
P-0-2-5						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	192.797	113.550	56.509	32.777	18.882	13.472
- Rx Rate (L1) (Bit/s)	4,32 M	4,48 M	4,16 M	4,65 M	5,26 M	4,67 M
- Rx Rate (Fps)	6.427	3.785	1.884	1.093	629	449
- Flood Count (Frames)	53	58	54	57	59	58
P-0-4-0						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	189.442	113.831	59.874	32.705	19.177	13.232
- Rx Rate (L1) (Bit/s)	4,24 M	4,49 M	4,41 M	4,64 M	5,34 M	4,59 M
- Rx Rate (Fps)	6.315	3.794	1.996	1.090	639	441
- Flood Count (Frames)	53	57	52	57	55	56
P-0-4-1						
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	196.875	116.495	61.376	32.659	18.998	13.334
- Rx Rate (L1) (Bit/s)	4,41 M	4,6 M	4,52 M	4,63 M	5,29 M	4.62 M
- Rx Rate (Fps)	6.563	3.883	2.046	1.089	633	444
- Flood Count (Frames)	57	54	56	58	55	57
P-0-4-2	0.	0.				
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	198.575	116.565	63.187	32.078	19.107	13.365
- Rx Rate (L1) (Bit/s)	4,45 M	4,6 M	4,65 M	4,55 M	5,32 M	4,63 M
- Rx Rate (Fps)	6.619	3.886	2.106	1.069	637	446
- Flood Count (Frames)	57	57	55	58	59	54
P-0-4-3		37		30		<u> </u>
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (E1) (Blus)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	193.959	114.146	59.427	32.930	18.975	13.198
- Rx Rate (L1) (Bit/s)	4,34 M	4,5 M	4,37 M	4,67 M	5,28 M	4,58 M
- Rx Rate (Fps)	6.465	3.805	1.981	1.098	633	440
- Flood Count (Frames)	55	56	57	56	57	58
P-0-4-4	33	30	31	30	31	30
- Tx (Frames)	4.464.285	2.533.783	1.358.695	704.887	359.195	288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	1.336.093 100 M	100 M	100 M	100 M
- Tx Rate (ET) (Bit/S)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	198.756	110.677	61.453	33.033	19.117	13.368
- Rx (Frames)	4,45 M	4,37 M	4,52 M	4,69 M	5,32 M	4,63 M
- Rx Rate (LT) (Bil/s)	6.625	3.689	2.048	1.101	637	4,63 10
- Flood Count (Frames)	57	57	54	56	57	56
,	57	57	54	30	57	30
P-0-4-5	4.464.285	2.533.783	1.358.695	704.887	359.195	200 404
- Tx (Frames)						288.461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	195.366	110.799	62.801	31.806	18.996	13.329
- Rx Rate (L1) (Bit/s)	4,38 M	4,37 M	4,62 M	4,51 M	5,29 M	4,62 M
- Rx Rate (Fps)	6.512	3.693	2.093	1.060	633	444
- Flood Count (Frames)	57	54	55	57	60	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1,8 G
Tx Rate (Fps)	146.294
Rx Rate (Percent)	5,72 %
Rx Rate (L1) (Bit/s)	1,03 G
Rx Rate (Fps)	83,65 K
Loss Rate (Percent)	42,82 %
Loss (Frames)	1.879.374
P-0-0-0	
- Tx (Frames)	243.814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127




- Rx (Frames)	2.357.344
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	966,83 M 78.578
- Flood Count (Frames)	25
P-0-0-1	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.054
- Rx Rate (L1) (Bit/s)	3,71 M
- Rx Rate (Fps) - Flood Count (Frames)	302 44
P-0-0-2	77
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.016
- Rx Rate (L1) (Bit/s)	3,7 M
- Rx Rate (Fps)	301
- Flood Count (Frames) P-0-0-3	53
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.029
- Rx Rate (L1) (Bit/s)	3,7 M
- Rx Rate (Fps)	301
- Flood Count (Frames)	41
P-0-0-4	040.000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.823 100 M
- Tx Rate (ET) (Bit/s)	8.127
- Rx (Frames)	9.031
- Rx Rate (L1) (Bit/s)	3,7 M
- Rx Rate (Fps)	301
- Flood Count (Frames)	54
P-0-0-5	0.40,000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243.823
- Tx Rate (ET) (Blus)	100 M 8.127
- Rx (Frames)	9.076
- Rx Rate (L1) (Bit/s)	3,72 M
- Rx Rate (Fps)	303
- Flood Count (Frames)	57
P-0-2-0	0.40.000
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8.127
- Rx (Frames)	7.336
- Rx Rate (L1) (Bit/s)	3,01 M
- Rx Rate (Fps)	245
- Flood Count (Frames)	40
P-0-2-1	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps) - Rx (Frames)	8.127 9.052
- Rx Rate (L1) (Bit/s)	3,71 M
- Rx Rate (Fps)	302
- Flood Count (Frames)	43
P-0-2-2	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames) - Rx Rate (L1) (Bit/s)	8.962 3,68 M
- Rx Rate (ET) (Bit/s)	299
- Flood Count (Frames)	37
P-0-2-3	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M



T D ( /5 )	0.407
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.066 3,72 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	302
- Flood Count (Frames)	48
P-0-2-4	40
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.062
- Rx Rate (L1) (Bit/s)	3,72 M
- Rx Rate (Fps)	302
- Flood Count (Frames)	44
P-0-2-5	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.095
- Rx Rate (L1) (Bit/s)	3,73 M
- Rx Rate (Fps)	303
- Flood Count (Frames)	59
P-0-4-0	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.078
- Rx Rate (L1) (Bit/s)	3,72 M
- Rx Rate (Fps)	303
- Flood Count (Frames)	41
P-0-4-1	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.064
- Rx Rate (L1) (Bit/s)	3,72 M
- Rx Rate (Fps)	302
- Flood Count (Frames)	36
P-0-4-2	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.077
- Rx Rate (L1) (Bit/s)	3,72 M
- Rx Rate (Fps)	303
- Flood Count (Frames)	31
P-0-4-3	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.041
- Rx Rate (L1) (Bit/s)	3,71 M
- Rx Rate (Fps)	301
- Flood Count (Frames)	35
P-0-4-4	
- Tx (Frames)	243.823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127
- Rx (Frames)	9.021
- Rx Rate (L1) (Bit/s)	3,7 M
- Rx Rate (Fps)	301
	38
- Flood Count (Frames)	
P-0-4-5	
P-0-4-5 - Tx (Frames)	243.823
P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	243.823 100 M
P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	243.823 100 M 8.127
P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	243.823 100 M 8.127 9.027
P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	243.823 100 M 8.127 9.027 3,7 M
P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	243.823 100 M 8.127 9.027



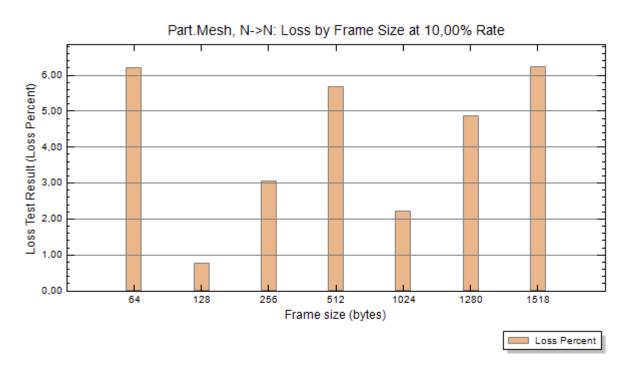

#### Results for 20,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G
Tx Rate (Fps)	5.357.143	3.040.540	1.630.434	845.864	431.034	346.153
Rx Rate (Percent)	0,03 %	6,08 %	6,15 %	6,21 %	6,21 %	6,24 %
Rx Rate (L1) (Bit/s)	4,75 M	1,09 G	1,11 G	1,12 G	1,12 G	1,12 G
Rx Rate (Fps)	7,06 K	924,16 K	501,4 K	262,69 K	133,86 K	107,95 K
Loss Rate (Percent)	99,87 %	69,61 %	69,25 %	68,94 %	68,94 %	68,81 %
Loss (Frames)	160.502.341	63.491.318	33.871.177	17.495.212	8.915.067	7.146.047
P-0-0-0						
- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576.912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.579	46.992	23.946	19.230
- Rx (Frames)	197.152	24.703.240	13.410.134	7.004.412	3.582.769	2.879.372
- Rx Rate (L1) (Bit/s)	4,42 M	974,95 M	986,99 M	993,69 M	997,44 M	998,18 M
- Rx Rate (Fps)	6.572	823.441	447.004	233.480	119.426	95.979
- Flood Count (Frames)	27	11	16	11	13	14
P-0-0-1						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	178.458	96.836	52.213	25.357	21.179
- Rx Rate (L1) (Bit/s)	0	7,04 M	7,13 M	7,41 M	7,06 M	7,34 M
- Rx Rate (Fps)	0	5.949	3.228	1.740	845	706
- Flood Count (Frames)	58	55	57	57	56	59
P-0-0-2						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.057	178.677	98.464	49.183	24.934	21.204
- Rx Rate (L1) (Bit/s)	23,68 K	7,05 M	7,25 M	6,98 M	6,94 M	7,35 M
- Rx Rate (Fps)	35	5.956	3.282	1.639	831	707
- Flood Count (Frames)	57	57	54	55	54	59
P-0-0-3						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.092	178.485	96.245	51.646	25.948	21.313



- Rx Rate (L1) (Bit/s)	24,46 K	7,04 M	7,08 M	7,33 M	7,22 M	7,39 M
- Rx Rate (Fps)	36	5.950	3.208	1.722	865	710
- Flood Count (Frames)	60	52	54	57	55	60
P-0-0-4			2 - 1 - 221			
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	165.213	95.892	52.517	25.481	21.633
- Rx Rate (L1) (Bit/s)	0	6,52 M	7,06 M	7,45 M	7,09 M	7,5 M
- Rx Rate (Fps)	0	5.507	3.196	1.751	849	721
- Flood Count (Frames)	58	52	57	57	58	59
P-0-0-5						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.067	178.639	92.592	51.236	24.892	21.426
- Rx Rate (L1) (Bit/s)	23,9 K	7,05 M	6,81 M	7,27 M	6,93 M	7,43 M
- Rx Rate (Fps)	36	5.955	3.086	1.708	830	714
- Flood Count (Frames)	60	52	57	56	56	55
P-0-2-0						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.087	178.346	97.631	49.095	25.543	21.362
- Rx Rate (L1) (Bit/s)	24,35 K	7,04 M	7,19 M	6,96 M	7,11 M	7,41 M
- Rx Rate (Fps)	36	5.945	3.254	1.637	851	712
- Flood Count (Frames)	57	56	55	57	57	54
P-0-2-1	01			01	O1	0-1
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (E1) (Blus)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.084	178.970	96.378	51.780	25.748	21.338
- Rx Rate (L1) (Bit/s)	24,28 K	7,06 M	7,09 M	7,35 M	7,17 M	7,4 M
	24,26 K					
- Rx Rate (Fps)		5.966	3.213	1.726	858	711
- Flood Count (Frames)	61	54	55	59	55	58
P-0-2-2	0.000.574	E 007 E07	0.747.004	4 400 774	740,000	F70 000
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.054	178.651	95.533	51.388	24.790	20.517
- Rx Rate (L1) (Bit/s)	23,61 K	7,05 M	7,03 M	7,29 M	6,9 M	7,11 M
- Rx Rate (Fps)	35	5.955	3.184	1.713	826	684
- Flood Count (Frames)	59	56	57	58	57	57
P-0-2-3						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.041	178.084	97.002	51.674	25.445	21.484
- Rx Rate (L1) (Bit/s)	23,32 K	7,03 M	7,14 M	7,33 M	7,08 M	7,45 M
- Rx Rate (Fps)	35	5.936	3.233	1.722	848	716
- Flood Count (Frames)	60	55	59	54	56	55
P-0-2-4						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.050	178.816	85.505	51.642	25.320	20.579
- Rx Rate (L1) (Bit/s)	23,52 K	7,06 M	6,29 M	7,33 M	7,05 M	7,13 M
- Rx Rate (Fps)	35	5.961	2.850	1.721	844	686
- Flood Count (Frames)	61	54	56	60	55	55
P-0-2-5	01	0-1				- 33
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx (Frames)	200 M	200 M	2.7 17.39 T	200 M	200 M	200 M
	297.619	168.919	90.580	46.992	23.946	19.231
- Tx Rate (Fps) - Rx (Frames)	297.019	178.145	98.093	52.138	25.732	19.231
	-					
- Rx Rate (L1) (Bit/s)	0	7,03 M	7,22 M	7,4 M	7,16 M	6,78 M
- Rx Rate (Fps)	0	5.938	3.270	1.738	858	652
- Flood Count (Frames)	61	55	56	58	57	60
P-0-4-0	0.000 ==:	F 60= 5	0 = 1 = 0 = 1	4 400 == :	710.00	
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231



- Rx (Frames)	1.036	178.930	96.544	51.806	26.091	21.340
- Rx Rate (L1) (Bit/s)	23,21 K	7,06 M	7,11 M	7,35 M	7,26 M	7,4 M
- Rx Rate (Fps)	35	5.964	3.218	1.727	870	711
- Flood Count (Frames)	60	55	57	55	56	55
P-0-4-1						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.018	179.357	96.720	51.733	25.513	21.129
- Rx Rate (L1) (Bit/s)	22,8 K	7,08 M	7,12 M	7,34 M	7,1 M	7,32 M
- Rx Rate (Fps)	34	5.979	3.224	1.724	850	704
- Flood Count (Frames)	59	52	54	57	54	58
P-0-4-2						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.075	177.694	96.255	52.311	25.967	21.129
- Rx Rate (L1) (Bit/s)	24.08 K	7.01 M	7,08 M	7,42 M	7,23 M	7,32 M
- Rx Rate (Fps)	36	5.923	3.209	1.744	866	704
- Flood Count (Frames)	58	53	55	56	52	56
P-0-4-3						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.048	177.716	97.776	51.299	25.243	21.574
- Rx Rate (L1) (Bit/s)	23,48 K	7,01 M	7,2 M	7,28 M	7,03 M	7,48 M
- Rx Rate (Fps)	35	5.924	3.259	1.710	841	719
- Flood Count (Frames)	58	53	57	55	57	57
P-0-4-4						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.010	179.267	96.080	51.991	25.365	21.182
- Rx Rate (L1) (Bit/s)	22,62 K	7,08 M	7,07 M	7,38 M	7,06 M	7,34 M
- Rx Rate (Fps)	34	5.976	3.203	1.733	846	706
- Flood Count (Frames)	58	55	56	56	53	55
P-0-4-5						
- Tx (Frames)	8.928.571	5.067.567	2.717.391	1.409.774	718.390	576.923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	1.065	178.197	98.172	52.641	25.811	21.228
- Rx Rate (L1) (Bit/s)	23,86 K	7,03 M	7,23 M	7,47 M	7,19 M	7,36 M
- Rx Rate (Fps)	36	5.940	3.272	1.755	860	708
- Flood Count (Frames)	57	53	53	57	54	57

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3,6 G
Tx Rate (Fps)	292.588
Rx Rate (Percent)	5,76 %
Rx Rate (L1) (Bit/s)	1,04 G
Rx Rate (Fps)	84,22 K
Loss Rate (Percent)	71,21 %
Loss (Frames)	6.250.906
P-0-0-0	
- Tx (Frames)	487.645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	2.387.162
- Rx Rate (L1) (Bit/s)	979,05 M
- Rx Rate (Fps)	79.572
- Flood Count (Frames)	13
P-0-0-1	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.332
- Rx Rate (L1) (Bit/s)	3,42 M




Du Data (Fra)	070
- Rx Rate (Fps) - Flood Count (Frames)	278 33
P-0-0-2	33
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.302
- Rx Rate (L1) (Bit/s)	3,4 M
- Rx Rate (Fps)	277
- Flood Count (Frames)	29
P-0-0-3	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	7.687
- Rx Rate (L1) (Bit/s)	3,15 M 256
- Rx Rate (Fps) - Flood Count (Frames)	31
P-0-0-4	31
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (E1) (Bit/s)	16.255
- Rx (Frames)	8.179
- Rx Rate (L1) (Bit/s)	3,35 M
- Rx Rate (Fps)	273
- Flood Count (Frames)	29
P-0-0-5	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.270
- Rx Rate (L1) (Bit/s)	3,39 M
- Rx Rate (Fps)	276
- Flood Count (Frames)	25
P-0-2-0	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.105
- Rx Rate (L1) (Bit/s)	3,32 M
- Rx Rate (Fps)	270
- Flood Count (Frames) P-0-2-1	29
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (E1) (Bit/s)	16.255
- Rx (Frames)	7.244
- Rx Rate (L1) (Bit/s)	2,97 M
- Rx Rate (Fps)	241
- Flood Count (Frames)	25
P-0-2-2	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.227
- Rx Rate (L1) (Bit/s)	3,37 M
- Rx Rate (Fps)	274
- Flood Count (Frames)	28
P-0-2-3	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.312
- Rx Rate (L1) (Bit/s)	3,41 M
- Rx Rate (Fps) - Flood Count (Frames)	277 27
P-0-2-4	21
- Tx (Frames)	487.646
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (E1) (Bit/s)	16.255
- Rx (Frames)	8.328



- Rx Rate (L1) (Bit/s)	3,42 M
- Rx Rate (Fps)	278
- Flood Count (Frames)	31
P-0-2-5	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.366
- Rx Rate (L1) (Bit/s)	3,43 M
- Rx Rate (Fps)	279
- Flood Count (Frames)	34
P-0-4-0	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.330
- Rx Rate (L1) (Bit/s)	3,42 M
- Rx Rate (Fps)	278
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.390
- Rx Rate (L1) (Bit/s)	3,44 M
- Rx Rate (Fps)	280
- Flood Count (Frames)	26
P-0-4-2	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.400
- Rx Rate (L1) (Bit/s)	3,45 M 280
- Rx Rate (Fps)	
- Flood Count (Frames)	27
P-0-4-3	407.040
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.346
- Rx Rate (L1) (Bit/s)	3,42 M
- Rx Rate (Fps)	278
- Flood Count (Frames)	25
P-0-4-4	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.404
- Rx Rate (L1) (Bit/s)	3,45 M
- Rx Rate (Fps)	280
- Flood Count (Frames)	29
P-0-4-5	
- Tx (Frames)	487.646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	8.337
- Rx Rate (L1) (Bit/s)	3,42 M
- Rx Rate (Fps)	278
- Flood Count (Frames)	30
. ,	



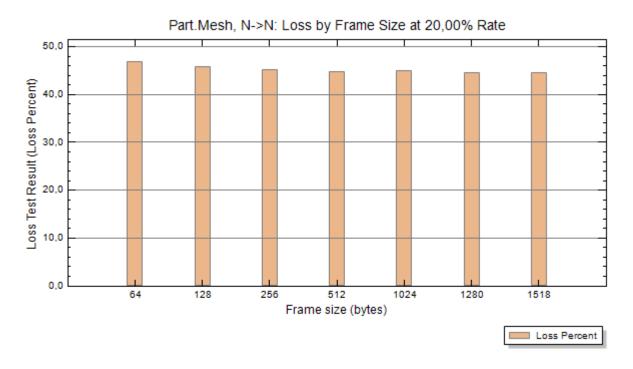

# Results for 30,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G
Tx Rate (Fps)	8.035.714	4.560.810	2.445.651	1.268.796	646.551	519.230
Rx Rate (Percent)	0,01 %	6,19 %	6,44 %	5,95 %	6,48 %	6,48 %
Rx Rate (L1) (Bit/s)	2,03 M	1,11 G	1,16 G	1,07 G	1,17 G	1,17 G
Rx Rate (Fps)	3,02 K	940,45 K	524,96 K	251,53 K	139,66 K	112,24 K
Loss Rate (Percent)	99,96 %	79,38 %	78,53 %	80,18 %	78,4 %	78,38 %
Loss (Frames)	240.980.812	108.610.866	57.620.716	30.517.854	15.206.837	12.209.714
P-0-0-0						
- Tx (Frames)	13.392.855	7.601.346	4.076.073	2.114.647	1.077.579	865.368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299,99 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.488	35.919	28.846
- Rx (Frames)	80.706	24.708.346	13.415.260	6.445.720	3.583.457	2.879.854
- Rx Rate (L1) (Bit/s)	1,81 M	975,16 M	987,36 M	914,43 M	997,63 M	998,35 M
- Rx Rate (Fps)	2.690	823.612	447.175	214.857	119.449	95.995
- Flood Count (Frames)	30	11	13	10	12	18
P-0-0-1						
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	692	208.534	138.228	64.392	36.140	28.697
- Rx Rate (L1) (Bit/s)	15,5 K	8,23 M	10,17 M	9,14 M	10,06 M	9,95 M
- Rx Rate (Fps)	23	6.951	4.608	2.146	1.205	957
- Flood Count (Frames)	59	46	55	56	57	55
P-0-0-2						
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	671	208.325	139.101	64.559	36.073	28.553
- Rx Rate (L1) (Bit/s)	15,03 K	8,22 M	10,24 M	9,16 M	10,04 M	9,9 M
- Rx Rate (Fps)	22	6.944	4.637	2.152	1.202	952
- Flood Count (Frames)	58	47	55	53	55	58
P-0-0-3						
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	666	208.069	137.750	64.476	35.916	28.614



- Rx Rate (L1) (Bit/s)	14,92 K	8,21 M	10,14 M	9,15 M	10 M	9,92 M
- Rx Rate (Fps)	22	6.936	4.592	2.149	1.197	954
- Flood Count (Frames)	59	45	57	54	55	57
P-0-0-4	40 000 057	7 004 054	4.070.000	0.444.004	4 077 500	005.004
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	644	208.389	135.393	65.298	35.921	28.809
- Rx Rate (L1) (Bit/s)	14,43 K	8,22 M	9,96 M	9,26 M	10 M	9,99 M
- Rx Rate (Fps)	21	6.946	4.513	2.177	1.197	960
- Flood Count (Frames)	59	48	55	55	56	55
P-0-0-5	40.000.057	7 004 054	4.070.000	0.111.001	4 077 500	005.004
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	629	200.654	138.259	65.135	35.000	28.493
- Rx Rate (L1) (Bit/s)	14,09 K	7,92 M	10,18 M	9,24 M	9,74 M	9,88 M
- Rx Rate (Fps)	21	6.688	4.609	2.171	1.167	950
- Flood Count (Frames)	59	56	58	53	57	57
P-0-2-0	40 000 057	7 004 054	4.070.000	0.444.004	4 077 500	005 204
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	614	206.219	137.713	63.788	35.793	28.689
- Rx Rate (L1) (Bit/s)	13,75 K	8,14 M	10,14 M	9,05 M	9,96 M	9,95 M
- Rx Rate (Fps)	20	6.874	4.590	2.126	1.193	956
- Flood Count (Frames)	61	49	58	56	56	59
P-0-2-1	40 000 057	7 004 054	4.070.000	0.444.004	4 077 500	005.004
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	607	205.609	136.625	64.741	35.233	28.713
- Rx Rate (L1) (Bit/s)	13,6 K	8,11 M	10,06 M	9,18 M	9,81 M	9,95 M
- Rx Rate (Fps)	20	6.854	4.554	2.158	1.174	957
- Flood Count (Frames)	62	49	59	57	56	56
P-0-2-2	40.000.057	7 004 054	4.070.000	0.111.001	4 077 500	005.004
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames) - Rx Rate (L1) (Bit/s)	598	205.696	126.806	65.128	35.983	28.693
. , , ,	13,4 K	8,12 M	9,33 M	9,24 M	10,02 M	9,95 M
- Rx Rate (Fps)	20 58	6.857 49	4.227	2.171	1.199	956
- Flood Count (Frames)	30	49	57	57	57	58
P-0-2-3	12 202 057	7 604 254	4.076.006	2 114 661	1 077 506	065 204
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M 253.378	300 M	300 M	300 M 35.920	300 M 28.846
- Tx Rate (Fps)	446.429		135.870	70.489		
- Rx (Frames)	578	208.097	137.294 10,1 M	64.718	35.101	28.568
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	12,95 K 19	8,21 M 6.937	4.576	9,18 M 2.157	9,77 M 1.170	9,9 M 952
- Flood Count (Frames)	59	49	58	52	53	58
P-0-2-4	39	48	30	32	33	30
	12 202 057	7.601.351	4.076.006	2 114 661	1 077 506	065 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	13.392.857		4.076.086	2.114.661	1.077.586	865.384
, , , ,	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	601	201.938	138.027	63.701	35.463	28.751
- Rx Rate (L1) (Bit/s)	13,46 K	7,97 M	10,16 M	9,04 M	9,87 M	9,97 M
- Rx Rate (Fps) - Flood Count (Frames)	20 59	6.731	4.601	2.123	1.182	958
	39	48	56	57	57	60
P-0-2-5	40 000 057	7 004 054	4.070.000	0.444.004	4.077.500	005 004
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx (Frames)	0	204.336	138.308	64.678	34.612	28.717
- Rx Rate (L1) (Bit/s)	0	8,06 M	10,18 M	9,18 M	9,64 M	9,96 M
- Rx Rate (Fps)	0	6.811	4.610	2.156	1.154	957
- Flood Count (Frames)	63	45	54	57	57	56
P-0-4-0	40 000 057	7.004.054	4.070.000	0.444.004	4 077 500	005.001
- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846



- Rx Rate (Fps)	- Rx (Frames)	614	206.466	138.586	64.898	36.002	28.635
-Flood Count (Frames)	- Rx Rate (L1) (Bit/s)	13,75 K	-, -	- ,		10,02 M	9,93 M
P-0-4-1 Tx (Frames) 13.392.857 7.601.351 30.0 M 9,52 D 28.844 28.633 -Rx Rate (L1) (Bit/s) 13,71 K 8,16 M 10,21 M 9,15 M 9,86 M 9,93 K -FR Rate (Fps) 20 6,895 4624 2,151 1,181 95- Flood Count (Frames) 56 45 52 53 55 Flood Count (Frames) 13.392.857 7,601.351 4,076.086 2,114.661 1,077.586 865.38- 1x Rate (L1) (Bit/s) 30.0 M	- Rx Rate (Fps)		6.882	4.620	2.163	1.200	955
TX (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.38   TX Rate (L1) (Bit/s) 300 M 9.93 M 9.93 M 9.93 M 9.93 M 9.93 M 9.93 M 9.94 M 9.95 M	- Flood Count (Frames)	57	46	56	57	54	55
- Tx Rate (L1) (Bit/s)	P-0-4-1						
- Tx Rate (Fps)	- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
-Rx (Frames) 612 206.851 138.718 64.516 35.426 28.63: -Rx Rate (L1) (Bit/s) 13,71 K 8,16 M 10,21 M 9,15 M 9,86 M 9,93 M -Rx Rate (Fps) 20 6.895 4.624 2.151 1.181 95Flood Count (Frames) 56 45 54 52 53 55: -Flood Count (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.38Tx Rate (L1) (Bit/s) 300 M -Tx Rate (Fps) 446.429 253.378 135.870 704.89 35.920 28.844 -Rx (Frames) 600 205.621 139.308 65.561 36.238 28.53Rx Rate (L1) (Bit/s) 13,44 K 8,12 M 10,25 M 9,3 M 10,09 M 9,88 M -Rx Rate (Fps) 20 6.854 4.644 2.185 1.208 95Flood Count (Frames) 59 48 55 54 52 55 -Flood Count (Frames) 59 48 55 54 52 55 -Flood Count (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.38Tx Rate (L1) (Bit/s) 300 M -Tx Rate (L1) (Bit/s) 300 M -Tx Rate (L1) (Bit/s) 300 M 300 M 300 M 300 M 300 M 300 M -Tx Rate (L1) (Bit/s) 300 M 300 M 300 M 300 M 300 M 300 M -Tx Rate (L1) (Bit/s) 300 M 300 M 300 M 300 M 300 M 300 M -Tx Rate (L1) (Bit/s) 13.99.857 7.601.351 138.095 64.908 35.601 28.803 -Rx Rate (L1) (Bit/s) 12.99 K 8,12 M 10,16 M 9,21 M 9,91 M 9,99 M -Fx Rate (Fps) 19 6.862 4.603 2.146 1.187 966 -Fx Rate (Fps) 19 6.862 4.603 2.146.61 1.077.586 865.38Fx Rate (L1) (Bit/s) 300 M -Fx Rate (Fps) 19 6.862 4.603 2.146 1.187 966 -Fx Rate (L1) (Bit/s) 300 M -Fx Rate (L1) (Bit/s) 300 M	- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Rx Rate (L1) (Bit/s)	- Tx Rate (Fps)	446.429	253.378		70.489	35.920	28.846
-Rx Rate (Fps) 20 6.895 4.624 2.151 1.181 95Flood Count (Frames) 56 45 54 52 53Flood Count (Frames) 56 45 54 52 53Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.38Tx Rate (L1) (Bit/s) 300 M 9.88 M 10.09 M 10	- Rx (Frames)	612	206.851	138.718	64.516	35.426	28.633
Flood Count (Frames   56	- Rx Rate (L1) (Bit/s)	13,71 K	8,16 M	10,21 M	9,15 M	9,86 M	9,93 M
Flood Count (Frames   56	- Rx Rate (Fps)	20	6.895	4.624	2.151	1.181	954
P-0-4-2 - Tx (Frames)		56	45	54	52	53	53
- Tx Rate (L1) (Bit/s)	P-0-4-2						
- Tx Rate (Fps)	- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Rx (Frames) 600 205.621 139.308 65.561 36.238 28.53   - Rx Rate (L1) (Bit/s) 13.44 K 8,12 M 10.25 M 9,3 M 10,09 M 9,99 M   - Rx Rate (Fps) 20 6.854 4.644 2.185 1.208 95   - Flood Count (Frames) 59 48 55 54 52 55   - Flood Count (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.38   - Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586   - Tx Rate (L1) (Bit/s) 300 M 9,91 M 9,91 M 9,91 M 9,99 M Rx Rate (Fps) 19 6.862 4.603 2.164 1.187 960 M 300	- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Rx Rate (L1) (Bit/s)	- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx Rate (L1) (Bit/s)	- Rx (Frames)	600	205.621	139.308	65.561	36.238	28.531
Flood Count (Frames) 59 48 55 54 52 55 54 7.401.351 4.076.086 2.114.661 1.077.586 865.384 1.075.861 1.077.586 865.384 1.075.861 1.075.865 1.075.865.385 1.075.861 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.07	- Rx Rate (L1) (Bit/s)	13,44 K	8,12 M	10,25 M			9,89 M
Flood Count (Frames) 59 48 55 54 52 55 54 7.401.351 4.076.086 2.114.661 1.077.586 865.384 1.075.861 1.077.586 865.384 1.075.861 1.075.865 1.075.865.385 1.075.861 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.075.865 1.07	- Rx Rate (Fps)	20	6.854	4.644	2.185	1.208	951
P-0-4-3 - Tx (Frames)		59	48		54	52	55
- Tx Rate (L1) (Bit/s)	P-0-4-3						
- Tx Rate (L1) (Bit/s)	- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (Fps)		300 M		300 M	300 M		300 M
- Rx (Frames) 580 205.851 138.095 64.908 35.601 28.803   - Rx Rate (L1) (Bit/s) 12,99 K 8,12 M 10,16 M 9,21 M 9,91 M 9,99	- Tx Rate (Fps)	446.429	253.378	135.870	70.489	35.920	28.846
- Rx Rate (L1) (Bit/s)	- Rx (Frames)		205.851	138.095	64.908	35.601	28.803
- Flood Count (Frames) 59 48 56 52 55 55 P-0-4-4 - Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.384 - Tx Rate (L1) (Bit/s) 300 M 9,92 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9	- Rx Rate (L1) (Bit/s)	12,99 K	8,12 M	10,16 M	9,21 M	9,91 M	9,99 M
- Flood Count (Frames) 59 48 56 52 55 55 55 55 55 55 56 55 60 60 60 60 60 60 60 60 60 60 60 60 60	- Rx Rate (Fps)	19	6.862	4.603	2.164	1.187	960
P-0-4-4 - Tx (Frames)	- Flood Count (Frames)	59					53
- Tx Rate (L1) (Bit/s) 300 M 9,92 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9,	P-0-4-4						
- Tx Rate (L1) (Bit/s) 300 M 9,92 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,93 M 9,97 M 9,99 M 10 M 9,99 M 10 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9,99 M 10 M 9,99 M 10 M 9,99 M 9,	- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (Fps)							300 M
- Rx (Frames) 609 207.394 137.408 64.066 35.928 28.616   - Rx Rate (L1) (Bit/s) 13,64 K 8,19 M 10,11 M 9,09 M 10 M 9,92 M   - Rx Rate (Fps) 20 6.913 4.580 2.136 1.198 95-7   - Flood Count (Frames) 60 49 53 51 52 55   - Flood Count (Frames) 7.601.351 4.076.086 2.114.661 1.077.586 865.384   - Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.384   - Tx Rate (L1) (Bit/s) 300 M   - Tx Rate (Fps) 446.429 253.378 135.870 70.489 35.920 28.846   - Rx (Frames) 591 207.052 137.940 65.747 35.817 28.815   - Rx Rate (L1) (Bit/s) 13,24 K 8,17 M 10,15 M 9,33 M 9,97 M 9,99 M   - Rx Rate (Fps) 20 6.902 4.598 2.192 1.194 966		446.429	253.378	135.870	70.489	35.920	28.846
- Rx Rate (L1) (Bit/s)	- Rx (Frames)						28.616
- Flood Count (Frames) 60 49 53 51 52 56  P-0-4-5 - Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.384 - Tx Rate (L1) (Bit/s) 300 M 300 M 300 M 300 M 300 M 300 M - Tx Rate (Fps) 446.429 253.378 135.870 70.489 35.920 28.844 - Rx (Frames) 591 207.052 137.940 65.747 35.817 28.813 - Rx Rate (L1) (Bit/s) 13,24 K 8,17 M 10,15 M 9,33 M 9,97 M 9,99 M - Rx Rate (Fps) 20 6.902 4.598 2.192 1.194 966	- Rx Rate (L1) (Bit/s)	13,64 K	8,19 M	10,11 M	9,09 M	10 M	9,92 M
Flood Count (Frames)         60         49         53         51         52         56           P-0-4-5         - Tx (Frames)         13.392.857         7.601.351         4.076.086         2.114.661         1.077.586         865.384           - Tx Rate (L1) (Bit/s)         300 M         300 M<	, , , ,					1.198	954
P-0-4-5 - Tx (Frames) 13.392.857 7.601.351 4.076.086 2.114.661 1.077.586 865.384 - Tx Rate (L1) (Bit/s) 300 M 300 M 300 M 300 M 300 M 300 M - Tx Rate (Fps) 446.429 253.378 135.870 70.489 35.920 28.844 - Rx (Frames) 591 207.052 137.940 65.747 35.817 28.813 - Rx Rate (L1) (Bit/s) 13,24 K 8,17 M 10,15 M 9,33 M 9,97 M 9,99 M - Rx Rate (Fps) 20 6.902 4.598 2.192 1.194 966		60					58
- Tx Rate (L1) (Bit/s)     300 M     300 M <t< td=""><td>P-0-4-5</td><td></td><td></td><td></td><td>-</td><td></td><td></td></t<>	P-0-4-5				-		
- Tx Rate (L1) (Bit/s)     300 M     300 M <t< td=""><td>- Tx (Frames)</td><td>13.392.857</td><td>7.601.351</td><td>4.076.086</td><td>2.114.661</td><td>1.077.586</td><td>865.384</td></t<>	- Tx (Frames)	13.392.857	7.601.351	4.076.086	2.114.661	1.077.586	865.384
- Tx Rate (Fps)     446.429     253.378     135.870     70.489     35.920     28.844       - Rx (Frames)     591     207.052     137.940     65.747     35.817     28.813       - Rx Rate (L1) (Bit/s)     13,24 K     8,17 M     10,15 M     9,33 M     9,97 M     9,99 M       - Rx Rate (Fps)     20     6.902     4.598     2.192     1.194     960	- Tx Rate (L1) (Bit/s)						300 M
- Rx (Frames)     591     207.052     137.940     65.747     35.817     28.813       - Rx Rate (L1) (Bit/s)     13,24 K     8,17 M     10,15 M     9,33 M     9,97 M     9,99 M       - Rx Rate (Fps)     20     6.902     4.598     2.192     1.194     960	- Tx Rate (Fps)						28.846
- Rx Rate (L1) (Bit/s) 13,24 K 8,17 M 10,15 M 9,33 M 9,97 M 9,99 M - Rx Rate (Fps) 20 6.902 4.598 2.192 1.194 960							28.813
- Rx Rate (Fps) 20 6.902 4.598 2.192 1.194 960							9,99 M
	, , , ,						960
							54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5,4 G
Tx Rate (Fps)	438.881
Rx Rate (Percent)	4,29 %
Rx Rate (L1) (Bit/s)	772,05 M
Rx Rate (Fps)	62,75 K
Loss Rate (Percent)	85,7 %
Loss (Frames)	11.283.990
P-0-0-0	
- Tx (Frames)	731.459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	1.783.096
- Rx Rate (L1) (Bit/s)	731,31 M
- Rx Rate (Fps)	59.437
- Flood Count (Frames)	9
P-0-0-1	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.916
- Rx Rate (L1) (Bit/s)	2,43 M




Dy Poto (Eng.)	107
- Rx Rate (Fps) - Flood Count (Frames)	197 26
P-0-0-2	20
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.861
- Rx Rate (L1) (Bit/s)	2,4 M
- Rx Rate (Fps)	195
- Flood Count (Frames)	26
P-0-0-3	721 460
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731.469
- Tx Rate (ET) (Blus)	300 M 24.382
- Rx (Frames)	5.853
- Rx Rate (L1) (Bit/s)	2,4 M
- Rx Rate (Fps)	195
- Flood Count (Frames)	25
P-0-0-4	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.837
- Rx Rate (L1) (Bit/s)	2,39 M
- Rx Rate (Fps)	195
- Flood Count (Frames)	26
P-0-0-5	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.796
- Rx Rate (L1) (Bit/s)	2,38 M
- Rx Rate (Fps)	193
- Flood Count (Frames)	23
P-0-2-0	704 400
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 24.382
- Rx (Frames)	5.798
- Rx Rate (L1) (Bit/s)	2,38 M
- Rx Rate (Fps)	193
- Flood Count (Frames)	23
P-0-2-1	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.902
- Rx Rate (L1) (Bit/s)	2,42 M
- Rx Rate (Fps)	197
- Flood Count (Frames)	26
P-0-2-2	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.833
- Rx Rate (L1) (Bit/s)	2,39 M
- Rx Rate (Fps)	194
- Flood Count (Frames) P-0-2-3	28
	721 460
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731.469 300 M
- Tx Rate (ET) (Blus)	24.382
- Rx (Frames)	5.871
- Rx Rate (L1) (Bit/s)	2,41 M
- Rx Rate (Fps)	196
- Flood Count (Frames)	23
P-0-2-4	
	731.469
- Tx (Frames)	131.408
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 24.382



- Rx Rate (L1) (Bit/s)	2,39 M
- Rx Rate (Fps)	194
- Flood Count (Frames)	24
P-0-2-5	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.806
- Rx Rate (L1) (Bit/s)	2,38 M
- Rx Rate (Fps)	194
- Flood Count (Frames)	27
P-0-4-0	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.804
- Rx Rate (L1) (Bit/s)	2,38 M
- Rx Rate (Fps)	193
- Flood Count (Frames)	28
P-0-4-1	20
	724 460
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.796
- Rx Rate (L1) (Bit/s)	2,38 M
- Rx Rate (Fps)	193
- Flood Count (Frames)	30
P-0-4-2	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.834
- Rx Rate (L1) (Bit/s)	2,39 M
- Rx Rate (Fps)	194
- Flood Count (Frames)	28
P-0-4-3	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.843
- Rx Rate (L1) (Bit/s)	2,4 M
- Rx Rate (Fps)	195
- Flood Count (Frames)	25
P-0-4-4	
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.905
- Rx Rate (L1) (Bit/s)	2,42 M
- Rx Rate (Fps)	197
- Flood Count (Frames)	24
P-0-4-5	
	724 460
- Tx (Frames)	731.469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	5.869
- Rx Rate (L1) (Bit/s)	2,41 M
- Rx Rate (Fps)	196
- Flood Count (Frames)	29



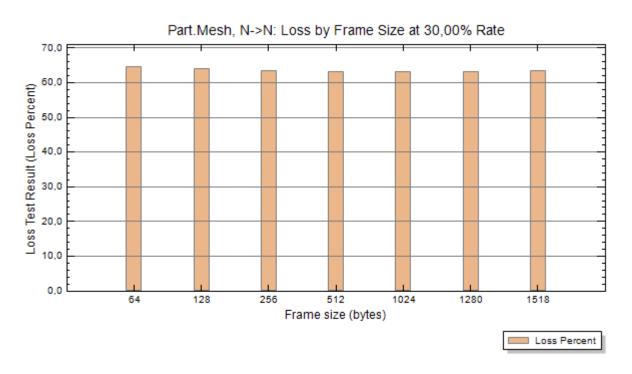

## Results for 40,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G
Tx Rate (Fps)	10.714.285	6.081.081	3.260.869	1.691.728	862.068	692.307
Rx Rate (Percent)	0,01 %	0,02 %	6,21 %	6,71 %	6,32 %	6,76 %
Rx Rate (L1) (Bit/s)	1,78 M	3,06 M	1,12 G	1,21 G	1,14 G	1,22 G
Rx Rate (Fps)	2,64 K	2,59 K	506,54 K	283,86 K	136,22 K	116,96 K
Loss Rate (Percent)	99,98 %	99,96 %	84,47 %	83,22 %	84,2 %	83,11 %
Loss (Frames)	321.349.228	182.354.834	82.629.793	42.236.194	21.775.560	17.260.360
P-0-0-0						
- Tx (Frames)	17.857.140	10.135.128	5.434.781	2.819.535	1.436.772	1.153.841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.892	38.461
- Rx (Frames)	67.322	69.090	12.720.947	7.007.320	3.362.390	2.879.762
- Rx Rate (L1) (Bit/s)	1,51 M	2,73 M	936,26 M	994,11 M	936,09 M	998,32 M
- Rx Rate (Fps)	2.244	2.303	424.032	233.577	112.080	95.992
- Flood Count (Frames)	33	28	14	11	8	14
P-0-0-1						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	877	567	148.179	89.038	42.358	34.809
- Rx Rate (L1) (Bit/s)	19,64 K	22,38 K	10,91 M	12,63 M	11,79 M	12,07 M
- Rx Rate (Fps)	29	19	4.939	2.968	1.412	1.160
- Flood Count (Frames)	56	59	45	56	57	55
P-0-0-2						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	888	572	148.191	89.173	42.738	36.979
- Rx Rate (L1) (Bit/s)	19,89 K	22,57 K	10,91 M	12,65 M	11,9 M	12,82 M
- Rx Rate (Fps)	30	19	4.940	2.972	1.425	1.233
- Flood Count (Frames)	61	59	44	56	55	57
P-0-0-3						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	580	146.750	88.872	42.797	37.355



- Rx Rate (L1) (Bit/s)	0	22,89 K	10,8 M	12,61 M	11,91 M	12,95 M
- Rx Rate (Fps)	0	19	4.892	2.962	1.427	1.245
- Flood Count (Frames)	58	63	51	58	55	57
P-0-0-4	47.057.440	40 405 405	E 404 700	0.040.540	4 400 704	4 450 040
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M 595.238	400 M 337.838	400 M	400 M	400 M	400 M
- Tx Rate (Fps)			181.159	93.985	47.893	38.462
- Rx (Frames)	835	558	132.705	88.976	42.626	36.827
- Rx Rate (L1) (Bit/s)	18,7 K	22,02 K	9,77 M	12,62 M	11,87 M	12,77 M
- Rx Rate (Fps)	28	19	4.424	2.966	1.421	1.228
- Flood Count (Frames)	61	61	54	56	53	58
P-0-0-5 - Tx (Frames)	17 057 140	10 125 125	5.434.782	2 040 540	1.436.781	1.153.846
- Tx (Frames)	17.857.142 400 M	10.135.135 400 M	400 M	2.819.548 400 M	400 M	1.155.646 400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	834	0	146.623	86.150	42.441	37.564
, ,	18,68 K	0		12,22 M		
- Rx Rate (L1) (Bit/s)		0	10,79 M		11,82 M	13,02 M
- Rx Rate (Fps)	28 58	59	4.887 47	2.872	1.415	1.252
- Flood Count (Frames) P-0-2-0	30	59	41	59	55	55
	17 057 140	10 125 125	5.434.782	2 040 540	1 126 701	1 152 046
- Tx (Frames)	17.857.142	10.135.135		2.819.548	1.436.781 400 M	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M		400 M
- Tx Rate (Fps)	595.238	337.838	181.159 147.246	93.985 88.295	47.893 43.129	38.462 36.904
- Rx (Frames)	791	543				
- Rx Rate (L1) (Bit/s)	17,72 K	21,43 K	10,84 M	12,53 M	12,01 M	12,79 M
- Rx Rate (Fps)	26	18	4.908	2.943	1.438	1.230
- Flood Count (Frames)	61	61	51	55	52	57
P-0-2-1	17 057 140	10 125 125	E 424 702	2 040 540	1 126 701	1 152 046
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	780	532	133.578	88.744	41.992	37.482
- Rx Rate (L1) (Bit/s)	17,47 K	21 K	9,83 M	12,59 M	11,69 M	12,99 M
- Rx Rate (Fps)	26 59	18	4.453	2.958	1.400	1.249
- Flood Count (Frames)	59	61	55	54	54	58
P-0-2-2	17 057 140	10 125 125	E 424 702	2 040 540	1 126 701	1 152 046
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17.857.142 400 M	10.135.135 400 M	5.434.782 400 M	2.819.548 400 M	1.436.781 400 M	1.153.846 400 M
- Tx Rate (Er) (Bit/s)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0 0	516	143.676	88.697	42.737	36.402
- Rx Rate (L1) (Bit/s)	0	20,36 K	10,57 M	12,58 M	11,9 M	12,8 M
- Rx Rate (Fps)	0	20,30 K	4.789	2.957	1.425	1.231
- Flood Count (Frames)	62	63	51	56	54	58
P-0-2-3	02	00	31	30	34	30
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx (Frames)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	776	523	148.136	88.666	42.194	37.127
- Rx Rate (L1) (Bit/s)	17,38 K	20,64 K	10,9 M	12,58 M	11,75 M	12,87 M
- Rx Rate (Fps)	26	17	4.938	2.956	1.406	1.238
- Flood Count (Frames)	61	63	54	58	57	58
P-0-2-4	01	00	34	30	31	30
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (ET) (Bit/s)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	793	499	147.387	89.577	42.002	37.019
- Rx Rate (L1) (Bit/s)	17,76 K	19,69 K	10,85 M	12,71 M		12,83 M
- Rx Rate (E1) (Bit/s)	26	19,09 K	4.913	2.986	11,69 M 1.400	1.234
- Flood Count (Frames)	59	61	53	57	55	58
P-0-2-5	39	01	33	31	33	30
	17 057 140	10 125 125	E 121 702	2 040 540	1 126 701	1 152 046
- Tx (Frames)	17.857.142 400 M	10.135.135 400 M	5.434.782 400 M	2.819.548 400 M	1.436.781 400 M	1.153.846 400 M
- Tx Rate (L1) (Bit/s)	595.238	337.838	181.159	93.985	47.893	38.462
- Tx Rate (Fps)						
- Rx (Frames)	774	525	147.507	88.974	42.923	37.202
- Rx Rate (L1) (Bit/s)	17,34 K	20,72 K	10,86 M	12,62 M	11,95 M	12,9 M
- Rx Rate (Fps)	26 60	18	4.917	2.966	1.431	1.240
- Flood Count (Frames)	00	61	46	56	55	57
P-0-4-0	17 057 440	10 125 125	E 404 700	2 040 540	1 406 704	1 150 040
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462



- Rx (Frames)	754	533	147.402	89.412	42.730	37.161
- Rx Rate (L1) (Bit/s)	16,89 K	21,04 K	10,85 M	12,68 M	11,9 M	12,88 M
- Rx Rate (Fps)	25	18	4.913	2.980	1.424	1.239
- Flood Count (Frames)	58	59	44	53	54	55
P-0-4-1						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	782	489	147.699	88.697	42.074	37.197
- Rx Rate (L1) (Bit/s)	17,52 K	19,3 K	10,87 M	12,58 M	11,71 M	12,89 M
- Rx Rate (Fps)	26	16	4.923	2.957	1.402	1.240
- Flood Count (Frames)	58	57	45	56	52	55
P-0-4-2						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	783	513	148.368	89.052	43.097	37.144
- Rx Rate (L1) (Bit/s)	17,54 K	20,25 K	10,92 M	12,63 M	12 M	12,88 M
- Rx Rate (Fps)	26	17	4.946	2.968	1.437	1.238
- Flood Count (Frames)	58	58	49	56	54	53
P-0-4-3						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	777	513	147.222	88.214	42.698	37.034
- Rx Rate (L1) (Bit/s)	17,4 K	20,25 K	10,84 M	12,51 M	11,89 M	12,84 M
- Rx Rate (Fps)	26	17	4.907	2.940	1.423	1.234
- Flood Count (Frames)	57	60	48	54	50	55
P-0-4-4						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	766	510	147.490	89.110	42.865	37.401
- Rx Rate (L1) (Bit/s)	17,16 K	20,13 K	10,86 M	12,64 M	11,93 M	12,97 M
- Rx Rate (Fps)	26	17	4.916	2.970	1.429	1.247
- Flood Count (Frames)	58	58	49	56	55	59
P-0-4-5						
- Tx (Frames)	17.857.142	10.135.135	5.434.782	2.819.548	1.436.781	1.153.846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	794	526	147.176	88.690	42.698	36.969
- Rx Rate (L1) (Bit/s)	17,79 K	20,76 K	10,83 M	12,58 M	11,89 M	12,82 M
- Rx Rate (Fps)	26	18	4.906	2.956	1.423	1.232
- Flood Count (Frames)	58	55	48	55	56	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7,2 G
Tx Rate (Fps)	585.175
Rx Rate (Percent)	5,92 %
Rx Rate (L1) (Bit/s)	1,07 G
Rx Rate (Fps)	86,62 K
Loss Rate (Percent)	85,2 %
Loss (Frames)	14.956.547
P-0-0-0	
- Tx (Frames)	975.290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	2.401.843
- Rx Rate (L1) (Bit/s)	985,08 M
- Rx Rate (Fps)	80.061
- Flood Count (Frames)	12
P-0-0-1	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.585
- Rx Rate (L1) (Bit/s)	4,75 M




Du Data (Fra)	200
- Rx Rate (Fps) - Flood Count (Frames)	386 25
P-0-0-2	23
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.616
- Rx Rate (L1) (Bit/s)	4,76 M
- Rx Rate (Fps)	387
- Flood Count (Frames)	27
P-0-0-3	075 202
- Tx (Frames) - Tx Rate (L1) (Bit/s)	975.292 400 M
- Tx Rate (ET) (Bl/s)	32.510
- Rx (Frames)	11.579
- Rx Rate (L1) (Bit/s)	4,75 M
- Rx Rate (Fps)	386
- Flood Count (Frames)	24
P-0-0-4	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames) - Rx Rate (L1) (Bit/s)	11.639
- Rx Rate (LT) (Bl/s)	4,77 M 388
- RX Rate (Fps) - Flood Count (Frames)	24
P-0-0-5	24
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.430
- Rx Rate (L1) (Bit/s)	4,69 M
- Rx Rate (Fps)	381
- Flood Count (Frames)	32
P-0-2-0	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M
- Rx (Frames)	32.510 11.650
- Rx Rate (L1) (Bit/s)	4,78 M
- Rx Rate (Fps)	388
- Flood Count (Frames)	31
P-0-2-1	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.488
- Rx Rate (L1) (Bit/s)	4,71 M
- Rx Rate (Fps) - Flood Count (Frames)	383
P-0-2-2	28_
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.610
- Rx Rate (L1) (Bit/s)	4,76 M
- Rx Rate (Fps)	387
- Flood Count (Frames)	28
P-0-2-3	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.552 4,74 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	385
- Flood Count (Frames)	20
P-0-2-4	20
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.518



- Rx Rate (L1) (Bit/s)	4,72 M
- Rx Rate (Fps)	384
- Flood Count (Frames)	29
P-0-2-5	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.625
- Rx Rate (L1) (Bit/s)	4,77 M
- Rx Rate (Fps)	388
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.663
- Rx Rate (L1) (Bit/s)	4,78 M
- Rx Rate (Fps)	389
- Flood Count (Frames)	26
P-0-4-1	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.642
, ,	4,77 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (Fps)	388
- Flood Count (Frames) P-0-4-2	25
	075 202
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.547
- Rx Rate (L1) (Bit/s)	4,74 M
- Rx Rate (Fps)	385
- Flood Count (Frames)	24
P-0-4-3	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.571
- Rx Rate (L1) (Bit/s)	4,75 M
- Rx Rate (Fps)	386
- Flood Count (Frames)	31
P-0-4-4	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.640
- Rx Rate (L1) (Bit/s)	4,77 M
- Rx Rate (Fps)	388
- Flood Count (Frames)	28
P-0-4-5	
- Tx (Frames)	975.292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	11.509
- Rx Rate (L1) (Bit/s)	4,72 M
- Rx Rate (Fps)	384
- Flood Count (Frames)	29
. 1004 Count (i fairios)	20



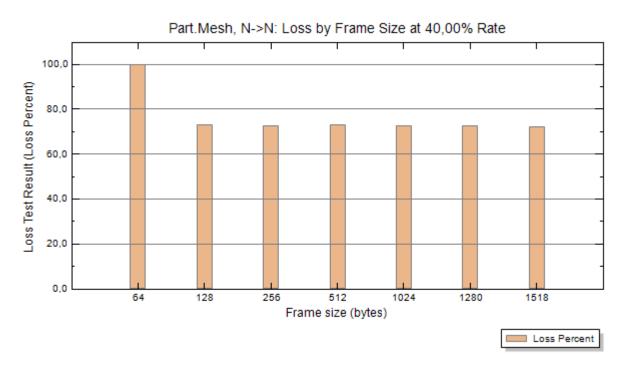

## Results for 50,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13.392.857	7.601.351	4.076.087	2.114.661	1.077.586	865.384
Rx Rate (Percent)	0,01 %	0,01 %	6,44 %	6,84 %	6,81 %	4,81 %
Rx Rate (L1) (Bit/s)	1,51 M	2,54 M	1,16 G	1,23 G	1,23 G	866,32 M
Rx Rate (Fps)	2,25 K	2,14 K	525,18 K	289,28 K	146,81 K	83,3 K
Loss Rate (Percent)	99,98 %	99,97 %	87,12 %	86,32 %	86,38 %	90,37 %
Loss (Frames)	401.718.305	227.976.203	106.527.124	54.761.552	27.923.171	23.462.504
P-0-0-0						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3.524.423	1.795.965	1.442.297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	55.467	57.988	13.415.993	7.007.659	3.583.831	1.869.054
- Rx Rate (L1) (Bit/s)	1,24 M	2,29 M	987,42 M	994,15 M	997,74 M	647,94 M
- Rx Rate (Fps)	1.849	1.933	447.200	233.589	119.461	62.302
- Flood Count (Frames)	37	29	8	13	15	11
P-0-0-1						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	1.110	508	138.604	97.707	47.810	37.241
- Rx Rate (L1) (Bit/s)	24,86 K	20,05 K	10,2 M	13,86 M	13,31 M	12,91 M
- Rx Rate (Fps)	37	17	4.620	3.257	1.594	1.241
- Flood Count (Frames)	63	59	40	46	49	45
P-0-0-2						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	516	131.860	98.260	48.545	37.072
- Rx Rate (L1) (Bit/s)	0	20,36 K	9,7 M	13,94 M	13,51 M	12,85 M
- Rx Rate (Fps)	0	17	4.395	3.275	1.618	1.236
- Flood Count (Frames)	58	56	40	46	50	45
P-0-0-3						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	1.089	433	140.499	99.032	48.418	37.060



- Rx Rate (L1) (Bit/s)	24,39 K	17,09 K	10,34 M	14,05 M	13,48 M	12,85 M
- Rx Rate (Fps)	36	14	4.683	3.301	1.614	1.235
- Flood Count (Frames)	57	59	44	50	45	54
P-0-0-4 - Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx (Frames) - Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	1.442.307 500 M
- Tx Rate (E1) (Bit/s)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	447	137.687	99.197	48.551	37.010
- Rx Rate (L1) (Bit/s)	0	17,64 K	10,13 M	14,07 M	13,52 M	12,83 M
- Rx Rate (Fps)	0	15	4.590	3.307	1.618	1.234
- Flood Count (Frames)	61	59	44	50	51	50
P-0-0-5	0.1				0.1	
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	889	0	127.699	96.095	48.065	37.048
- Rx Rate (L1) (Bit/s)	19,91 K	0	9,4 M	13,63 M	13,38 M	12,84 M
- Rx Rate (Fps)	30	0	4.257	3.203	1.602	1.235
- Flood Count (Frames)	58	58	37	47	46	54
P-0-2-0						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	884	427	138.046	97.825	47.837	36.999
- Rx Rate (L1) (Bit/s)	19,8 K	16,85 K	10,16 M	13,88 M	13,32 M	12,83 M
- Rx Rate (Fps)	29	14	4.602	3.261	1.595	1.233
- Flood Count (Frames)	59	60	45	53	52	49
P-0-2-1						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	906	452	139.958	98.786	47.967	36.903
- Rx Rate (L1) (Bit/s)	20,29 K	17,84 K	10,3 M	14,01 M	13,35 M	12,79 M
- Rx Rate (Fps)	30	15	4.665	3.293	1.599	1.230
- Flood Count (Frames)	59	58	48	54	50	54
P-0-2-2	00.004.400	10.000.010	0 -00 4-0	0 -04 400		4 440 00-
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297 0	226.449	117.481	59.866	48.077
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	139.373 10,26 M	98.345 13,95 M	48.255 13,43 M	37.020 12,83 M
- Rx Rate (E1) (Bit/s)	0	0	4.646	3.278	1.609	1.234
- Flood Count (Frames)	61	59	41	45	45	47
P-0-2-3	01	39	41	43	43	47
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	891	443	139.299	97.335	48.347	36.961
- Rx Rate (L1) (Bit/s)	19,96 K	17,48 K	10,25 M	13,81 M	13,46 M	12,81 M
- Rx Rate (Fps)	30	15	4.643	3.245	1.612	1.232
- Flood Count (Frames)	61	59	43	45	49	53
P-0-2-4	-			-	-	
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	427	138.616	98.467	48.348	36.931
- Rx Rate (L1) (Bit/s)	0	16,85 K	10,2 M	13,97 M	13,46 M	12,8 M
- Rx Rate (Fps)	0	14	4.621	3.282	1.612	1.231
- Flood Count (Frames)	58	59	42	48	55	50
P-0-2-5						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	879	0	135.690	98.789	47.964	37.057
- Rx Rate (L1) (Bit/s)	19,69 K	0	9,99 M	14,01 M	13,35 M	12,85 M
- Rx Rate (Fps)	29	0	4.523	3.293	1.599	1.235
- Flood Count (Frames)	59	58	39	46	45	47
P-0-4-0						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
				500.14	E00 N4	E00 14
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	500 M 744.048	500 M 422.297	500 M 226.449	500 M 117.481	500 M 59.866	500 M 48.077



- Rx (Frames)	881	443	139.316	98.754	48.144	37.072
- Rx Rate (L1) (Bit/s)	19,73 K	17,48 K	10,25 M	14,01 M	13,4 M	12,85 M
- Rx Rate (Fps)	29	15	4.644	3.292	1.605	1.236
- Flood Count (Frames)	55	58	39	49	43	50
P-0-4-1						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	887	439	140.212	98.601	48.661	37.215
- Rx Rate (L1) (Bit/s)	19,87 K	17,33 K	10,32 M	13,99 M	13,55 M	12,9 M
- Rx Rate (Fps)	30	15	4.674	3.287	1.622	1.241
- Flood Count (Frames)	58	57	44	51	53	51
P-0-4-2						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	885	446	138.048	98.108	48.182	37.074
- Rx Rate (L1) (Bit/s)	19,82 K	17,6 K	10,16 M	13,92 M	13,41 M	12,85 M
- Rx Rate (Fps)	30	15	4.602	3.270	1.606	1.236
- Flood Count (Frames)	56	60	47	45	48	50
P-0-4-3						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	880	453	137.320	98.209	48.303	37.156
- Rx Rate (L1) (Bit/s)	19,71 K	17,88 K	10,11 M	13,93 M	13,45 M	12,88 M
- Rx Rate (Fps)	29	15	4.577	3.274	1.610	1.239
- Flood Count (Frames)	58	59	44	48	46	47
P-0-4-4						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	881	450	138.362	99.048	48.517	37.037
- Rx Rate (L1) (Bit/s)	19,73 K	17,76 K	10,18 M	14,05 M	13,51 M	12,84 M
- Rx Rate (Fps)	29	15	4.612	3.302	1.617	1.235
- Flood Count (Frames)	56	56	48	49	42	49
P-0-4-5						
- Tx (Frames)	22.321.428	12.668.918	6.793.478	3.524.436	1.795.977	1.442.307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	867	441	138.892	98.066	48.658	37.102
- Rx Rate (L1) (Bit/s)	19,42 K	17,4 K	10,22 M	13,91 M	13,55 M	12,86 M
- Rx Rate (Fps)	29	15	4.630	3.269	1.622	1.237
- Flood Count (Frames)	56	56	49	49	47	48

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731.469
Rx Rate (Percent)	6,2 %
Rx Rate (L1) (Bit/s)	1,12 G
Rx Rate (Fps)	90,69 K
Loss Rate (Percent)	87,6 %
Loss (Frames)	19.223.288
P-0-0-0	
- Tx (Frames)	1.219.104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	2.435.955
- Rx Rate (L1) (Bit/s)	999,07 M
- Rx Rate (Fps)	81.199
- Flood Count (Frames)	11
P-0-0-1	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.919
- Rx Rate (L1) (Bit/s)	6,94 M




De Dete (Fee)	F0.4
<ul><li>- Rx Rate (Fps)</li><li>- Flood Count (Frames)</li></ul>	564 25
P-0-0-2	23
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.965
- Rx Rate (L1) (Bit/s)	6,96 M
- Rx Rate (Fps)	566
- Flood Count (Frames)	26
P-0-0-3	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.092 7,01 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	570
- Flood Count (Frames)	21
P-0-0-4	21
- Tx (Frames)	1.219.115
- Tx (Frames)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.455
- Rx Rate (L1) (Bit/s)	6,75 M
- Rx Rate (Fps)	549
- Flood Count (Frames)	24
P-0-0-5	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.852
- Rx Rate (L1) (Bit/s)	6,91 M
- Rx Rate (Fps)	562
- Flood Count (Frames)	22
P-0-2-0	1 210 115
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	500 M 40.637
- Rx (Frames)	17.180
- Rx Rate (L1) (Bit/s)	7,05 M
- Rx Rate (Fps)	573
- Flood Count (Frames)	22
P-0-2-1	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.901
- Rx Rate (L1) (Bit/s)	6,93 M
- Rx Rate (Fps)	563
- Flood Count (Frames)	21
P-0-2-2	4.040.445
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.989 6.97 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6,97 M
- Flood Count (Frames)	566 25
P-0-2-3	20
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.137
- Rx Rate (L1) (Bit/s)	7,03 M
- Rx Rate (Fps)	571
- Flood Count (Frames)	25
P-0-2-4	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	12.941



Py Poto (L1) (Pit/o)	5 21 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5,31 M 431
- Flood Count (Frames)	24
P-0-2-5	24
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.011
- Rx Rate (L1) (Bit/s)	6,98 M
- Rx Rate (Fps)	567
- Flood Count (Frames)	22
P-0-4-0	22
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (E1) (Bl/s)	40.637
	17.168
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	7,04 M
- Rx Rate (Fps)	572
- Flood Count (Frames)	21
P-0-4-1	4 040 445
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.015
- Rx Rate (L1) (Bit/s)	6,98 M
- Rx Rate (Fps)	567
- Flood Count (Frames)	25
P-0-4-2	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	16.949
- Rx Rate (L1) (Bit/s)	6,95 M
- Rx Rate (Fps)	565
- Flood Count (Frames)	24
P-0-4-3	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.071
- Rx Rate (L1) (Bit/s)	7 M
- Rx Rate (Fps)	569
- Flood Count (Frames)	23
P-0-4-4	
- Tx (Frames)	1.219.115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	17.130
- Rx Rate (L1) (Bit/s)	7,03 M
- Rx Rate (Fps)	571
- Flood Count (Frames)	23
P-0-4-5	20
- Tx (Frames)	1.219.115
	500 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	40.637
- Rx (Frames)	
	17.041
- Rx Rate (L1) (Bit/s)	6,99 M
- Rx Rate (Fps)	568
- Flood Count (Frames)	26



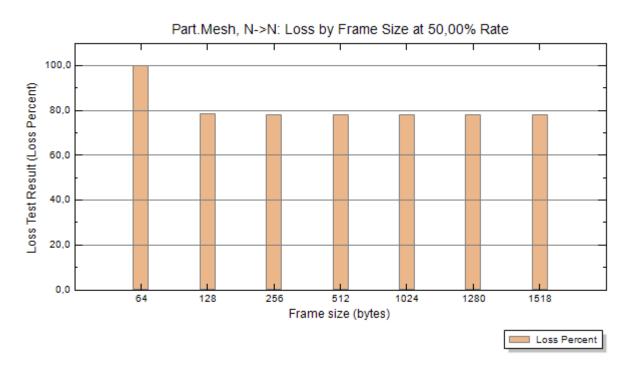

## Results for 60,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10,8 G	10,8 G	10,8 G	10,8 G	10,8 G	10,8 G
Tx Rate (Fps)	16.071.428	9.121.621	4.891.303	2.537.593	1.293.103	1.038.461
Rx Rate (Percent)	0,01 %	0,01 %	1,97 %	6,81 %	6,61 %	6,99 %
Rx Rate (L1) (Bit/s)	1,26 M	2,23 M	355,09 M	1,23 G	1,19 G	1,26 G
Rx Rate (Fps)	1,88 K	1,89 K	160,82 K	288,22 K	142,53 K	120,93 K
Loss Rate (Percent)	99,99 %	99,98 %	96,71 %	88,64 %	88,98 %	88,35 %
Loss (Frames)	482.086.571	273.592.046	141.914.535	67.481.334	34.517.316	27.525.918
P-0-0-0						
- Tx (Frames)	26.785.710	15.202.692	8.152.163	4.229.311	2.155.158	1.730.753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599,99 M
- Tx Rate (Fps)	892.857	506.756	271.739	140.977	71.839	57.692
- Rx (Frames)	43.674	49.870	4.543.715	7.005.396	3.583.434	2.880.298
- Rx Rate (L1) (Bit/s)	978,3 K	1,97 M	334,42 M	993,83 M	997,63 M	998,5 M
- Rx Rate (Fps)	1.456	1.662	151.457	233.513	119.448	96.010
- Flood Count (Frames)	25	23	28	12	11	17
P-0-0-1						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	1.044	594	18.030	96.839	40.104	43.985
- Rx Rate (L1) (Bit/s)	23,39 K	23,44 K	1,33 M	13,74 M	11,16 M	15,25 M
- Rx Rate (Fps)	35	20	601	3.228	1.337	1.466
- Flood Count (Frames)	59	59	58	35	43	42
P-0-0-2						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	550	14.200	96.134	38.290	43.887
- Rx Rate (L1) (Bit/s)	0	21,71 K	1,05 M	13,64 M	10,66 M	15,21 M
- Rx Rate (Fps)	0	18	473	3.204	1.276	1.463
- Flood Count (Frames)	59	59	56	36	39	38
P-0-0-3						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	928	448	18.587	96.432	41.447	43.446



- Rx Rate (L1) (Bit/s)	20,79 K	17,68 K	1,37 M	13,68 M	11,54 M	15,06 M
- Rx Rate (Fps)	31	15	620	3.214	1.382	1.448
- Flood Count (Frames)	61	59	56	38	40	45
P-0-0-4	00 705 744	45 000 700	0.450.470	4 000 000	0.455.470	4 700 700
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	600 M 892.857	600 M 506.757	600 M 271.739	600 M 140.977	600 M 71.839	600 M 57.692
- Rx (Frames)	888	469	15.844	96.387	41.056	43.910
- Rx Rate (L1) (Bit/s)	19,89 K	18,51 K	1,17 M	13,67 M	11,43 M	15,22 M
- Rx Rate (Fps)	30	16	528	3.213	1.369	1.464
- Flood Count (Frames)	61	61	55	45	42	44
P-0-0-5	0.	0.1		10		
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	448	0	96.713	41.092	43.269
- Rx Rate (L1) (Bit/s)	0	17,68 K	0	13,72 M	11,44 M	15 M
- Rx Rate (Fps)	0	15	0	3.224	1.370	1.442
- Flood Count (Frames)	59	57	59	48	37	37
P-0-2-0						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	828	458	17.354	96.599	41.088	44.148
- Rx Rate (L1) (Bit/s)	18,55 K	18,08 K	1,28 M	13,7 M	11,44 M	15,3 M
- Rx Rate (Fps)	28	15	578	3.220	1.370	1.472
- Flood Count (Frames)	57	59	59	38	42	40
P-0-2-1						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	807	447	18.485	96.504	40.509	43.943
- Rx Rate (L1) (Bit/s)	18,08 K	17,64 K	1,36 M	13,69 M	11,28 M	15,23 M
- Rx Rate (Fps) - Flood Count (Frames)	27 60	15 60	616 59	3.217	1.350	1.465 43
P-0-2-2	00	00	39	43	30	43
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	808	0	17.449	96.597	38.608	44.071
- Rx Rate (L1) (Bit/s)	18,1 K	0	1,28 M	13,7 M	10,75 M	15,28 M
- Rx Rate (Fps)	27	0	582	3.220	1.287	1.469
- Flood Count (Frames)	59	57	58	33	39	39
P-0-2-3						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	785	477	18.860	96.808	40.949	43.842
- Rx Rate (L1) (Bit/s)	17,58 K	18,83 K	1,39 M	13,73 M	11,4 M	15,2 M
- Rx Rate (Fps)	26	16	629	3.227	1.365	1.461
- Flood Count (Frames)	62	57	57	37	41	44
P-0-2-4						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	825	0	16.015	96.856	41.136	44.029
- Rx Rate (L1) (Bit/s)	18,48 K	0	1,18 M	13,74 M	11,45 M	15,26 M
- Rx Rate (Fps)	28	0	534	3.229	1.371	1.468
- Flood Count (Frames)	59	56	57	39	39	44
P-0-2-5	06 705 744	4E 000 700	0.450.470	4 000 000	0 455 470	4 700 700
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	804	0	17.138	96.472	40.924	44.141
- Rx Rate (L1) (Bit/s)	18,01 K	0	1,26 M	13,69 M	11,39 M	15,3 M
- Rx Rate (Fps) - Flood Count (Frames)	27 59	61	571 56	3.216 37	1.364	1.471
P-0-4-0	59	01	90	31	45	42
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26.785.714 600 M	600 M	600 M	4.229.323 600 M	2.155.172 600 M	1.730.769 600 M
- Tx Rate (ET) (Bit/S)	892.857	506.757	271.739	140.977	71.839	57.692
- 17 Mare (Lh2)	092.001	300.737	211.139	140.977	11.039	57.092



- Rx (Frames)	827	473	18.244	96.642	41.463	44.027
- Rx Rate (L1) (Bit/s)	18,52 K	18,67 K	1,34 M	13,71 M	11,54 M	15,26 M
- Rx Rate (Fps)	28	16	608	3.221	1.382	1.468
- Flood Count (Frames)	55	56	59	36	37	37
P-0-4-1						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	813	469	18.219	96.424	41.345	44.082
- Rx Rate (L1) (Bit/s)	18,21 K	18,51 K	1,34 M	13,68 M	11,51 M	15,28 M
- Rx Rate (Fps)	27	16	607	3.214	1.378	1.469
- Flood Count (Frames)	55	57	56	39	41	35
P-0-4-2						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	808	483	18.011	96.290	41.171	44.068
- Rx Rate (L1) (Bit/s)	18,1 K	19,06 K	1,33 M	13,66 M	11,46 M	15,28 M
- Rx Rate (Fps)	27	16	600	3.210	1.372	1.469
- Flood Count (Frames)	58	58	54	41	33	42
P-0-4-3						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	820	475	18.194	96.381	40.912	44.148
- Rx Rate (L1) (Bit/s)	18,37 K	18,75 K	1,34 M	13,67 M	11,39 M	15,3 M
- Rx Rate (Fps)	27	16	606	3.213	1.364	1.472
- Flood Count (Frames)	57	58	54	35	37	41
P-0-4-4						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	815	466	18.086	96.712	41.183	44.148
- Rx Rate (L1) (Bit/s)	18,26 K	18,39 K	1,33 M	13,72 M	11,47 M	15,3 M
- Rx Rate (Fps)	27	16	603	3.224	1.373	1.472
- Flood Count (Frames)	58	56	57	41	36	45
P-0-4-5						
- Tx (Frames)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	803	453	18.138	96.282	41.055	44.466
- Rx Rate (L1) (Bit/s)	17,99 K	17,88 K	1,33 M	13,66 M	11,43 M	15,41 M
- Rx Rate (Fps)	27	15	605	3.209	1.369	1.482
- Flood Count (Frames)	58	54	54	33	38	44

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10,8 G
Tx Rate (Fps)	877.763
Rx Rate (Percent)	5,99 %
Rx Rate (L1) (Bit/s)	1,08 G
Rx Rate (Fps)	87,58 K
Loss Rate (Percent)	90,02 %
Loss (Frames)	23.705.384
P-0-0-0	
- Tx (Frames)	1.462.935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	2.403.687
- Rx Rate (L1) (Bit/s)	985,83 M
- Rx Rate (Fps)	80.123
- Flood Count (Frames)	13
P-0-0-1	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.157
- Rx Rate (L1) (Bit/s)	5,4 M




D D ( ( )	400
- Rx Rate (Fps)	439
- Flood Count (Frames) P-0-0-2	24
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.255
- Rx Rate (L1) (Bit/s)	5,44 M
- Rx Rate (Fps)	442
- Flood Count (Frames)	24
P-0-0-3	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.089
- Rx Rate (L1) (Bit/s)	5,37 M
- Rx Rate (Fps)	436
- Flood Count (Frames) P-0-0-4	20
	1 462 039
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.462.938 600 M
- Tx Rate (LT) (Bit/s)	48.765
- Rx (Frames)	13.243
- Rx Rate (L1) (Bit/s)	5,43 M
- Rx Rate (E1) (Blus)	3,43 W
- Flood Count (Frames)	26
P-0-0-5	20
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	12.973
- Rx Rate (L1) (Bit/s)	5,32 M
- Rx Rate (Fps)	432
- Flood Count (Frames)	24
P-0-2-0	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.104
- Rx Rate (L1) (Bit/s)	5,37 M
- Rx Rate (Fps)	437
- Flood Count (Frames)	27
P-0-2-1	4 400 000
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	600 M
· · · · ·	48.765 13.137
- Rx (Frames) - Rx Rate (L1) (Bit/s)	5,39 M
- Rx Rate (Fps)	438
- Flood Count (Frames)	26
P-0-2-2	20
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.112
- Rx Rate (L1) (Bit/s)	5,38 M
- Rx Rate (Fps)	437
- Flood Count (Frames)	23
P-0-2-3	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.173
- Rx Rate (L1) (Bit/s)	5,4 M
- Rx Rate (Fps)	439
- Flood Count (Frames)	25
P-0-2-4	4 400 000
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.234



Dy Doto (L1) (Dit(o)	E 42 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5,43 M 441
- Flood Count (Frames)	22
P-0-2-5	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.063
- Rx Rate (L1) (Bit/s)	5,36 M
- Rx Rate (Fps)	435
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.179
- Rx Rate (L1) (Bit/s)	5,41 M
- Rx Rate (Fps)	439
- Flood Count (Frames)	23
P-0-4-1	20
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (ET) (Bit/s)	48.765
	13.264
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	5,44 M
- Rx Rate (Fps)	442
- Flood Count (Frames)	20
P-0-4-2	1 460 000
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.203
- Rx Rate (L1) (Bit/s)	5,41 M
- Rx Rate (Fps)	440
- Flood Count (Frames)	25
P-0-4-3	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.168
- Rx Rate (L1) (Bit/s)	5,4 M
- Rx Rate (Fps)	439
- Flood Count (Frames)	23
P-0-4-4	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.271
- Rx Rate (L1) (Bit/s)	5,44 M
- Rx Rate (Fps)	442
- Flood Count (Frames)	26
P-0-4-5	
- Tx (Frames)	1.462.938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.765
- Rx (Frames)	13.185
- Rx Rate (L1) (Bit/s)	5,41 M
- Rx Rate (Fps)	440
- Flood Count (Frames)	22
(i ramos)	



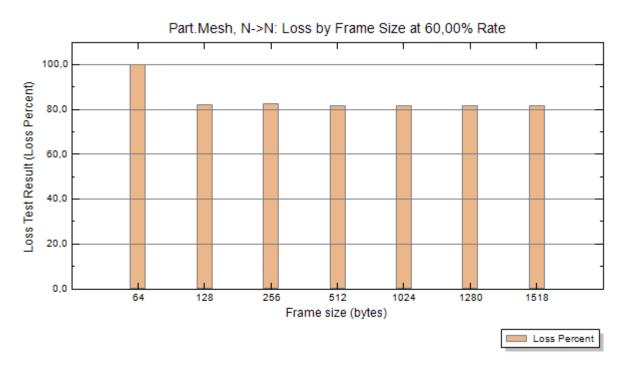

# Results for 70,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12,6 G	12,6 G	12,6 G	12,6 G	12,6 G	12,6 G
Tx Rate (Fps)	18.750.000	10.641.891	5.706.521	2.960.526	1.508.620	1.211.538
Rx Rate (Percent)	0,01 %	0 %	0,15 %	7,17 %	7,07 %	7,05 %
Rx Rate (L1) (Bit/s)	1,48 M	678,16 K	27,2 M	1,29 G	1,27 G	1,27 G
Rx Rate (Fps)	2,2 K	572,77	12,32 K	303,43 K	152,39 K	122,02 K
Loss Rate (Percent)	99,99 %	99,99 %	99,78 %	89,75 %	89,9 %	89,93 %
Loss (Frames)	562.434.095	319.239.553	170.826.007	79.712.834	40.686.919	32.685.463
P-0-0-0						
- Tx (Frames)	31.249.995	17.736.474	9.510.854	4.934.199	2.514.351	2.019.226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.028	164.473	83.812	67.308
- Rx (Frames)	52.532	17.182	345.207	7.007.972	3.584.221	2.846.808
- Rx Rate (L1) (Bit/s)	1,18 M	678,12 K	25,41 M	994,2 M	997,85 M	986,89 M
- Rx Rate (Fps)	1.751	573	11.507	233.599	119.474	94.894
- Flood Count (Frames)	26	27	25	14	8	13
P-0-0-1						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	0	0	0	122.529	58.052	47.974
- Rx Rate (L1) (Bit/s)	0	0	0	17,38 M	16,16 M	16,63 M
- Rx Rate (Fps)	0	0	0	4.084	1.935	1.599
- Flood Count (Frames)	61	60	61	39	40	49
P-0-0-2						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.463	0	1.920	122.881	58.010	45.909
- Rx Rate (L1) (Bit/s)	32,77 K	0	141,31 K	17,43 M	16,15 M	15,92 M
- Rx Rate (Fps)	49	0	64	4.096	1.934	1.530
- Flood Count (Frames)	61	59	58	32	41	42
P-0-0-3						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	0	0	0	123.944	58.183	48.186



- Rx Rate (L1) (Bit/s)	0	0	0	17,58 M	16,2 M	16,7 M
- Rx Rate (Fps)	0	0	0	4.131	1.939	1.606
- Flood Count (Frames)	60	59	60	45	40	39
P-0-0-4	04.050.000	47 700 400	0.540.000	4 004 040	0.544.007	0.040.000
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M 317.029	700 M	700 M 83.812	700 M 67.308
- Tx Rate (Fps)	1.041.667	591.216		164.474	57.989	47.852
- Rx (Frames)	1.415	0	1.817	123.255		
- Rx Rate (L1) (Bit/s)	31,7 K	0	133,73 K	17,49 M	16,14 M	16,59 M
- Rx Rate (Fps)	47		61	4.109	1.933	1.595
- Flood Count (Frames) P-0-0-5	61	59	61	40	46	42
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.472	0	1.915	124.255	58.254	48.041
- Rx Rate (L1) (Bit/s)	32,97 K	0	140,94 K	17,63 M	16,22 M	16,65 M
- Rx Rate (Fps)	32,97 K	0	64	4.142	1.942	1.601
- Flood Count (Frames)	60	58	63	4.142	41	45
P-0-2-0	00	30	03	41	41	40
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (LT) (Bit/s)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.041.007	0	1.867	123.489	58.235	47.515
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	1.867 137,41 K	17,52 M	16,21 M	16,47 M
- Rx Rate (E1) (Bivs)	0	0	62	4.116	1.941	1.584
- Flood Count (Frames)	57	56	60	52	51	37
P-0-2-1	37	30	00	32	31	31
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	0	0	1.849	123.847	57.066	47.782
- Rx Rate (L1) (Bit/s)	0	0	136,09 K	17,57 M	15,89 M	16,56 M
- Rx Rate (E1) (Bivs)	0	0	62	4.128	1.902	1.593
- Flood Count (Frames)	57	58	56	4.120	41	1.595
P-0-2-2	31	30	30	43	41	44
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	0	0	0	123.589	57.688	47.883
- Rx Rate (L1) (Bit/s)	0	0	0	17,53 M	16,06 M	16,6 M
- Rx Rate (Fps)	0	0	0	4.120	1.923	1.596
- Flood Count (Frames)	58	61	57	44	41	39
P-0-2-3		01	01		71	- 00
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	0	0	0	122.752	58.152	47.918
- Rx Rate (L1) (Bit/s)	0	0	0	17,41 M	16,19 M	16,61 M
- Rx Rate (Fps)	0	0	0	4.092	1.938	1.597
- Flood Count (Frames)	60	60	58	39	40	38
P-0-2-4	00	- 00	30			30
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.285	0	1.960	122.711	58.206	48.141
- Rx Rate (L1) (Bit/s)	28,78 K	0	144,26 K	17,41 M	16,2 M	16,69 M
- Rx Rate (Fps)	43	0	65	4.090	1.940	1.605
- Flood Count (Frames)	63	58	59	40	48	39
P-0-2-5	00	30		40	70	- 33
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (ET) (Bit/s)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.041.007	0	1.893	122.389	58.028	47.885
- Rx (Frames)	0	0	139,32 K	17,36 M	16,15 M	47.005 16,6 M
- Rx Rate (LT) (Bit/S)	0	0	139,32 K	4.080	1.934	1.596
- Flood Count (Frames)	58	58	57	39	40	48
P-0-4-0	30	30	31	38	40	40
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308



- Rx (Frames)	1.288	0	1.918	123.453	58.260	48.047
- Rx Rate (L1) (Bit/s)	28,85 K	0	141,16 K	17,51 M	16,22 M	16,66 M
- Rx Rate (Fps)	43	0	64	4.115	1.942	1.602
- Flood Count (Frames)	58	57	59	42	39	42
P-0-4-1						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.281	0	1.777	123.193	58.397	48.215
- Rx Rate (L1) (Bit/s)	28,69 K	0	130,79 K	17,48 M	16,26 M	16,71 M
- Rx Rate (Fps)	43	0	59	4.106	1.947	1.607
- Flood Count (Frames)	55	60	59	39	42	39
P-0-4-2						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.295	0	1.983	123.627	57.966	48.224
- Rx Rate (L1) (Bit/s)	29,01 K	0	145,95 K	17,54 M	16,14 M	16,72 M
- Rx Rate (Fps)	43	0	66	4.121	1.932	1.607
- Flood Count (Frames)	60	56	58	37	48	44
P-0-4-3						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.297	0	1.773	123.242	58.175	48.190
- Rx Rate (L1) (Bit/s)	29,05 K	0	130,49 K	17,48 M	16,2 M	16,71 M
- Rx Rate (Fps)	43	0	59	4.108	1.939	1.606
- Flood Count (Frames)	59	56	60	33	46	45
P-0-4-4						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)	1.275	0	1.785	123.049	58.411	47.954
- Rx Rate (L1) (Bit/s)	28,56 K	0	131,38 K	17,46 M	16,26 M	16,62 M
- Rx Rate (Fps)	43	0	60	4.102	1.947	1.598
- Flood Count (Frames)	56	56	56	36	40	35
P-0-4-5						
- Tx (Frames)	31.250.000	17.736.486	9.510.869	4.934.210	2.514.367	2.019.230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.308
- Rx (Frames)				122.758		
	1.297	1	1.956	122.730	58.378	48.149
	1.297 29.05 K				58.378 16.25 M	48.149 16.69 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	1.297 29,05 K 43	39,47 0	1.956 143,96 K 65	17,42 M 4.092	16,25 M 1.946	16,69 M 1.605

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12,6 G
Tx Rate (Fps)	1.024.057
Rx Rate (Percent)	6,02 %
Rx Rate (L1) (Bit/s)	1,08 G
Rx Rate (Fps)	88,02 K
Loss Rate (Percent)	91,4 %
Loss (Frames)	28.081.104
P-0-0-0	
- Tx (Frames)	1.706.749
- Tx Rate (L1) (Bit/s)	699,99 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	2.426.056
- Rx Rate (L1) (Bit/s)	995,01 M
- Rx Rate (Fps)	80.869
- Flood Count (Frames)	7
P-0-0-1	
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.703
- Rx Rate (L1) (Bit/s)	5,21 M




- Fix Rate (Fps) 4.23 - Flood Count (Frames) 27 - Flood Count (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.715 - Rx Rate (L1) (Bit/s) 5,21 M - Rx Rate (Fps) 424 - Flood Count (Frames) 27 - P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (Fps) 421 - Rx Rate (Fps) 421 - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - Rx (Frames) 1.706.762 - Tx (Frames) 1.706.7	Du Data (Fra)	400
P-0-0-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.715 - Rx Rate (L1) (Bit/s) 5,21 M - Rx Rate (Fps) 424 - Flood Count (Frames) 27 - P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 12.706.762 - Tx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx	- Rx Rate (Fps)	423
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.715 - Rx Rate (L1) (Bit/s) 5.21 M - Rx Rate (Fps) 424 - Flood Count (Frames) 27 - P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5.18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 56.892 - Rx (Fr		21
- Tx Rate (L1) (Bit/s)		1.706.762
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.715 - Rx Rate (L1) (Bit/s) 5,21 M - Rx Rate (Fps) 424 - Flood Count (Frames) 27 - P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.564 - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx R		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) 424 - Flood Count (Frames) 27 P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx (Frames) 12.585 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.5591 - Rx (Frames) 12.5591 - Rx (Frames) 12.5591 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892 -		
- Flood Count (Frames) 27 P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx (Frames) 12.591 - Rx (Frames) 12.591 - Rx (Frames) 12.591 - Rx (Frames) 12.593 - Rx (Frames) 12.593 - Rx (Frames) 12.593 - Rx (Frames) 12.593 - Rx (Frames) 12.594 - Rx (Frames) 12.593 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.593 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.593 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx (Frames) 12.594 - Rx (Frames) 12.596 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx (Frames) 12.591 - Rx (Frames) 12.593 - Rx (Frames) 12.594 - Rx (Frames) 12.596 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892		
P-0-0-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.593 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.593 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.594 - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892		27
- Tx Rate (L1) (Bit/s) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892 -		1 706 760
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx (Frames) 56.892 - Rx (Frames) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 9.68.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892	- Tx (Frames)	
- Rx (Frames) 12.641 - Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 - P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 - P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (Fps) 56.892	- Tx Rate (Ens)	
- Rx Rate (L1) (Bit/s) 5,18 M - Rx Rate (Fps) 421 - Flood Count (Frames) 25 P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892		
- Rx Rate (Fps) 421 - Flood Count (Frames) 25 P-0-0-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 9 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 56.892		
Flood Count (Frames)         25           P-0-0-4         1.706.762           - Tx Rate (L1) (Bit/s)         700 M           - Tx Rate (Fps)         56.892           - Rx (Frames)         12.470           - Rx Rate (L1) (Bit/s)         5,11 M           - Rx Rate (Fps)         416           - Flood Count (Frames)         22           P-0-0-5         - Tx (Frames)         1.706.762           - Tx Rate (L1) (Bit/s)         700 M           - Tx Rate (Fps)         56.892           - Rx (Frames)         12.585           - Rx Rate (L1) (Bit/s)         5,16 M           - Rx Rate (Fps)         420           - Flood Count (Frames)         24           P-0-2-0         - Tx (Frames)         1.706.762           - Tx Rate (L1) (Bit/s)         700 M           - Tx Rate (Fps)         56.892           - Rx (Frames)         12.654           - Rx Rate (Fps)         422           - Flood Count (Frames)         24           P-0-2-1         - Tx (Frames)         1.706.762           - Tx Rate (L1) (Bit/s)         5,16 M           - Tx Rate (Fps)         56.892           - Rx (Frames)         1.2591           - Rx Rate (Fps) <td>- Rx Rate (Fps)</td> <td></td>	- Rx Rate (Fps)	
- Tx (Frames)	- Flood Count (Frames)	25
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps)		
- Rx (Frames) 12.470 - Rx Rate (L1) (Bit/s) 5,11 M - Rx Rate (Fps) 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.2654 - Rx Rate (L1) (Bit/s) 700 M - Rx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx Rate (Fps) 700 M - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 700 M - Tx Rate (Fps) 700 M - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 700 M - Rx Rate (L1) (Bit/s) 700 M - Rx Rate (Fps) 700 M - Tx Rate (Fps) 700 M - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 700 M - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 700 M		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) - 416 - Flood Count (Frames) 22 P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 56.892 - Flood Count (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 422 - Flood Count (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 50.892	- KX (Frames)	
- Flood Count (Frames) P-0-0-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Tx (Frames) - Tx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx Rate (Fps)		
P-0-0-5 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,19 M - Tx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 56.892		
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 - P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 56.892 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 30 - P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 56.892		22
- Tx Rate (L1) (Bit/s)		1 706 762
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5.892	- Tx (Frames)	
- Rx (Frames) 12.585 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (L1) (Bit/s) 700 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 56.892 - Tx Rate (L1) (Bit/s) 56.892		
- Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx (Frames) 700 M - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (Fps) 420 - Flood Count (Frames) 24 P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx Rate (Fps) 56.892 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
P-0-2-0 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 700 M - Tx Rate (Fps) 422 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - P-0-2-2 - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 700 M - Rx Rate (Fps) 418 - Flood Count (Frames) 700 M - Rx Rate (Fps) 700 M - Rx Rate (Fps) 700 M - Tx Rate (Fps) 700 M - Tx Rate (Fps) 700 M - Rx Rate (Fps) 700 M - Tx Rate (Fps) 700 M		
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 - P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	- Flood Count (Frames)	24
- Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	P-0-2-0	
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx (Frames) 12.654 - Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (L1) (Bit/s) 5,19 M - Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (Fps) 422 - Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Rx (Frames) 1.706.762 - Rx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Flood Count (Frames) 24 P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
P-0-2-1 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 700 M - Tx (Frames) 1.706.762 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Rx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 50.892 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 - P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 418 - Flood Count (Frames) 27 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 - P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		1.706.762
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.591 - Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (L1) (Bit/s) 5,16 M - Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		56.892
- Rx Rate (Fps) 420 - Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		12.591
- Flood Count (Frames) 30 P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 51.2 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
P-0-2-2 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	- Rx Rate (Fps)	
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		30
- Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 512 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		4 700 700
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx (Frames) 12.539 - Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (L1) (Bit/s) 5,14 M - Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (Fps) 418 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	- Rx Rate (Fps)	
P-0-2-3 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Tx Rate (Fps) 56.892 - Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	- Tx (Frames)	1.706.762
- Rx (Frames) 12.476 - Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		700 M
- Rx Rate (L1) (Bit/s) 5,12 M - Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Rx Rate (Fps) 416 - Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
- Flood Count (Frames) 27 P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		
P-0-2-4 - Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	- KX Kate (Fps)	
- Tx (Frames) 1.706.762 - Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892	P-0-2-4	21
- Tx Rate (L1) (Bit/s) 700 M - Tx Rate (Fps) 56.892		1 706 762
- Tx Rate (Fps) 56.892		



- Rx Rate (L1) (Bit/s)	5,16 M
- Rx Rate (Fps)	419
- Flood Count (Frames)	23
P-0-2-5	
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.652
- Rx Rate (L1) (Bit/s)	5,19 M
- Rx Rate (Fps)	422
- Flood Count (Frames) P-0-4-0	24
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.622
- Rx Rate (L1) (Bit/s)	5,18 M
- Rx Rate (Fps)	421
- Flood Count (Frames)	28
P-0-4-1	
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.824
- Rx Rate (L1) (Bit/s)	5,26 M
- Rx Rate (Fps)	427
- Flood Count (Frames) P-0-4-2	24
- Tx (Frames)	1.706.762
- Tx (Frames)	700 M
- Tx Rate (ET) (Bit/s)	56.892
- Rx (Frames)	12.647
- Rx Rate (L1) (Bit/s)	5,19 M
- Rx Rate (Fps)	422
- Flood Count (Frames)	26
P-0-4-3	
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.626
- Rx Rate (L1) (Bit/s)	5,18 M
- Rx Rate (Fps)	421
- Flood Count (Frames)	28
P-0-4-4	1 706 760
- Tx (Frames)	1.706.762 700 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	56.892
- Rx (Frames)	12.734
- Rx Rate (L1) (Bit/s)	5,22 M
- Rx Rate (Fps)	424
- Flood Count (Frames)	28
P-0-4-5	
- Tx (Frames)	1.706.762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	12.485
- Rx Rate (L1) (Bit/s)	5,12 M
- Rx Rate (Fps)	416
- Flood Count (Frames)	20



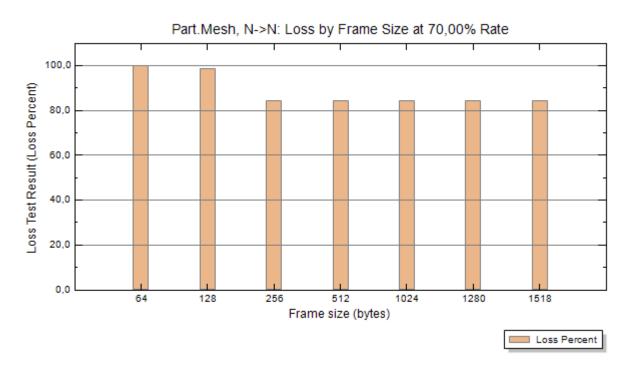

## Results for 80,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14,4 G	14,4 G	14,4 G	14,4 G	14,4 G	14,4 G
Tx Rate (Fps)	21.428.571	12.162.162	6.521.739	3.383.458	1.724.138	1.384.615
Rx Rate (Percent)	0,01 %	0,01 %	0,02 %	6,51 %	7,1 %	6,17 %
Rx Rate (L1) (Bit/s)	908,39 K	1,87 M	3,06 M	1,17 G	1,28 G	1,11 G
Rx Rate (Fps)	1,35 K	1,58 K	1,38 K	275,16 K	153,03 K	106,81 K
Loss Rate (Percent)	99,99 %	99,99 %	99,98 %	91,87 %	91,12 %	92,29 %
Loss (Frames)	642.816.572	364.817.398	195.610.647	93.248.852	47.133.126	38.334.177
P-0-0-0						
- Tx (Frames)	35.714.280	20.270.256	10.869.562	5.639.087	2.873.561	2.307.682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.675	362.319	187.970	95.785	76.923
- Rx (Frames)	29.580	36.927	36.038	6.819.616	3.584.205	2.444.294
- Rx Rate (L1) (Bit/s)	662,59 K	1,46 M	2,65 M	967,48 M	997,84 M	847,36 M
- Rx Rate (Fps)	986	1.231	1.201	227.321	119.474	81.476
- Flood Count (Frames)	32	24	24	8	8	10
P-0-0-1						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	821	875	403	83.669	58.929	44.661
- Rx Rate (L1) (Bit/s)	18,39 K	34,53 K	29,66 K	11,87 M	16,41 M	15,48 M
- Rx Rate (Fps)	27	29	13	2.789	1.964	1.489
- Flood Count (Frames)	59	59	60	38	41	34
P-0-0-2						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	759	860	340	83.350	59.305	45.044
- Rx Rate (L1) (Bit/s)	17 K	33,94 K	25,02 K	11,82 M	16,51 M	15,62 M
- Rx Rate (Fps)	25	29	11	2.778	1.977	1.501
- Flood Count (Frames)	59	61	63	30	32	40
P-0-0-3						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	711	795	354	83.036	58.759	44.670



- Rx Rate (L1) (Bit/s)	15,93 K	31,38 K	26,05 K	11,78 M	16,36 M	15,49 M
- Rx Rate (Fps)	24	27	12	2.768	1.959	1.489
- Flood Count (Frames)	59	60	61	38	37	33
P-0-0-4	05.744.005	00.070.070	40.000.505	5 000 007	0.070.500	0.007.000
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M 675.676	800 M 362.319	800 M 187.970	800 M 95.785	800 M 76.923
- Tx Rate (Fps) - Rx (Frames)	1.190.476	741	362.319	84.367	59.362	44.781
- Rx (Frames)	0	29,24 K	24,73 K	11,97 M	16,53 M	15,52 M
- Rx Rate (Fps)	0	25,24 10	11	2.812	1.979	1.493
- Flood Count (Frames)	62	59	59	38	34	31
P-0-0-5					0.	0.1
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	673	0	341	84.195	59.378	44.645
- Rx Rate (L1) (Bit/s)	15,08 K	0	25,1 K	11,94 M	16,53 M	15,48 M
- Rx Rate (Fps)	22	0	11	2.807	1.979	1.488
- Flood Count (Frames)	58	61	59	32	43	34
P-0-2-0						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames) - Rx Rate (L1) (Bit/s)	664 14,87 K	0	348	85.024 12,06 M	59.558	44.748
- Rx Rate (LT) (Bit/s)	14,87 K	0	25,61 K 12	2.834	16,58 M	15,51 M
- Flood Count (Frames)	61	60	60	39	1.985	1.492
P-0-2-1	01	00	00	39	41	33
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	665	756	332	85.485	59.589	44.415
- Rx Rate (L1) (Bit/s)	14,9 K	29,84 K	24,44 K	12,13 M	16,59 M	15,4 M
- Rx Rate (Fps)	22	25	11	2.850	1.986	1.481
- Flood Count (Frames)	61	57	59	38	41	39
P-0-2-2						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	673	720	351	84.521	59.533	44.712
- Rx Rate (L1) (Bit/s)	15,08 K	28,42 K	25,83 K	11,99 M	16,57 M	15,5 M
- Rx Rate (Fps)	22	24	12	2.817	1.984	1.490
- Flood Count (Frames)	60	59	61	29	41	34
P-0-2-3 - Tx (Frames)	25 714 205	20 270 270	10 000 EGE	E 620 007	2 072 562	2 207 602
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35.714.285 800 M	20.270.270 800 M	10.869.565 800 M	5.639.097 800 M	2.873.563 800 M	2.307.692 800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	642	735	336	82.729	59.718	44.813
- Rx Rate (L1) (Bit/s)	14,38 K	29,01 K	24,73 K	11,74 M	16,63 M	15,54 M
- Rx Rate (Fps)	21	25	11	2.758	1.991	1.494
- Flood Count (Frames)	59	57	57	34	40	49
P-0-2-4						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	667	0	0	84.731	59.625	44.594
- Rx Rate (L1) (Bit/s)	14,94 K	0	0	12,02 M	16,6 M	15,46 M
- Rx Rate (Fps)	22	0	0	2.824	1.988	1.486
- Flood Count (Frames)	58	55	58	41	42	38
P-0-2-5	05.744.005	00.070.070	40.000.505	5 000 007	0.070.500	0.007.000
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476 683	675.676 698	362.319 340	187.970 85.676	95.785 58.331	76.923 44.491
- Ry (Framoc)		27,55 K	25,02 K	12,15 M	16,24 M	15,42 M
- Rx (Frames)	15 2 K		2J,U2 N			
- Rx Rate (L1) (Bit/s)	15,3 K		11	2 856	1 0/1/1	1 482
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	23	23	11 59	2.856	1.944	1.483
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)			11 59	2.856	1.944	1.483 35
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	23 57	23 61	59	38	40	35
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	23	23				



- Rx (Frames)	681	734	324	84.865	59.585	44.774
- Rx Rate (L1) (Bit/s)	15,25 K	28,97 K	23,85 K	12,04 M	16,59 M	15,52 M
- Rx Rate (Fps)	23	24	11	2.829	1.986	1.492
- Flood Count (Frames)	56	57	58	39	35	37
P-0-4-1						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	644	729	341	83.978	59.044	44.819
- Rx Rate (L1) (Bit/s)	14,43 K	28,77 K	25,1 K	11,91 M	16,44 M	15,54 M
- Rx Rate (Fps)	21	24	11	2.799	1.968	1.494
- Flood Count (Frames)	57	61	57	36	36	38
P-0-4-2						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	664	721	338	84.711	58.701	44.547
- Rx Rate (L1) (Bit/s)	14,87 K	28.46 K	24,88 K	12,02 M	16,34 M	15.44 M
- Rx Rate (Fps)	22	24	11	2.824	1.957	1.485
- Flood Count (Frames)	57	57	59	35	37	40
P-0-4-3						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	673	715	333	85.117	59.037	44.673
- Rx Rate (L1) (Bit/s)	15,08 K	28,22 K	24,51 K	12,08 M	16,44 M	15,49 M
- Rx Rate (Fps)	22	24	11	2.837	1.968	1.489
- Flood Count (Frames)	58	59	58	42	47	36
P-0-4-4						
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	665	727	333	85.064	58.955	44.856
- Rx Rate (L1) (Bit/s)	14,9 K	28,69 K	24,51 K	12,07 M	16,41 M	15,55 M
- Rx Rate (Fps)	22	24	11	2.835	1.965	1.495
- Flood Count (Frames)	58	60	55	42	43	32
P-0-4-5					-	-
- Tx (Frames)	35.714.285	20.270.270	10.869.565	5.639.097	2.873.563	2.307.692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	688	715	332	84.750	59.392	44.732
- Rx Rate (L1) (Bit/s)	15,41 K	28.22 K	24,44 K	12,02 M	16,53 M	15,51 M
- Rx Rate (Fps)	23	24	11	2.825	1.980	1.491
- Flood Count (Frames)	56	58	57	33	38	44

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14,4 G
Tx Rate (Fps)	1.170.351
Rx Rate (Percent)	6,11 %
Rx Rate (L1) (Bit/s)	1,1 G
Rx Rate (Fps)	89,43 K
Loss Rate (Percent)	92,36 %
Loss (Frames)	32.427.606
P-0-0-0	
- Tx (Frames)	1.950.580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	2.418.731
- Rx Rate (L1) (Bit/s)	992 M
- Rx Rate (Fps)	80.624
- Flood Count (Frames)	9
P-0-0-1	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	13.898
- Rx Rate (L1) (Bit/s)	5,7 M




	400
- Rx Rate (Fps)	463
- Flood Count (Frames)	26
P-0-0-2 - Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.997
- Rx Rate (L1) (Bit/s)	6,56 M
- Rx Rate (Fps)	533
- Flood Count (Frames)	31
P-0-0-3	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.873
- Rx Rate (L1) (Bit/s)	6,51 M
- Rx Rate (Fps)	529
- Flood Count (Frames)	27
P-0-0-4	4.050.505
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020 15.746
- Rx (Frames) - Rx Rate (L1) (Bit/s)	6,46 M
- Rx Rate (E1) (Bit/s)	
- RX Rate (Fps) - Flood Count (Frames)	525 27
P-0-0-5	21
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	14.762
- Rx Rate (L1) (Bit/s)	6,05 M
- Rx Rate (Fps)	492
- Flood Count (Frames)	21
P-0-2-0	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.843
- Rx Rate (L1) (Bit/s)	6,5 M
- Rx Rate (Fps)	528
- Flood Count (Frames)	23
P-0-2-1	4.050.505
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	M 008
- Tx Rate (Fps)	65.020
- Rx (Frames) - Rx Rate (L1) (Bit/s)	15.856
	6,5 M 529
- Rx Rate (Fps) - Flood Count (Frames)	24
P-0-2-2	24
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (ET) (Bit/s)	65.020
- Rx (Frames)	13.028
- Rx Rate (L1) (Bit/s)	5,34 M
- Rx Rate (Fps)	434
- Flood Count (Frames)	24
P-0-2-3	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.805
- Rx Rate (L1) (Bit/s)	6,48 M
- Rx Rate (Fps)	527
- Flood Count (Frames)	27
P-0-2-4	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.564



- Rx Rate (L1) (Bit/s)	6,38 M
- Rx Rate (Fps)	519
- Flood Count (Frames)	23
P-0-2-5	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.951
- Rx Rate (L1) (Bit/s)	6,54 M
- Rx Rate (Fps)	532
- Flood Count (Frames) P-0-4-0	24
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	16.017
- Rx Rate (L1) (Bit/s)	6,57 M
- Rx Rate (Fps)	534
- Flood Count (Frames)	19
P-0-4-1	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.829
- Rx Rate (L1) (Bit/s)	6,49 M
- Rx Rate (Fps)	528
- Flood Count (Frames)	30
P-0-4-2 - Tx (Frames)	1 050 505
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.950.585 800 M
- Tx Rate (ET) (Bl/s)	65.020
- Rx (Frames)	15.982
- Rx Rate (L1) (Bit/s)	6,55 M
- Rx Rate (Fps)	533
- Flood Count (Frames)	25
P-0-4-3	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	15.846
- Rx Rate (L1) (Bit/s)	6,5 M
- Rx Rate (Fps)	528
- Flood Count (Frames)	24
P-0-4-4	
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.020
- Rx (Frames)	16.072
- Rx Rate (L1) (Bit/s)	6,59 M
- Rx Rate (Fps)	536
- Flood Count (Frames) P-0-4-5	25
- Tx (Frames)	1.950.585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (ET) (Bl/s)	65.020
- Rx (Frames)	16.119
- Rx Rate (L1) (Bit/s)	6,61 M
- Rx Rate (Fps)	537
- Flood Count (Frames)	25



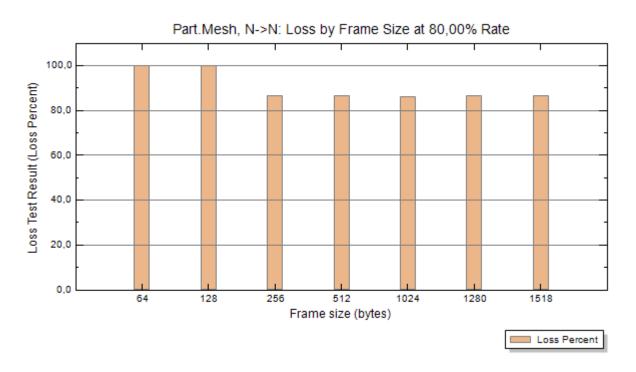

## Results for 90,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16,2 G	16,2 G	16,2 G	16,2 G	16,2 G	16,2 G
Tx Rate (Fps)	24.107.142	13.682.432	7.336.956	3.806.390	1.939.655	1.557.691
Rx Rate (Percent)	0 %	0,01 %	0 %	6,68 %	6,78 %	6,91 %
Rx Rate (L1) (Bit/s)	0	1,84 M	0	1,2 G	1,22 G	1,24 G
Rx Rate (Fps)	0	1,55 K	0	282,32 K	146,16 K	119,53 K
Loss Rate (Percent)	100 %	99,99 %	100 %	92,58 %	92,46 %	92,33 %
Loss (Frames)	723.214.272	410.426.434	220.108.673	105.722.043	53.804.717	43.144.809
P-0-0-0						
- Tx (Frames)	40.178.565	22.804.038	12.228.253	6.343.975	3.232.754	2.596.138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899,99 M
- Tx Rate (Fps)	1.339.286	760.135	407.608	211.466	107.758	86.538
- Rx (Frames)	0	36.295	0	7.008.778	3.584.538	2.880.579
- Rx Rate (L1) (Bit/s)	0	1,43 M	0	994,31 M	997,94 M	998,6 M
- Rx Rate (Fps)	0	1.210	0	233.626	119.485	96.019
- Flood Count (Frames)	1	29	1	10	11	9
P-0-0-1						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	97.573	50.041	43.974
- Rx Rate (L1) (Bit/s)	0	0	0	13,84 M	13,93 M	15,24 M
- Rx Rate (Fps)	0	0	0	3.252	1.668	1.466
- Flood Count (Frames)	56	1	58	40	40	37
P-0-0-2						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	945	0	97.208	50.285	0
- Rx Rate (L1) (Bit/s)	0	37,3 K	0	13,79 M	14 M	0
- Rx Rate (Fps)	0	32	0	3.240	1.676	0
- Flood Count (Frames)	58	56	61	45	35	1
P-0-0-3						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	859	0	96.866	49.821	43.874



- Rx Rate (L1) (Bit/s)	0	33,9 K	0	13,74 M	13,87 M	15,21 M
- Rx Rate (Fps)	0	29	0	3.229	1.661	1.462
- Flood Count (Frames)	59	59	2	34	44	42
P-0-0-4	40 470 574	00 004 054	40,000,000	0.040.004	2 222 750	0.500.450
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40.178.571 900 M	22.804.054 900 M	12.228.260 900 M	6.343.984 900 M	3.232.758 900 M	2.596.153 900 M
- Tx Rate (ET) (Bit/s)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	44.854
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	15,55 M
- Rx Rate (Fps)	0	0	0	0	0	1.495
- Flood Count (Frames)	1	59	60	2	1	38
P-0-0-5						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	797	0	0	49.676	42.450
- Rx Rate (L1) (Bit/s)	0	31,45 K	0	0	13,83 M	14,72 M
- Rx Rate (Fps)	0	27	0	0	1.656	1.415
- Flood Count (Frames)	61	61	59	2	35	33
P-0-2-0	40 470 574	00 004 054	40,000,000	0.040.004	0.000.750	0.500.450
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M 211.466	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609		107.759	86.538
- Rx (Frames)	0	750	0	103.725	51.145	44.800 15,53 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	29,6 K 25	0	14,72 M 3.458	14,24 M 1.705	15,53 M 1.493
- Flood Count (Frames)	59	59	61	3.436	43	1.493
P-0-2-1	39	39	01	30	43	40
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	100.429	48.372	43.294
- Rx Rate (L1) (Bit/s)	0	0	0	14,25 M	13,47 M	15,01 M
- Rx Rate (Fps)	0	0	0	3.348	1.612	1.443
- Flood Count (Frames)	1	59	1	35	31	38
P-0-2-2						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	821	0	91.917	50.992	43.768
- Rx Rate (L1) (Bit/s)	0	32,4 K	0	13,04 M	14,2 M	15,17 M
- Rx Rate (Fps)	0	27	0	3.064	1.700	1.459
- Flood Count (Frames)	0	58	59	41	30	41
P-0-2-3	40 4-04	00 00 4 0= 4	40.000.000	0.040.004		0 =00 1=0
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	98.029	49.979	44.501
- Rx Rate (L1) (Bit/s)	0	0		13,91 M	13,91 M	15,43 M
- Rx Rate (Fps) - Flood Count (Frames)	0 59	0	0 58	3.268	1.666	1.483 39
P-0-2-4	39	I	30	31	41	
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx (Frames)	900 M	900 M	900 M	900 M	900 M	2.590.155 900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	760.133	0	98.745	48.990	43.708
- Rx Rate (L1) (Bit/s)	0	30,03 K	0	14,01 M	13,64 M	15,15 M
- Rx Rate (Fps)	0	25	0	3.292	1.633	1.457
- Flood Count (Frames)	63	57	59	37	38	40
P-0-2-5						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	698	0	94.665	51.036	44.014
- Rx Rate (L1) (Bit/s)	0	27,55 K	0	13,43 M	14,21 M	15,26 M
- Rx Rate (Fps)	0	23	0	3.156	1.701	1.467
- Flood Count (Frames)	58	58	59	37	37	36
P-0-4-0						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538



- Rx (Frames)	0	785	0	96.504	50.346	44.663
- Rx Rate (L1) (Bit/s)	0	30,98 K	0	13,69 M	14,02 M	15,48 M
- Rx Rate (Fps)	0	26	0	3.217	1.678	1.489
- Flood Count (Frames)	54	58	59	36	37	29
P-0-4-1						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	771	0	97.956	49.223	43.949
- Rx Rate (L1) (Bit/s)	0	30,43 K	0	13,9 M	13,7 M	15,24 M
- Rx Rate (Fps)	0	26	0	3.265	1.641	1.465
- Flood Count (Frames)	55	55	55	37	36	40
P-0-4-2						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	772	0	96.502	50.878	45.030
- Rx Rate (L1) (Bit/s)	0	30,47 K	0	13,69 M	14,16 M	15,61 M
- Rx Rate (Fps)	0	26	0	3.217	1.696	1.501
- Flood Count (Frames)	59	58	56	36	36	32
P-0-4-3						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	749	0	97.217	49.806	43.926
- Rx Rate (L1) (Bit/s)	0	29,56 K	0	13,79 M	13,87 M	15,23 M
- Rx Rate (Fps)	0	25	0	3.241	1.660	1.464
- Flood Count (Frames)	58	58	58	32	39	33
P-0-4-4						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	749	0	96.657	49.668	44.597
- Rx Rate (L1) (Bit/s)	0	29,56 K	0	13,71 M	13,83 M	15,46 M
- Rx Rate (Fps)	0	25	0	3.222	1.656	1.487
- Flood Count (Frames)	56	59	59	30	38	34
P-0-4-5						
- Tx (Frames)	40.178.571	22.804.054	12.228.260	6.343.984	3.232.758	2.596.153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	770	0	96.889	50.127	43.949
- Rx Rate (L1) (Bit/s)	0	30,39 K	0	13,75 M	13,96 M	15,24 M
- Rx Rate (Fps)	0	26	0	3.230	1.671	1.465
- Flood Count (Frames)	55	57	58	36	33	37

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16,2 G
Tx Rate (Fps)	1.316.644
Rx Rate (Percent)	6,09 %
Rx Rate (L1) (Bit/s)	1,1 G
Rx Rate (Fps)	89,07 K
Loss Rate (Percent)	93,24 %
Loss (Frames)	36.827.371
P-0-0-0	
- Tx (Frames)	2.194.394
- Tx Rate (L1) (Bit/s)	899,99 M
- Tx Rate (Fps)	73.146
- Rx (Frames)	2.422.773
- Rx Rate (L1) (Bit/s)	993,66 M
- Rx Rate (Fps)	80.759
- Flood Count (Frames)	11
P-0-0-1	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.680
- Rx Rate (L1) (Bit/s)	7,25 M




Dy Doto (Fno)	E00
- Rx Rate (Fps) - Flood Count (Frames)	589 28
P-0-0-2	20
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.865
- Rx Rate (L1) (Bit/s)	7,33 M
- Rx Rate (Fps)	596
- Flood Count (Frames)	25
P-0-0-3	0.404.400
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-0-4	I
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (E1) (Bl/s)	73.147
- Rx (Frames)	17.729
- Rx Rate (L1) (Bit/s)	7,27 M
- Rx Rate (Fps)	591
- Flood Count (Frames)	22
P-0-0-5	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.794
- Rx Rate (L1) (Bit/s)	7,3 M
- Rx Rate (Fps)	593
- Flood Count (Frames)	27
P-0-2-0	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.633
- Rx Rate (L1) (Bit/s)	7,23 M
- Rx Rate (Fps)	588
- Flood Count (Frames)	24
P-0-2-1	0.404.400
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames) - Rx Rate (L1) (Bit/s)	17.614 7,22 M
- Rx Rate (ET) (Bit/s)	587
- Flood Count (Frames)	24
P-0-2-2	24
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.809
- Rx Rate (L1) (Bit/s)	7,3 M
- Rx Rate (Fps)	594
- Flood Count (Frames)	23
P-0-2-3	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-4	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0



- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-5	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	18.051
- Rx Rate (L1) (Bit/s)	7,4 M
- Rx Rate (Fps)	602
- Flood Count (Frames)	30
P-0-4-0	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.761
- Rx Rate (L1) (Bit/s)	7,28 M
- Rx Rate (Fps)	592
- Flood Count (Frames)	21
P-0-4-1	۷.
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (E1) (Bl/s)	73.147
- Rx (Frames)	
	17.802
- Rx Rate (L1) (Bit/s)	7,3 M
- Rx Rate (Fps)	593
- Flood Count (Frames)	28
P-0-4-2	0.404.400
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	18.082
- Rx Rate (L1) (Bit/s)	7,42 M
- Rx Rate (Fps)	603
- Flood Count (Frames)	28
P-0-4-3	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.725
- Rx Rate (L1) (Bit/s)	7,27 M
- Rx Rate (Fps)	591
- Flood Count (Frames)	26
P-0-4-4	
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.822
- Rx Rate (L1) (Bit/s)	7,31 M
- Rx Rate (Fps)	594
- Flood Count (Frames)	19
P-0-4-5	10
- Tx (Frames)	2.194.408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	17.819
- Rx Rate (L1) (Bit/s)	7,31 M
- Rx Rate (Fps)	594
- Flood Count (Frames)	23



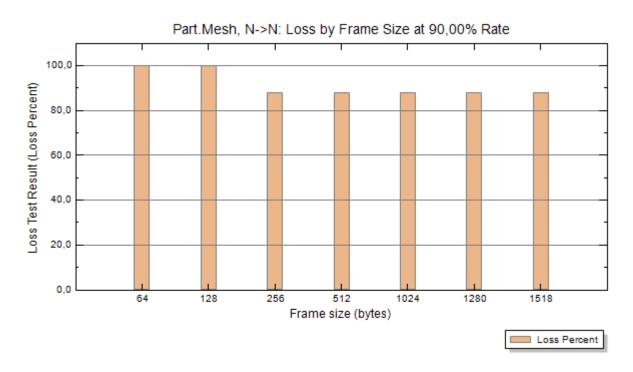

### Results for 100,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26.785.714	15.202.702	8.152.173	4.229.323	2.155.172	1.730.769
Rx Rate (Percent)	0 %	0,01 %	0,02 %	0 %	6,77 %	6,83 %
Rx Rate (L1) (Bit/s)	616,2 K	1,47 M	2,71 M	0	1,22 G	1,23 G
Rx Rate (Fps)	916,97	1,24 K	1,23 K	0	145,92 K	118,28 K
Loss Rate (Percent)	100 %	99,99 %	99,98 %	100 %	93,23 %	93,17 %
Loss (Frames)	803.543.910	456.043.729	244.528.411	126.879.687	60.277.640	48.374.549
P-0-0-0						
- Tx (Frames)	44.642.850	25.337.837	13.586.944	7.048.863	3.591.947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	18.312	30.356	30.585	0	3.584.040	2.880.313
- Rx Rate (L1) (Bit/s)	410,19 K	1,2 M	2,25 M	0	997,8 M	998,51 M
- Rx Rate (Fps)	610	1.012	1.020	0	119.468	96.010
- Flood Count (Frames)	42	34	39	1	9	11
P-0-0-1						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	784	743	399	0	0	50.766
- Rx Rate (L1) (Bit/s)	17,56 K	29,32 K	29,37 K	0	0	17,6 M
- Rx Rate (Fps)	26	25	13	0	0	1.692
- Flood Count (Frames)	60	81	60	21	1	39
P-0-0-2						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	670	582	483	0	49.798	0
- Rx Rate (L1) (Bit/s)	15,01 K	22,97 K	35,55 K	0	13,86 M	0
- Rx Rate (Fps)	22	19	16	0	1.660	0
- Flood Count (Frames)	60	61	60	24	33	1
P-0-0-3						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	613	0	396	0	49.933	49.945



- Rx Rate (L1) (Bit/s)	13,73 K	0	29,15 K	0	13,9 M	17,31 M
- Rx Rate (Fps)	20	0	13	0	1.664	1.665
- Flood Count (Frames)	59	63	79	1	39	37
P-0-0-4						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	0	552	386	0	49.110	0
- Rx Rate (L1) (Bit/s)	0	21,79 K	28,41 K	0	13,67 M	0
- Rx Rate (Fps)	0	18	13	0	1.637	0
- Flood Count (Frames)	1	59	61	23	32	1
P-0-0-5	44.040.057	05 007 007	40 500 050	7.040.070	2 504 054	0.004.045
- Tx (Frames)	44.642.857 1000 M	25.337.837	13.586.956 1000 M	7.048.872	3.591.954 1000 M	2.884.615
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1.488.095	1000 M 844.595	452.899	1000 M 234.962	119.732	1000 M 96.154
- Rx (Frames)	615	044.595	386	234.902	49.545	90.134
- Rx (Frames) - Rx Rate (L1) (Bit/s)	13,78 K	0	28,41 K	0	13,79 M	0
- Rx Rate (LT) (Bit/S)	21	0	20,41 K	0	1.652	0
- Flood Count (Frames)	57	1	58	24	26	0
P-0-2-0	37	I	36	24	20	ı
	11 612 957	25 227 027	12 506 056	7 049 972	3.591.954	2.884.615
- Tx (Frames) - Tx Rate (L1) (Bit/s)	44.642.857 1000 M	25.337.837 1000 M	13.586.956 1000 M	7.048.872 1000 M	3.591.954 1000 M	2.884.615 1000 M
		844.595				
- Tx Rate (Fps) - Rx (Frames)	1.488.095		452.899	234.962	119.732 49.565	96.154 51.190
	587	507	371	0		
- Rx Rate (L1) (Bit/s)	13,15 K	20,01 K	27,31 K	0	13,8 M	17,75 M
- Rx Rate (Fps)	20	17	12	0	1.652	1.706
- Flood Count (Frames) P-0-2-1	58	57	60	22	35	36
-	14 640 057	05 227 027	12 506 056	7.048.872	2 504 054	2 004 645
- Tx (Frames)	44.642.857	25.337.837	13.586.956		3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M 452.899	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595		234.962	119.732	96.154
- Rx (Frames)	0	498 19,65 K	388 28,56 K	0	49.892 13,89 M	53.348
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	19,65 K	20,30 K	0	1.663	18,49 M 1.778
- Flood Count (Frames)	1	63	76	20	36	40
P-0-2-2	- 1	03	70	20	30	40
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (ET) (Bl/s)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	604	044.595	384	0	48.712	52.080
- Rx Rate (L1) (Bit/s)	13,53 K	0	28,26 K	0	13,56 M	18,05 M
- Rx Rate (Fps)	20	0	13	0	1.624	1.736
- Flood Count (Frames)	79	0	60	21	38	29
P-0-2-3	10	-		21		
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx (Frames)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	593	489	0	0	49.806	51.970
- Rx Rate (L1) (Bit/s)	13,28 K	19,3 K	0	0	13,87 M	18,02 M
- Rx Rate (Fps)	20	16	0	0	1.660	1.732
- Flood Count (Frames)	58	76	0	0	31	45
P-0-2-4		70	<u> </u>		01	
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx (Frames)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	594	044.555	369	0	49.195	51.481
- Rx Rate (L1) (Bit/s)	13,31 K	0	27,16 K	0	13,7 M	17,85 M
- Rx Rate (Fps)	20	0	12	0	1.640	1.716
- Flood Count (Frames)	58	1	58	22	38	33
P-0-2-5	30	<u>'</u>	30	22	30	- 33
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	2.004.013 1000 M
- Tx Rate (LT) (Bit/s)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	1.466.095	493	371	234.962	50.773	90.134
- Rx (Frames) - Rx Rate (L1) (Bit/s)	13,13 K	19,46 K	27,31 K	0	14,14 M	0
- Rx Rate (LT) (Bit/S)	13,13 K	19,46 K	27,31 K	0	14,14 M	0
- Flood Count (Frames)	58	62	58	22	37	1
P-0-4-0	30	UZ	30	22	31	I
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1000 M	25.337.637 1000 M	1000 M	1000 M	1000 M	2.004.013 1000 M
- Tx Rate (LT) (Blvs) - Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
	1.400.090	044.090	402.099	234.902	119./32	90.154



- Rx (Frames)	592	525	378	0	49.278	50.694
- Rx Rate (L1) (Bit/s)	13,26 K	20,72 K	27,82 K	0	13,72 M	17,57 M
- Rx Rate (Fps)	20	18	13	0	1.643	1.690
- Flood Count (Frames)	58	57	60	22	40	33
P-0-4-1						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	578	534	373	0	50.052	51.995
- Rx Rate (L1) (Bit/s)	12,95 K	21,08 K	27,45 K	0	13,93 M	18,02 M
- Rx Rate (Fps)	19	18	12	0	1.668	1.733
- Flood Count (Frames)	61	59	58	20	39	35
P-0-4-2						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	584	541	391	0	49.356	52.256
- Rx Rate (L1) (Bit/s)	13.08 K	21,35 K	28.78 K	0	13,74 M	18,12 M
- Rx Rate (Fps)	19	18	13	0	1.645	1.742
- Flood Count (Frames)	58	58	59	23	34	37
P-0-4-3						
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	587	499	371	0	49.749	50.604
- Rx Rate (L1) (Bit/s)	13,15 K	19,69 K	27,31 K	0	13,85 M	17,54 M
- Rx Rate (Fps)	20	17	12	0	1.658	1.687
- Flood Count (Frames)	61	60	59	18	37	42
P-0-4-4	0.				0.	·-
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	598	517	374	0	49.090	51.597
- Rx Rate (L1) (Bit/s)	13,4 K	20,4 K	27,53 K	0	13,67 M	17,89 M
- Rx Rate (Fps)	20	17	12	0	1.636	1.720
- Flood Count (Frames)	60	55	58	19	37	33
P-0-4-5					0.	
- Tx (Frames)	44.642.857	25.337.837	13.586.956	7.048.872	3.591.954	2.884.615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.899	234.962	119.732	96.154
- Rx (Frames)	612	501	380	0	49.631	50.278
- Rx Rate (L1) (Bit/s)	13,71 K	19,77 K	27,97 K	0	13,82 M	17,43 M
- Rx Rate (Fps)	20	17	13	0	1.654	1.676
- Flood Count (Frames)	58	59	56	20	33	38
r iood oodiit (i fairies)	30	55	50	20	55	30

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1.462.938
Rx Rate (Percent)	0 %
Rx Rate (L1) (Bit/s)	0
Rx Rate (Fps)	0
Loss Rate (Percent)	100 %
Loss (Frames)	43.888.152
P-0-0-0	
- Tx (Frames)	2.438.225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	2
P-0-0-1	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	24
P-0-0-2 - Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Er) (Bit/3)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-0-3	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-0-4	0.400.004
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (LT) (Bit/s)	0
- Flood Count (Frames)	21
P-0-0-5	21
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	01.274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	21
P-0-2-0	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-2-1	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-2	23
	2 /28 221
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2.438.231 1000 M
- Tx Rate (E1) (Bit/s)	81.274
- Rx (Frames)	01.274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	25
P-0-2-3	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	24
P-0-2-4	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0



- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	23
P-0-2-5	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-4-0	21
- Tx (Frames)	2.438.231
- Tx (Frames)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	01.274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-4-1	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-4-3	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	20
P-0-4-4	
- Tx (Frames)	2.438.231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-4-5	20
- Tx (Frames)	2.438.231
	2.436.231 1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	81.274
- Rx (Frames)	01.274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	17
. 1004 Court (i furitos)	17



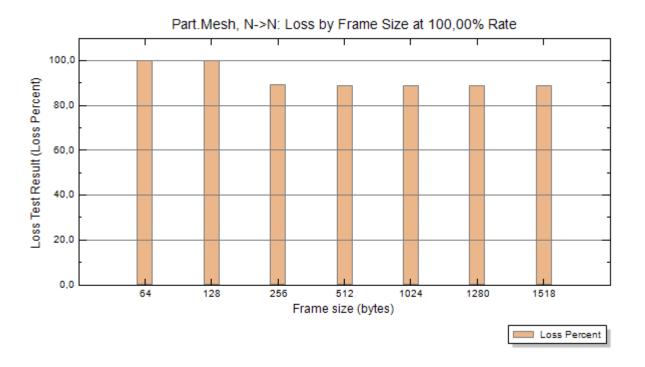



# Rate Test: Part.Mesh, N->N Results

### **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: East-to-West

### **Throughput Options**

Initial Rate: 1,00%
Maximum Rate: 100,00%
Minimum Rate: 0,01%
Resolution: 0,01%

#### **Used Ports**

Port ID	Port Role
P-0-0-0	East
P-0-0-1	East
P-0-0-2	East
P-0-0-3	East
P-0-0-4	East
P-0-0-5	East
P-0-2-0	East
P-0-2-1	East
P-0-2-2	East
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

## **Throughput Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0,018 %	0,018 %	0,018 %	0,018 %	0,018 %	0,018 %
Tx Rate (L1) (Bit/s)	1,59 M	1,6 M	1,59 M	1,59 M	1,58 M	1,57 M
Tx Rate (Fps)	2.373	1.347	721	373	189	151
Rx Rate (Percent)	0,02 %	0,02 %	0,02 %	0,02 %	0,02 %	0,02 %
Rx Rate (L1) (Bit/s)	1,57 M	1,58 M	1,57 M	1,56 M	1,5 M	1,57 M
Rx Rate (Fps)	2,34 K	1,34 K	711,03	366,37	179,53	151,13
Loss Rate (Percent)	1,61 %	0,82 %	1,37 %	1,67 %	5,01 %	0,04 %
Loss (Frames)	1.146	330	296	187	284	2
P-0-0-0						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0



- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2	7.044	1 101	0.400	1.010	200	504
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3	0	0	0	0	0	
	7.044	4 404	0.400	1.010	000	504
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
	0	0	0	0	0	0
- Flood Count (Frames)	U	U	U	U	U	0
P-0-0-4						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
,			-	-	-	
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx (Frames)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0		-	-	-	-	
	7.044	4 404	0.400	4.040	000	504
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
	0	0	0	0	-	
- Flood Count (Frames)	U	U	U	U	0	0
P-0-2-1						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
	-					
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	7.911	4.491	2.403	1.242	630	504
- Tx Rate (L1) (Bit/s)	177,21 K	177,24 K	176,86 K	176,2 K	175,39 K	174,72 K
- Tx Rate (Fps)	264	150	80	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
	0	0	0	•	0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.782	4.454	2.281	1.220	441	502
- Rx Rate (L1) (Bit/s)	174,32 K	175,78 K	167,88 K	173,08 K	122,77 K	174,03 K
- Rx Rate (Fps)	259	148	76	41		
					15	17
- Flood Count (Frames)	58	59	57	61	54	59
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
	0	0	0	0	0	0
		U	U	U	U	U
- Tx Rate (Fps)		-	0.204	4 220	600	FO.4
- TX Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	7.783 174,34 K	4.454 175,78 K	2.381 175,24 K	1.220 173,08 K	622 173,16 K	504 174,72 K



- Rx Rate (Fps)	259	148	79	41	21	17
- Flood Count (Frames)	57	59	59	61	58	60
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.783	4.454	2.381	1.220	585	504
- Rx Rate (L1) (Bit/s)	174,34 K	175,78 K	175,24 K	173,08 K	162,86 K	174,72 K
- Rx Rate (Fps)	259	148	79	41	20	17
- Flood Count (Frames)	59	59	59	61	55	63
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.783	4.454	2.381	1.220	622	504
- Rx Rate (L1) (Bit/s)	174,34 K	175,78 K	175,24 K	173,08 K	173,16 K	174,72 K
- Rx Rate (Fps)	259	148	79	41	21	174,7210
- Flood Count (Frames)	57	57	55	58	56	55
P-0-4-1	31	31	33	30	30	
- Tx (Frames)	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
	0	0	0	0	0	
- Tx Rate (Fps)	-			-	-	0
- Rx (Frames)	7.783	4.454	2.381	1.221	623	504
- Rx Rate (L1) (Bit/s)	174,34 K	175,78 K	175,24 K	173,22 K	173,44 K	174,72 K
- Rx Rate (Fps)	259	148	79	41	21	17
- Flood Count (Frames)	57	58	56	57	57	59
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.784	4.454	2.381	1.222	623	504
- Rx Rate (L1) (Bit/s)	174,36 K	175,78 K	175,24 K	173,36 K	173,44 K	174,72 K
- Rx Rate (Fps)	259	148	79	41	21	17
- Flood Count (Frames)	56	59	58	60	57	57
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.785	4.455	2.381	1.222	623	504
- Rx Rate (L1) (Bit/s)	174,38 K	175,82 K	175,24 K	173,36 K	173,44 K	174,72 K
- Rx Rate (Fps)	260	149	79	41	21	17
- Flood Count (Frames)	58	58	58	58	56	57
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.785	4.455	2.382	1.223	623	504
- Rx Rate (L1) (Bit/s)	174,38 K	175,82 K	175,32 K	173,5 K	173,44 K	174,72 K
- Rx Rate (Fps)	260	149	79	41	21	17
- Flood Count (Frames)	57	56	55	60	58	57
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.785	4.455	2.382	1.223	624	504
- Rx Rate (L1) (Bit/s)	174,38 K	175,82 K	175,32 K	173,5 K	173,72 K	174,72 K
- Rx Rate (Fps)	260	149	79	41	21	17
- Flood Count (Frames)	57	53	56	58	58	56

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0,018 %
Tx Rate (L1) (Bit/s)	1,59 M
Tx Rate (Fps)	130
Rx Rate (Percent)	0,02 %
Rx Rate (L1) (Bit/s)	1,56 M
Rx Rate (Fps)	126,8
Loss Rate (Percent)	2,16 %
Loss (Frames)	84



	D 0 0 0	
- Tx Rate (L1) (Bit/s)	P-0-0-0 Ty (Framos)	133
- Tx Rate (Fps)		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 10 - Flood Count (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K -		0
- Flood Count (Frames) P-0-0-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Floo		
P-0-0-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K		0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		133
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 P-0-0-3 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K		
- Rx Rate (Fps) - Flood Count (Frames) P-0-0-2 - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fp		0
- Flood Count (Frames) P-0-0-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Tx (Frames) - Rx Rate (Fps) - Tx (Frames) - Rx Rate (Fps) - Tx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count	- Rx Rate (L1) (Bit/s)	
P-0-0-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Flood Count (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Flood Count (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K	- Rx Rate (Fps)	
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 14 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Flood Count (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		0
- Tx Rate (L1) (Bit/s)		122
- Tx Rate (Fps)		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-3 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx		
- Rx Rate (Fps) - Flood Count (Frames)  P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Ra		0
- Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) -	- Rx Rate (L1) (Bit/s)	0
P-0-0-3 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 14 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K	- Rx Rate (Fps)	
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 14 - Rx (Frames) 15 - Flood Count (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K		422
- Tx Rate (Fps)		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-4 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		
- Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 10 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 16 - Tx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K		0
P-0-0-4 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K		0
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Tx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K		0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		422
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 10 - Tx (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Rx Rate (Fps) 11 - Rx (Frames) 10 - Rx Rate (Fps) 11 - Rx Rat		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx Rate		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 10 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Rx Rate (Fps) 11 - Rx (Frames) 11 -		0
P-0-0-5 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K		
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 432 - Tx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 15 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 19 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K		0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Flood Count (Frames) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K		400
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 10 - Flood		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 432 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 15 - Rx Rate (Fps) 15 - Flood Count (Frames) 15 - Rx Rate (Fps) 15 - Tx Rate (Fps) 15 - Tx (Frames) 15 - Tx Rate (Fps) 16 - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 14 - Rx (Frames) 15 - Rx Rate (Fps) 16 - Rx Rate (Fps) 17 - Rx Rate (L1) (Bit/s) 17 - Rx Rate (L1) (B		0
P-0-2-0 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Tx (Frames) 10 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Tx (Frames) 10 - Tx (Frames) 10 - Tx (Frames) 11 - Tx (Frames) 11 - Tx (Frames) 11 - Tx Rate (Fps) 11 - Tx Rate (Fps) 11 - Rx (Frames) 11	- Rx Rate (Fps)	0
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K		0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 1432 - Tx Rate (Fps) 14 - Rx (Frames) 1432 - Rx Rate (Fps) 14 - Rx (Frames) 1432 - Rx Rate (Fps) 14 - Rx (Frames) 1432 - Rx Rate (Fps) 144 - Rx (Frames) 1432		400
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 10 - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Rx Rate (L1) (Bit/s) 177,18 K - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 177,18 K		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 1 - Rx Rate (Fps) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 10		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 16 - Rx Rate (L1) (Bit/s) 17 - Rx Rate (L1) (Bit/s) 17 - Rx Rate (L1) (Bit/s) 17 - Rx Rate (L1) (Bit/s) 10		
P-0-2-1 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0		0
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0	- Flood Count (Frames)	0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		100
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0	- Ix (Frames)	
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0	- Tx Rate (LT) (BIVS)	
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0	- Rx Rate (Fps)	
- Tx (Frames) 432 - Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0	- Flood Count (Frames)	0
- Tx Rate (L1) (Bit/s) 177,18 K - Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Tx Rate (Fps) 14 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0		
- Rx Rate (L1) (Bit/s) 0		
		0




- Flood Count (Frames)	0
P-0-2-3	U
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	423
- Rx Rate (L1) (Bit/s)	173,49 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-2-4	_
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	423
- Rx Rate (L1) (Bit/s)	173,49 K
- Rx Rate (Fps)	58
- Flood Count (Frames) P-0-2-5	30
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	416
- Rx Rate (L1) (Bit/s)	170,62 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	423
- Rx Rate (L1) (Bit/s)	173,49 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	423
- Rx Rate (L1) (Bit/s)	173,49 K
- Rx Rate (Fps)	14
- Flood Count (Frames) P-0-4-2	55
	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (Er) (Blus)	0
- Rx (Frames)	423
- Rx Rate (L1) (Bit/s)	173,49 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173,9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	424 173.0 K
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	173,9 K
- Flood Count (Frames)	54
P-0-4-5	J4
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	425
- Rx Rate (L1) (Bit/s)	174,31 K



- Rx Rate (Fps)	14
- Flood Count (Frames)	55

Note: One or more of the rate tests did not pass the test criteria!

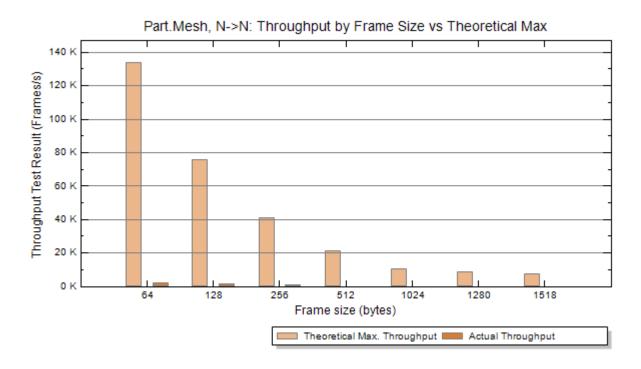

## **Forwarding Test Results**

### Results for 10,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	899,99 M	899,99 M	899,99 M
Tx Rate (Fps)	1.339.284	760.134	407.608	211.464	107.757	86.538
Rx Rate (Percent)	9,38 %	9,92 %	9,69 %	9,43 %	9,78 %	9,51 %
Rx Rate (L1) (Bit/s)	844,09 M	893,17 M	872,47 M	848,84 M	879,95 M	856,24 M
Rx Rate (Fps)	1,26 M	754,37 K	395,14 K	199,44 K	105,36 K	82,33 K
Loss Rate (Percent)	6,21 %	0,76 %	3,06 %	5,68 %	2,23 %	4,86 %
Loss (Frames)	2.496.023	173.017	373.977	360.587	71.959	126.210
P-0-0-0						
- Tx (Frames)	4.464.279	2.533.779	1.358.694	704.880	359.190	288.459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.809	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	4.464.279	2.533.779	1.358.694	704.880	359.190	288.459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.809	84.459	45.290	23.496	11.973	9.615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	4.464.279	2.533.779	1.358.694	704.880	359.190	288.459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Fix Rate (L1) (Bit/s)	- Tx Rate (Fps)	148.809	84.459	45.290	23.496	11.973	9.615
- Rx Rate (Fps)		0	0	0	0	0	
-Flood Count (Frames)				-	-		
P.Q.D.3	\ . <i>,</i>	-	-	-	-	-	(
1. X [Frames]         4.464.279         2.533.779         1.358.694         704.880         359.990         288           1. X Rate (L1) (Bitls)         100 M         100 M         100 M         100 M         100 M         100 M         11.973         9           7. X Farenes)         0	, ,	0	0	0	0	0	C
Tx Rate (L1) (Bits)		4.464.070	2 522 770	1 250 604	704 000	250 100	200 450
Tx Rate (Fps)							288.459
- Rx (Frames)							100 N
- Rx Rate (L1) (Bitls)							9.615
- RX Rate (Fps)		-	-	-	-	-	
Flood Count (Frames)		-		-		-	C
P-0-04			-	-		-	0
- Tx (Frames)	` '	U	U	U	U	U	
- Tx Rate (L1) (Bl/s)		4 464 270	2 533 770	1 358 604	704 880	350 100	288.459
- Tx Rate (Fps)	. ,						100 M
- RX (Frames)							9.615
- Rx Rate (L1) (Bit/s)							9.013
- Rx Rate (Fps)		-		-		-	0
- Flood Count (Frames)					-		0
P-0-0-5						-	0
- Tx (Frames)		<u> </u>	0	-		<u> </u>	
- Tx Rate (L1) (Bit/s)		4,464 279	2,533 779	1.358 694	704 880	359 190	288.459
- Tx Rate (Fps)							100 M
- Rx (Frames)	( ) ( )						9.615
- Rx Rate (11) (Bit/s)							0.013
-Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0					-		0
-Flood Count (Frames)						-	0
P-0-2-0					-		0
- Tx (Frames)	. ,	-		<u> </u>	0	<u> </u>	
- Tx Rate (L1) (Bit/s)		4 464 279	2 533 770	1 358 604	704 880	350 100	288.459
- TX Rate (Fps)							100 M
-Rx (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0							9.615
- Rx Rate (L1) (Bit/s)							0.010
- Rx Rate (Fps)					-		0
-Flood Count (Frames)					-	-	0
P-0-2-1 - Tx (Frames)							0
- Tx (Frames)	. ,						
- Tx Rate (L1) (Bit/s)	-	4.464.279	2.533.779	1.358.694	704.880	359.190	288.459
- Tx Rate (Fps)							100 M
- Rx (Frames)							9.615
- Rx Rate (L1) (Bit/s)	- Rx (Frames)	0	0	0	0	0	0
- Flood Count (Frames)		0	0	0	0	0	0
- Flood Count (Frames)	. , , ,	0		0	0	0	0
- Tx (Frames)		0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	P-0-2-2						
- Tx Rate (L1) (Bit/s)	- Tx (Frames)	4.464.279	2.533.779	1.358.694	704.880	359.190	288.459
- Tx Rate (Fps)		100 M	100 M	100 M	100 M	100 M	100 M
- Rx Rate (L1) (Bit/s) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		148.809	84.459	45.290	23.496		9.615
- Rx Rate (Fps) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx (Frames)	0	0	0	0	0	0
- Flood Count (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
P-0-2-3 - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Ra	- Rx Rate (Fps)	0	0	0	0	0	0
P-0-2-3 - Tx (Frames) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	- Flood Count (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	P-0-2-3						
- Tx Rate (Fps)         0         0         0         0         0           - Rx (Frames)         4.256.889         2.514.554         1.317.705         669.759         308.230         276           - Rx Rate (L1) (Bit/s)         95,35 M         99,24 M         96,98 M         95,02 M         85,81 M         95,3           - Rx Rate (Fps)         141.896         83.818         43.924         22.325         10.274         9           - Flood Count (Frames)         58         60         59         61         58           P-0-2-4         -         -         -         -         -           - Tx (Frames)         0         0         0         0         0           - Tx Rate (L1) (Bit/s)         0         0         0         0         0           - Tx Rate (Fps)         0	- Tx (Frames)	0	0	0	0	0	0
- Rx (Frames)	- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)         95,35 M         99,24 M         96,98 M         95,02 M         85,81 M         95,4 M         95,02 M         85,81 M         95,02 M         96,02 M         99,02 M         96,02 M         99,02 M         99,02 M         96,02 M         99,02 M </td <td>- Tx Rate (Fps)</td> <td>0</td> <td></td> <td>0</td> <td>0</td> <td>0</td> <td>0</td>	- Tx Rate (Fps)	0		0	0	0	0
- Rx Rate (Fps)       141.896       83.818       43.924       22.325       10.274       9         - Flood Count (Frames)       58       60       59       61       58         P-0-2-4       - Tx (Frames)       0       0       0       0       0         - Tx Rate (L1) (Bit/s)       0       0       0       0       0       0         - Tx Rate (Fps)       0	- Rx (Frames)	4.256.889	2.514.554	1.317.705	669.759	308.230	276.531
- Flood Count (Frames)         58         60         59         61         58           P-0-2-4         - Tx (Frames)         0         0         0         0         0           - Tx (Frames)         0         0         0         0         0         0           - Tx Rate (L1) (Bit/s)         0         0         0         0         0         0           - Rx (Frames)         4.256.889         2.514.555         1.317.705         669.759         356.565         257           - Rx Rate (L1) (Bit/s)         95,35 M         99,24 M         96,98 M         95,02 M         99,27 M         89,3           - Rx Rate (Fps)         141.896         83.819         43.924         22.325         11.886         8           - Flood Count (Frames)         61         60         61         62         59	- Rx Rate (L1) (Bit/s)	95,35 M	99,24 M	96,98 M	95,02 M	85,81 M	95,86 M
P-0-2-4         0 </td <td></td> <td>141.896</td> <td>83.818</td> <td>43.924</td> <td>22.325</td> <td>10.274</td> <td>9.218</td>		141.896	83.818	43.924	22.325	10.274	9.218
- Tx (Frames)       0       0       0       0       0       0         - Tx Rate (L1) (Bit/s)       0       0       0       0       0       0         - Tx Rate (Fps)       0       0       0       0       0       0         - Rx (Frames)       4.256.889       2.514.555       1.317.705       669.759       356.565       257         - Rx Rate (L1) (Bit/s)       95,35 M       99,24 M       96,98 M       95,02 M       99,27 M       89,3         - Rx Rate (Fps)       141.896       83.819       43.924       22.325       11.886       8         - Flood Count (Frames)       61       60       61       62       59         P-0-2-5       9	- Flood Count (Frames)	58	60	59	61	58	61
- Tx Rate (L1) (Bit/s)       0       0       0       0       0         - Tx Rate (Fps)       0       0       0       0       0         - Rx (Frames)       4.256.889       2.514.555       1.317.705       669.759       356.565       257         - Rx Rate (L1) (Bit/s)       95,35 M       99,24 M       96,98 M       95,02 M       99,27 M       89,3         - Rx Rate (Fps)       141.896       83.819       43.924       22.325       11.886       8         - Flood Count (Frames)       61       60       61       62       59         P-0-2-5       80       60       61       62       59							
- Tx Rate (Fps)       0       0       0       0       0         - Rx (Frames)       4.256.889       2.514.555       1.317.705       669.759       356.565       257         - Rx Rate (L1) (Bit/s)       95,35 M       99,24 M       96,98 M       95,02 M       99,27 M       89,3         - Rx Rate (Fps)       141.896       83.819       43.924       22.325       11.886       8         - Flood Count (Frames)       61       60       61       62       59         P-0-2-5       9			-	-	-	-	0
- Rx (Frames)     4.256.889     2.514.555     1.317.705     669.759     356.565     257       - Rx Rate (L1) (Bit/s)     95,35 M     99,24 M     96,98 M     95,02 M     99,27 M     89,35       - Rx Rate (Fps)     141.896     83.819     43.924     22.325     11.886     8       - Flood Count (Frames)     61     60     61     62     59       P-0-2-5				-			0
- Rx Rate (L1) (Bit/s)     95,35 M     99,24 M     96,98 M     95,02 M     99,27 M     89,7 M       - Rx Rate (Fps)     141.896     83.819     43.924     22.325     11.886     8       - Flood Count (Frames)     61     60     61     62     59       P-0-2-5				-	-		0
- Rx Rate (Fps)     141.896     83.819     43.924     22.325     11.886     8       - Flood Count (Frames)     61     60     61     62     59       P-0-2-5     9							257.653
- Flood Count (Frames) 61 60 61 62 59 P-0-2-5							89,32 M
P-0-2-5							8.588
	, ,	61	60	61	62	59	58
- Tx (Frames) 0 0 0 0							
	- Tx (Frames)	0	0	0	0	0	0



- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.627.371	2.514.555	1.312.625	625.261	356.565	276.533
- Rx Rate (L1) (Bit/s)	81,25 M	99,24 M	96,61 M	88,7 M	99,27 M	95,86 M
- Rx Rate (Fps)	120.912	83.819	43.754	20.842	11.886	9.218
- Flood Count (Frames)	60	61	61	60	61	59
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.256.889	2.514.555	1.317.705	669.759	356.565	276.533
- Rx Rate (L1) (Bit/s)	95,35 M	99,24 M	96,98 M	95,02 M	99,27 M	95.86 M
- Rx Rate (Fps)	141.896	83.819	43.924	22.325	11.886	9.218
- Flood Count (Frames)	58	59	56	56	56	55
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.256.890	2.514.555	1.317.705	669.759	356.565	276.534
- Rx Rate (L1) (Bit/s)	95,35 M	99.24 M	96,98 M	95,02 M	99,27 M	95.87 M
- Rx Rate (Fps)	141.896	83.819	43.924	22.325	11.886	9.218
- Flood Count (Frames)	58	55	56	57	58	57
P-0-4-2	30		30	- 01	30	- 51
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (E1) (Blus)	0	0	0	0	0	0
- Rx (Frames)	4.256.890	2.514.555	1.317.705	669.759	356.565	276.534
- Rx Rate (L1) (Bit/s)	95,35 M	99,24 M	96,98 M	95,02 M	99,27 M	95,87 M
- Rx Rate (ET) (Blus)	141.896	83.819	43.924	22.325	11.886	9.218
- Flood Count (Frames)	57	58	58	58	58	58
P-0-4-3	31	30	30	30	30	30
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (ET) (blus)	0	0	0	0	0	0
- Rx (Frames)	4.256.890	2.514.555	1.317.705	669.759	356.565	276.534
- Rx (Flames)	95,35 M	99,24 M	96,98 M	95,02 M	99,27 M	95,87 M
` ' ` '	141.896	83.819	43.924	22.325	11.886	95,67 10
- Rx Rate (Fps) - Flood Count (Frames)	55	58	43.924	61	57	
P-0-4-4	33	36	30	01	37	57
-	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)					-	
- Rx (Frames)	4.256.890	2.514.555	1.317.707	669.759	356.565	276.534
- Rx Rate (L1) (Bit/s)	95,35 M	99,24 M	96,98 M	95,02 M	99,27 M	95,87 M
- Rx Rate (Fps)	141.896	83.819	43.924	22.325	11.886	9.218
- Flood Count (Frames)	58	59	58	57	55	57
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	070.505
- Rx (Frames)	4.256.890	2.514.555	1.317.707	669.759	356.566	276.535
- Rx Rate (L1) (Bit/s)	95,35 M	99,24 M	96,98 M	95,02 M	99,27 M	95,87 M
- Rx Rate (Fps)	141.896	83.819	43.924	22.325	11.886	9.218
- Flood Count (Frames)	56	58	57	60	58	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	899,98 M
Tx Rate (Fps)	73.146
Rx Rate (Percent)	9,38 %
Rx Rate (L1) (Bit/s)	843,79 M
Rx Rate (Fps)	68,58 K
Loss Rate (Percent)	6,24 %
Loss (Frames)	137.004
P-0-0-0	
- Tx (Frames)	243.819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8.127




- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Tx Rate (F		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Tx Rate (Fps	- Rx (Frames)	
- Flood Count (Frames) P-0-0-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Eps) - Flood Count (Frames) - Flood Count (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx (Frames) - Rx (Frames) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flo		
P-0-0-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood	- Flood Count (Frames)	
- Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Tx Rate		
- Tx Rate (L1) (Bit/s)		243.819
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - P-0-0-3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Fl	- Tx Rate (Fps)	8.127
- Rx Rate (Fps)	- Rx (Frames)	0
- Flood Count (Frames) P-0-0-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Ra		0
P-0-0-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 8.127 - Rx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flo		
- Tx (Frames)		0
- Tx Rate (L1) (Bit/s)		242 940
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0	- IX (Frames)	
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 100 M - Tx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps)		
- Rx Rate (Fps) - Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-0-4 - Tx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-0-5 - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Ra		
- Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fp		
P-0-0-3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Tx		
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 100 M - Tx Rate (Fps)		243.819
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Tx Rate (		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M		
- Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (		
P-0-0-4 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps)		
- Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Tx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0	·	0
- Tx Rate (L1) (Bit/s)		2/13 810
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (Fps		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (Fps)		
- Flood Count (Frames) 0 P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx		0
P-0-0-5 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps	- Rx Rate (Fps)	0
- Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0		0
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0	- Tx (Frames)	
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 100 M - Tx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Rx Rate (Fps) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 100 M - Rx Rate		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0		
- Flood Count (Frames) 0 P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0		
P-0-2-0 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 243.819 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 243.819 - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0		
- Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Tx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Flood Count (Frames) 100 M - Tx Rate (Fps) 100 M - Rx Rate (L1) (Bit/s) 100 M - Rx Rate (Fps) 100 C -		243.819
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 3 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0		100 M
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (Fps) 100 M - Rx Rate (L1) (Bit/s) 100 M - Rx Rate (Fps)		8.127
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Flood Count (Frames) 0 P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
P-0-2-1 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		U
- Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		243 810
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0	- Rx Rate (L1) (Bit/s)	0
P-0-2-2 - Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0	- Rx Rate (Fps)	0
- Tx (Frames) 243.819 - Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		0
- Tx Rate (L1) (Bit/s) 100 M - Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		040.04=
- Tx Rate (Fps) 8.127 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0	- IX Rate (LT) (BIT/S)	
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
- Flood Count (Frames) 0 P-0-2-3 - Tx (Frames) 0		
P-0-2-3 - Tx (Frames) 0		
- Tx (Frames) 0		
- Tx Rate (L1) (Bit/s) 0	- Tx (Frames)	0
	- Tx Rate (L1) (Bit/s)	0



T D ( (5 )	•
- Tx Rate (Fps)	0
- Rx (Frames)	231.046
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	58
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	208.979
- Rx Rate (L1) (Bit/s)	85,71 M
- Rx Rate (Fps)	6.966
- Flood Count (Frames)	55
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.048
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	59
P-0-4-0	- 33
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	59
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	57
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	231 040
	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	56
P-0-4-4	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
- Rx Rate (Fps)	7.702
- Flood Count (Frames)	56
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	231.049
- Rx Rate (L1) (Bit/s)	94,76 M
	7.702
- Rx Rate (Fps) - Flood Count (Frames)	57



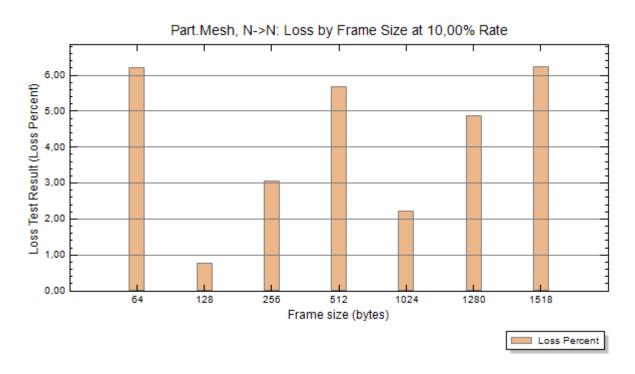

### Results for 20,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G	1,8 G
Tx Rate (Fps)	2.678.570	1.520.270	815.216	422.931	215.517	173.075
Rx Rate (Percent)	10,62 %	10,83 %	10,95 %	11,03 %	11,01 %	11,08 %
Rx Rate (L1) (Bit/s)	955,61 M	974,45 M	985,94 M	993,01 M	991,27 M	996,87 M
Rx Rate (Fps)	1,42 M	823,02 K	446,53 K	233,32 K	118,69 K	95,85 K
Loss Rate (Percent)	46,91 %	45,86 %	45,23 %	44,83 %	44,93 %	44,62 %
Loss (Frames)	37.696.039	20.917.618	11.060.605	5.688.306	2.904.899	2.316.674
P-0-0-0						
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4			2 - 1 - 222		-10.000	
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5			2 - 1 - 222		-10.000	
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	0.000.507	5 007 507	0.717.000	4 400 700	740.000	570.040
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1			2 = 1 = 222		-10.000	
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2			2 - 1 - 222	4 400 -00	-10.000	
- Tx (Frames)	8.928.567	5.067.567	2.717.388	1.409.769	718.389	576.918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168.919	90.580	46.992	23.946	19.231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	U	0
P-0-2-3	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 747 000	0	0	0	
- Rx (Frames)	4.744.378	2.747.836	1.491.054	777.400	381.166	319.052
- Rx Rate (L1) (Bit/s)	106,27 M	108,45 M	109,74 M	110,29 M	106,12 M	110,6 M
- Rx Rate (Fps)	158.146	91.595	49.702	25.913	12.706	10.635
- Flood Count (Frames)	43	34	31	35	36	38
P-0-2-4		0			0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.759.551	2.743.553	1.485.902	777.517	397.536	319.357
- Rx Rate (L1) (Bit/s)	106,61 M	108,28 M	109,36 M	110,3 M	110,67 M	110,71 M
- Rx Rate (Fps)	158.652	91.452	49.530	25.917	13.251	10.645
- Flood Count (Frames)	35	32	35	39	32	45
P-0-2-5	0	0			0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 700 074	0	0	0	047.740
- Rx (Frames)	4.713.706	2.738.374	1.486.781	777.802	397.523	317.710
- Rx Rate (L1) (Bit/s)	105,59 M	108,07 M	109,43 M	110,34 M	110,67 M	110,14 M
- Rx Rate (Fps)	157.124	91.279	49.559	25.927	13.251	10.590
- Flood Count (Frames)	39	35	33	34	31	41
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	4.707.031	2.739.384	1.485.723	777.424	397.005	319.950
- Rx Rate (L1) (Bit/s)	105,44 M	108,11 M	109,35 M	110,29 M	110,53 M	110,92 M
- Rx Rate (Fps)	156.901	91.313	49.524	25.914	13.234	10.665
- Flood Count (Frames)	31	44	40	33	35	32
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.718.253	2.736.912	1.487.395	777.831	397.195	320.355
- Rx Rate (L1) (Bit/s)	105,69 M	108,02 M	109,47 M	110,35 M	110,58 M	111,06 M
- Rx Rate (Fps)	157.275	91.230	49.580	25.928	13.240	10.679
- Flood Count (Frames)	41	41	30	33	30	39
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.757.530	2.738.776	1.488.275	778.030	397.549	319.668
- Rx Rate (L1) (Bit/s)	106,57 M	108,09 M	109,54 M	110,38 M	110,68 M	110,82 M
- Rx Rate (Fps)	158.584	91.293	49.609	25.934	13.252	10.656
- Flood Count (Frames)	42	36	36	37	34	43
P-0-4-3				-		-
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.767.402	2.742.642	1.489.187	777.955	397.259	320.219
- Rx Rate (L1) (Bit/s)	106,79 M	108,24 M	109,6 M	110,37 M	110,6 M	111,01 M
- Rx Rate (Fps)	158.913	91.421	49.640	25.932	13.242	10.674
- Flood Count (Frames)	37	44	34	33	34	44
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.743.360	2.749.441	1.490.499	777.755	397.480	319.537
- Rx Rate (L1) (Bit/s)	106,25 M	108,51 M	109,7 M	110,34 M	110,66 M	110,77 M
- Rx Rate (Fps)	158.112	91.648	49.683	25.925	13.249	10.651
- Flood Count (Frames)	30	38	35	34	34	41
P-0-4-5				-	-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.749.853	2.753.567	1.491.071	777.901	397.889	319.740
- Rx Rate (L1) (Bit/s)	106,4 M	108,67 M	109,74 M	110,36 M	110,77 M	110,84 M
- Rx Rate (Fps)	158.328	91.786	49.702	25.930	13.263	10.658
- Flood Count (Frames)	35	40	36	35	29	38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	1,8 G
Tx Rate (Fps)	146.291
Rx Rate (Percent)	11,09 %
Rx Rate (L1) (Bit/s)	997,81 M
Rx Rate (Fps)	81,1 K
Loss Rate (Percent)	44,57 %
Loss (Frames)	1.955.853
P-0-0-0	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	40= 000
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	487.638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16.255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.072
- Rx Rate (L1) (Bit/s)	110,77 M
- Rx Rate (Fps)	9.002
- Flood Count (Frames)	33
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.136



Dy Doto (L1) (Dit/o)	110 70 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	110,79 M 9.005
- Flood Count (Frames)	34
P-0-2-5	34
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.107
- Rx Rate (L1) (Bit/s)	110,78 M
- Rx Rate (Fps) - Flood Count (Frames)	9.004
P-0-4-0	41
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.694
- Rx Rate (L1) (Bit/s)	
	111,02 M
- Rx Rate (Fps)	9.023
- Flood Count (Frames)	32
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.302
- Rx Rate (L1) (Bit/s)	110,86 M
- Rx Rate (Fps)	9.010
- Flood Count (Frames)	30
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.446
- Rx Rate (L1) (Bit/s)	110,92 M
- Rx Rate (Fps)	9.015
- Flood Count (Frames)	36
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.138
- Rx Rate (L1) (Bit/s)	110,79 M
- Rx Rate (Fps)	9.005
- Flood Count (Frames)	39
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.597
- Rx Rate (L1) (Bit/s)	110,98 M
- Rx Rate (Fps)	9.020
- Flood Count (Frames)	34
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
	270 207
- Rx (Frames)	270.397
	270.397 110,9 M
- Rx (Frames)	



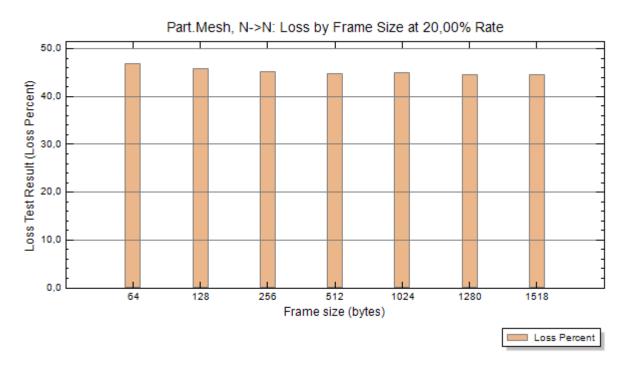

### Results for 30,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	2,7 G	2,7 G	2,7 G	2,7 G	2,7 G	2,7 G
Tx Rate (Fps)	4.017.857	2.280.404	1.222.825	634.397	323.274	259.613
Rx Rate (Percent)	10,61 %	10,81 %	10,96 %	11,04 %	11,07 %	11,08 %
Rx Rate (L1) (Bit/s)	954,45 M	972,82 M	986,77 M	993,27 M	996,32 M	997,56 M
Rx Rate (Fps)	1,42 M	821,64 K	446,91 K	233,38 K	119,29 K	95,92 K
Loss Rate (Percent)	64,65 %	63,97 %	63,45 %	63,21 %	63,1 %	63,05 %
Loss (Frames)	77.926.180	43.763.048	23.277.475	12.030.475	6.119.491	4.910.821
P-0-0-0						
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	10.000.0==		4.0=0.000	0.111.050		
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	40 000 055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	42 202 055	7 004 040	4.070.000	0.444.050	4 077 570	005 077
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	40 000 055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	40.000.055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13.392.855	7.601.346	4.076.082	2.114.658	1.077.579	865.377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446.429	253.378	135.869	70.489	35.919	28.846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	U	U	U	0
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)		-		780.600		
- Rx (Frames) - Rx Rate (L1) (Bit/s)	4.712.615	2.693.642	1.482.161		397.994	319.378
	105,56 M	106,31 M 89.788	109,09 M	110,74 M	110,8 M	110,72 M
- Rx Rate (Fps) - Flood Count (Frames)	157.087		49.405	26.020	13.266	10.646
P-0-2-4	36	32	28	31	29	31
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0		-	-	-	0
- Tx Rate (Fps) - Rx (Frames)		0 747 542	0 1.483.769	770.924	0 398.342	
	4.737.136	2.747.513	1.463.769 109,21 M	779.821		319.114
- Rx Rate (L1) (Bit/s)	106,11 M	108,44 M	,	110,63 M	110,9 M	110,63 M
- Rx Rate (Fps) - Flood Count (Frames)	157.905	91.584	49.459	25.994	13.278	10.637
	34	32	26	29	32	27
P-0-2-5	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	4 775 562	0 745 003	1 494 694	779 747	0	219.756
- Rx (Frames)	4.775.563	2.745.003	1.484.684	778.747	396.067	318.756
- Rx Rate (L1) (Bit/s)	106,97 M	108,34 M	109,27 M	110,48 M	110,27 M	110,5 M
- Rx Rate (Fps)	159.185	91.500	49.489	25.958	13.202	10.625
- Flood Count (Frames)	29	30	33	30	30	31
P-0-4-0	2			2		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)						



- Rx (Frames)	4.770.072	2.746.203	1.500.291	776.795	395.638	320.562
- Rx Rate (L1) (Bit/s)	106,85 M	108,38 M	110,42 M	110,2 M	110,15 M	111,13 M
- Rx Rate (Fps)	159.002	91.540	50.010	25.893	13.188	10.685
- Flood Count (Frames)	41	29	28	30	29	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.716.865	2.750.829	1.498.713	776.778	395.852	320.552
- Rx Rate (L1) (Bit/s)	105,66 M	108,57 M	110,31 M	110,2 M	110,21 M	111,12 M
- Rx Rate (Fps)	157.229	91.694	49.957	25.893	13.195	10.685
- Flood Count (Frames)	26	29	27	25	29	29
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.684.958	2.752.888	1.498.179	778.211	398.114	319.004
- Rx Rate (L1) (Bit/s)	104,94 M	108,65 M	110,27 M	110,4 M	110,83 M	110,59 M
- Rx Rate (Fps)	156.165	91.763	49.939	25.940	13.270	10.633
- Flood Count (Frames)	29	29	26	33	33	33
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.722.227	2.747.129	1.487.523	778.195	400.073	320.279
- Rx Rate (L1) (Bit/s)	105,78 M	108,42 M	109,48 M	110,4 M	111,38 M	111,03 M
- Rx Rate (Fps)	157.408	91.571	49.584	25.940	13.336	10.676
- Flood Count (Frames)	34	23	24	26	23	32
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.750.058	2.731.344	1.485.807	775.794	398.903	320.554
- Rx Rate (L1) (Bit/s)	106,4 M	107,8 M	109,36 M	110,06 M	111,05 M	111,13 M
- Rx Rate (Fps)	158.335	91.045	49.527	25.860	13.297	10.685
- Flood Count (Frames)	31	31	28	30	27	32
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.740.021	2.734.515	1.486.136	776.506	397.737	319.373
- Rx Rate (L1) (Bit/s)	106,18 M	107,92 M	109,38 M	110,16 M	110,73 M	110,72 M
- Rx Rate (Fps)	158.001	91.151	49.538	25.884	13.258	10.646
- Flood Count (Frames)	30	33	25	40	25	25

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	2,7 G
Tx Rate (Fps)	219.440
Rx Rate (Percent)	10,94 %
Rx Rate (L1) (Bit/s)	984,91 M
Rx Rate (Fps)	80,05 K
Loss Rate (Percent)	63,52 %
Loss (Frames)	4.181.753
P-0-0-0	
- Tx (Frames)	731.466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	731.466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24.382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps) - Flood Count (Frames)  P-0-0-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)  P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)
P-0-0-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) P-0-0-3 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-3 7 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx Rate (Fps) 24.382 - Rx (Frames) (Compared of the compared
- Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) P-0-0-3 - Tx (Frames) (731.466 - Tx Rate (L1) (Bit/s) (300 N) - Tx Rate (Fps) (24.382
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)  P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)  24.382
- Rx Rate (Fps) - Flood Count (Frames) C P-0-0-3 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) 24.382
P-0-0-3 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 N - Tx Rate (Fps) 24.382
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx Rate (Fps) 24.382
D. (France)
- Rx (Frames)
- Rx Rate (L1) (Bit/s)
- Rx Rate (Fps)
- Flood Count (Frames)
P-0-0-4
- Tx (Frames) 731.466
- Tx Rate (L1) (Bit/s) 300 M
- Tx Rate (Fps) 24.382
- Rx (Frames)
- Rx Rate (L1) (Bit/s)
- Rx Rate (Fps) (
- Flood Count (Frames) (P-0-0-5
- Tx (Frames) 731.466
- Tx (Frames) 731.400 - Tx Rate (L1) (Bit/s) 300 M
- Tx Rate (E1) (Bits) 300 W
- Rx (Frames)
- Rx Rate (L1) (Bit/s)
- Rx Rate (Fps)
- Flood Count (Frames)
P-0-2-0
- Tx (Frames) 731.466
- Tx Rate (L1) (Bit/s) 300 M
- Tx Rate (Fps) 24.382
- Rx (Frames)
- Rx Rate (L1) (Bit/s)
- Rx Rate (Fps)
- Flood Count (Frames)
P-0-2-1
- Tx (Frames) 731.466
- Tx Rate (L1) (Bit/s) 300 M
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) ( - Rx Rate (L1) (Bit/s)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) -2-2
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - 2-2 - Tx (Frames) 731.466
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) -2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - 2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) P-0-2-2 (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - P-0-2-3
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - P-0-2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - P-0-2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - P-0-2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Rx (Fra
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - P-0-2-2 - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Rx Rate (Fps) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Rx (
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Rx Rate (Fps) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Rx (Frames)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C)
- Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Flood Count (Frames) (C) - Flood Count (Frames) (C) - Tx (Frames) 731.466 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 24.382 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (L1) (Bit/s) (C) - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate



Dy Data (I 1) (Bit/s)	97,42 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	7.918
- Flood Count (Frames)	38
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.369
- Rx Rate (L1) (Bit/s)	110,89 M
- Rx Rate (Fps)	9.012
- Flood Count (Frames)	30
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.907
- Rx Rate (L1) (Bit/s)	111,11 M
- Rx Rate (Fps)	9.030
- Flood Count (Frames)	28
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.531
- Rx Rate (L1) (Bit/s)	110,95 M
- Rx Rate (Fps)	9.018
- Flood Count (Frames)	26
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271.252
- Rx Rate (L1) (Bit/s)	111,25 M
- Rx Rate (Fps)	9.042
- Flood Count (Frames)	34
P-0-4-3	0-7
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.502
- Rx Rate (L1) (Bit/s)	110,94 M
- Rx Rate (Fps)	9.017
- Flood Count (Frames)	28
P-0-4-4	20
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.394
- Rx Rate (L1) (Bit/s)	110,9 M
- Rx Rate (Fps)	9.013
- Flood Count (Frames)	32
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.876
- Rx Rate (L1) (Bit/s)	111,1 M
- Rx Rate (Fps)	9.029
- Flood Count (Frames)	33



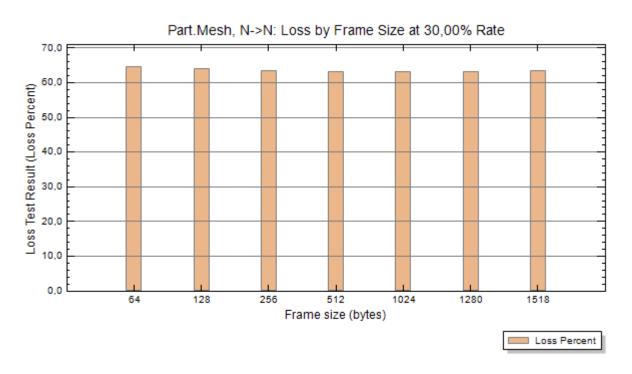

### Results for 40,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G	3,6 G
Tx Rate (Fps)	5.357.140	3.040.540	1.630.433	845.864	431.033	346.154
Rx Rate (Percent)	0,02 %	10,83 %	10,96 %	10,8 %	11,04 %	10,97 %
Rx Rate (L1) (Bit/s)	1,89 M	974,73 M	986,51 M	972,21 M	993,48 M	987,05 M
Rx Rate (Fps)	2,82 K	823,25 K	446,79 K	228,43 K	118,95 K	94,91 K
Loss Rate (Percent)	99,95 %	72,92 %	72,6 %	72,99 %	72,4 %	72,58 %
Loss (Frames)	160.629.700	66.518.649	35.509.370	18.522.972	9.362.457	7.537.336
P-0-0-0						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M				
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	U	U	U	U	U	U
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M				
- Tx Rate (ET) (Bl/3)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	007.000	0	0	0	00.402
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M				
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M				
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	17.857.134	10.135.134	5.434.776	2.819.547	1.436.778	1.153.845
- Tx Rate (L1) (Bit/s)	400 M	400 M				
- Tx Rate (Fps)	595.238	337.838	181.159	93.985	47.893	38.462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-3	U	U	U	U	U	U
- Tx (Frames)	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (ET) (Bit/s)	0	0	0	0	0	0
- Rx (Frames)	10.022	2.740.993	1.491.079	711.844	397.644	319.365
- Rx Rate (L1) (Bit/s)	224,49 K	108,18 M	109,74 M	100,99 M	110,7 M	110,71 M
- Rx Rate (Fps)	334	91.366	49.703	23.728	13.255	10.646
- Flood Count (Frames)	57	28	27	20	21	29
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.736	2.737.869	1.488.892	737.159	397.429	288.934
- Rx Rate (L1) (Bit/s)	128,49 K	108,05 M	109,58 M	104,58 M	110,64 M	100,16 M
- Rx Rate (Fps)	191	91.262	49.630	24.572	13.248	9.631
- Flood Count (Frames)	59	28	28	27	20	28
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.187	2.748.294	1.489.775	737.660	387.292	318.747
- Rx Rate (L1) (Bit/s)	138,59 K	108,47 M	109,65 M	104,65 M	107,82 M	110,5 M
- Rx Rate (Fps)	206	91.610	49.659	24.589	12.910	10.625
- Flood Count (Frames)	59	31	26	34	24	37
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
	0 0 0	0 0 0	0 0 0	0 0 0	0 0 0	0 0



- Rx (Frames)	11.033	2.746.550	1.490.066	777.825	397.758	320.025
- Rx Rate (L1) (Bit/s)	247,14 K	108,4 M	109,67 M	110,35 M	110,74 M	110,94 M
- Rx Rate (Fps)	368	91.552	49.669	25.928	13.259	10.668
- Flood Count (Frames)	55	24	34	26	26	28
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	10.720	2.740.710	1.493.320	777.979	397.581	321.158
- Rx Rate (L1) (Bit/s)	240,13 K	108,17 M	109,91 M	110,37 M	110,69 M	111,33 M
- Rx Rate (Fps)	357	91.357	49.777	25.933	13.253	10.705
- Flood Count (Frames)	56	24	28	28	20	33
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	10.475	2.738.732	1.490.090	778.793	397.350	320.000
- Rx Rate (L1) (Bit/s)	234,64 K	108,09 M	109,67 M	110,48 M	110,62 M	110,93 M
- Rx Rate (Fps)	349	91.291	49.670	25.960	13.245	10.667
- Flood Count (Frames)	56	22	28	27	23	27
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	10.223	2.745.472	1.485.906	778.233	397.821	320.066
- Rx Rate (L1) (Bit/s)	229 K	108,35 M	109,36 M	110,41 M	110,75 M	110,96 M
- Rx Rate (Fps)	341	91.516	49.530	25.941	13.261	10.669
- Flood Count (Frames)	59	33	30	28	26	31
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	10.068	2.753.465	1.486.352	777.904	397.562	319.537
- Rx Rate (L1) (Bit/s)	225,52 K	108,67 M	109,4 M	110,36 M	110,68 M	110,77 M
- Rx Rate (Fps)	336	91.782	49.545	25.930	13.252	10.651
- Flood Count (Frames)	55	24	24	27	28	28
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	10.042	2.745.472	1.488.134	775.554	398.108	319.437
- Rx Rate (L1) (Bit/s)	224,94 K	108,35 M	109,53 M	110,03 M	110,83 M	110,74 M
- Rx Rate (Fps)	335	91.516	49.604	25.852	13.270	10.648
- Flood Count (Frames)	59	27	25	26	25	26

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	3,6 G
Tx Rate (Fps)	292.586
Rx Rate (Percent)	11,09 %
Rx Rate (L1) (Bit/s)	998,28 M
Rx Rate (Fps)	81,13 K
Loss Rate (Percent)	72,27 %
Loss (Frames)	6.343.524
P-0-0-0	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	075 005
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M 32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (ET) (Bit/s)	0
- Flood Count (Frames)	0
P-0-2-1	0
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	975.285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32.510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.618
- Rx Rate (L1) (Bit/s)	110,58 M
- Rx Rate (Fps)	8.987
- Flood Count (Frames)	27
P-0-2-4	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.278



- Rx Rate (L1) (Bit/s)	110,85 M
- Rx Rate (Fps)	9.009
- Flood Count (Frames)	25
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.283
- Rx Rate (L1) (Bit/s)	110,85 M
- Rx Rate (Fps)	9.009
- Flood Count (Frames)	27
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.896
- Rx Rate (L1) (Bit/s)	111,1 M
- Rx Rate (Fps)	9.030
- Flood Count (Frames)	26
P-0-4-1	20
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.875
- Rx Rate (L1) (Bit/s)	111,09 M
- Rx Rate (Fps)	9.029
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.643
- Rx Rate (L1) (Bit/s)	111 M
- Rx Rate (Fps)	9.021
- Flood Count (Frames)	22
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.293
- Rx Rate (L1) (Bit/s)	110,86 M
- Rx Rate (Fps)	9.010
- Flood Count (Frames)	22
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.684
- Rx Rate (L1) (Bit/s)	111,02 M
- Rx Rate (Fps)	9.023
- Flood Count (Frames)	29
P-0-4-5	29
	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.471
- Rx Rate (L1) (Bit/s)	110,93 M
- Rx Rate (Fps)	9.016
- Flood Count (Frames)	29



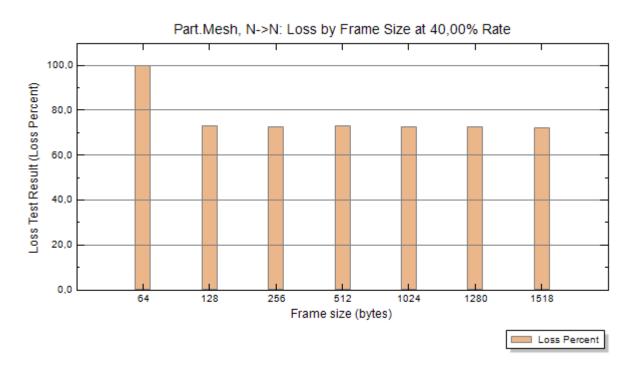

### Results for 50,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	4,5 G	4,5 G	4,5 G	4,5 G	4,5 G	4,5 G
Tx Rate (Fps)	6.696.427	3.800.674	2.038.041	1.057.331	538.793	432.691
Rx Rate (Percent)	0,01 %	10,83 %	10,92 %	10,9 %	11,07 %	11,08 %
Rx Rate (L1) (Bit/s)	1,26 M	974,48 M	983,19 M	981,3 M	996,6 M	997,62 M
Rx Rate (Fps)	1,87 K	823,04 K	445,28 K	230,57 K	119,32 K	95,92 K
Loss Rate (Percent)	99,97 %	78,34 %	78,15 %	78,19 %	77,85 %	77,83 %
Loss (Frames)	200.836.613	89.328.915	47.782.736	24.802.868	12.584.044	10.102.995
P-0-0-0						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	00.004.400	10.000.010	0.700.470	0.504.400	4 705 077	4 440 004
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	U	0	U	U	U	
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	22.321.422	12.668.913	6.793.470	3.524.436	1.795.977	1.442.304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.047	422.297	226.449	117.481	59.866	48.077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-3	U	U	U	U	U	0
- Tx (Frames)	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (ET) (Bit/s)	0	0	0	0	0	0
- Rx (Frames)	6.217	2.744.714	1.494.639	763.546	397.263	319.167
- Rx Rate (L1) (Bit/s)	139,26 K	108,32 M	110,01 M	108,32 M	110,6 M	110,64 M
- Rx Rate (Fps)	207	91.490	49.821	25.452	13.242	10.639
- Flood Count (Frames)	58	32	22	25	25	26
P-0-2-4				20	20	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.226	2.746.257	1.495.390	778.869	397.943	319.372
- Rx Rate (L1) (Bit/s)	139,46 K	108,39 M	110,06 M	110,5 M	110,79 M	110,72 M
- Rx Rate (Fps)	208	91.542	49.846	25.962	13.265	10.646
- Flood Count (Frames)	56	29	29	27	25	29
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.236	2.740.155	1.440.480	710.676	397.844	319.367
- Rx Rate (L1) (Bit/s)	139,69 K	108,14 M	106,02 M	100,82 M	110,76 M	110,71 M
- Rx Rate (Fps)	208	91.339	48.016	23.689	13.261	10.646
- Flood Count (Frames)	59	24	24	28	21	30
P-0-4-0						_
- Tx (Frames)	0	0	0	0	0	0
	0 0 0	0 0 0	0 0 0	0	0 0	0 0



- Rx (Frames)	6.156	2.747.821	1.490.774	776.042	397.936	319.626
- Rx Rate (L1) (Bit/s)	137,89 K	108,45 M	109,72 M	110,09 M	110,79 M	110,8 M
- Rx Rate (Fps)	205	91.594	49.692	25.868	13.265	10.654
- Flood Count (Frames)	57	25	24	20	25	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.277	2.739.639	1.492.868	778.155	397.402	319.604
- Rx Rate (L1) (Bit/s)	140,6 K	108,12 M	109,88 M	110,39 M	110,64 M	110,8 M
- Rx Rate (Fps)	209	91.321	49.762	25.939	13.247	10.653
- Flood Count (Frames)	58	27	21	22	24	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.251	2.750.917	1.486.865	778.042	397.830	319.462
- Rx Rate (L1) (Bit/s)	140,02 K	108,57 M	109,43 M	110,38 M	110,76 M	110,75 M
- Rx Rate (Fps)	208	91.697	49.562	25.935	13.261	10.649
- Flood Count (Frames)	57	24	22	24	30	25
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.290	2.740.948	1.484.962	777.127	397.734	319.724
- Rx Rate (L1) (Bit/s)	140,9 K	108,18 M	109,29 M	110,25 M	110,73 M	110,84 M
- Rx Rate (Fps)	210	91.365	49.499	25.904	13.258	10.657
- Flood Count (Frames)	57	25	24	25	32	27
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.352	2.744.540	1.483.586	777.326	397.975	320.038
- Rx Rate (L1) (Bit/s)	142,28 K	108,32 M	109,19 M	110,28 M	110,8 M	110,95 M
- Rx Rate (Fps)	212	91.485	49.453	25.911	13.266	10.668
- Flood Count (Frames)	55	31	23	22	27	23
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6.180	2.736.311	1.488.930	777.273	397.822	321.381
- Rx Rate (L1) (Bit/s)	138,43 K	107,99 M	109,59 M	110,27 M	110,75 M	111,41 M
- Rx Rate (Fps)	206	91.210	49.631	25.909	13.261	10.713
- Flood Count (Frames)	54	21	28	27	27	25

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	4,5 G
Tx Rate (Fps)	365.734
Rx Rate (Percent)	10,99 %
Rx Rate (L1) (Bit/s)	989,2 M
Rx Rate (Fps)	80,4 K
Loss Rate (Percent)	78,02 %
Loss (Frames)	8.560.118
P-0-0-0	
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	
	0
- Flood Count (Frames)	0
P-0-0-2	4.040.440
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.219.113
- Tx Rate (ET) (Bit/s)	500 M 40.637
- Rx (Frames)	40.037
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	-
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	4 040 440
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	0
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	4 040 440
- Tx (Frames)	1.219.113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40.637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
	0
P-0-2-3	0
P-0-2-3 - Tx (Frames)	U
- Tx (Frames)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 266.729
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 266.729 109,39 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 266.729 109,39 M 8.891
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 266.729 109,39 M 8.891
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	0 266.729 109,39 M 8.891 28
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames)	0 266.729 109,39 M 8.891 28



- Rx Rate (L1) (Bit/s)	107,9 M
- Rx Rate (Fps)	8.769
- Flood Count (Frames)	31
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	257.210
- Rx Rate (L1) (Bit/s)	105,49 M
- Rx Rate (Fps)	8.574
- Flood Count (Frames)	22
P-0-4-0	•
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	267.491
- Rx Rate (L1) (Bit/s)	109,71 M
- Rx Rate (Fps) - Flood Count (Frames)	8.916 27
P-0-4-1	21
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	264.707
- Rx Rate (L1) (Bit/s)	108,57 M
- Rx Rate (Fps)	8.824
- Flood Count (Frames)	24
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	279.972
- Rx Rate (L1) (Bit/s)	114,83 M
- Rx Rate (Fps)	9.332
- Flood Count (Frames)	25
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268.369
- Rx Rate (L1) (Bit/s)	110,07 M
- Rx Rate (Fps)	8.946
- Flood Count (Frames)	26
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	264.132
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	108,33 M 8.804
- Flood Count (Frames)	25
P-0-4-5	25
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Bl/s)	0
- Rx (Frames)	280.211
- Rx Rate (L1) (Bit/s)	114,92 M
- Rx Rate (Fps)	9.340
- Flood Count (Frames)	28
( )	



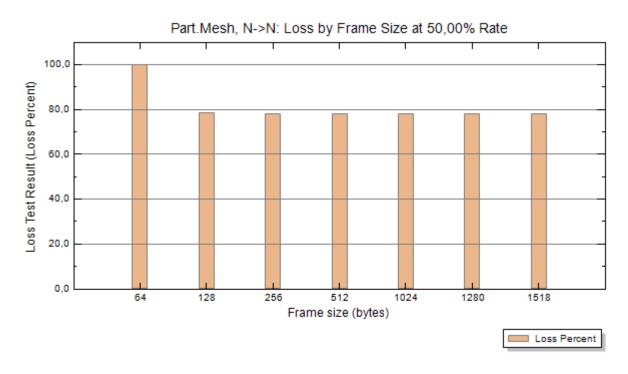

## Results for 60,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G	5,4 G
Tx Rate (Fps)	8.035.713	4.560.810	2.445.652	1.268.795	646.550	519.229
Rx Rate (Percent)	0,01 %	10,74 %	10,46 %	11,04 %	11,05 %	11,04 %
Rx Rate (L1) (Bit/s)	1,16 M	966,68 M	941,55 M	993,22 M	994,75 M	993,71 M
Rx Rate (Fps)	1,72 K	816,45 K	426,42 K	233,37 K	119,1 K	95,55 K
Loss Rate (Percent)	99,98 %	82,1 %	82,56 %	81,61 %	81,58 %	81,6 %
Loss (Frames)	241.019.680	112.330.837	60.576.812	31.062.740	15.823.403	12.710.392
P-0-0-0						
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	00 -010	15.000.501	0.150.150	1 000 010	0.155.105	
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26.785.710	15.202.701	8.152.173	4.229.316	2.155.167	1.730.763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506.757	271.739	140.977	71.839	57.692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-3	U	U	U	U	U	0
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)						
- Rx (Frames)	5.750	2.760.616	1.176.960	775.253	389.401	318.037
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	128,8 K	108,95 M	86,62 M	109,98 M	108,41 M	110,25 M
- Flood Count (Frames)	192 59	92.021	39.232	25.842	12.980	10.601
,	59	29	22	26	23	20
P-0-2-4	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 500 704	0	0	0	0
- Rx (Frames)	5.750	2.530.701	1.488.100	776.261	398.336	318.853
- Rx Rate (L1) (Bit/s)	128,8 K	99,88 M	109,52 M	110,13 M	110,9 M	110,54 M
- Rx Rate (Fps)	192	84.357	49.603	25.875	13.278	10.628
- Flood Count (Frames)	59	22	27	23	20	27
P-0-2-5		0	0	0		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 740 750	0	0	0	0
- Rx (Frames)	5.744	2.740.753	1.189.945	777.923	398.122	308.083
- Rx Rate (L1) (Bit/s)	128,67 K	108,17 M	87,58 M	110,36 M	110,84 M	106,8 M
- Rx Rate (Fps)	191	91.358	39.665	25.931	13.271	10.269
- Flood Count (Frames)	58	24	20	23	22	24
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Er) (Blus)	0	0	0	0	0	0



- Rx (Frames)	5.771	2.747.900	1.491.034	779.770	397.148	320.526
- Rx Rate (L1) (Bit/s)	129,27 K	108,45 M	109,74 M	110,62 M	110,57 M	111,12 M
- Rx Rate (Fps)	192	91.597	49.701	25.992	13.238	10.684
- Flood Count (Frames)	60	28	23	21	18	27
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.752	2.750.263	1.491.853	779.640	397.665	320.338
- Rx Rate (L1) (Bit/s)	128,84 K	108,54 M	109,8 M	110,6 M	110,71 M	111,05 M
- Rx Rate (Fps)	192	91.675	49.728	25.988	13.256	10.678
- Flood Count (Frames)	56	22	26	25	21	23
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.712	2.744.029	1.487.702	779.729	398.364	319.955
- Rx Rate (L1) (Bit/s)	127,95 K	108,3 M	109,49 M	110,62 M	110,9 M	110,92 M
- Rx Rate (Fps)	190	91.468	49.590	25.991	13.279	10.665
- Flood Count (Frames)	56	26	21	23	25	23
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.785	2.722.128	1.491.286	777.934	398.030	320.565
- Rx Rate (L1) (Bit/s)	129,58 K	107,43 M	109,76 M	110,36 M	110,81 M	111,13 M
- Rx Rate (Fps)	193	90.738	49.710	25.931	13.268	10.686
- Flood Count (Frames)	58	26	23	24	19	22
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.737	2.747.936	1.487.940	778.516	398.208	319.842
- Rx Rate (L1) (Bit/s)	128,51 K	108,45 M	109,51 M	110,45 M	110,86 M	110,88 M
- Rx Rate (Fps)	191	91.598	49.598	25.951	13.274	10.661
- Flood Count (Frames)	59	27	22	23	24	20
P-0-4-5				-		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.709	2.749.146	1.487.925	776.078	397.826	320.276
- Rx Rate (L1) (Bit/s)	127,88 K	108,5 M	109,51 M	110,1 M	110,75 M	111,03 M
- Rx Rate (Fps)	190	91.638	49.598	25.869	13.261	10.676
- Flood Count (Frames)	61	21	26	24	24	28

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	5,4 G
Tx Rate (Fps)	438.880
Rx Rate (Percent)	11 %
Rx Rate (L1) (Bit/s)	990,36 M
Rx Rate (Fps)	80,49 K
Loss Rate (Percent)	81,66 %
Loss (Frames)	10.751.668
P-0-0-0	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	4 400 000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.462.932
- Tx Rate (LT) (Bl/s)	600 M 48.764
- Rx (Frames)	46.704
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	4 400 000
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1.462.932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48.764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	1 /62 022
- Tx (Frames)	1.462.932 600 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	600 M 48.764
- Rx (Frames)	40.704
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.054
- Rx Rate (L1) (Bit/s)	110,76 M
- Rx Rate (Fps)	9.002
- Flood Count (Frames)	24
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	250.628



- Rx Rate (L1) (Bit/s)	102,79 M
- Rx Rate (Fps)	8.354
- Flood Count (Frames)	24
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.865
- Rx Rate (L1) (Bit/s)	110,68 M
- Rx Rate (Fps)	8.996
- Flood Count (Frames)	26
P-0-4-0	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272.830
- Rx Rate (L1) (Bit/s)	111,9 M
- Rx Rate (Fps)	9.094
- Flood Count (Frames)	21
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.880
- Rx Rate (L1) (Bit/s)	110,69 M
- Rx Rate (Fps)	8.996
- Flood Count (Frames)	23
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.308
- Rx Rate (L1) (Bit/s)	110,45 M
- Rx Rate (Fps)	8.977
- Flood Count (Frames)	30
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.728
- Rx Rate (L1) (Bit/s)	111,03 M
- Rx Rate (Fps)	9.024
- Flood Count (Frames)	22
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271.298
- Rx Rate (L1) (Bit/s)	111,27 M
- Rx Rate (Fps)	9.043
- Flood Count (Frames)	26
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.129
- Rx Rate (L1) (Bit/s)	110,79 M
- Rx Rate (Fps)	9.004
- Flood Count (Frames)	20



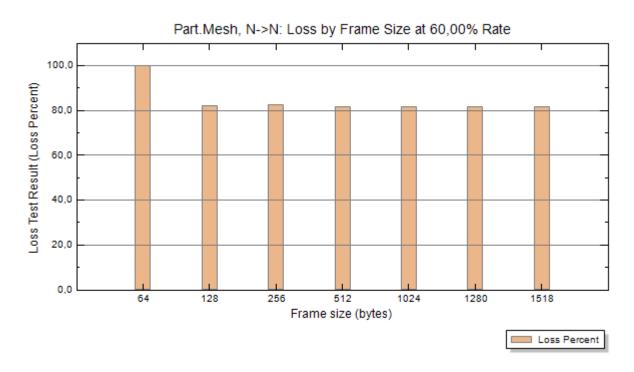

## Results for 70,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	6,3 G	6,3 G	6,3 G	6,3 G	6,3 G	6,3 G
Tx Rate (Fps)	9.374.999	5.320.944	2.853.260	1.480.262	754.310	605.767
Rx Rate (Percent)	0,01 %	0,85 %	10,96 %	11,04 %	11,08 %	11,09 %
Rx Rate (L1) (Bit/s)	1,04 M	76,19 M	986,49 M	993,48 M	997,49 M	997,93 M
Rx Rate (Fps)	1,54 K	64,35 K	446,78 K	233,43 K	119,43 K	95,95 K
Loss Rate (Percent)	99,98 %	98,79 %	84,34 %	84,23 %	84,17 %	84,16 %
Loss (Frames)	281.203.636	157.697.788	72.194.466	37.404.949	19.046.352	15.294.352
P-0-0-0						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (ET) (Bit/s)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	0	0	0	0	0	0
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	31.249.998	17.736.480	9.510.867	4.934.205	2.514.366	2.019.222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591.216	317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	24 240 000	47 700 400	0.540.007	4 004 005	0.544.000	0.040.000
- Tx (Frames)	31.249.998 700 M	17.736.480	9.510.867	4.934.205 700 M	2.514.366 700 M	2.019.222 700 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1.041.667	700 M 591.216	700 M 317.029	164.474	83.812	67.307
- Rx (Frames)	0	0	0	0	03.012	07.307
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	<u> </u>	-				
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.185	212.466	1.489.603	781.004	397.556	318.830
- Rx Rate (L1) (Bit/s)	116,14 K	8,39 M	109,63 M	110,8 M	110,68 M	110,53 M
- Rx Rate (Fps)	173	7.082	49.653	26.033	13.252	10.628
- Flood Count (Frames)	58	55	23	21	25	24
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.148	214.446	1.486.881	775.776	396.863	319.321
- Rx Rate (L1) (Bit/s)	115,32 K	8,46 M	109,43 M	110,06 M	110,49 M	110,7 M
- Rx Rate (Fps)	172	7.148	49.563	25.859	13.229	10.644
- Flood Count (Frames)	55	59	22	26	22	24
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.142	217.606	1.493.939	776.634	397.502	319.354
- Rx Rate (L1) (Bit/s)	115,18 K	8,59 M	109,95 M	110,18 M	110,66 M	110,71 M
- Rx Rate (Fps)	171	7.254	49.798	25.888	13.250	10.645
- Flood Count (Frames)	57	57	24	24	20	21
P-0-4-0					0	
- Tx (Frames)	0	0	0	0	0	0
Ty Data (1.1) (D:1/-)						
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	5.143	217.124	1.492.822	773.453	397.929	319.966
- Rx Rate (L1) (Bit/s)	115,2 K	8,57 M	109,87 M	109,73 M	110,78 M	110,92 M
- Rx Rate (Fps)	171	7.237	49.761	25.782	13.264	10.666
- Flood Count (Frames)	58	57	28	18	21	24
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.155	215.810	1.489.424	779.846	398.844	319.655
- Rx Rate (L1) (Bit/s)	115,47 K	8,52 M	109,62 M	110,63 M	111,04 M	110,81 M
- Rx Rate (Fps)	172	7.194	49.647	25.995	13.295	10.655
- Flood Count (Frames)	59	55	23	24	19	20
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.155	213.605	1.488.432	779.680	398.068	320.242
- Rx Rate (L1) (Bit/s)	115,47 K	8,43 M	109,55 M	110,61 M	110,82 M	111,02 M
- Rx Rate (Fps)	172	7.120	49.614	25.989	13.269	10.675
- Flood Count (Frames)	60	56	20	22	23	22
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.115	213.819	1.485.919	779.545	398.678	321.051
- Rx Rate (L1) (Bit/s)	114,58 K	8,44 M	109,36 M	110,59 M	110,99 M	111,3 M
- Rx Rate (Fps)	171	7.127	49.531	25.985	13.289	10.702
- Flood Count (Frames)	56	55	24	22	26	23
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.134	213.398	1.489.785	778.716	398.829	320.136
- Rx Rate (L1) (Bit/s)	115 K	8,42 M	109,65 M	110,47 M	111,03 M	110,98 M
- Rx Rate (Fps)	171	7.113	49.660	25.957	13.294	10.671
- Flood Count (Frames)	58	57	26	23	22	26
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.169	212.258	1.486.532	778.242	398.673	320.091
- Rx Rate (L1) (Bit/s)	115,79 K	8,38 M	109,41 M	110,41 M	110,99 M	110,96 M
- Rx Rate (Fps)	172	7.075	49.551	25.941	13.289	10.670
- Flood Count (Frames)	57	56	24	22	19	25

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	6,3 G
Tx Rate (Fps)	512.028
Rx Rate (Percent)	11,01 %
Rx Rate (L1) (Bit/s)	991,13 M
Rx Rate (Fps)	80,55 K
Loss Rate (Percent)	84,27 %
Loss (Frames)	12.944.246
P-0-0-0	
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	4 700 700
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M 56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	-
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	1 706 760
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M 56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	-
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1.706.760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56.892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	253.754
- Rx Rate (L1) (Bit/s)	104,07 M
- Rx Rate (Fps)	8.458
- Flood Count (Frames)	22
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	270.600
- Rx (Frames)	270.600



Dy Pata (I.1) (Rit/s)	110 08 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	110,98 M 9.020
- Flood Count (Frames)	24
P-0-2-5	27
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.867
- Rx Rate (L1) (Bit/s)	111,09 M
- Rx Rate (Fps)	9.029
- Flood Count (Frames)	23
P-0-4-0	25
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.413
- Rx Rate (L1) (Bit/s)	110,91 M
- Rx Rate (Fps)	9.014
- Flood Count (Frames)	20
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.558
- Rx Rate (L1) (Bit/s)	110,96 M
- Rx Rate (Fps)	9.019
- Flood Count (Frames)	21
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.391
- Rx Rate (L1) (Bit/s)	110,49 M
- Rx Rate (Fps)	8.980
- Flood Count (Frames)	27
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.380
- Rx Rate (L1) (Bit/s)	110,89 M
- Rx Rate (Fps)	9.013
- Flood Count (Frames)	21
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.950
- Rx Rate (L1) (Bit/s)	110,72 M
- Rx Rate (Fps)	8.998
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.681
- Rx Rate (L1) (Bit/s)	111,02 M
- Rx Rate (Fps)	9.023
- Flood Count (Frames)	24
(i rainos)	



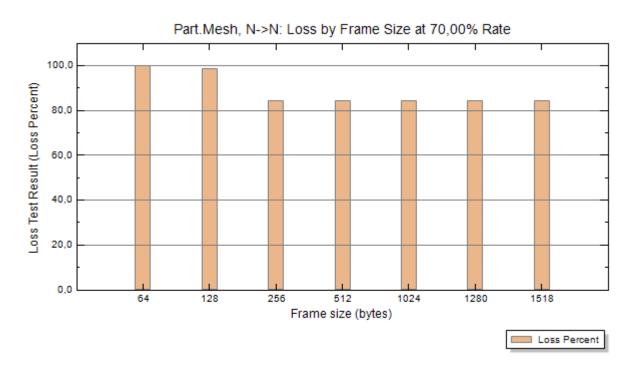

## Results for 80,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G	7,2 G
Tx Rate (Fps)	10.714.283	6.081.080	3.260.868	1.691.728	862.067	692.307
Rx Rate (Percent)	0,01 %	0,02 %	10,97 %	10,91 %	11,07 %	10,86 %
Rx Rate (L1) (Bit/s)	1,02 M	1,58 M	986,85 M	981,6 M	996,39 M	977 M
Rx Rate (Fps)	1,51 K	1,33 K	446,94 K	230,64 K	119,3 K	93,94 K
Loss Rate (Percent)	99,99 %	99,98 %	86,29 %	86,37 %	86,16 %	86,43 %
Loss (Frames)	321.383.077	182.392.453	84.417.701	43.832.691	22.283.009	17.950.928
P-0-0-0						
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	0==110==	22.27.222	10.000 =01			
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	25 744 277	20 270 200	40.000.504	E 000 004	0.070.550	0.007.000
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M 1.190.476	800 M 675.676	800 M	800 M 187.970	800 M 95.785	800 M 76.923
- Tx Rate (Fps) - Rx (Frames)	1.190.476	0/3.070	362.319	0	95.765	
	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	U
	25 714 277	20.270.268	10 960 561	5.639.094	2 072 556	2.307.690
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35.714.277 800 M	20.270.268 800 M	10.869.561 800 M	800 M	2.873.556 800 M	2.307.690 800 M
- Tx Rate (LT) (Bit/s)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	1.190.476	0/5.676	362.319	167.970	95.765	76.923
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (E1) (Bivs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	U	U	U	U	U	U
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	075.070	0	0	95.765	70.923
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	0	0	0	0	0	0
- Tx (Frames)	35.714.277	20.270.268	10.869.561	5.639.094	2.873.556	2.307.690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1.190.476	675.676	362.319	187.970	95.785	76.923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.971	4.479	1.491.873	695.681	396.487	319.037
- Rx Rate (L1) (Bit/s)	133,75 K	176,77 K	109,8 M	98,69 M	110,38 M	110,6 M
- Rx Rate (Fps)	199	149	49.729	23.189	13.216	10.635
- Flood Count (Frames)	61	61	20	21	23	22
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	2.191	4.385	1.493.500	776.310	396.156	318.848
- Rx Rate (L1) (Bit/s)	49,08 K	173,06 K	109,92 M	110,13 M	110,29 M	110,53 M
- Rx Rate (Fps)	73	146	49.783	25.877	13.205	10.628
- Flood Count (Frames)	56	59	28	19	21	21
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
	2.252	4.510	1.492.032	773.534	392.411	258.488
- Rx (Frames)			109,81 M	109,74 M	109,25 M	89,61 M
- Rx (Frames) - Rx Rate (L1) (Bit/s)		177.99 K □		,		,
- Rx Rate (L1) (Bit/s)	50,44 K	177,99 K 150		25.784		8 616
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	50,44 K 75	150	49.734	25.784 25	13.080	8.616 25
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	50,44 K			25.784 25		8.616 25
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	50,44 K 75 58	150	49.734		13.080	25
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	50,44 K 75	150 57	49.734 22	25	13.080 24	



- Rx (Frames)	5.836	4.425	1.491.266	775.087	398.151	321.041
- Rx Rate (L1) (Bit/s)	130,73 K	174,64 K	109,76 M	109,96 M	110,85 M	111,29 M
- Rx Rate (Fps)	195	148	49.709	25.836	13.272	10.701
- Flood Count (Frames)	57	59	21	21	25	31
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.811	4.455	1.488.608	778.660	399.853	320.303
- Rx Rate (L1) (Bit/s)	130,17 K	175,82 K	109,56 M	110,47 M	111,32 M	111,04 M
- Rx Rate (Fps)	194	149	49.620	25.955	13.328	10.677
- Flood Count (Frames)	57	59	19	25	22	23
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.783	4.472	1.489.671	779.983	400.307	320.774
- Rx Rate (L1) (Bit/s)	129,54 K	176,49 K	109,64 M	110,65 M	111,45 M	111,2 M
- Rx Rate (Fps)	193	149	49.656	25.999	13.344	10.692
- Flood Count (Frames)	57	58	25	23	26	24
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.833	4.349	1.485.794	779.487	400.532	320.198
- Rx Rate (L1) (Bit/s)	130,66 K	171,64 K	109,35 M	110,58 M	111,51 M	111 M
- Rx Rate (Fps)	194	145	49.526	25.983	13.351	10.673
- Flood Count (Frames)	56	57	27	23	21	23
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.850	4.424	1.489.029	780.203	397.941	320.062
- Rx Rate (L1) (Bit/s)	131,04 K	174,6 K	109,59 M	110,68 M	110,79 M	110,95 M
- Rx Rate (Fps)	195	147	49.634	26.007	13.265	10.669
- Flood Count (Frames)	57	58	18	26	24	22
P-0-4-5	<b>.</b>					
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5.889	4.460	1.486.575	780.210	397.157	319.531
- Rx Rate (L1) (Bit/s)	131,91 K	176,02 K	109,41 M	110,69 M	110,57 M	110,77 M
- Rx Rate (Fps)	196	149	49.553	26.007	13.239	10.651
- Flood Count (Frames)	58	55	28	23	20	22
r lood Count (i raines)	50	00	20	20	20	22

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	7,2 G
Tx Rate (Fps)	585.174
Rx Rate (Percent)	10,89 %
Rx Rate (L1) (Bit/s)	980,49 M
Rx Rate (Fps)	79,69 K
Loss Rate (Percent)	86,38 %
Loss (Frames)	15.164.538
P-0-0-0	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	4.050.570
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1.950.579
- Tx Rate (ET) (Bit/s)	800 M 65.019
- Rx (Frames)	03.019
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	1.050.570
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-0	U
- Tx (Frames)	1.950.579
- Tx (Frames) - Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (ET) (Bit/s)	65.019
- Rx (Frames)	00.013
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1.950.579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65.019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.917
- Rx Rate (L1) (Bit/s)	111,11 M
- Rx Rate (Fps)	9.031
- Flood Count (Frames)	27
P-0-2-4	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	272.570
1 to (1 1011103)	212.010



- Rx Rate (L1) (Bit/s)	111,79 M
- Rx Rate (Fps)	9.086
- Flood Count (Frames)	19
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	226.927
- Rx Rate (L1) (Bit/s)	93,07 M
- Rx Rate (Fps)	7.564
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.618
- Rx Rate (L1) (Bit/s)	110,58 M
- Rx Rate (Fps)	8.987
- Flood Count (Frames)	27
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.538
- Rx Rate (L1) (Bit/s)	110,55 M
- Rx Rate (Fps)	8.985
- Flood Count (Frames)	28
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.955
- Rx Rate (L1) (Bit/s)	111,13 M
- Rx Rate (Fps)	9.032
- Flood Count (Frames)	25
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.799
- Rx Rate (L1) (Bit/s)	111,06 M
- Rx Rate (Fps)	9.027
- Flood Count (Frames)	24
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.827
- Rx Rate (L1) (Bit/s)	110,67 M
- Rx Rate (Fps)	8.994
- Flood Count (Frames)	26
P-0-4-5	20
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (E1) (Bl/s)	0
- Rx (Frames)	
	269.522 110,54 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	8.984
- Flood Count (Frames)	22
- Flood Coulit (Flailles)	22



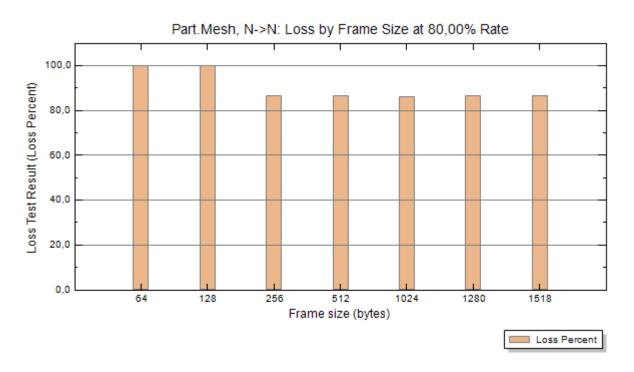

## Results for 90,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	8,1 G	8,1 G	8,1 G	8,1 G	8,1 G	8,1 G
Tx Rate (Fps)	12.053.570	6.841.214	3.668.477	1.903.195	969.827	778.845
Rx Rate (Percent)	0,01 %	0,02 %	10,87 %	10,94 %	11,08 %	10,91 %
Rx Rate (L1) (Bit/s)	730,22 K	1,51 M	977,87 M	984,76 M	997,23 M	982,16 M
Rx Rate (Fps)	1,09 K	1,27 K	442,88 K	231,38 K	119,4 K	94,44 K
Loss Rate (Percent)	99,99 %	99,98 %	87,93 %	87,84 %	87,69 %	87,87 %
Loss (Frames)	361.574.486	205.198.175	96.768.041	50.154.430	25.512.794	20.532.186
P-0-0-0						
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	40 450 505	22 22 4 2 4 7	10 000 0==	0.040.000		0 =00 / /0
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-0-5	U	U	U	U	U	U
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (E1) (Bl/s)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	00.550
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	0	0	0	0	0	
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	00.550
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1		0	-	•	•	
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	86.538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	40.178.565	22.804.047	12.228.255	6.343.983	3.232.755	2.596.149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Ix Rate (Fps)	1.339.286	760.135	407.609	211.466	107.759	
- Tx Rate (Fps) - Rx (Frames)	1.339.286	760.135 0	407.609 0	211.466 0	107.759 0	86.538
- Rx (Frames)						86.538 0
	0	0	0	0	0	86.538 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	86.538 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 0 0	0 0 0	0 0 0	0 0 0	0 0 0	86.538 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0	0 0 0	0 0 0	0 0 0	0 0 0	86.538 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3	0 0 0 0	0 0 0	0 0 0 0	0 0 0 0	0 0 0 0	86.538 0 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0 0 0 0 0	0 0 0 0	0 0 0 0	0 0 0 0	0 0 0 0	86.538 0 0 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames)	0 0 0 0	0 0 0 0	0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	86.538 0 0 0 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	86.538 0 0 0 0 0 0 0 0 318.768
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 0 0 0 0 0 0 0 3.521	0 0 0 0 0 0 0 0 4.290	0 0 0 0 0 0 0 0 0 1.491.428	0 0 0 0 0 0 0 0 0 768.722	0 0 0 0 0 0 0 0 0 397.855	86.538 0 0 0 0 0 0 0 318.768 110,51 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps)	0 0 0 0 0 0 0 0 3.521 78,87 K	0 0 0 0 0 0 0 4.290 169,31 K	0 0 0 0 0 0 0 0 1.491.428 109,77 M	0 0 0 0 0 0 0 0 768.722 109,06 M	0 0 0 0 0 0 0 0 397.855 110,76 M	86.538 0 0 0 0 0 0 0 318.768 110,51 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	0 0 0 0 0 0 0 3.521 78,87 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24	0 0 0 0 0 0 0 768.722 109,06 M 25.624 29	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames)	0 0 0 0 0 0 0 3.521 78,87 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0 0 0 0 0 0 0 3.521 78,87 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s)	0 0 0 0 0 0 0 3.521 78,87 K 117 60	0 0 0 0 0 0 0 4.290 169,31 K 143 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24	0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames)	0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 0 273.442
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 0 273.442 94,79 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 0 273.442 94,79 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 0 273.442 94,79 M 9.115
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames)	0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 398.069 110,82 M 13.269 24	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0 0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.44 M 9.115 26
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0 0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667 82,14 K 122 60 0 0	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0	0 0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 0 0 0 319.758
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0 0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667 82,14 K 122 60 0 0 0	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 319.502
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667 82,14 K 122 60 0 0 0 3.510 78,62 K 117	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27 0 0 1.487.696 109,49 M 49.590	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359 100,35 M 23.579	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 319.502 110,76 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 0 3.667 82,14 K 122 60 0 0 0	0 0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K	0 0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764	86.538 0 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 319.502 110,76 M 10.650
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Route (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60 0 0 3.510 78,62 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27 0 0 0 1.487.696 109,49 M 49.590 25	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359 100,35 M 23.579 26	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764 110,74 M 13.259 25	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 319.502 110,76 M 10.650
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60 0 0 3.510 78,62 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K 141 61	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27 0 0 1.487.696 109,49 M 49.590 25	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359 100,35 M 23.579 26	0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764 110,74 M 13.259 25	86.538 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 319.502 110,76 M 10.650 25
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Route (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0 0 0 0 3.521 78,87 K 117 60 0 0 3.667 82,14 K 122 60 0 0 3.510 78,62 K 117 60	0 0 0 0 0 0 4.290 169,31 K 143 61 0 0 0 4.237 167,22 K 141 61 0 0 0 4.237 167,22 K	0 0 0 0 0 0 0 1.491.428 109,77 M 49.714 24 0 0 0 1.370.867 100,9 M 45.696 27 0 0 0 1.487.696 109,49 M 49.590 25	0 0 0 0 0 0 0 0 0 768.722 109,06 M 25.624 29 0 0 0 767.695 108,91 M 25.590 32 0 0 0 707.359 100,35 M 23.579 26	0 0 0 0 0 0 0 0 397.855 110,76 M 13.262 24 0 0 0 398.069 110,82 M 13.269 24 0 0 0 397.764 110,74 M 13.259 25	86.538 0 0 0 0 0 0 0 318.768 110,51 M 10.626 27 0 0 273.442 94,79 M 9.115 26 0 0 0 319.502 110,76 M 10.650 25



- Rx (Frames)	3.741	4.284	1.486.791	778.123	398.053	320.702
- Rx Rate (L1) (Bit/s)	83,8 K	169,08 K	109,43 M	110,39 M	110,82 M	111,18 M
- Rx Rate (Fps)	125	143	49.560	25.937	13.268	10.690
- Flood Count (Frames)	57	58	28	25	26	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.602	4.253	1.488.667	778.414	398.019	320.038
- Rx Rate (L1) (Bit/s)	80,68 K	167,85 K	109,57 M	110,43 M	110,81 M	110,95 M
- Rx Rate (Fps)	120	142	49.622	25.947	13.267	10.668
- Flood Count (Frames)	55	55	21	23	20	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.462	4.223	1.485.117	779.780	398.264	320.018
- Rx Rate (L1) (Bit/s)	77,55 K	166,67 K	109,3 M	110,62 M	110,88 M	110,94 M
- Rx Rate (Fps)	115	141	49.504	25.993	13.275	10.667
- Flood Count (Frames)	56	58	23	22	20	21
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.743	4.246	1.490.082	787.617	397.966	320.345
- Rx Rate (L1) (Bit/s)	83,84 K	167,58 K	109,67 M	111,74 M	110,79 M	111,05 M
- Rx Rate (Fps)	125	142	49.669	26.254	13.266	10.678
- Flood Count (Frames)	59	58	26	28	21	24
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.649	4.218	1.490.025	787.436	398.008	319.939
- Rx Rate (L1) (Bit/s)	81,74 K	166,47 K	109,67 M	111,71 M	110,81 M	110,91 M
- Rx Rate (Fps)	122	141	49.668	26.248	13.267	10.665
- Flood Count (Frames)	56	62	25	24	27	30
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3.704	4.260	1.495.581	786.271	398.003	320.401
- Rx Rate (L1) (Bit/s)	82,97 K	168,13 K	110,07 M	111,55 M	110,8 M	111,07 M
- Rx Rate (Fps)	123	142	49.853	26.209	13.267	10.680
- Flood Count (Frames)	57	55	23	27	17	21

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	8,1 G
Tx Rate (Fps)	658.322
Rx Rate (Percent)	11,09 %
Rx Rate (L1) (Bit/s)	998,33 M
Rx Rate (Fps)	81,14 K
Loss Rate (Percent)	87,67 %
Loss (Frames)	17.315.498
P-0-0-0	
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




De Dete (Fee)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	2 12 1 12=
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	0
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (ET) (Bit/s)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	0.404.407
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M 73.147
- Tx Rate (Fps)	
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2.194.407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73.147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	264.349
- Rx Rate (L1) (Bit/s)	108,42 M
- Rx Rate (Fps)	8.812
- Flood Count (Frames)	24
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	274.059



Dv Data (I.1) (Dit/a)	112,4 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	9.135
- Flood Count (Frames)	27
P-0-2-5	21
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270.758
- Rx Rate (L1) (Bit/s)	111,05 M
- Rx Rate (Fps)	9.025
- Flood Count (Frames)	23
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	264.977
- Rx Rate (L1) (Bit/s)	108,68 M
- Rx Rate (Fps)	8.833
- Flood Count (Frames)	22
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	275.627
- Rx Rate (L1) (Bit/s)	113,04 M
- Rx Rate (Fps)	9.188
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	271.785
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	111,47 M
- Rx Rate (Fps)	9.060
- Flood Count (Frames)	19_
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	265.773
- Rx Rate (L1) (Bit/s)	109 M
- Rx Rate (Fps)	8.859
- Flood Count (Frames)	22
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	275.030
- Rx Rate (L1) (Bit/s)	112,8 M
- Rx Rate (Fps)	9.168
- Flood Count (Frames)	20
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271.807
	111 10 M
- Rx Rate (L1) (Bit/s)	111,48 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	9.060



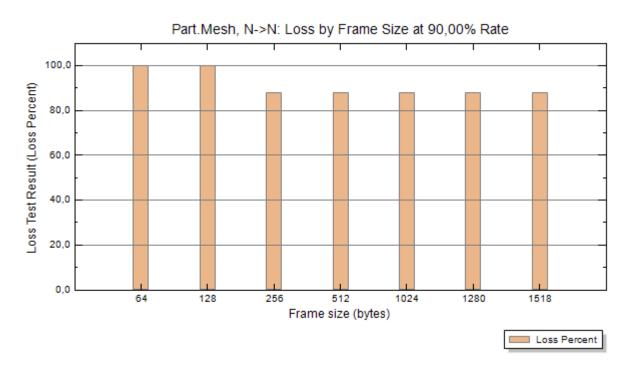

## Results for 100,00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13.392.856	7.601.351	4.076.085	2.114.662	1.077.586	865.382
Rx Rate (Percent)	0,01 %	0,02 %	10,96 %	11,04 %	11,05 %	11,06 %
Rx Rate (L1) (Bit/s)	831,98 K	1,58 M	986,71 M	994,01 M	994,57 M	995,01 M
Rx Rate (Fps)	1,24 K	1,33 K	446,88 K	233,55 K	119,08 K	95,67 K
Loss Rate (Percent)	99,99 %	99,98 %	89,04 %	88,96 %	88,95 %	88,94 %
Loss (Frames)	401.748.535	228.000.507	108.876.151	56.433.201	28.755.120	23.091.244
P-0-0-0						
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	44.040.0=0	25 225 225	10 -00 0 10		2 - 2 1 2 - 1	
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	44.040.050	05 007 005	40.500.040	7.040.070	0.504.054	0.004.000
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	44.040.050	05 007 005	40 500 040	7.040.070	2 504 054	0.004.000
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	44.040.050	05 007 005	40.500.040	7.040.070	0.504.054	0.004.000
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	44.040.050	05 007 005	40.500.040	7.040.070	0.504.054	0.004.000
- Tx (Frames)	44.642.853	25.337.835	13.586.949	7.048.872	3.591.954	2.884.608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844.595	452.898	234.962	119.732	96.154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	U	U	U	U
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	-	-				
- Rx (Frames) - Rx Rate (L1) (Bit/s)	4.440	4.464	1.487.974	776.774	399.686	322.934
- Rx Rate (LT) (Bil/S)	99,46 K	176,18 K	109,51 M	110,2 M 25.892	111,27 M	111,95 M 10.764
- Flood Count (Frames)	148	149	49.599		13.323	
, ,	60	59	24	22	22	25
P-0-2-4	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	1.823	4.430	1.495.333	775.508	400.382	322.926
- Rx Rate (L1) (Bit/s)	40,84 K	174,84 K	110,06 M	110,02 M	111,47 M	111,95 M
- Rx Rate (Fps)	61	148	49.844	25.850	13.346	10.764
- Flood Count (Frames)	58	58	24	24	22	25
P-0-2-5		0		0		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.379	4.373	1.492.028	779.260	389.839	321.049
- Rx Rate (L1) (Bit/s)	98,09 K	172,59 K	109,81 M	110,55 M	108,53 M	111,3 M
- Rx Rate (Fps)	146	146	49.734	25.975	12.995	10.702
- Flood Count (Frames)	61	61	25	29	26	20
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
			^	0	^	^
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	4.349	4.480	1.495.556	780.297	396.246	316.919
- Rx Rate (L1) (Bit/s)	97,42 K	176,81 K	110,07 M	110,7 M	110,31 M	109,87 M
- Rx Rate (Fps)	145	149	49.852	26.010	13.208	10.564
- Flood Count (Frames)	58	56	25	19	22	22
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.467	4.474	1.487.414	778.620	395.802	317.429
- Rx Rate (L1) (Bit/s)	100,06 K	176,57 K	109,47 M	110,46 M	110,19 M	110,04 M
- Rx Rate (Fps)	149	149	49.580	25.954	13.193	10.581
- Flood Count (Frames)	57	56	23	24	22	21
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.412	4.428	1.491.465	778.715	397.708	317.300
- Rx Rate (L1) (Bit/s)	98,83 K	174,76 K	109,77 M	110,47 M	110,72 M	110 M
- Rx Rate (Fps)	147	148	49.716	25.957	13.257	10.577
- Flood Count (Frames)	55	61	24	20	20	21
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.420	4.491	1.487.652	779.657	397.515	316.645
- Rx Rate (L1) (Bit/s)	99,01 K	177,24 K	109,49 M	110,61 M	110,67 M	109,77 M
- Rx Rate (Fps)	147	150	49.588	25.989	13.251	10.555
- Flood Count (Frames)	58	58	22	25	22	22
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.394	4.386	1.480.210	779.341	397.405	317.371
- Rx Rate (L1) (Bit/s)	98,43 K	173,1 K	108,94 M	110,56 M	110,64 M	110,02 M
- Rx Rate (Fps)	146	146	49.340	25.978	13.247	10.579
- Flood Count (Frames)	58	58	27	17	20	22
P-0-4-5					-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4.458	4.482	1.488.758	778.475	397.883	317.655
- Rx Rate (L1) (Bit/s)	99,86 K	176,89 K	109,57 M	110,44 M	110,77 M	110,12 M
- Rx Rate (Fps)	149	149	49.625	25.949	13.263	10.589
- Flood Count (Frames)	55	55	26	18	20	24

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731.468
Rx Rate (Percent)	11,05 %
Rx Rate (L1) (Bit/s)	994,51 M
Rx Rate (Fps)	80,83 K
Loss Rate (Percent)	88,95 %
Loss (Frames)	19.519.178
P-0-0-0	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2 - Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-4	0
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-2-1	0
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2.438.226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81.274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	273.283
- Rx (Frames) - Rx Rate (L1) (Bit/s)	112,08 M
- Rx Rate (E1) (Bit/s)	9.109
- Flood Count (Frames)	21
P-0-2-4	۲۱
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.109
, ,	



- Rx Rate (L1) (Bit/s)	110,37 M
- Rx Rate (Fps)	8.970
- Flood Count (Frames)	26
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	258.716
- Rx Rate (L1) (Bit/s)	106,11 M
- Rx Rate (Fps)	8.624
- Flood Count (Frames) P-0-4-0	28
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	273.599
- Rx Rate (L1) (Bit/s)	112,21 M
- Rx Rate (Fps)	9.120
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269.371
- Rx Rate (L1) (Bit/s)	110,48 M
- Rx Rate (Fps)	8.979
- Flood Count (Frames)	24
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	268.549
- Rx Rate (L1) (Bit/s)	110,14 M
- Rx Rate (Fps)	8.952
- Flood Count (Frames)	24
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	274.026
- Rx Rate (L1) (Bit/s)	112,39 M
- Rx Rate (Fps)	9.134
- Flood Count (Frames)	25
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	269.423
- Rx Rate (L1) (Bit/s)	110,5 M
- Rx Rate (Fps)	8.981
- Flood Count (Frames)	23
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268.780
- Rx Rate (L1) (Bit/s)	110,24 M
- Rx Rate (Fps)	8.959
- Flood Count (Frames)	22



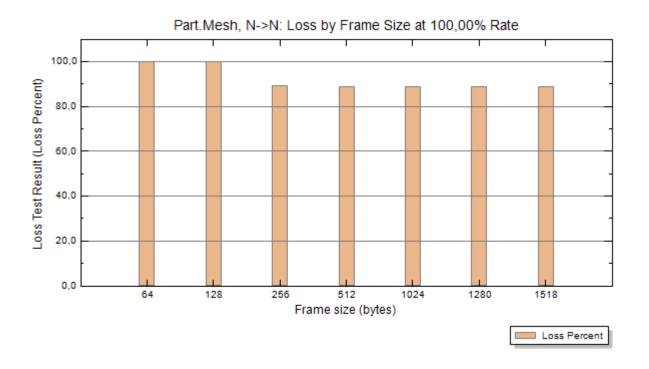



# **Congestion Control Results**

# **Test Setup**

Duration: 30 seconds Iteration: 1

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Source
P-0-4-4	Destination
P-0-4-5	Destination

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	89.285.716	50.675.677	27.173.914	14.097.746	7.183.910	5.769.232
Uncongested Port: (P-0-4-4)						
- Tx (Frames)	22.321.429	12.668.920	6.793.479	3.524.437	1.795.978	1.442.308
- Rx (Frames)	22.321.429	12.668.920	6.793.479	3.524.437	1.795.978	1.442.308
- Loss (Frames)	0	0	0	0	0	0
- Loss (Percent)	0,00	0,00	0,00	0,00	0,00	0,00
Congested Port:						
(P-0-4-5)						
- Tx (Frames)	66.964.287	38.006.757	20.380.435	10.573.309	5.387.932	4.326.924
- Rx (Frames)	42.621.942	24.672.541	13.393.816	6.996.695	3.578.526	2.875.992
- Loss (Frames)	24.342.345	13.334.216	6.986.619	3.576.614	1.809.406	1.450.932
- Loss (Percent)	36,35	35,08	34,28	33,83	33,58	33,53

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	100 %
Tx (Frames)	4.876.464
Uncongested Port: (P-0-4-4)	
- Tx (Frames)	1.219.116
- Rx (Frames)	453.249
- Loss (Frames)	765.867
- Loss (Percent)	62,82
Congested Port: (P-0-4-5)	
- Tx (Frames)	3.657.348
- Rx (Frames)	2.432.092
- Loss (Frames)	1.225.256
- Loss (Percent)	33,50



# **Forward Pressure Results**

# **Test Setup**

Duration: 30 seconds

Iteration:

InterFrame Gap Delta: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx (Frames)	45.180.722	25.510.204	13.636.363	7.062.146	3.595.397	2.886.836
Tx Rate (Fps)	1.506.024	850.340	454.546	235.405	119.847	96.228
Tx IFG (Bytes)	20	20	20	20	20	20
Tx Max. Util. (Percent)	101,205	100,680	100,364	100,188	100,096	100,077
Rx (Frames)	42.613.630	24.671.078	13.392.895	6.996.318	3.578.299	2.875.824
Rx Rate (Fps)	1.420.451	822.367	446.427	233.208	119.274	95.859
Rx Max. Util. (Percent)	95,454	97,368	98,571	99,254	99,618	99,693
Loss (Frames)	2.567.092	839.126	243.468	65.828	17.098	11.012
Loss (Percent)	5,68	3,29	1,79	0,93	0,48	0,38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx (Frames)	2.439.817
Tx Rate (Fps)	81.327
Tx IFG (Bytes)	20
Tx Max. Util. (Percent)	100,065
Rx (Frames)	2.431.962
Rx Rate (Fps)	81.063
Rx Max. Util. (Percent)	99,740
Loss (Frames)	7.855
Loss (Percent)	0,32



# **Maximum Forwarding Rate Results**

# **Test Setup**

Duration: 30 seconds Iteration: 1

 Port ID
 Port Role

 P-0-0-0
 Source

 P-0-4-5
 Destination

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90,018 %	100 %	100 %	100 %	100 %	90 %
Tx (Frames)	40.186.488	25.337.837	13.586.956	7.048.872	3.591.954	2.596.153
Tx Rate (L1) (Bit/s)	900,18 M	1000 M	1000 M	1000 M	1000 M	900 M
Tx Rate (Fps)	1.339.550	844.595	452.899	234.962	119.732	86.538
Rx (Frames)	40.186.488	24.602.240	13.392.925	6.996.333	3.578.309	2.596.153
Rx Rate (L1) (Bit/s)	900,18 M	970,97 M	985,72 M	992,55 M	996,2 M	900 M
Rx Rate (Fps)	1.339.550	820.075	446.431	233.211	119.277	86.538

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx (Frames)	2.438.231
Tx Rate (L1) (Bit/s)	1000 M
Tx Rate (Fps)	81.274
Rx (Frames)	2.431.967
Rx Rate (L1) (Bit/s)	997,43 M
Rx Rate (Fps)	81.066



# **Address Caching Capacity Results**

## **Test Setup**

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC

Address Initial Count:100Address Maximum Count:2.048Address Minimum Count:100Address Resolution:100

Learning Rate: 20 Fps
Toggle Port Sync State: No
Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds

Switch Test Ports: No

DUT Aging Time: 310 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port

### **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Duration (Seconds)	55	6	6	6	6	6
Address Count	1.074	100	100	100	100	100
TestPort Tx (Frames)	22	22	22	22	22	22
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	22	22	22	22	22	22
MonPort Rx (Frames)	22	22	22	22	22	22

Frame Size	1518
Result State	FAIL
Iter. #	1
Duration (Seconds)	6
Address Count	100
TestPort Tx (Frames)	22
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	22
MonPort Rx (Frames)	22



# **Address Learning Rate Results**

## **Test Setup**

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC
Only Use Max. Capacity: No
Set End = Max. Capacity: Yes

 Base Learning Rate:
 100 Fps

 Initial Rate:
 20,00%

 Maximum Rate:
 100,00%

 Minimum Rate:
 20,00%

 Resolution:
 20,00%

Toggle Port Sync State: No

Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds
Switch Test Ports: No

DUT Aging Time: 310 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port


### **Test Results**

### **Results for 100 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	6	6	6	6	6	6
Address Count	100	100	100	100	100	100
TestPort Tx (Frames)	100	100	100	100	100	100
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	100	100	100	100	100	100
MonPort Rx (Frames)	100	100	100	100	100	100

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	6
Address Count	100
TestPort Tx (Frames)	100
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	100
MonPort Rx (Frames)	100



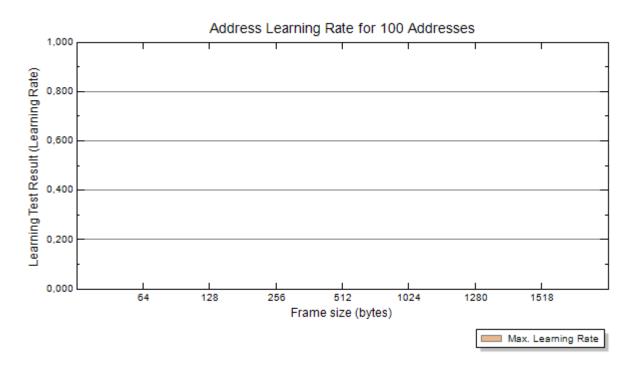


### **Results for 300 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	16	16	16	16	16	16
Address Count	300	300	300	300	300	300
TestPort Tx (Frames)	300	300	300	300	300	300
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	300	300	300	300	300	300
MonPort Rx (Frames)	300	300	300	300	300	300

1518
FAIL
1
20 %
20
16
300
300
0
300
300



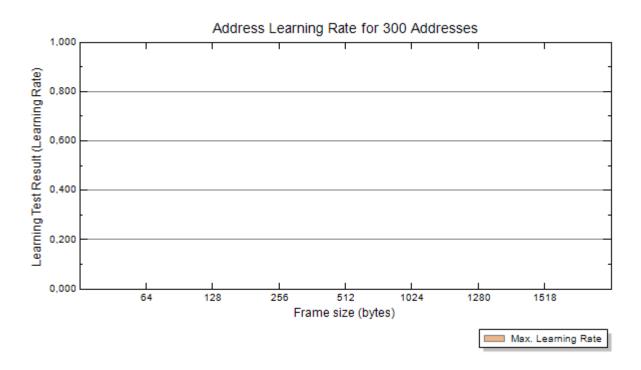


### **Results for 500 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	26	26	26	26	26	26
Address Count	500	500	500	500	500	500
TestPort Tx (Frames)	500	500	500	500	500	500
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	500	500	500	500	500	500
MonPort Rx (Frames)	500	500	500	500	500	500

1518
FAIL
1
20 %
20
26
500
500
0
500
500



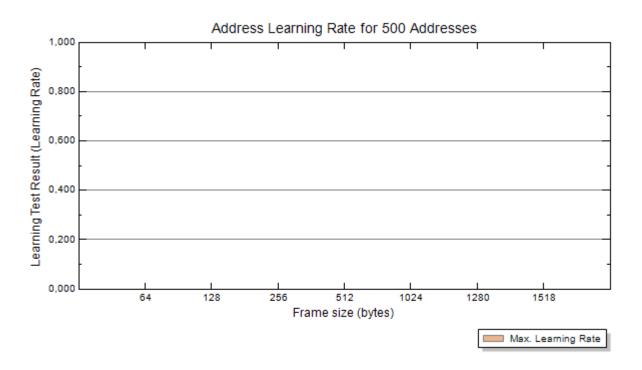


### **Results for 700 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	36	36	36	36	36	36
Address Count	700	700	700	700	700	700
TestPort Tx (Frames)	700	700	700	700	700	700
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	700	700	700	700	700	700
MonPort Rx (Frames)	512	512	512	512	512	512

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	36
Address Count	700
TestPort Tx (Frames)	700
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	700
MonPort Rx (Frames)	512



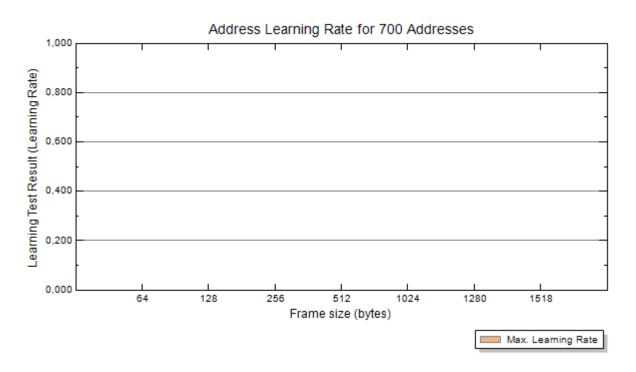


### **Results for 900 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	46	46	46	46	46	46
Address Count	900	900	900	900	900	900
TestPort Tx (Frames)	900	900	900	900	900	900
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	900	900	900	900	900	900
MonPort Rx (Frames)	512	512	512	512	512	512

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	46
Address Count	900
TestPort Tx (Frames)	900
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	900
MonPort Rx (Frames)	512



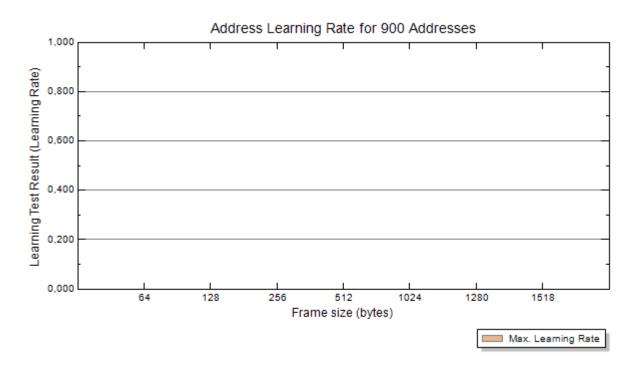


### **Results for 1.100 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	56	56	56	56	56	56
Address Count	1.100	1.100	1.100	1.100	1.100	1.100
TestPort Tx (Frames)	1.100	1.100	1.100	1.100	1.100	1.100
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1.100	1.100	1.100	1.100	1.100	1.100
MonPort Rx (Frames)	512	512	512	512	512	512

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	56
Address Count	1.100
TestPort Tx (Frames)	1.100
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1.100
MonPort Rx (Frames)	512



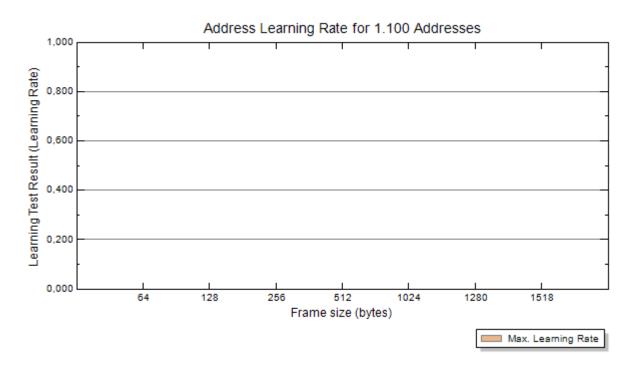


### **Results for 1.300 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	66	66	66	66	66	66
Address Count	1.300	1.300	1.300	1.300	1.300	1.300
TestPort Tx (Frames)	1.300	1.300	1.300	1.300	1.300	1.300
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1.300	1.300	1.300	1.300	1.300	1.300
MonPort Rx (Frames)	513	514	514	514	514	514

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	66
Address Count	1.300
TestPort Tx (Frames)	1.300
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1.300
MonPort Rx (Frames)	514



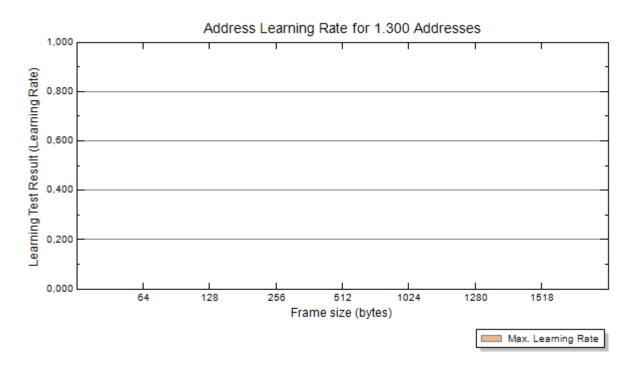


### **Results for 1.500 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	76	76	76	76	76	76
Address Count	1.500	1.500	1.500	1.500	1.500	1.500
TestPort Tx (Frames)	1.500	1.500	1.500	1.500	1.500	1.500
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1.500	1.500	1.500	1.500	1.500	1.500
MonPort Rx (Frames)	513	514	514	514	514	514

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	76
Address Count	1.500
TestPort Tx (Frames)	1.500
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1.500
MonPort Rx (Frames)	514



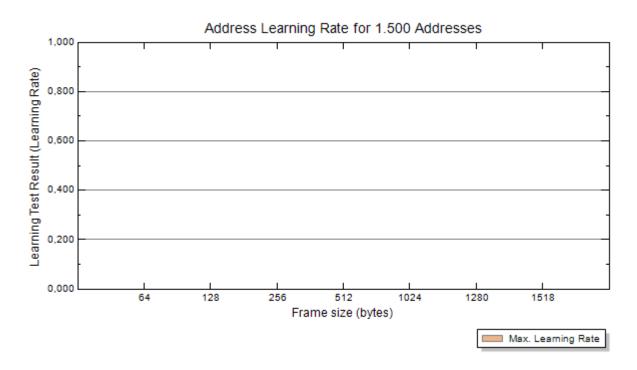


### Results for 1.700 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	86	86	86	86	86	86
Address Count	1.700	1.700	1.700	1.700	1.700	1.700
TestPort Tx (Frames)	1.700	1.700	1.700	1.700	1.700	1.700
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1.700	1.700	1.700	1.700	1.700	1.700
MonPort Rx (Frames)	513	514	514	514	514	514

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	86
Address Count	1.700
TestPort Tx (Frames)	1.700
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1.700
MonPort Rx (Frames)	514



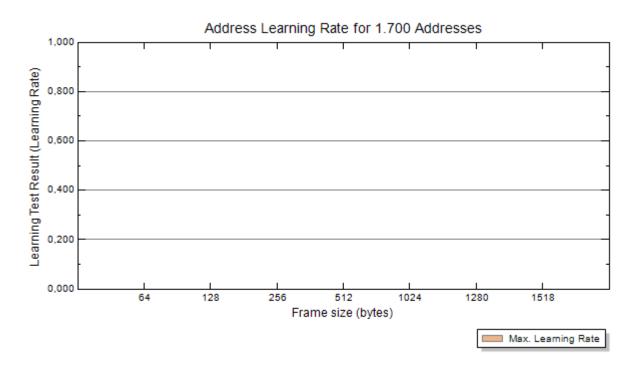


### **Results for 1.900 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	96	96	96	96	96	96
Address Count	1.900	1.900	1.900	1.900	1.900	1.900
TestPort Tx (Frames)	1.900	1.900	1.900	1.900	1.900	1.900
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1.900	1.900	1.900	1.900	1.900	1.900
MonPort Rx (Frames)	514	516	516	516	516	516

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	96
Address Count	1.900
TestPort Tx (Frames)	1.900
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1.900
MonPort Rx (Frames)	516



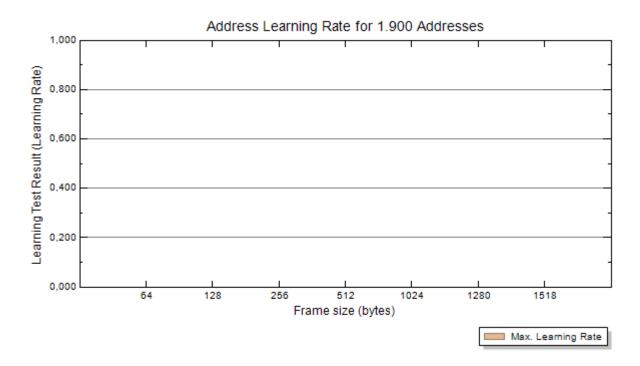


### **Results for 2.048 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Learning Rate (Fps)	20	20	20	20	20	20
Duration (Seconds)	104	104	104	104	104	104
Address Count	2.048	2.048	2.048	2.048	2.048	2.048
TestPort Tx (Frames)	2.048	2.048	2.048	2.048	2.048	2.048
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	2.048	2.048	2.048	2.048	2.048	2.048
MonPort Rx (Frames)	515	517	517	517	517	517

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	104
Address Count	2.048
TestPort Tx (Frames)	2.048
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	2.048
MonPort Rx (Frames)	517



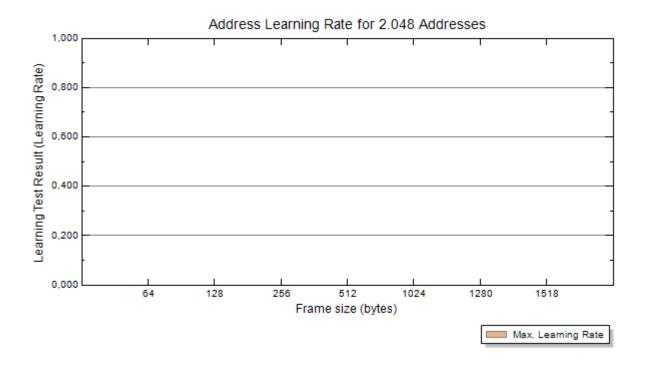



# **Errored Frames Filtering Results**

## **Test Setup**

Duration: 30 seconds

Iteration:

Oversize Test Enabled: Yes
Max. Valid Frame Size: 1518 bytes
Min. Valid Frame Size: 64 bytes
Oversize Frame Span: 1 bytes
Undersize Frame Span: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

### **Test Results**

Tx Rate (Percent)	10 %	20 %	30 %	40 %	50 %	60 %
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (L1) (Bit/s)	100 M	200 M	300 M	400 M	500 M	600 M
Tx (Frames)	1.741.375	3.482.752	5.224.128	6.965.504	8.706.880	10.448.257
Rx (Frames)	1.741.301	3.474.210	5.151.355	6.688.651	8.277.379	9.751.789
Tx Valid (Frames)	154.130	308.261	462.392	616.522	770.653	924.784
Rx Valid (Frames)	154.130	308.261	462.392	616.522	770.653	924.784
Tx Oversize (Frames)	81.221	162.443	243.664	324.886	406.107	487.329
Rx Oversize (Frames)	81.221	162.443	243.664	324.886	406.107	487.329
Tx Undersize (Frames)	1.506.024	3.012.048	4.518.072	6.024.096	7.530.120	9.036.144
Rx Undersize (Frames)	1.505.950	3.003.506	4.445.299	5.747.243	7.100.619	8.339.676
Tx FCS Error (Frames)	59	58	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0	0	0

Tx Rate (Percent)	70 %	80 %	90 %	100 %
Result State	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1
Tx Rate (L1) (Bit/s)	700 M	800 M	900 M	1000 M
Tx (Frames)	12.189.633	13.931.009	15.672.386	17.413.762
Rx (Frames)	11.106.265	12.612.044	14.062.937	13.728.940
Tx Valid (Frames)	1.078.914	1.233.045	1.387.176	1.541.307
Rx Valid (Frames)	1.078.914	1.233.045	1.387.176	1.478.061
Tx Oversize (Frames)	568.551	649.772	730.994	812.215
Rx Oversize (Frames)	568.551	649.772	730.994	629.321
Tx Undersize (Frames)	10.542.168	12.048.192	13.554.216	15.060.240
Rx Undersize (Frames)	9.458.800	10.729.227	11.944.767	11.621.558
Tx FCS Error (Frames)	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0



# **Broadcast Forwarding Results**

## **Test Setup**

Duration: 30 seconds

Iteration: 1

 Initial Rate:
 10,00%

 Maximum Rate:
 100,00%

 Minimum Rate:
 10,00%

 Resolution:
 10,00%

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Destination
P-0-0-2	Destination
P-0-0-3	Destination
P-0-0-4	Destination
P-0-0-5	Destination
P-0-2-0	Destination
P-0-2-1	Destination
P-0-2-2	Destination
P-0-2-3	Destination
P-0-2-4	Destination
P-0-2-5	Destination
P-0-4-0	Destination
P-0-4-1	Destination
P-0-4-2	Destination
P-0-4-3	Destination
P-0-4-4	Destination
P-0-4-5	Destination

### **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	66,294 %	77,852 %	83,125 %	91,563 %	94,375 %	94,375 %
Tx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
Tx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
Tx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
Loss Rate (Percent)	0 %	0 %	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0	0	0
P-0-0-1						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	2,964	3,279	2,896	3,234	3,002	2,918
- Min Latency (micsec)	2,238	2,703	2,695	2,703	2,743	2,703
- Max Latency (micsec)	8,516	7,033	5,221	10,809	5,365	5,277
- Avg Jitter (micsec)	0,003	0,002	0,009	0,002	0,004	0,004
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,525	2,237	2,429	2,068	2,309	2,477
P-0-0-2						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	2,552	2,921	2,929	3,071	3,008	2,933
- Min Latency (micsec)	2,286	2,727	2,719	2,727	2,743	2,727
- Max Latency (micsec)	6,159	6,023	5,245	6,359	5,341	5,253
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,004
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,621	2,044	2,357	2,164	2,309	2,357
P-0-0-3						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	2,538	2,863	2,958	3,274	3,025	2,934



- Min Latency (micsec)	2,286	2,703	2,695	2,703	2,743	2,727
- Max Latency (micsec)	7,290	6,167	5,630	7,442	5,558	5,061
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,645	2,333	2,285	2,068	2,188	2,164
P-0-0-4						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	3,064	2,995	2,967	5,480	3,037	2,966
- Min Latency (micsec)	2,262	2,751	2.743	2,751	2,767	2,751
- Max Latency (micsec)	7,939	7,298	6,039	12,565	5,365	5,253
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,002	0,000	0,000	0,000	0,000
` '					2,188	
- Max Jitter (micsec)	2,549	2,140	2,309	2,140	2,100	2,285
P-0-0-5	00 505 544	10 705 000	11 001 157	0.454.400	0.000.000	0.700.055
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	3,320	3,497	2,976	29,964	3,020	2,971
- Min Latency (micsec)	2,262	2,727	2,719	2,727	2,767	2,727
- Max Latency (micsec)	7,626	8,212	5,245	61,901	5,606	5,109
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,573	2,140	2,429	2,068	2,405	2,188
P-0-2-0	2,010	2,140	2,720	2,000	2,400	2,100
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6 454 400	2 200 006	2 722 255
				6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	2,944	3,614	2,303	41,135	2,338	2,291
- Min Latency (micsec)	1,589	2,054	2,046	2,054	2,070	2,054
- Max Latency (micsec)	7,049	7,394	4,956	75,347	4,812	4,604
- Avg Jitter (micsec)	0,003	0,002	0,008	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,766	2,261	2,237	2,044	2,405	2,261
P-0-2-1	,	, -	, -	,-	,	, -
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
· · /	3,336	3,914	2,307	25,672	2,348	2,291
- Avg Latency (micsec)						
- Min Latency (micsec)	1,589	2,054	2,046	2,054	2,094	2,054
- Max Latency (micsec)	8,252	8,717	5,173	48,863	4,668	4,700
- Avg Jitter (micsec)	0,003	0,002	0,008	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,621	2,140	2,525	2,164	2,309	2,573
P-0-2-2						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	3,417	3,836	2,329	19,504	2,364	2,289
- Min Latency (micsec)	1,613	2,054	2,046	2,270	2,094	2,054
- Max Latency (micsec)	8,997	7,562	5,389	55,622	4,764	4,531
- Avg Jitter (micsec)	0,003	0,002	0,008	0,002	0,003	0,005
- Min Jitter (micsec)	0,000	0,002	0,000	0,000	0,000	0,000
, ,						
- Max Jitter (micsec)	2,549	2,140	2,237	2,164	2,501	2,285
P-0-2-3						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	3,348	4,082	2,340	47,421	2,366	2,271
- Min Latency (micsec)	1,589	2,054	2,046	2,270	2,094	2,054
- Max Latency (micsec)	7,193	8,789	4,908	96,635	4,788	4,652
- Avg Jitter (micsec)	0,003	0,002	0,008	0,002	0,003	0,006
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,549	2,116	2,237	2,044	2,309	2,333
	2,048	۷,110	۷,۷۵۱	۷,044	۷,309	۷,۵۵۵
P-0-2-4	00 505 544	40 705 000	44.004.457	0.454.400	2 200 202	0.700.055
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	3,761	4,455	2,361	52,816	2,381	2,273
- Min Latency (micsec)	1,589	2,078	2,046	2,294		2,078



- Max Latency (micsec) - Avg Jitter (micsec)	7,410 0,003	9,029 0,002	4,932 0,010	86,965 0,002	4,620 0,003	4,724 0,006
- Min Jitter (micsec)	0,000	0,002	0,000	0,002	0,000	0,000
- Max Jitter (micsec)	2,742	2,237	2,333	2,164	2,212	2,549
P-0-2-5	2,142	2,231	2,333	2,104	2,212	2,043
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	4,508	4,578	2,354	65,712	2,369	2,271
- Min Latency (micsec)	1,589	2,054	2,046	2,294	2,094	2,054
- Max Latency (micsec)	9,238	8,957	5,173	118,139	4,836	4,435
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,003	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,333	2,116	2,212	2,140	2,285	2,285
P-0-4-0						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	4,841	4,652	2,448	78,895	2,487	2,376
- Min Latency (micsec)	1,717	2,182	2,150	2,495	2,198	2,158
- Max Latency (micsec)	9,342	9,470	5,061	146,194	6,432	4,780
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,006
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,525	2,044	2,212	2,164	2,501	2,405
P-0-4-1	00 505 544	40 705 000	44.004.457	0.454.400	0.000.000	0.700.055
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M 657.530	831,25 M	915,62 M	943,75 M 112.997	943,75 M
- Rx Rate (Fps)	986.517		376.472	215.137		90.745
- Avg Latency (micsec) - Min Latency (micsec)	4,721 1,669	5,879 2,158	2,435 2.150	90,492 2,495	2,484 2,198	2,364 2,158
- Max Latency (micsec)	9,198	12,213	4,892	179,004	4,892	4,804
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,002	0,000	0,000
- Max Jitter (micsec)	2,140	2,140	2,309	2,068	2,309	2,549
P-0-4-2	_,	_,	_,,,,,	2,000	2,000	_,0.0
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	4,572	5,548	2,465	121,563	2,498	2,381
- Min Latency (micsec)	1,693	2,182	2,150	2,230	2,222	2,158
- Max Latency (micsec)	10,449	12,453	4,796	227,522	5,181	4,708
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,549	2,140	2,212	2,140	2,477	2,285
P-0-4-3	00 -011	40 -05 000		0.454.400		
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec) - Min Latency (micsec)	4,888 1,717	6,678 2,206	2,466 2,174	106,822	2,504 2,222	2,403 2,182
- Max Latency (micsec)		12,742	4,796	2,254 230,600	5,036	4,684
- Avg Jitter (micsec)	9,511 0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,002	0,000	0,002	0,000	0,003
- Max Jitter (micsec)	2,116	2,044	2,309	2,164	2,501	2,261
P-0-4-4	2,110	2,044	2,000	2,104	2,001	2,201
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	4,165	6,374	2,445	113,184	2,490	2,370
- Min Latency (micsec)	1,717	2,182	2,150	2,230	2,222	2,158
- Max Latency (micsec)	8,548	12,525	5,085	240,102	4,772	4,780
- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,237	2,140	2,212	2,068	2,405	2,261
P-0-4-5						
- Rx (Frames)	29.595.511	19.725.902	11.294.157	6.454.123	3.389.906	2.722.355
- Rx Rate (L1) (Bit/s)	662,94 M	778,52 M	831,25 M	915,62 M	943,75 M	943,75 M
- Rx Rate (Fps)	986.517	657.530	376.472	215.137	112.997	90.745
- Avg Latency (micsec)	4,046	5,115	2,451	106,006	2,519	2,396
- Min Latency (micsec)	1,765	2,206	2,174	2,278	2,246	2,206
- Max Latency (micsec)	10,617	9,591	4,676	221,724	5,157	4,780



- Avg Jitter (micsec)	0,003	0,002	0,010	0,002	0,004	0,005
- Min Jitter (micsec)	0,000	0,000	0,000	0,000	0,000	0,000
- Max Jitter (micsec)	2,212	2,116	2,405	2,116	2,285	2,453

Frame Size	1518
Result State	PASS
Iter.#	1
Tx Rate (Percent)	94,375 %
Tx (Frames)	2.301.080
Tx Rate (L1) (Bit/s)	943,75 M
Tx Rate (Fps)	76.703
Loss Rate (Percent)	0 %
Loss (Frames)	0
P-0-0-1	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,912
- Min Latency (micsec)	2,735
- Max Latency (micsec)	5,189
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,333
P-0-0-2	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,929
- Min Latency (micsec)	2,735
- Max Latency (micsec)	5,333
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,381
P-0-0-3	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,924
- Min Latency (micsec)	2,711
- Max Latency (micsec)	5,020
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,188
P-0-0-4	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,966
- Min Latency (micsec)	2,735
- Max Latency (micsec)	5,069
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,188
P-0-0-5	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,966
- Min Latency (micsec)	2,735
- Max Latency (micsec)	5,045
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,188
P-0-2-0	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,284
- Min Latency (micsec)	2,038
- Max Latency (micsec)	4,515



According to the second	0.000
- Avg Jitter (micsec) - Min Jitter (micsec)	0,003
- Max Jitter (micsec)	2,164
P-0-2-1	2,104
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,284
- Min Latency (micsec)	2,038
- Max Latency (micsec)	4,395
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,212
P-0-2-2	0.004.000
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,299
- Min Latency (micsec)	2,062 4,347
- Max Latency (micsec)	0,003
- Avg Jitter (micsec) - Min Jitter (micsec)	0,003
- Max Jitter (micsec)	2,212
P-0-2-3	۷,۷۱۷
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,302
- Min Latency (micsec)	2,062
- Max Latency (micsec)	4,539
- Avg Jitter (micsec)	0,002
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,164
P-0-2-4	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,311
- Min Latency (micsec)	2,062
- Max Latency (micsec)	4,347
- Avg Jitter (micsec)	0,002
- Min Jitter (micsec)	0,000
- Max Jitter (micsec) P-0-2-5	2,140
	2.301.080
- Rx (Frames) - Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,297
- Min Latency (micsec)	2,062
- Max Latency (micsec)	4,515
- Avg Jitter (micsec)	0,002
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,188
P-0-4-0	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,391
- Min Latency (micsec)	2,166
- Max Latency (micsec)	4,716
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,237
P-0-4-1	0.007.55
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,371
- Min Latency (micsec)	2,166 4,620
	4 6.30
- Max Latency (micsec) - Avg Jitter (micsec)	0,003



- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,188
P-0-4-2	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
<ul> <li>Avg Latency (micsec)</li> </ul>	2,375
- Min Latency (micsec)	2,166
- Max Latency (micsec)	4,644
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,333
P-0-4-3	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,381
- Min Latency (micsec)	2,214
- Max Latency (micsec)	4,692
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,381
P-0-4-4	
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,351
- Min Latency (micsec)	2,190
- Max Latency (micsec)	4,475
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,140
P-0-4-5	·
- Rx (Frames)	2.301.080
- Rx Rate (L1) (Bit/s)	943,75 M
- Rx Rate (Fps)	76.703
- Avg Latency (micsec)	2,387
- Min Latency (micsec)	2,214
- Max Latency (micsec)	4,644
- Avg Jitter (micsec)	0,003
- Min Jitter (micsec)	0,000
- Max Jitter (micsec)	2,212
	_,



