

Valkyrie2889 Test Report

Test Summary

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2021-07-30, 04:26 Test Duration: 12:27:15 (h:m:s)

Generated By: Valkyrie2889 v1.40, running on 'Microsoft Windows 8.1 Enterprise Evaluation'

Comments: Test with 1 WRS

software: Valkyrie2889 v1.40chassis: Xenabay (140.181.139.228)

- configuration: https://github.com/GSI-CS-CO/network_testing - WRS: backplane v3.30, scb v3.4, gw v6.0, fw v6.0.1, Creotech

Test Setup

Test Configuration

Subtest Selection

Rate Test: Full Mesh Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, 1:N Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, N->N Enabled
- Throughput Enabled
- Forwarding Enabled

Congestion Control: Enabled
Forward Pressure: Enabled
Maximum Forwarding Rate: Enabled
Address Caching Capacity: Enabled
Address Learning Rate: Enabled
Errored Frames Filtering: Enabled
Broadcast Forwarding: Enabled

Test Options

Packet Sizes Used: 64,128,256,512,1024,1280,1518

Rate Type: Fraction
Fraction per Port: 100.00%

Latency Measurement Mode: Last-To-Last
Toggle Port Sync States: Yes

Traffic Configuration

Used Chassis

Chassis ID	Chassis Name	Address
C-0	New chassis	140.181.139.228:2260



Used Ports

Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



Rate Test: Full Mesh Results

Test Setup

Duration: 30 seconds

Iteration: 1

Topology: Mesh Direction: Bidirectional

Throughput Options

Initial Rate: 10.00%
Maximum Rate: 100.00%
Minimum Rate: 10.00%
Resolution: 0.50%

Used Ports

Port ID
P-0-0-0
P-0-0-1
P-0-0-2
P-0-0-3
P-0-0-4
P-0-0-5
P-0-2-0
P-0-2-1
P-0-2-2
P-0-2-3
P-0-2-4
P-0-2-5
P-0-4-0
P-0-4-1
P-0-4-2
P-0-4-3
P-0-4-4
P-0-4-5

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,269	815,215	422,923	215,516	173,074
Rx Rate (Percent)	7.61 %	7.72 %	7.73 %	7.83 %	7.78 %	7.75 %
Rx Rate (L1) (Bit/s)	1.37 G	1.39 G	1.39 G	1.41 G	1.4 G	1.39 G
Rx Rate (Fps)	2.04 M	1.17 M	630.05 K	331.11 K	167.63 K	134.09 K
Loss Rate (Percent)	23.86 %	22.78 %	22.71 %	21.71 %	22.22 %	22.52 %
Loss (Frames)	19,170,177	10,389,667	5,555,019	2,754,352	1,436,561	1,169,367
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	2,997,798	1,685,192	1,056,724	555,888	282,602	221,600
- Rx Rate (L1) (Bit/s)	67.15 M	66.51 M	77.77 M	78.86 M	78.68 M	76.82 M
- Rx Rate (Fps)	99,927	56,173	35,224	18,530	9,420	7,387
- Flood Count (Frames)	57	58	60	64	61	61
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,456,257	1,986,217	1,057,103	555,651	242,414	225,177
- Rx Rate (L1) (Bit/s)	77.42 M	78.39 M	77.8 M	78.83 M	67.49 M	78.06 M
- Rx Rate (Fps)	115,209	66,207	35,237	18,522	8,080	7,506



9,615 224,994 78 M 7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M
100 M 9,615 224,994 78 M 7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
9,615 224,994 78 M 7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
224,994 78 M 7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
78 M 7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
7,500 59 288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
288,456 100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
100 M 9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
9,615 225,843 78.29 M 7,528 62 288,456 100 M 9,615
225,843 78.29 M 7,528 62 288,456 100 M 9,615
78.29 M 7,528 62 288,456 100 M 9,615
7,528 62 288,456 100 M 9,615
62 288,456 100 M 9,615
288,456 100 M 9,615
100 M 9,615
100 M 9,615
9,615
225,344
78.12 M
7,511
61
288,456
100 M
9,615
225,525
78.18 M
7,518
27
288,456
100 M
9,615
224,725
77.9 M
7,491
59
288,456
100 M
9,615
199,857
69.28 M
6,662
62
288,456
100 M
9,615
221,166
76.67 M
7,372
65
288,456
200,430 100 M
9,615
225,569
78.2 M
7,519
7,519 59
7,519 59 288,456
7,519 59 288,456 100 M
7,519 59 288,456



- Rx Rate (Fps)	115,116	60,751	31,755	18,530	9,201	7,518
- Flood Count (Frames)	58	61	56	62	62	60
P-0-2-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,454,603	1,986,498	1,057,260	556,717	282,677	225,251
- Rx Rate (L1) (Bit/s)	77.38 M	78.4 M	77.81 M	78.98 M	78.7 M	78.09 M
- Rx Rate (Fps)	115,153	66,217	35,242	18,557	9,423	7,508
- Flood Count (Frames)	59	59	60	62	66	61
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,455,626	1,989,240	1,056,957	555,876	282,277	225,852
- Rx Rate (L1) (Bit/s)	77.41 M	78.51 M	77.79 M	78.86 M	78.59 M	78.3 M
- Rx Rate (Fps)	115,188	66,308	35,232	18,529	9,409	7,528
- Flood Count (Frames)	59	59	57	58	58	57
P-0-4-1			0.			<u> </u>
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,455,296	1,987,459	1,055,434	555,991	281,984	225,786
- Rx Rate (L1) (Bit/s)	77.4 M	78.44 M	77.68 M	78.88 M	78.5 M	78.27 M
- Rx Rate (Fps)	115,177	66,249	35,181	18,533	9,399	7,526
- Flood Count (Frames)	60	59	56	56	59	57
P-0-4-2	00	39	30	30	39	- 51
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	1,556,691 100 M	100 M	100 M	200,430 100 M
- Tx Rate (Er) (Blus)	148,810	84,459	45,290	23.496	11,973	9,615
- Rx (Frames)	3,457,133	1,988,585	1,055,486	556,711	281,521	225,690
	77.44 M			78.98 M		78.24 M
- Rx Rate (L1) (Bit/s)		78.48 M	77.68 M		78.38 M	
- Rx Rate (Fps)	115,238 58	66,286	35,183 57	18,557 54	9,384 56	7,523
- Flood Count (Frames)	56	56	3/	54	30	55
P-0-4-3	4 404 005	0.500.700	4.050.004	704.074	050.400	000.450
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,456,803	1,983,921	1,057,162	556,711	282,751	225,076
- Rx Rate (L1) (Bit/s)	77.43 M	78.3 M	77.81 M	78.98 M	78.72 M	78.03 M
- Rx Rate (Fps)	115,227	66,131	35,239	18,557	9,425	7,503
- Flood Count (Frames)	56	59	57	58	57	61
P-0-4-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,454,699	1,986,600	1,055,952	556,640	282,738	224,628
- Rx Rate (L1) (Bit/s)	77.39 M	78.4 M	77.72 M	78.97 M	78.71 M	77.87 M
- Rx Rate (Fps)	115,157	66,220	35,198	18,555	9,425	7,488
- Flood Count (Frames)	60	62	57	56	57	54
P-0-4-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,455,513	1,985,548	1,056,228	556,465	282,936	225,227
- Rx Rate (L1) (Bit/s)	77.4 M	78.36 M	77.74 M	78.94 M	78.77 M	78.08 M
- Rx Rate (Fps)	115,184	66,185	35,208	18,549	9,431	7,508
- Flood Count (Frames)	59	58	61	60	58	53

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,288
Rx Rate (Percent)	7.65 %
Rx Rate (L1) (Bit/s)	1.38 G
Rx Rate (Fps)	111.84 K
Loss Rate (Percent)	23.55 %
Loss (Frames)	1,033,404



P-0-0-0	242 914
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	177,789
- Rx Rate (L1) (Bit/s)	72.92 M
- Rx Rate (Fps)	5,926 58
- Flood Count (Frames) P-0-0-1	36
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,864
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	77.46 M 6,295
- Flood Count (Frames)	59
P-0-0-2	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames) - Rx Rate (L1) (Bit/s)	189,174 77.59 M
- Rx Rate (Fps)	6,306
- Flood Count (Frames)	57
P-0-0-3	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps) - Rx (Frames)	8,127 170,304
- Rx Rate (L1) (Bit/s)	69.85 M
- Rx Rate (Fps)	5,677
- Flood Count (Frames)	61
P-0-0-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127
- Rx (Frames)	179,530
- Rx Rate (L1) (Bit/s)	73.63 M
- Rx Rate (Fps)	5,984
- Flood Count (Frames)	63
P-0-0-5	242 014
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	189,735
- Rx Rate (L1) (Bit/s)	77.82 M
- Rx Rate (Fps)	6,325
- Flood Count (Frames) P-0-2-0	29
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	189,380
- Rx Rate (L1) (Bit/s)	77.67 M
- Rx Rate (Fps) - Flood Count (Frames)	6,313 59
P-0-2-1	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	186,965 76.68 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6,232
- Flood Count (Frames)	58
P-0-2-2	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
Tx Pata (E.)	
- Tx Rate (Fps)	8,127
- Tx Rate (Fps) - Rx (Frames)	8,127 189,617
- Tx Rate (Fps)	8,127




- Flood Count (Frames)	62
P-0-2-3	02
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	187,631
- Rx Rate (L1) (Bit/s)	76.95 M
- Rx Rate (Fps)	6,254
- Flood Count (Frames)	60
P-0-2-4	00
	242 014
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814
	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,860
- Rx Rate (L1) (Bit/s)	77.46 M
- Rx Rate (Fps)	6,295
- Flood Count (Frames)	62
P-0-2-5	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	186,474
- Rx Rate (L1) (Bit/s)	76.48 M
- Rx Rate (Fps)	6,216
- Flood Count (Frames)	59
P-0-4-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	190,803
- Rx Rate (L1) (Bit/s)	78.25 M
- Rx Rate (Fps)	6,360
- Flood Count (Frames)	55
P-0-4-1	
	2/2 91/
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,282
- Rx Rate (L1) (Bit/s)	77.22 M
- Rx Rate (Fps)	6,276
- Flood Count (Frames)	58
P-0-4-2	0.000.1
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	186,788
- Rx Rate (L1) (Bit/s)	76.61 M
- Rx Rate (Fps)	6,226
- Flood Count (Frames)	58
P-0-4-3	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	187,890
- Rx Rate (L1) (Bit/s)	77.06 M
- Rx Rate (Fps)	6,263
- Flood Count (Frames)	58
P-0-4-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	188,997
- Rx (Frames) - Rx Rate (L1) (Bit/s)	
	77.51 M
- Rx Rate (Fps)	6,300
- Flood Count (Frames)	58
P-0-4-5	040.04
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,165
- Rx Rate (L1) (Bit/s)	77.17 M



- Rx Rate (Fps)	6,272
- Flood Count (Frames)	61

Note: One or more of the rate tests did not pass the test criteria!

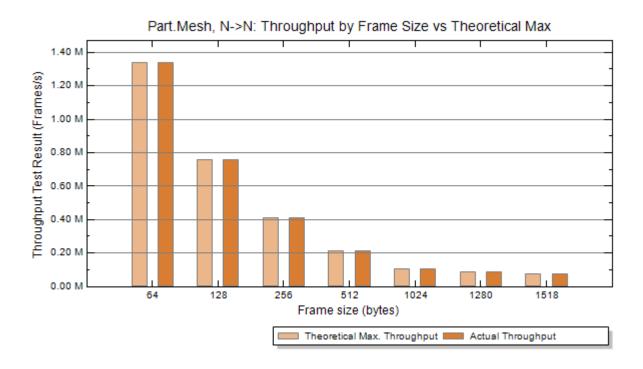

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,269	815,215	422,923	215,516	173,074
Rx Rate (Percent)	7.75 %	7.87 %	7.77 %	7.9 %	7.86 %	7.98 %
Rx Rate (L1) (Bit/s)	1.4 G	1.42 G	1.4 G	1.42 G	1.41 G	1.44 G
Rx Rate (Fps)	2.08 M	1.2 M	633.47 K	334.26 K	169.29 K	138.13 K
Loss Rate (Percent)	22.48 %	21.33 %	22.29 %	20.96 %	21.45 %	20.19 %
Loss (Frames)	18,061,901	9,726,911	5,452,386	2,659,744	1,386,825	1,048,372
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,489,429	1,984,907	939,004	559,385	281,490	231,551
- Rx Rate (L1) (Bit/s)	78.16 M	78.34 M	69.11 M	79.36 M	78.37 M	80.27 M
- Rx Rate (Fps)	116,314	66,164	31,300	18,646	9,383	7,718
- Flood Count (Frames)	62	61	62	79	68	56
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,490,777	1,993,083	962,316	484,817	287,445	223,012
- Rx Rate (L1) (Bit/s)	78.19 M	78.66 M	70.83 M	68.78 M	80.02 M	77.31 M
- Rx Rate (Fps)	116,359	66,436	32,077	16,161	9,582	7,434
- Flood Count (Frames)	62	65	71	60	61	60
P-0-0-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,491,591	1,970,968	1,080,093	572,540	285,786	224,322
- Rx Rate (L1) (Bit/s)	78.21 M	77.79 M	79.49 M	81.22 M	79.56 M	77.76 N
- Rx Rate (Fps)	116,386	65,699	36,003	19,085	9,526	7,477
- Flood Count (Frames)	65	71	63	60	61	60
P-0-0-3					0-0 100	
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,434	1,994,590	1,063,236	563,123	285,600	231,841
- Rx Rate (L1) (Bit/s)	78.25 M	78.72 M	78.25 M	79.89 M	79.51 M	80.37 M
- Rx Rate (Fps)	116,448	66,486	35,441	18,771	9,520	7,728
- Flood Count (Frames)	63	66	73	72	63	73
P-0-0-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,218	2,003,195	1,072,509	486,910	259,773	231,586
- Rx Rate (L1) (Bit/s)	78.25 M	79.06 M	78.94 M	69.08 M	72.32 M	80.28 M
- Rx Rate (Fps)	116,441	66,773	35,750	16,230	8,659	7,720
- Flood Count (Frames)	64	58	61	61	60	62
P-0-0-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,492,768	2.004.944	907,063	561,892	280,221	230,665
- Rx Rate (L1) (Bit/s)	78.24 M	79.13 M	66.76 M	79.71 M	78.01 M	79.96 M
- Rx Rate (Fps)	116,426	66,831	30,235	18,730	9,341	7,689
- Flood Count (Frames)	29	26	28	29	27	30
P-0-2-0	29	20	20	29	21	30
	4 404 005	0.500.700	4.050.004	704.074	250 402	200 450
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,776	1,992,956	1,071,414	562,830	283,516	232,684
- Rx Rate (L1) (Bit/s)	78.26 M	78.66 M	78.86 M	79.85 M	78.93 M	80.66 M
- Rx Rate (Fps)	116,459	66,432	35,714	18,761	9,451	7,756
- Flood Count (Frames)	65	61	62	59	64	63
P-0-2-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,177,522	2,001,834	1,053,597	561,542	282,005	231,335
- Rx Rate (L1) (Bit/s)	71.18 M	79.01 M	77.54 M	79.66 M	78.51 M	80.2 M
- Rx Rate (Fps)	105,917	66,728	35,120	18,718	9,400	7,711
- Flood Count (Frames)	61	64	64	59	61	59
P-0-2-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,490,255	1,982,593	1,078,900	552,992	287,272	230,839
- Rx Rate (L1) (Bit/s)	78.18 M	78.25 M	79.41 M	78.45 M	79.98 M	80.02 M
- Rx Rate (Fps)	116,342	66,086	35,963	18,433	9,576	7,695
- Flood Count (Frames)	63	59	63	61	62	64
P-0-2-3				01		<u> </u>
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359.193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
	148,810		45,290	23,496	11,973	9,615
- Tx Rate (Fps)		84,459	1,076,443			
- Rx (Frames)	3,245,420	1,994,765		566,084	265,969	229,902
- Rx Rate (L1) (Bit/s)	72.7 M	78.73 M	79.23 M	80.31 M	74.05 M	79.7 M
- Rx Rate (Fps)	108,181	66,492	35,881	18,869	8,866	7,663
- Flood Count (Frames)	63	62	62	61	63	64
P-0-2-4	4 404 60=	0.500.500	4.050.001	704.074	050 460	000 :==
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,490,838	1,996,173	1,069,361	569,078	284,839	231,001
- Rx Rate (L1) (Bit/s)	78.19 M	78.78 M	78.7 M	80.73 M	79.3 M	80.08 M
- Rx Rate (Fps)	116,361	66,539	35,645	18,969	9,495	7,700
- Flood Count (Frames)	64	64	60	61	59	62
P-0-2-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,490,418	1,998,424	1,067,118	568,643	288,536	229,977
- Rx Rate (L1) (Bit/s)	78.19 M	78.87 M	78.54 M	80.67 M	80.33 M	79.73 M
- Rx Rate (Fps)	116,347	66,614	35,571	18,955	9,618	7,666
- Flood Count (Frames)	62	61	61	60	62	59
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,068	2,004,154	1,086,659	563,055	284,237	231,575
- Rx Rate (L1) (Bit/s)	78.24 M	79.1 M	79.98 M	79.88 M	79.13 M	80.28 M
- Rx Rate (Fps)	116,436	66,805	36,222	18,769	9,475	7,719
- Flood Count (Frames)	55	59	59	58	56	58
P-0-4-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,391	1,993,605	1,079,368	570,922	285,601	232,520
- Rx Rate (L1) (Bit/s)	78.25 M	78.68 M	79.44 M	80.99 M	79.51 M	80.61 M
- Rx Rate (Fps)	116,446	66,454	35,979	19,031	9,520	7,751
- Flood Count (Frames)	58	57	57	59	59	57
P-0-4-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,564	1,993,529	1,096,169	572,482	283,144	230,206
- Rx Rate (L1) (Bit/s)	78.26 M	78.68 M	80.68 M	81.22 M	78.83 M	79.8 M
- Rx Rate (Fps)	116,452	66,451	36,539	19,083	9,438	7,674
- Flood Count (Frames)	57	61	61	59	58	57
P-0-4-3						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,492,108	1,984,487	1,099,293	569,565	285,275	229,072
- Rx Rate (L1) (Bit/s)	78.22 M	78.32 M	80.91 M	80.8 M	79.42 M	79.41 M
- Rx Rate (Fps)	116,404	66,150	36,643	18,986	9,509	7,636
- Flood Count (Frames)	56	60	59	59	59	59
P-0-4-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,493,377	1,992,785	1,099,095	573,502	282,793	230,639
- Rx Rate (L1) (Bit/s)	78.25 M	78.65 M	80.89 M	81.36 M	78.73 M	79.95 M
- Rx Rate (Fps)	116,446	66,426	36,637	19,117	9,426	7,688
- Flood Count (Frames)	58	59	57	63	59	60
P-0-4-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,490,275	1,994,173	1,102,414	568,572	285,147	231,109
- Rx Rate (L1) (Bit/s)	78.18 M	78.7 M	81.14 M	80.66 M	79.38 M	80.12 M
- Rx Rate (Fps)	116,343	66,472	36,747	18,952	9,505	7,704
- Flood Count (Frames)	64	57	61	61	60	61

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,288
Rx Rate (Percent)	7.98 %
Rx Rate (L1) (Bit/s)	1.44 G
Rx Rate (Fps)	116.77 K
Loss Rate (Percent)	20.18 %
Loss (Frames)	885,577
P-0-0-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	194,380
- Rx Rate (L1) (Bit/s)	79.72 M
- Rx Rate (Fps) - Flood Count (Frames)	6,479
P-0-0-1	- 00
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	193,971
- Rx Rate (L1) (Bit/s)	79.55 M
- Rx Rate (Fps)	6,466
- Flood Count (Frames) P-0-0-2	65
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	194,632
- Rx Rate (L1) (Bit/s)	79.83 M
- Rx Rate (Fps)	6,488
- Flood Count (Frames)	61
P-0-0-3	042 044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M
- Tx Rate (LT) (Bibs)	8,127
- Rx (Frames)	196,857
- Rx Rate (L1) (Bit/s)	80.74 M
- Rx Rate (Fps)	6,562
- Flood Count (Frames)	62
P-0-0-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames) - Rx Rate (L1) (Bit/s)	187,810 77.03 M
- Rx Rate (Fps)	6,260
- Flood Count (Frames)	70
P-0-0-5	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	194,959 79.96 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6,499
- Flood Count (Frames)	24
P-0-2-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	194,996
- Rx Rate (L1) (Bit/s)	79.97 M
- Rx Rate (Fps) - Flood Count (Frames)	6,500 63
P-0-2-1	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	195,637
- Rx Rate (L1) (Bit/s)	80.24 M
- Rx Rate (Fps)	6,521
- Flood Count (Frames) P-0-2-2	62
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	196,695
- Rx Rate (L1) (Bit/s)	80.67 M
- Rx Rate (Fps)	6,557
- Flood Count (Frames)	62
P-0-2-3	040.044
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M



(_ \	
- Tx Rate (Fps)	8,127
- Rx (Frames)	192,793
- Rx Rate (L1) (Bit/s)	79.07 M
- Rx Rate (Fps)	6,426
- Flood Count (Frames)	62
P-0-2-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	195,202
- Rx Rate (L1) (Bit/s)	80.06 M
- Rx Rate (Fps)	6,507
- Flood Count (Frames)	70
P-0-2-5	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	195,558
- Rx Rate (L1) (Bit/s)	80.2 M
- Rx Rate (Fps)	6,519
- Flood Count (Frames)	62
P-0-4-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	193,343
- Rx Rate (L1) (Bit/s)	79.3 M
- Rx Rate (Fps)	6,445
- Flood Count (Frames)	59
P-0-4-1	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	195,929
- Rx Rate (L1) (Bit/s)	80.36 M
- Rx Rate (Fps)	6,531
- Flood Count (Frames)	60
P-0-4-2	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	193,441
- Rx Rate (L1) (Bit/s)	79.34 M
- Rx Rate (Fps)	6,448
- Flood Count (Frames)	59
P-0-4-3	
- Tx (Frames)	
- TX (Frames)	243,814
- Tx Rate (L1) (Bit/s)	243,814 100 M
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 197,190
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 197,190 80.87 M 6,573
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	100 M 8,127 197,190 80.87 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4	100 M 8,127 197,190 80.87 M 6,573 61
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames)	100 M 8,127 197,190 80.87 M 6,573 61
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Ry Rate (Fps) - Flood Count (Frames)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Ry Rate (Fps) - Flood Count (Frames) P-0-4-5	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M 8,127 193,112
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 197,190 80.87 M 6,573 61 243,814 100 M 8,127 196,570 80.62 M 6,552 58 243,814 100 M 8,127 193,112 79.2 M



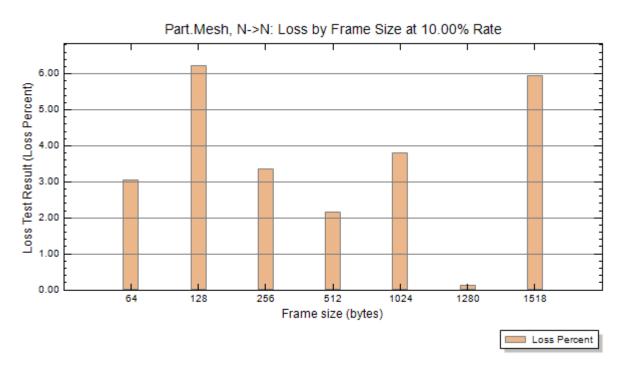

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,142	3,040,538	1,630,429	845,855	431,032	346,147
Rx Rate (Percent)	0.36 %	12.51 %	12.56 %	12.6 %	12.7 %	12.76 %
Rx Rate (L1) (Bit/s)	64.75 M	2.25 G	2.26 G	2.27 G	2.29 G	2.3 G
Rx Rate (Fps)	96.35 K	1.9 M	1.02 M	532.91 K	273.6 K	220.78 K
Loss Rate (Percent)	98.2 %	37.43 %	37.21 %	37 %	36.52 %	36.22 %
Loss (Frames)	157,823,685	34,144,608	18,202,546	9,388,425	4,722,824	3,761,117
P-0-0-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	203,359	3,175,036	1,709,152	893,862	454,376	352,671
- Rx Rate (L1) (Bit/s)	4.56 M	125.31 M	125.79 M	126.81 M	126.5 M	122.26 M
- Rx Rate (Fps)	6,779	105,835	56,972	29,795	15,146	11,756
- Flood Count (Frames)	61	59	63	60	60	63
P-0-0-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	205,205	3,167,741	1,707,129	892,074	453,494	368,186
- Rx Rate (L1) (Bit/s)	4.6 M	125.02 M	125.64 M	126.56 M	126.25 M	127.64 M
- Rx Rate (Fps)	6,840	105,591	56,904	29,736	15,116	12,273
- Flood Count (Frames)	61	58	59	59	58	60
P-0-0-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	174,223	3,166,267	1,704,652	890,510	454,601	371,298
- Rx Rate (L1) (Bit/s)	3.9 M	124.96 M	125.46 M	126.33 M	126.56 M	128.72 M
- Rx Rate (Fps)	5,807	105,542	56,822	29,684	15,153	12,377
- Flood Count (Frames)	61	57	60	59	62	60
P-0-0-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	145,765	3,153,735	1,685,036	892,149	456,854	366,818



- Rx Rate (L1) (Bit/s)	3.27 M	124.47 M	124.02 M	126.57 M	127.19 M	127.16 M
- Rx Rate (Fps)	4,859	105,125	56,168	29,738	15,228	12,227
- Flood Count (Frames)	63	62	60	60	62	59
P-0-0-4			2 - 1 - 222			
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,298	3,040,943	1,698,094	893,222	456,896	369,256
- Rx Rate (L1) (Bit/s)	185.88 K	120.02 M	124.98 M	126.72 M	127.2 M	128.01 M
- Rx Rate (Fps)	277	101,365	56,603	29,774	15,230	12,309
- Flood Count (Frames)	60	57	61	59	58	60
P-0-0-5			2 - 1 - 222	4 400 ==0		
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,230	3,154,216	1,694,566	892,737	455,970	368,771
- Rx Rate (L1) (Bit/s)	184.35 K	124.49 M	124.72 M	126.65 M	126.94 M	127.84 M
- Rx Rate (Fps)	274	105,141	56,486	29,758	15,199	12,292
- Flood Count (Frames)	31	24	31	25	29	33
P-0-2-0			2 - 1 - 222			
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,157	3,099,635	1,697,227	890,825	455,721	369,908
- Rx Rate (L1) (Bit/s)	182.72 K	122.33 M	124.92 M	126.38 M	126.87 M	128.23 M
- Rx Rate (Fps)	272	103,321	56,574	29,694	15,191	12,330
- Flood Count (Frames)	60	59	61	62	58	59
P-0-2-1			2 - 1 - 222			
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	90,920	3,174,066	1,679,890	890,596	456,485	369,363
- Rx Rate (L1) (Bit/s)	2.04 M	125.27 M	123.64 M	126.35 M	127.09 M	128.05 M
- Rx Rate (Fps)	3,031	105,802	55,996	29,687	15,216	12,312
- Flood Count (Frames)	60	59	59	61	54	60
P-0-2-2			2 - 1 - 222	4 400 ==0	- 10 000	
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	204,522	3,165,237	1,704,856	893,172	456,509	371,178
- Rx Rate (L1) (Bit/s)	4.58 M	124.92 M	125.48 M	126.71 M	127.09 M	128.68 M
- Rx Rate (Fps)	6,817	105,508	56,829	29,772	15,217	12,373
- Flood Count (Frames)	61	55	60	59	62	59
P-0-2-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	204,043	3,174,851	1,707,550	844,262	456,520	369,224
- Rx Rate (L1) (Bit/s)	4.57 M	125.3 M	125.68 M	119.77 M	127.1 M	128 M
- Rx Rate (Fps)	6,801	105,828	56,918	28,142	15,217	12,307
- Flood Count (Frames)	59	58	60	61	61	61
P-0-2-4						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	204,336	3,179,353	1,705,663	866,550	456,877	358,675
- Rx Rate (L1) (Bit/s)	4.58 M	125.48 M	125.54 M	122.93 M	127.19 M	124.34 M
- Rx Rate (Fps)	6,811	105,978	56,855	28,885	15,229	11,956
- Flood Count (Frames)	62	59	59	56	63	59
P-0-2-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	204,782	3,139,158	1,707,421	891,053	458,058	369,404
- Rx Rate (L1) (Bit/s)	4.59 M	123.89 M	125.67 M	126.41 M	127.52 M	128.06 M
- Rx Rate (Fps)	6,826	104,639	56,914	29,702	15,269	12,313
- Flood Count (Frames)	61	58	61	59	59	57
P-0-4-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230



-Rx Rate (Fps) 6,824 105,560 57,339 29,740 15,197 12,43 -Flood Count (Frames) 60 61 58 57 57 57 -Flood Count (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 -Fx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 -Fx (Frames) 204,685 3,222,387 1,719,107 883,405 457,111 367,71 -Fx (Frames) 204,685 3,222,387 1,719,107 883,405 457,111 367,71 -Fx Rate (L1) (Bit/s) 4,58 M 127,18 M 126,53 M 126,74 M 127,28 M 127,48 -Fx Rate (Fps) 6,822 107,413 57,304 29,780 15,240 12,25 -Flood Count (Frames) 61 59 56 56 57 -Fx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 -Fx Rate (L1) (Bit/s) 200 M 200	- Rx (Frames)	204,716	3,166,801	1,720,167	892,212	455,910	372,900
-Flood Count (Frames) 60 61 58 57 57 57 58 69-0-4-1 -Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 -Tx Rate (L1) (Bil/s) 200 M 20	- Rx Rate (L1) (Bit/s)	4.59 M	124.98 M	126.6 M	126.58 M	126.93 M	129.27 M
P-0-4-1	- Rx Rate (Fps)	6,824	105,560	57,339		15,197	12,430
- Tx (Frames)	- Flood Count (Frames)	60	61	58	57	57	56
- Tx Rate (L1) (Bit/s)	P-0-4-1						
- TX Rate (Fps)		8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
-Rx (Frames)	- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Rx Rate (L1) (Bit/s)	- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
Rx Rate (Fps) 6,822 107,413 57,304 29,780 15,240 12,25 Flood Count (Frames) 61 59 56 56 57 Flood Count (Frames) 61 59 56 56 57 Flood Count (Frames) 61 59 56 56 57 Flood Count (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 Tx Rate (LT) (Bit/s) 200 M 200	- Rx (Frames)	204,652	3,222,387	1,719,107	893,405	457,191	367,717
-Flood Count (Frames) 61 59 56 56 57 57 58 59 50 50 50 57 50 50 50 50 50 50 50 50 50 50 50 50 50		4.58 M	127.18 M	126.53 M	126.74 M	127.28 M	127.48 M
P-0.4-2 - Tx (Frames) - Rate (L1) (Bit/s) - Tx Rate (Fps) - 297,619 - 168,919 - 90,579 - 46,992 - 23,946 - 19,23 - Rx (Frames) - 205,333 - 3,223,925 - 17,11,841 - 893,292 - 455,828 - 370,14 - 893,292 - 455,828 - 370,14 - 893,292 - 456,828 - 370,14 - 128,33 - Rx Rate (Fps) - 6,844 - 107,464 - 57,061 - 29,776 - 15,194 - 12,34 - Flood Count (Frames) - 58 - 58 - 61 - 58 - 59 - 59 - 7x Rate (L1) (Bit/s) - 7x Rate (- Rx Rate (Fps)	6,822	107,413	57,304	29,780	15,240	12,257
- Tx (Frames)	- Flood Count (Frames)	61	59	56	56	57	59
- Tx Rate (L1) (Bit/s)	P-0-4-2						
- Tx Rate (Fps)	- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Rx (Frames)	- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Rx Rate (L1) (Bit/s)	- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx Rate (Fps) 6,844 107,464 57,061 29,776 15,194 12,34 Flood Count (Frames) 58 58 58 61 58 59 58 FP-0-4-3	- Rx (Frames)	205,333	3,223,925	1,711,841	893,292	455,828	370,192
- Flood Count (Frames) 58 58 58 61 58 59 58 7-0-4-3 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 71	- Rx Rate (L1) (Bit/s)	4.6 M	127.24 M	125.99 M	126.73 M	126.9 M	128.33 M
P-0-4-3 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 20	- Rx Rate (Fps)	6,844	107,464	57,061	29,776	15,194	12,340
- Tx (Frames)	- Flood Count (Frames)	58	58	61	58	59	57
- Tx Rate (L1) (Bit/s)	P-0-4-3						
- Tx Rate (L1) (Bit/s)	- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (Fps)		200 M	200 M	200 M	200 M	200 M	200 M
- Rx (Frames)		297,619	168,919	90,579	46,992	23,946	19,230
- Rx Rate (L1) (Bit/s)		204,483	3,222,335	1,719,252	891,983	455,153	369,793
- Rx Rate (Fps) 6,816 107,411 57,308 29,733 15,172 12,32 Flood Count (Frames) 59 59 56 58 55 55 F9-0-4-4 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M	- Rx Rate (L1) (Bit/s)				126.54 M		128.19 M
- Flood Count (Frames) 59 59 56 58 55 59 59 50 50 50 50 50 50 50 50 50 50 50 50 50		6,816	107,411	57,308	29,733	15,172	12,326
- Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 126.56 M 126.48 M 127.18 M 128.24 <td></td> <td></td> <td>59</td> <td>56</td> <td>58</td> <td>55</td> <td>59</td>			59	56	58	55	59
- Tx Rate (L1) (Bit/s) 200 M 19,23 23,946 19,23 456,824 369,92 -8,23 1,719,526 891,525 456,824 369,92 -8,24	P-0-4-4						
- Tx Rate (L1) (Bit/s) 200 M 19,23 23,946 19,23 456,824 369,92 -8,23 1,719,526 891,525 456,824 369,92 -8,24	- Tx (Frames)	8.928.570	5.067.564	2.717.382	1.409.759	718.386	576,912
- Tx Rate (Fps) 297,619 168,919 90,579 46,992 23,946 19,23 - Rx (Frames) 204,885 3,223,088 1,719,526 891,525 456,824 369,92 - Rx Rate (L1) (Bit/s) 4.59 M 127.2 M 126.56 M 126.48 M 127.18 M 128.24 - Rx Rate (Fps) 6,830 107,436 57,318 29,718 15,227 12,33 - Flood Count (Frames) 58 61 58 61 57 - P-0-4-5							200 M
- Rx (Frames) 204,885 3,223,088 1,719,526 891,525 456,824 369,92 - Rx Rate (L1) (Bit/s) 4.59 M 127.2 M 126.56 M 126.48 M 127.18 M 128.24 - Rx Rate (Fps) 6,830 107,436 57,318 29,718 15,227 12,33 - Flood Count (Frames) 58 61 58 61 57 5 P-0-4-5 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 200 M <td< td=""><td>- Tx Rate (Fps)</td><td>297,619</td><td>168,919</td><td>90,579</td><td>46,992</td><td>23,946</td><td>19,230</td></td<>	- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx Rate (L1) (Bit/s) 4.59 M 127.2 M 126.56 M 126.48 M 127.18 M 128.24 - Rx Rate (Fps) 6,830 107,436 57,318 29,718 15,227 12,33 - Flood Count (Frames) 58 61 58 61 57 5 P-0-4-5 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M							369,927
- Rx Rate (Fps) 6,830 107,436 57,318 29,718 15,227 12,33 - Flood Count (Frames) 58 61 58 61 57 5 P-0-4-5 50 50 50 50 50 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 200 M<							128.24 M
- Flood Count (Frames) 58 61 58 61 57 58 P-0-4-5 - Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 200 M <td>. , , ,</td> <td>6.830</td> <td></td> <td></td> <td></td> <td></td> <td>12,331</td>	. , , ,	6.830					12,331
P-0-4-5 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M							58
- Tx (Frames) 8,928,570 5,067,564 2,717,382 1,409,759 718,386 576,91 - Tx Rate (L1) (Bit/s) 200 M 200 M <td< td=""><td>` /</td><td></td><td></td><td></td><td>-</td><td>-</td><td></td></td<>	` /				-	-	
- Tx Rate (L1) (Bit/s) 200 M 200 M <t< td=""><td></td><td>8.928.570</td><td>5.067.564</td><td>2.717.382</td><td>1.409.759</td><td>718.386</td><td>576,912</td></t<>		8.928.570	5.067.564	2.717.382	1.409.759	718.386	576,912
- Tx Rate (Fps) 297,619 168,919 90,579 46,992 23,946 19,23 - Rx (Frames) 204,666 3,222,770 1,719,201 893,808 454,857 368,01 - Rx Rate (L1) (Bit/s) 4.58 M 127.19 M 126.53 M 126.8 M 126.63 M 127.58 - Rx Rate (Fps) 6,822 107,426 57,307 29,794 15,162 12,26							200 M
- Rx (Frames) 204,666 3,222,770 1,719,201 893,808 454,857 368,01 - Rx Rate (L1) (Bit/s) 4.58 M 127.19 M 126.53 M 126.8 M 126.63 M 127.58 - Rx Rate (Fps) 6,822 107,426 57,307 29,794 15,162 12,26							19,230
- Rx Rate (L1) (Bit/s) 4.58 M 127.19 M 126.53 M 126.8 M 126.63 M 127.58 - Rx Rate (Fps) 6,822 107,426 57,307 29,794 15,162 12,26	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \						368,018
- Rx Rate (Fps) 6,822 107,426 57,307 29,794 15,162 12,26							127.58 M
	. , , ,						12,267
	- Flood Count (Frames)	58	60	57	59	56	61

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,587
Rx Rate (Percent)	12.5 %
Rx Rate (L1) (Bit/s)	2.25 G
Rx Rate (Fps)	182.93 K
Loss Rate (Percent)	37.48 %
Loss (Frames)	3,289,697
P-0-0-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	304,384
- Rx Rate (L1) (Bit/s)	124.84 M
- Rx Rate (Fps)	10,146
- Flood Count (Frames)	58
P-0-0-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	306,387
- Rx Rate (L1) (Bit/s)	125.66 M




	10.010
- Rx Rate (Fps)	10,213
- Flood Count (Frames)	58
P-0-0-2 - Tx (Frames)	487,645
- Tx (Frames)	200 M
- Tx Rate (ET) (Bl/s)	16,255
- Rx (Frames)	305,105
- Rx Rate (L1) (Bit/s)	125.13 M
- Rx Rate (Fps)	10,170
- Flood Count (Frames)	58
P-0-0-3	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	304,939
- Rx Rate (L1) (Bit/s)	125.07 M
- Rx Rate (Fps)	10,165
- Flood Count (Frames)	60
P-0-0-4	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	200 M 16,255
- TX Rate (Fps) - Rx (Frames)	303,181
- Rx (Frames) - Rx Rate (L1) (Bit/s)	124.34 M
- Rx Rate (E1) (Bibs)	10,106
- Flood Count (Frames)	58
P-0-0-5	50
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	305,523
- Rx Rate (L1) (Bit/s)	125.31 M
- Rx Rate (Fps)	10,184
- Flood Count (Frames)	30
P-0-2-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	303,647
- Rx Rate (L1) (Bit/s)	124.54 M
- Rx Rate (Fps)	10,122
- Flood Count (Frames)	59
P-0-2-1	407 C4E
- Tx (Frames) - Tx Rate (L1) (Bit/s)	487,645
- Tx Rate (ET) (Blus)	200 M 16,255
- Rx (Frames)	304,265
- Rx (Hames)	124.79 M
- Rx Rate (Fps)	10,142
- Flood Count (Frames)	61
P-0-2-2	31
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	305,368
- Rx Rate (L1) (Bit/s)	125.24 M
- Rx Rate (Fps)	10,179
- Flood Count (Frames)	60
P-0-2-3	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	306,374
- Rx Rate (L1) (Bit/s)	125.65 M
- Rx Rate (Fps)	10,212
- Flood Count (Frames)	55
P-0-2-4	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	305,201



- Rx Rate (L1) (Bit/s)	125.17 M
- Rx Rate (Fps)	10,173
- Flood Count (Frames)	56
P-0-2-5	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	306,917
- Rx Rate (L1) (Bit/s)	125.88 M
- Rx Rate (Fps)	10,231
- Flood Count (Frames)	59
P-0-4-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	304,568
- Rx Rate (L1) (Bit/s)	124.91 M
- Rx Rate (Fps)	10,152
- Flood Count (Frames)	60
P-0-4-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	302,956
- Rx Rate (L1) (Bit/s)	124.25 M
- Rx Rate (Fps)	10,099
- Flood Count (Frames)	58
P-0-4-2	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	307,195
	125.99 M
- Rx Rate (L1) (Bit/s)	10,240
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-4-3	60
	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	305,409
- Rx Rate (L1) (Bit/s)	125.26 M
- Rx Rate (Fps)	10,180
- Flood Count (Frames)	58
P-0-4-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	301,777
- Rx Rate (L1) (Bit/s)	123.77 M
- Rx Rate (Fps)	10,059
- Flood Count (Frames)	57
P-0-4-5	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	304,717
- Rx Rate (L1) (Bit/s)	124.97 M
- Rx Rate (Fps)	10,157
- Flood Count (Frames)	59



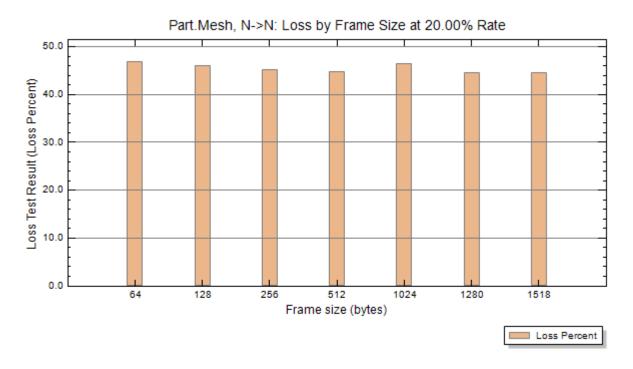

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,713	4,560,808	2,445,644	1,268,788	646,547	519,221
Rx Rate (Percent)	0.02 %	16.75 %	16.96 %	16.98 %	16.85 %	17.35 %
Rx Rate (L1) (Bit/s)	3.01 M	3.02 G	3.05 G	3.06 G	3.03 G	3.12 G
Rx Rate (Fps)	4.48 K	2.55 M	1.38 M	718.33 K	363.2 K	300.32 K
Loss Rate (Percent)	99.94 %	44.16 %	43.46 %	43.38 %	43.83 %	42.16 %
Loss (Frames)	240,936,849	60,424,636	31,888,673	16,513,619	8,500,497	6,567,128
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,917	4,191,124	2,298,620	1,201,476	602,496	502,617
- Rx Rate (L1) (Bit/s)	177.34 K	165.41 M	169.18 M	170.45 M	167.73 M	174.24 M
- Rx Rate (Fps)	264	139,704	76,621	40,049	20,083	16,754
- Flood Count (Frames)	62	58	62	59	59	63
P-0-0-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,105	4,279,427	2,296,407	1,204,853	601,763	503,734
- Rx Rate (L1) (Bit/s)	181.55 K	168.89 M	169.02 M	170.93 M	167.53 M	174.63 M
- Rx Rate (Fps)	270	142,648	76,547	40,162	20,059	16,791
- Flood Count (Frames)	66	59	61	57	57	59
P-0-0-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,881	4,277,527	2,286,799	1,205,305	602,807	503,625
- Rx Rate (L1) (Bit/s)	109.33 K	168.82 M	168.31 M	170.99 M	167.82 M	174.59 M
- Rx Rate (Fps)	163	142,584	76,227	40,177	20,094	16,788
- Flood Count (Frames)	63	62	57	56	60	60
P-0-0-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,884	4,276,817	2,296,172	1,202,514	604,556	479,410



- Rx Rate (L1) (Bit/s)	109.4 K	168.79 M	169 M	170.6 M	168.31 M	166.2 M
- Rx Rate (Fps)	163	142,561	76,539	40,084	20,152	15,980
- Flood Count (Frames)	62	58	60	54	58	63
P-0-0-4	40 000 055	7 004 040	4.070.070	0.444.047	4 077 570	005.000
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368 299.99 M
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M 135,869	300 M	300 M	
- Tx Rate (Fps)	446,429	253,378	,	70,488	35,919	28,846
- Rx (Frames)	8,425	4,283,722	2,301,900	1,070,181	606,762	494,438
- Rx Rate (L1) (Bit/s)	188.72 K	169.06 M	169.42 M	151.82 M	168.92 M	171.41 M
- Rx Rate (Fps)	281	142,791	76,730	35,673	20,225	16,481
- Flood Count (Frames)	64	58	60	56	58	63
P-0-0-5	40 200 055	7 004 040	4.070.070	0.444.047	4 077 570	005.000
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M 446.429	300 M	300 M 135.869	300 M	300 M 35.919	299.99 M
- Tx Rate (Fps)	-, -	253,378	,	70,488	,	28,846
- Rx (Frames)	4,884	3,627,870	2,300,166	1,201,576	608,644	502,558
- Rx Rate (L1) (Bit/s)	109.4 K	143.18 M	169.29 M	170.46 M	169.45 M	174.22 M
- Rx Rate (Fps)	163	120,929	76,672	40,053	20,288	16,752
- Flood Count (Frames)	29	28	31	28	26	26
P-0-2-0	40.000.055	7 004 040	4.070.070	0.444.047	4 077 570	005.000
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,637	4,273,318	2,300,543	1,202,731	609,799	504,001
- Rx Rate (L1) (Bit/s)	193.47 K	168.65 M	169.32 M	170.63 M	169.77 M	174.72 M
- Rx Rate (Fps)	288	142,444	76,685	40,091	20,327	16,800
- Flood Count (Frames)	63	58	60	61	59	63
P-0-2-1	40,000,055	7 004 040	4.070.070	0.444.047	4 077 570	005.000
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,885	4,279,493	2,301,844	1,206,546	609,430	504,007
- Rx Rate (L1) (Bit/s)	109.42 K	168.9 M	169.42 M	171.17 M	169.67 M	174.72 M
- Rx Rate (Fps)	163	142,650	76,728	40,218	20,314	16,800
- Flood Count (Frames)	62	58	60	60	56	61
P-0-2-2	40.000.0==			211121		
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,560	4,290,974	2,303,089	1,206,610	609,442	486,670
- Rx Rate (L1) (Bit/s)	191.74 K	169.35 M	169.51 M	171.18 M	169.67 M	168.71 M
- Rx Rate (Fps)	285	143,032	76,770	40,220	20,315	16,222
- Flood Count (Frames)	62	54	58	60	57	63
P-0-2-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,516	4,286,179	2,301,843	1,205,803	607,684	502,382
- Rx Rate (L1) (Bit/s)	190.76 K	169.16 M	169.42 M	171.06 M	169.18 M	174.16 M
- Rx Rate (Fps)	284	142,873	76,728	40,193	20,256	16,746
- Flood Count (Frames)	64	57	56	55	57	62
P-0-2-4						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,427	4,224,442	2,301,461	1,205,671	605,206	503,538
- Rx Rate (L1) (Bit/s)	188.76 K	166.72 M	169.39 M	171.04 M	168.49 M	174.56 M
- Rx Rate (Fps)	281	140,815	76,715	40,189	20,174	16,785
- Flood Count (Frames)	62	56	57	57	58	60
P-0-2-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,370	4,284,355	2,301,760	1,208,463	606,812	503,215
- Rx Rate (L1) (Bit/s)	187.49 K	169.09 M	169.41 M	171.44 M	168.94 M	174.45 M
- Rx Rate (Fps)	279	142,812	76,725	40,282	20,227	16,774
- Flood Count (Frames)	64	58	59	59	59	63
P-0-4-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (L1) (Bit/s)	000					



- Rx (Frames)	8,267	4,319,130	2,318,547	1,203,647	605,883	504,554
- Rx Rate (L1) (Bit/s)	185.18 K	170.46 M	170.65 M	170.76 M	168.68 M	174.91 M
- Rx Rate (Fps)	276	143,971	77,285	40,122	20,196	16,818
- Flood Count (Frames)	59	55	56	57	57	60
P-0-4-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,137	4,311,835	2,319,333	1,206,532	604,853	503,921
- Rx Rate (L1) (Bit/s)	182.27 K	170.17 M	170.7 M	171.17 M	168.39 M	174.69 M
- Rx Rate (Fps)	271	143,728	77,311	40,218	20,162	16,797
- Flood Count (Frames)	60	57	57	57	56	60
P-0-4-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,051	4,314,259	2,319,587	1,201,056	603,344	502,750
- Rx Rate (L1) (Bit/s)	180.34 K	170.27 M	170.72 M	170.39 M	167.97 M	174.29 M
- Rx Rate (Fps)	268	143,809	77,320	40,035	20,111	16,758
- Flood Count (Frames)	57	57	55	58	57	59
P-0-4-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,928	4,280,612	2,317,793	1,204,063	602,064	503,311
- Rx Rate (L1) (Bit/s)	177.59 K	168.94 M	170.59 M	170.82 M	167.61 M	174.48 M
- Rx Rate (Fps)	264	142,687	77,260	40,135	20,069	16,777
- Flood Count (Frames)	61	56	56	58	57	58
P-0-4-4						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,860	4,301,001	2,303,428	1,205,815	602,005	502,311
- Rx Rate (L1) (Bit/s)	176.06 K	169.75 M	169.53 M	171.06 M	167.6 M	174.13 M
- Rx Rate (Fps)	262	143,367	76,781	40,194	20,067	16,744
- Flood Count (Frames)	61	57	58	57	57	58
P-0-4-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,807	4,297,507	2,311,349	1,207,185	602,375	502,454
- Rx Rate (L1) (Bit/s)	174.88 K	169.61 M	170.12 M	171.26 M	167.7 M	174.18 M
- Rx Rate (Fps)	260	143,250	77,045	40,240	20,079	16,748
- Flood Count (Frames)	63	59	58	58	58	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,875
Rx Rate (Percent)	16.97 %
Rx Rate (L1) (Bit/s)	3.05 G
Rx Rate (Fps)	248.24 K
Loss Rate (Percent)	43.44 %
Loss (Frames)	5,719,059
P-0-0-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	388,471
- Rx Rate (L1) (Bit/s)	159.32 M
- Rx Rate (Fps)	12,949
- Flood Count (Frames)	58
P-0-0-1	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	415,405
- Rx Rate (L1) (Bit/s)	170.37 M




D D (/F)	40.047
- Rx Rate (Fps)	13,847 61
- Flood Count (Frames) P-0-0-2	01
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	414,100
- Rx Rate (L1) (Bit/s)	169.84 M
- Rx Rate (Fps)	13,803
- Flood Count (Frames)	57
P-0-0-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames) - Rx Rate (L1) (Bit/s)	416,605 170.86 M
- Rx Rate (Fps)	13,887
- Flood Count (Frames)	60
P-0-0-4	00
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	416,422
- Rx Rate (L1) (Bit/s)	170.79 M
- Rx Rate (Fps)	13,881
- Flood Count (Frames)	61
P-0-0-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	415,497
- Rx Rate (L1) (Bit/s)	170.41 M 13,850
- Rx Rate (Fps) - Flood Count (Frames)	13,830
P-0-2-0	21
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	415,995
- Rx Rate (L1) (Bit/s)	170.61 M
- Rx Rate (Fps)	13,867
- Flood Count (Frames)	57
P-0-2-1	704 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M
- Rx (Frames)	24,382 412,389
- Rx Rate (L1) (Bit/s)	169.13 M
- Rx Rate (Fps)	13,746
- Flood Count (Frames)	59
P-0-2-2	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	414,869
- Rx Rate (L1) (Bit/s)	170.15 M
- Rx Rate (Fps)	13,829
- Flood Count (Frames)	57
P-0-2-3	704 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382 413 150
- Rx (Frames) - Rx Rate (L1) (Bit/s)	413,159 169.45 M
- Rx Rate (LT) (Blus)	13,772
- Flood Count (Frames)	59
P-0-2-4	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 24,382



- Rx Rate (L1) (Bit/s)	170.79 M
- Rx Rate (Fps)	13,881
- Flood Count (Frames)	58
P-0-2-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	414,877
- Rx Rate (L1) (Bit/s)	170.15 M
- Rx Rate (Fps)	13,829
- Flood Count (Frames)	61
P-0-4-0	01
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	416,563
- Rx Rate (L1) (Bit/s)	170.85 M
- Rx Rate (Fps)	13,885
- Flood Count (Frames)	59
P-0-4-1	39
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	416,294
- Rx (Frames)	170.74 M
- Rx Rate (E1) (Blus)	13,876
- Flood Count (Frames) P-0-4-2	57
	721 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M 24,382
- Tx Rate (Fps) - Rx (Frames)	
	415,290 170.32 M
- Rx Rate (L1) (Bit/s)	13,843
- Rx Rate (Fps) - Flood Count (Frames)	13,643
P-0-4-3	39
	721 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M 24,382
- Tx Rate (Fps)	
- Rx (Frames)	413,602
- Rx Rate (L1) (Bit/s)	169.63 M
- Rx Rate (Fps)	13,787
- Flood Count (Frames)	54
P-0-4-4	724 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	416,438
- Rx Rate (L1) (Bit/s)	170.8 M
- Rx Rate (Fps)	13,881
- Flood Count (Frames) P-0-4-5	54
	724 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	414,797
- Rx Rate (L1) (Bit/s)	170.12 M
- Rx Rate (Fps)	13,827
- Flood Count (Frames)	55



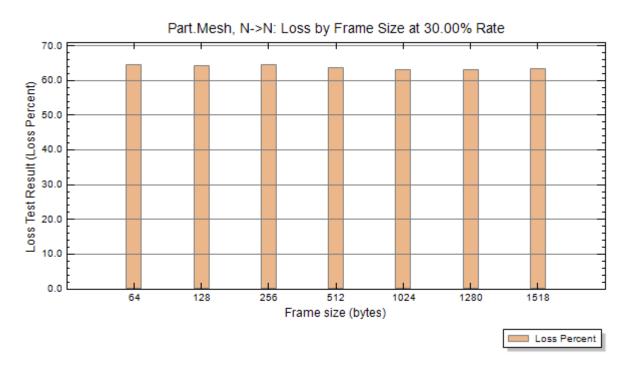

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,284	6,081,077	3,260,869	1,691,721	862,063	692,305
Rx Rate (Percent)	0.01 %	0.04 %	21.18 %	20.97 %	21.38 %	21.45 %
Rx Rate (L1) (Bit/s)	2.45 M	6.3 M	3.81 G	3.78 G	3.85 G	3.86 G
Rx Rate (Fps)	3.64 K	5.32 K	1.73 M	887.09 K	460.7 K	371.23 K
Loss Rate (Percent)	99.97 %	99.91 %	47.05 %	47.56 %	46.56 %	46.38 %
Loss (Frames)	321,319,265	182,272,615	46,023,979	24,138,970	12,041,026	9,632,215
P-0-0-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,668	7,131	2,885,566	1,488,757	767,176	618,180
- Rx Rate (L1) (Bit/s)	126.96 K	281.44 K	212.38 M	211.2 M	213.58 M	214.3 M
- Rx Rate (Fps)	189	238	96,186	49,625	25,573	20,606
- Flood Count (Frames)	62	63	54	59	58	59
P-0-0-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,105	9,398	2,847,944	1,424,557	767,829	618,031
- Rx Rate (L1) (Bit/s)	136.75 K	370.91 K	209.61 M	202.1 M	213.76 M	214.25 M
- Rx Rate (Fps)	204	313	94,931	47,485	25,594	20,601
- Flood Count (Frames)	60	62	57	60	57	58
P-0-0-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,265	7,131	2,867,946	1,403,815	768,431	619,248
- Rx Rate (L1) (Bit/s)	140.34 K	281.44 K	211.08 M	199.15 M	213.93 M	214.67 M
- Rx Rate (Fps)	209	238	95,598	46,794	25,614	20,642
- Flood Count (Frames)	64	59	56	58	57	59
P-0-0-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,340	9,554	2,860,744	1,488,745	768,919	618,381



- Rx Rate (L1) (Bit/s)	142.02 K	377.06 K	210.55 M	211.2 M	214.07 M	214.37 M
- Rx Rate (Fps)	211	318	95,358	49,625	25,631	20,613
- Flood Count (Frames)	64	59	55	56	55	62
P-0-0-4	17.057.110	10 105 100	5 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,297	9,723	2,869,262	1,490,036	768,117	619,784
- Rx Rate (L1) (Bit/s)	141.05 K	383.73 K	211.18 M	211.39 M	213.84 M	214.86 M
- Rx Rate (Fps)	210	324	95,642	49,668	25,604	20,659
- Flood Count (Frames)	64	61	57	58	59	58
P-0-0-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,331	9,648	2,872,803	1,489,357	767,551	611,539
- Rx Rate (L1) (Bit/s)	141.81 K	380.77 K	211.44 M	211.29 M	213.69 M	212 M
- Rx Rate (Fps)	211	322	95,760	49,645	25,585	20,385
- Flood Count (Frames)	26	30	22	26	28	30
P-0-2-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,371	9,538	2,860,174	1,467,224	767,543	619,260
- Rx Rate (L1) (Bit/s)	142.71 K	376.43 K	210.51 M	208.15 M	213.68 M	214.68 M
- Rx Rate (Fps)	212	318	95,339	48,907	25,585	20,642
- Flood Count (Frames)	64	61	56	59	59	59
P-0-2-1	0.1	0.1				
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,350	9,480	2,875,610	1,489,513	768,151	620,187
- Rx Rate (L1) (Bit/s)	142.24 K	374.14 K	211.64 M	211.31 M	213.85 M	215 M
- Rx Rate (Fps)	212	316	95,854	49,650	25,605	20,673
- Flood Count (Frames)	66	61	55	58	61	58
P-0-2-2	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,326	9,366	2,880,157	1,489,057	768,960	619,435
- Rx Rate (L1) (Bit/s)	141.7 K	369.64 K	211.98 M	211.25 M	214.08 M	214.74 M
- Rx Rate (Fps)	211	312	96,005	49,635	25,632	20,648
- Flood Count (Frames)	62	61	56	56	59	56
P-0-2-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,326	6,717	2,806,371	1,488,633	767,773	619,350
- Rx Rate (L1) (Bit/s)	141.7 K	265.1 K	206.55 M	211.19 M	213.75 M	214.71 M
- Rx Rate (Fps)	211	224	93,546	49,621	25,592	20,645
- Flood Count (Frames)	62	59	56	54	59	58
P-0-2-4						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	6,314	9,281	2,879,875	1,470,819	768,157	619,293
- Rx Rate (L1) (Bit/s)	141.43 K	366.29 K	211.96 M	208.66 M	213.85 M	214.69 M
- Rx Rate (Fps)	210	309	95,996	49,027	25,605	20,643
- Flood Count (Frames)	63	61	56	56	60	61
P-0-2-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
	595,238	337,838	181,159	93,985	47,892	38,461
- Tx Rate (Fps) - Rx (Frames)	6,232		2,886,509		765,703	619,121
		9,175		1,488,291		
- Rx Rate (L1) (Bit/s)	139.6 K	362.11 K	212.45 M	211.14 M	213.17 M	214.63 M
- Rx Rate (Fps)	208	306	96,217	49,610	25,523	20,637
- Flood Count (Frames)	64	64	57	60	56	58
P-0-4-0	17.0	10 10 - 1	F / A / F - 1	0.010.75=	4 400 ===	====
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461



- Rx (Frames)	6,086	9,088	2,899,204	1,488,938	767,762	619,450
- Rx Rate (L1) (Bit/s)	136.33 K	358.67 K	213.38 M	211.23 M	213.74 M	214.74 M
- Rx Rate (Fps)	203	303	96,640	49,631	25,592	20,648
- Flood Count (Frames)	60	59	55	58	56	58
P-0-4-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,925	9,034	2,871,460	1,487,948	767,220	619,348
- Rx Rate (L1) (Bit/s)	132.72 K	356.54 K	211.34 M	211.09 M	213.59 M	214.71 M
- Rx Rate (Fps)	198	301	95,715	49,598	25,574	20,645
- Flood Count (Frames)	63	58	52	57	56	55
P-0-4-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,837	8,960	2,912,921	1,489,181	767,396	619,013
- Rx Rate (L1) (Bit/s)	130.75 K	353.62 K	214.39 M	211.27 M	213.64 M	214.59 M
- Rx Rate (Fps)	195	299	97,097	49,639	25,580	20,634
- Flood Count (Frames)	58	61	55	56	56	59
P-0-4-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,731	8,893	2,916,080	1,489,242	767,804	619,071
- Rx Rate (L1) (Bit/s)	128.37 K	350.98 K	214.62 M	211.27 M	213.76 M	214.61 M
- Rx Rate (Fps)	191	296	97,203	49,641	25,593	20,636
- Flood Count (Frames)	58	58	56	56	58	60
P-0-4-4						
- Tx (Frames)	17,857,140	10.135.128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,578	8,828	2,909,146	1,490,079	768,265	619,375
- Rx Rate (L1) (Bit/s)	124.95 K	348.41 K	214.11 M	211.39 M	213.88 M	214.72 M
- Rx Rate (Fps)	186	294	96,972	49,669	25,609	20,646
- Flood Count (Frames)	58	60	56	60	58	56
P-0-4-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,173	8,744	2,900,307	1,488,468	768,113	618,857
- Rx Rate (L1) (Bit/s)	115.88 K	345.1 K	213.46 M	211.16 M	213.84 M	214.54 M
- Rx Rate (Fps)	172	291	96,677	49,616	25,604	20,629
- Flood Count (Frames)	60	61	52	58	56	57
						•

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,174
Rx Rate (Percent)	21.11 %
Rx Rate (L1) (Bit/s)	3.8 G
Rx Rate (Fps)	308.81 K
Loss Rate (Percent)	47.23 %
Loss (Frames)	8,290,772
P-0-0-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	515,200
- Rx Rate (L1) (Bit/s)	211.3 M
- Rx Rate (Fps)	17,173
- Flood Count (Frames)	56
P-0-0-1	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	513,571
- Rx Rate (L1) (Bit/s)	210.63 M




- Rx Rate (Fps)	17,119
- Flood Count (Frames)	59
P-0-0-2 - Tx (Frames)	975,290
- Tx (Hames)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	515,322
- Rx Rate (L1) (Bit/s)	211.35 M
- Rx Rate (Fps)	17,177
- Flood Count (Frames)	58
P-0-0-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	515,134
- Rx Rate (L1) (Bit/s)	211.27 M
- Rx Rate (Fps)	17,171
- Flood Count (Frames)	55
P-0-0-4 - Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (ET) (Bl/s)	32,510
- Rx (Frames)	514,435
- Rx Rate (L1) (Bit/s)	210.99 M
- Rx Rate (Fps)	17,148
- Flood Count (Frames)	56
P-0-0-5	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	514,923
- Rx Rate (L1) (Bit/s)	211.19 M
- Rx Rate (Fps)	17,164
- Flood Count (Frames)	27
P-0-2-0	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps) - Rx (Frames)	32,510 515,250
- Rx Rate (L1) (Bit/s)	211.32 M
- Rx Rate (Fps)	17,175
- Flood Count (Frames)	54
P-0-2-1	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	514,806
- Rx Rate (L1) (Bit/s)	211.14 M
- Rx Rate (Fps)	17,160
- Flood Count (Frames)	58
P-0-2-2 - Tx (Frames)	075 200
- Tx (Frames) - Tx Rate (L1) (Bit/s)	975,290 400 M
- Tx Rate (ET) (Bl/s)	32,510
- Rx (Frames)	515,230
- Rx Rate (L1) (Bit/s)	211.31 M
- Rx Rate (Fps)	17,174
- Flood Count (Frames)	57
P-0-2-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	515,639
- Rx Rate (L1) (Bit/s)	211.48 M
- Rx Rate (Fps)	17,188
- Flood Count (Frames)	59
P-0-2-4	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M 32,510
- Tx Rate (Fps) - Rx (Frames)	514,115
ita (i idilica)	517,113



- Rx Rate (L1) (Bit/s) 210.86 M - Rx Rate (Fps) 17,13 - Flood Count (Frames) 5 P-0-2-5 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 975,29 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14 - Rx Rate (Fps) 17,14 - Flood Count (Frames) 5
- Flood Count (Frames) 5 P-0-2-5 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
P-0-2-5 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx Rate (Fps) 32,51 - Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx (Frames) 514,65 - Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx Rate (L1) (Bit/s) 211.08 M - Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx Rate (Fps) 17,15 - Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Flood Count (Frames) 6 P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 N - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 N - Rx Rate (Fps) 17,14
P-0-4-0 - Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx (Frames) 975,29 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Tx Rate (Fps) 32,51 - Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx (Frames) 514,36 - Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx Rate (L1) (Bit/s) 210.96 M - Rx Rate (Fps) 17,14
- Rx Rate (Fps) 17,14
- Flood Count (Frames) 5
P-0-4-1
- Tx (Frames) 975,29
- Tx Rate (L1) (Bit/s) 400 M
- Tx Rate (Fps) 32,51
- Rx (Frames) 514,83
- Rx Rate (L1) (Bit/s) 211.15 M
- Rx Rate (Fps) 17,16
- Flood Count (Frames) 6
P-0-4-2
- Tx (Frames) 975,29
- Tx Rate (L1) (Bit/s) 400 M
- Tx Rate (Fps) 32,51
- Rx (Frames) 514,33
- Rx Rate (L1) (Bit/s) 210.95 M
- Rx Rate (Fps) 17,14
- Flood Count (Frames) 5
P-0-4-3
- Tx (Frames) 975,29
- Tx Rate (L1) (Bit/s) 400 N
- Tx Rate (Fps) 32,51
- Rx (Frames) 513,74
- Rx Rate (L1) (Bit/s) 210.7 M
- Rx Rate (Fps) 17,12
- Flood Count (Frames) 5
P-0-4-4
- Tx (Frames) 975,29
- Tx Rate (L1) (Bit/s) 400 M
- Tx Rate (Fps) 32,51
- Rx (Frames) 514,98
- Rx Rate (L1) (Bit/s) 211.21 M
- Rx Rate (Fps) 17,16
- Flood Count (Frames) 5
P-0-4-5
- Tx (Frames) 975,29
- Tx Rate (L1) (Bit/s) 400 M
- Tx Rate (Fps) 32,51
- Rx (Frames) 513,90
- Rx Rate (L1) (Bit/s) 210.77 M
- Rx Rate (Fps) 17,13
- Flood Count (Frames) 5



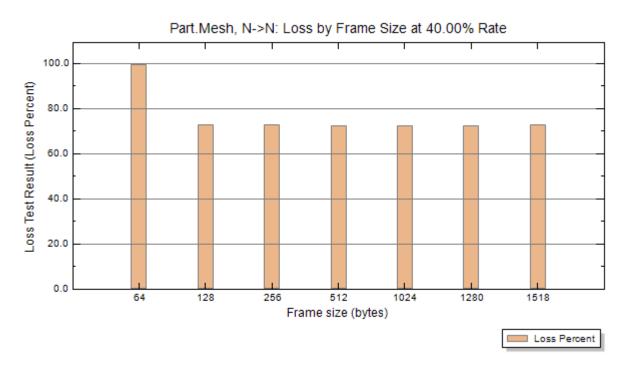

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,855	7,601,346	4,076,083	2,114,654	1,077,579	865,378
Rx Rate (Percent)	0.01 %	0.03 %	25.93 %	26.31 %	26.25 %	25.36 %
Rx Rate (L1) (Bit/s)	1.86 M	4.75 M	4.67 G	4.74 G	4.72 G	4.56 G
Rx Rate (Fps)	2.77 K	4.01 K	2.11 M	1.11 M	565.66 K	438.85 K
Loss Rate (Percent)	99.98 %	99.95 %	48.13 %	47.38 %	47.51 %	49.29 %
Loss (Frames)	401,702,433	227,920,006	58,857,193	30,057,358	15,357,544	12,795,932
P-0-0-0						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,455	4,786	3,515,624	1,854,956	946,043	734,825
- Rx Rate (L1) (Bit/s)	99.79 K	188.89 K	258.75 M	263.16 M	263.38 M	254.74 M
- Rx Rate (Fps)	149	160	117,187	61,832	31,535	24,494
- Flood Count (Frames)	61	60	57	59	56	55
P-0-0-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,774	7,433	3,482,885	1,854,985	945,831	735,696
- Rx Rate (L1) (Bit/s)	106.94 K	293.36 K	256.34 M	263.16 M	263.32 M	255.04 M
- Rx Rate (Fps)	159	248	116,096	61,833	31,528	24,523
- Flood Count (Frames)	64	61	59	54	60	58
P-0-0-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,937	7,449	3,513,701	1,855,293	945,750	684,545
- Rx Rate (L1) (Bit/s)	110.59 K	293.99 K	258.61 M	263.2 M	263.3 M	237.31 M
- Rx Rate (Fps)	165	248	117,123	61,843	31,525	22,818
- Flood Count (Frames)	64	63	58	57	58	59
P-0-0-3						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,927	7,589	3,515,829	1,854,676	946,016	735,040



- Rx Rate (L1) (Bit/s)	110.36 K	299.51 K	258.77 M	263.12 M	263.37 M	254.81 M
- Rx Rate (Fps)	164	253	117,194	61,823	31,534	24,501
- Flood Count (Frames)	59	55	58	59	59	58
P-0-0-4	00 004 405	40,000,040	0.700.470	0.504.400	4 705 005	4 440 00
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	2,660	7,623	3,515,332	1,854,386	945,850	735,496
- Rx Rate (L1) (Bit/s)	59.58 K	300.85 K	258.73 M	263.08 M	263.32 M	254.97 M
- Rx Rate (Fps)	89	254	117,178	61,813	31,528	24,517
- Flood Count (Frames)	62	60	57	57	59	57
P-0-0-5	00.004.405	10.000.010	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,900	7,624	3,518,211	1,855,819	945,554	723,714
- Rx Rate (L1) (Bit/s)	109.76 K	300.89 K	258.94 M	263.28 M	263.24 M	250.89 M
- Rx Rate (Fps)	163	254	117,274	61,861	31,518	24,124
- Flood Count (Frames)	31	29	29	26	28	21
P-0-2-0	00 004 405	40,000,040	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,986	7,616	3,519,948	1,855,306	943,189	729,898
- Rx Rate (L1) (Bit/s)	111.69 K	300.58 K	259.07 M	263.21 M	262.58 M	253.03 M
- Rx Rate (Fps)	166	254	117,332	61,844	31,440	24,330
- Flood Count (Frames)	64	63	56	57	58	54
P-0-2-1	00 004 405	40,000,040	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,955	7,576	3,522,685	1,855,528	945,548	735,092
- Rx Rate (L1) (Bit/s)	110.99 K	299 K	259.27 M	263.24 M	263.24 M	254.83 M
- Rx Rate (Fps)	165	253	117,423	61,851	31,518	24,503
- Flood Count (Frames)	61	61	57	59	57	56
P-0-2-2	00 004 405	40,000,040	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,944	7,532	3,514,195	1,841,224	938,674	735,368
- Rx Rate (L1) (Bit/s)	110.75 K	297.26 K	258.64 M	261.21 M	261.33 M	254.93 M
- Rx Rate (Fps) - Flood Count (Frames)	165 63	251	117,140	61,374	31,289	24,512
P-0-2-3	03	60	56	59	59	55
- Tx (Frames)	22,321,425	12 669 010	6.793.472	2 524 422	1 70E 06E	1 442 207
, ,		12,668,910	-,,	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048		226,449	117,481	59,866	48,077
- Rx (Frames)	4,984	4,606	3,519,693 259.05 M	1,855,386	945,903	734,704
- Rx Rate (L1) (Bit/s)	111.64 K	181.78 K		263.22 M	263.34 M	254.7 M
- Rx Rate (Fps) - Flood Count (Frames)	166 64	154 61	117,323 61	61,846	31,530 60	24,490
	04	01	01	57	00	55
P-0-2-4	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1 442 207
- Tx (Frames)	22,321,425	12,668,910	6,793,472 500 M	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M		500 M	500 M	500 M
- Tx Rate (Fps) - Rx (Frames)	744,048	422,297	226,449	117,481	59,866 901,014	48,077
- Rx (Frames)	4,969	4,520	3,520,081	1,855,719	,	735,296
, , , ,	111.31 K	178.39 K	259.08 M	263.26 M	250.84 M	254.9 M
- Rx Rate (Fps)	166	151	117,336	61,857	30,034	24,510
- Flood Count (Frames)	61	61	59	59	58	52
P-0-2-5	20 224 425	10.000.010	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,979	4,434	3,520,711	1,855,809	946,136	734,829
- Rx Rate (L1) (Bit/s)	111.53 K	175 K	259.12 M	263.28 M	263.4 M	254.74 M
- Rx Rate (Fps)	166	148	117,357	61,860	31,538	24,494
- Flood Count (Frames)	64	59	59	58	58	59
P-0-4-0	00 004 405	40.000.010	0.700.470	0.504.400	4 705 005	4 440 00-
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077



- Rx (Frames)	4,835	7,154	3,518,563	1,855,733	946,341	735,493
- Rx Rate (L1) (Bit/s)	108.3 K	282.34 K	258.97 M	263.27 M	263.46 M	254.97 M
- Rx Rate (Fps)	161	238	117,285	61,858	31,545	24,516
- Flood Count (Frames)	63	58	60	56	58	57
P-0-4-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,716	7,036	3,548,936	1,855,639	945,777	734,971
- Rx Rate (L1) (Bit/s)	105.64 K	277.69 K	261.2 M	263.25 M	263.3 M	254.79 M
- Rx Rate (Fps)	157	235	118,298	61,855	31,526	24,499
- Flood Count (Frames)	60	61	56	55	59	56
P-0-4-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,524	6,957	3,546,943	1,855,425	945,695	735,305
- Rx Rate (L1) (Bit/s)	101.34 K	274.57 K	261.06 M	263.22 M	263.28 M	254.91 M
- Rx Rate (Fps)	151	232	118,231	61,848	31,523	24,510
- Flood Count (Frames)	59	60	53	56	61	57
P-0-4-3					-	
- Tx (Frames)	22,321,425	12.668.910	6.793.472	3.524.423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744.048	422.297	226.449	117,481	59.866	48,077
- Rx (Frames)	4,355	6,930	3,544,787	1,855,906	945,563	734,895
- Rx Rate (L1) (Bit/s)	97.55 K	273.5 K	260.9 M	263.29 M	263.24 M	254.76 M
- Rx Rate (Fps)	145	231	118,160	61,864	31,519	24,497
- Flood Count (Frames)	59	59	56	60	57	61
P-0-4-4						
- Tx (Frames)	22.321.425	12.668.910	6.793.472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422.297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,254	6,789	3,545,743	1,855,719	945,380	735,138
- Rx Rate (L1) (Bit/s)	95.29 K	267.94 K	260.97 M	263.26 M	263.19 M	254.85 M
- Rx Rate (Fps)	142	226	118,191	61,857	31,513	24,505
- Flood Count (Frames)	63	59	57	56	57	57
P-0-4-5						-
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,063	6,720	3,541,436	1,854,747	945,562	735,109
- Rx Rate (L1) (Bit/s)	91.01 K	265.22 K	260.65 M	263.13 M	263.24 M	254.84 M
- Rx Rate (Fps)	135	224	118,048	61,825	31,519	24,504
- Flood Count (Frames)	62	57	58	59	60	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,462
Rx Rate (Percent)	26.05 %
Rx Rate (L1) (Bit/s)	4.69 G
Rx Rate (Fps)	381.04 K
Loss Rate (Percent)	47.91 %
Loss (Frames)	10,512,784
P-0-0-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	634,380
- Rx Rate (L1) (Bit/s)	260.18 M
- Rx Rate (Fps)	21,146
- Flood Count (Frames)	55
P-0-0-1	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	635,497
- Rx Rate (L1) (Bit/s)	260.64 M




- Rx Rate (Fps)	21,183
- Flood Count (Frames)	61
P-0-0-2	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	635,307
- Rx Rate (L1) (Bit/s)	260.56 M
- Rx Rate (Fps)	21,177
- Flood Count (Frames)	58
P-0-0-3	4 040 404
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames) - Rx Rate (L1) (Bit/s)	636,376 261 M
- Rx Rate (Fps)	21,213
- Flood Count (Frames)	57
P-0-0-4	31
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	633,309
- Rx Rate (L1) (Bit/s)	259.74 M
- Rx Rate (Fps)	21,110
- Flood Count (Frames)	58
P-0-0-5	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	636,001
- Rx Rate (L1) (Bit/s)	260.85 M
- Rx Rate (Fps)	21,200
- Flood Count (Frames)	23
P-0-2-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	636,250
- Rx Rate (L1) (Bit/s)	260.95 M
- Rx Rate (Fps)	21,208 58
- Flood Count (Frames) P-0-2-1	30
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	635,228
- Rx Rate (L1) (Bit/s)	260.53 M
- Rx Rate (Fps)	21,174
- Flood Count (Frames)	55
P-0-2-2	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	636,495
- Rx Rate (L1) (Bit/s)	261.05 M
- Rx Rate (Fps)	21,217
- Flood Count (Frames)	59
P-0-2-3	101010
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	637,050
- Rx Rate (L1) (Bit/s)	261.28 M
- Rx Rate (Fps) - Flood Count (Frames)	21,235
P-0-2-4	57
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	619,565
	0.0,000



D. D. t. (1.4) (D#/-)	054414
- Rx Rate (L1) (Bit/s)	254.1 M
- Rx Rate (Fps) - Flood Count (Frames)	20,652 58
P-0-2-5	30
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	638,016
- Rx Rate (L1) (Bit/s)	261.67 M
- Rx Rate (Fps)	21,267
- Flood Count (Frames)	62
P-0-4-0	02
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	638,359
- Rx Rate (L1) (Bit/s)	261.81 M
- Rx Rate (Fps)	21,279
- Flood Count (Frames)	61
P-0-4-1	-
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	636,814
- Rx Rate (L1) (Bit/s)	261.18 M
- Rx Rate (Fps)	21,227
- Flood Count (Frames)	56
P-0-4-2	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	636,902
- Rx Rate (L1) (Bit/s)	261.21 M
- Rx Rate (Fps)	21,230
- Flood Count (Frames)	55
P-0-4-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	634,580
- Rx Rate (L1) (Bit/s)	260.26 M
- Rx Rate (Fps)	21,153
- Flood Count (Frames)	55
P-0-4-4	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	635,816
- Rx Rate (L1) (Bit/s)	260.77 M
- Rx Rate (Fps)	21,194
- Flood Count (Frames)	56
P-0-4-5	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	635,143
- Rx Rate (L1) (Bit/s)	260.49 M
- Rx Rate (Fps)	21,171
- Flood Count (Frames)	59



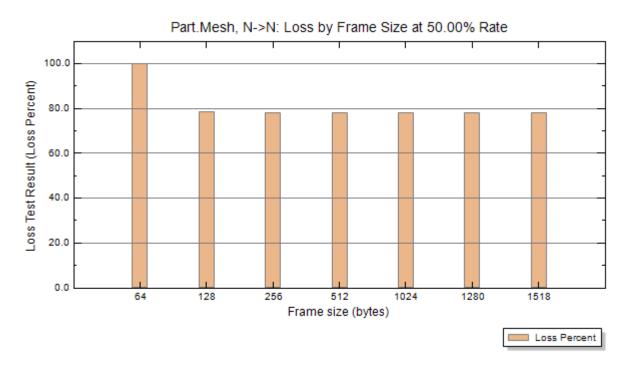

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G
Tx Rate (Fps)	16,071,426	9,121,615	4,891,298	2,537,587	1,293,095	1,038,452
Rx Rate (Percent)	0.01 %	0.02 %	0.09 %	30 %	30.29 %	30.8 %
Rx Rate (L1) (Bit/s)	1.83 M	4 M	16.27 M	5.4 G	5.45 G	5.54 G
Rx Rate (Fps)	2.72 K	3.37 K	7.37 K	1.27 M	652.7 K	533.15 K
Loss Rate (Percent)	99.98 %	99.96 %	99.85 %	50 %	49.52 %	48.66 %
Loss (Frames)	482,061,121	273,547,214	146,517,888	38,065,192	19,211,989	15,158,951
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,423	4,253	12,743	2,116,217	1,087,328	889,133
- Rx Rate (L1) (Bit/s)	99.08 K	167.85 K	937.88 K	300.22 M	302.71 M	308.23 M
- Rx Rate (Fps)	147	142	425	70,541	36,244	29,638
- Flood Count (Frames)	64	62	63	57	58	61
P-0-0-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	2,575	5,983	12,824	2,117,013	1,087,444	889,030
- Rx Rate (L1) (Bit/s)	57.68 K	236.13 K	943.85 K	300.33 M	302.74 M	308.2 M
- Rx Rate (Fps)	86	199	427	70,567	36,248	29,634
- Flood Count (Frames)	63	61	65	58	56	58
P-0-0-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,015	6,157	12,753	2,116,552	1,086,763	889,172
- Rx Rate (L1) (Bit/s)	112.34 K	243 K	938.62 K	300.27 M	302.55 M	308.25 M
- Rx Rate (Fps)	167	205	425	70,552	36,225	29,639
- Flood Count (Frames)	65	63	65	60	56	58
P-0-0-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,139	6,209	12,706	2,117,698	1,086,864	889,013



- Rx Rate (L1) (Bit/s)	115.11 K	245.05 K	935.16 K	300.43 M	302.58 M	308.19 M
- Rx Rate (Fps) - Flood Count (Frames)	171	207 60	424 62	70,590 58	36,229 60	29,634 61
P-0-0-4	04	00	02	30	00	01
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	2,599	4,228	12,654	2,116,901	1,087,282	889,372
- Rx Rate (L1) (Bit/s)	58.22 K	166.87 K	931.33 K	300.32 M	302.7 M	308.32 M
- Rx Rate (Fps)	87	141	422	70,563	36,243	29,646
- Flood Count (Frames)	60	60	64	58	58	57
P-0-0-5 - Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx (Frames)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,209	6,189	12,449	2,116,518	1,088,209	888,801
- Rx Rate (L1) (Bit/s)	116.68 K	244.26 K	916.25 K	300.26 M	302.96 M	308.12 M
- Rx Rate (Fps)	174	206	415	70,551	36,274	29,627
- Flood Count (Frames)	29	29	27	22	25	24
P-0-2-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames) - Rx Rate (L1) (Bit/s)	2,563 57.41 K	6,234 246.04 K	12,377 910.95 K	2,115,313 300.09 M	1,087,624 302.79 M	889,730 308.44 M
- Rx Rate (ET) (Bibs)	85	240.04 K	413	70,510	36,254	29,658
- Flood Count (Frames)	62	60	63	70,510	55	29,030
P-0-2-1	02	- 00				- 01
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,105	4,270	12,371	2,114,660	1,087,512	889,271
- Rx Rate (L1) (Bit/s)	114.35 K	168.52 K	910.51 K	300 M	302.76 M	308.28 M
- Rx Rate (Fps)	170	142	412	70,489	36,250	29,642
- Flood Count (Frames)	64	62	62	55	59	59
P-0-2-2	00 705 740	45 000 000	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,710 600 M	15,202,692 600 M	8,152,163 600 M	4,229,311 600 M	2,155,158 600 M	1,730,753 599.99 M
- Tx Rate (E1) (Blus)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,158	6,178	12,248	2,115,098	1,088,780	875,032
- Rx Rate (L1) (Bit/s)	115.54 K	243.83 K	901.45 K	300.06 M	303.12 M	303.36 M
- Rx Rate (Fps)	172	206	408	70,503	36,293	29,169
- Flood Count (Frames)	63	65	62	59	54	58
P-0-2-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,163	6,185	12,218	2,113,758	1,088,940	889,464
- Rx Rate (L1) (Bit/s)	115.65 K 172	244.1 K 206	899.24 K 407	299.87 M 70,459	303.16 M 36,298	308.35 M 29,649
- Rx Rate (Fps) - Flood Count (Frames)	63	64	63	70,459	36,298 57	29,649 57
P-0-2-4	03	04	03	31	31	31
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,183	6,112	12,159	2,114,308	1,088,820	889,631
- Rx Rate (L1) (Bit/s)	116.1 K	241.22 K	894.9 K	299.95 M	303.13 M	308.41 N
- Rx Rate (Fps)	173	204	405	70,477	36,294	29,654
- Flood Count (Frames)	64	60	66	57	56	54
P-0-2-5	00 705 740	45 000 000	0.450.400	4.000.044	0.455.450	4 700 7-0
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 N
- Tx Rate (Fps) - Rx (Frames)	892,857 5,203	506,756 5,950	271,739 12,117	140,977 2,092,614	71,839 1,088,086	57,692 889,381
- Rx (Frames) - Rx Rate (L1) (Bit/s)	5,203 116.55 K	234.83 K	891.81 K	2,092,614 296.87 M	302.92 M	308.32 M
- Rx Rate (E1) (Blus)	173	234.63 K	404	69,754	36,270	29,646
- Flood Count (Frames)	64	61	61	55	60	61
P-0-4-0			.			0.
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 N
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692



- Rx (Frames)	5,205	5,799	12,110	2,115,088	1,088,911	889,686
- Rx Rate (L1) (Bit/s)	116.59 K	228.87 K	891.3 K	300.06 M	303.15 M	308.42 M
- Rx Rate (Fps)	174	193	404	70,503	36,297	29,656
- Flood Count (Frames)	58	58	59	58	54	57
P-0-4-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	5,054	5,727	11,969	2,114,708	1,088,026	889,543
- Rx Rate (L1) (Bit/s)	113.21 K	226.03 K	880.92 K	300.01 M	302.91 M	308.37 M
- Rx Rate (Fps)	168	191	399	70,490	36,268	29,651
- Flood Count (Frames)	59	59	59	59	54	54
P-0-4-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,817	5,603	11,940	2,116,907	1,088,045	889,742
- Rx Rate (L1) (Bit/s)	107.9 K	221.13 K	878.78 K	300.32 M	302.91 M	308.44 M
- Rx Rate (Fps)	161	187	398	70,564	36,268	29,658
- Flood Count (Frames)	58	59	62	55	55	54
P-0-4-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,643	5,490	11,886	2,116,667	1,087,616	889,452
- Rx Rate (L1) (Bit/s)	104 K	216.67 K	874.81 K	300.28 M	302.79 M	308.34 M
- Rx Rate (Fps)	155	183	396	70,556	36,254	29,648
- Flood Count (Frames)	61	60	59	55	56	58
P-0-4-4						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,385	5,406	11,811	2,115,474	1,087,450	889,475
- Rx Rate (L1) (Bit/s)	98.22 K	213.36 K	869.29 K	300.12 M	302.75 M	308.35 M
- Rx Rate (Fps)	146	180	394	70,516	36,248	29,649
- Flood Count (Frames)	60	60	59	55	57	54
P-0-4-5						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,220	5,269	11,711	2,116,912	1,087,155	889,636
- Rx Rate (L1) (Bit/s)	94.53 K	207.95 K	861.93 K	300.32 M	302.66 M	308.41 M
- Rx Rate (Fps)	141	176	390	70,564	36,239	29,655
- Flood Count (Frames)	60	60	64	54	53	56

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10.8 G
Tx Rate (Fps)	877,761
Rx Rate (Percent)	29.84 %
Rx Rate (L1) (Bit/s)	5.37 G
Rx Rate (Fps)	436.56 K
Loss Rate (Percent)	50.26 %
Loss (Frames)	13,236,076
P-0-0-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	724,634
- Rx Rate (L1) (Bit/s)	297.2 M
- Rx Rate (Fps)	24,154
- Flood Count (Frames)	55
P-0-0-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	726,462
- Rx Rate (L1) (Bit/s)	297.95 M




- Rx Rate (Fps)	24,215
- Flood Count (Frames)	54
P-0-0-2	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,375
- Rx Rate (L1) (Bit/s)	298.32 M
- Rx Rate (Fps)	24,246
- Flood Count (Frames)	55
P-0-0-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,500
- Rx Rate (L1) (Bit/s)	298.37 M
- Rx Rate (Fps)	24,250
- Flood Count (Frames)	55
P-0-0-4	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,799
- Rx Rate (L1) (Bit/s)	298.49 M
- Rx Rate (Fps)	24,260
- Flood Count (Frames)	57
P-0-0-5	<u> </u>
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,919
- Rx Rate (L1) (Bit/s)	298.54 M
- Rx Rate (Fps)	24,264
- Flood Count (Frames)	24,204
P-0-2-0	
	1 462 025
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,661
- Rx Rate (L1) (Bit/s)	298.85 M 24,289
- Rx Rate (Fps)	
- Flood Count (Frames)	54
P-0-2-1	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	729,419
- Rx Rate (L1) (Bit/s)	299.16 M
- Rx Rate (Fps)	24,314
- Flood Count (Frames)	56
P-0-2-2	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,030
- Rx Rate (L1) (Bit/s)	299.41 M
- Rx Rate (Fps)	24,334
- Flood Count (Frames)	55
P-0-2-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,810
- Rx Rate (L1) (Bit/s)	298.91 M
- Rx Rate (Fps)	24,294
	57
- Flood Count (Frames)	
- Flood Count (Frames) P-0-2-4	
P-0-2-4	1 462 025
P-0-2-4 - Tx (Frames)	1,462,935
P-0-2-4	1,462,935 600 M 48,765



D D ((14) (D;)()	000 04 14
- Rx Rate (L1) (Bit/s)	296.84 M
- Rx Rate (Fps)	24,126
- Flood Count (Frames)	57
P-0-2-5	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	729,620
- Rx Rate (L1) (Bit/s)	299.24 M
- Rx Rate (Fps)	24,321
- Flood Count (Frames)	53
P-0-4-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,561
- Rx Rate (L1) (Bit/s)	298.81 M
- Rx Rate (Fps)	24,285
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,270
- Rx Rate (L1) (Bit/s)	298.69 M
- Rx Rate (Fps)	24,276
- Flood Count (Frames)	54
P-0-4-2	01
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (ET) (Blus)	48,765
- Rx (Frames)	727,164
- Rx Rate (L1) (Bit/s)	298.23 M 24,239
- Rx Rate (Fps)	24,239
- Flood Count (Frames) P-0-4-3	00
	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	726,733
- Rx Rate (L1) (Bit/s)	298.06 M
- Rx Rate (Fps)	24,224
- Flood Count (Frames)	57
P-0-4-4	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,530
- Rx Rate (L1) (Bit/s)	298.38 M
- Rx Rate (Fps)	24,251
- Flood Count (Frames)	55
P-0-4-5	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	726,493
- Rx Rate (L1) (Bit/s)	297.96 M
- Rx Rate (Fps)	24,216
- Flood Count (Frames)	54
	34



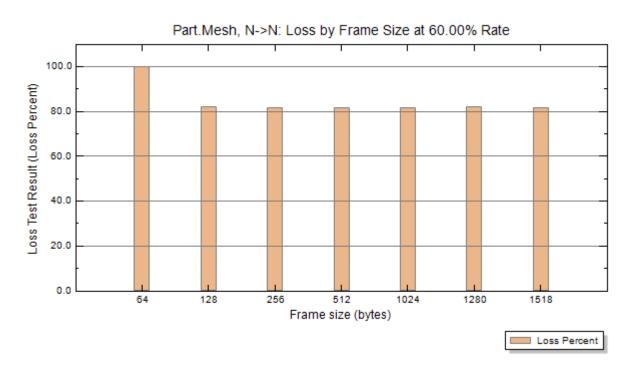

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G
Tx Rate (Fps)	18,749,997	10,641,884	5,706,512	2,960,519	1,508,611	1,211,536
Rx Rate (Percent)	0.01 %	0.02 %	0.08 %	34.72 %	34.84 %	34.37 %
Rx Rate (L1) (Bit/s)	1.29 M	3.42 M	13.82 M	6.25 G	6.27 G	6.19 G
Rx Rate (Fps)	1.93 K	2.89 K	6.26 K	1.47 M	750.83 K	594.94 K
Loss Rate (Percent)	99.99 %	99.97 %	99.89 %	50.4 %	50.23 %	50.89 %
Loss (Frames)	562,442,102	319,169,783	171,007,582	44,762,030	22,733,407	18,497,789
P-0-0-0						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,131	4,989	10,792	2,447,504	1,252,931	990,615
- Rx Rate (L1) (Bit/s)	47.73 K	196.9 K	794.29 K	347.22 M	348.82 M	343.41 M
- Rx Rate (Fps)	71	166	360	81,583	41,764	33,021
- Flood Count (Frames)	61	59	64	59	55	54
P-0-0-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,125	5,217	11,040	2,447,801	1,253,322	990,682
- Rx Rate (L1) (Bit/s)	70 K	205.9 K	812.54 K	347.26 M	348.92 M	343.44 M
- Rx Rate (Fps)	104	174	368	81,593	41,777	33,023
- Flood Count (Frames)	62	60	62	60	57	58
P-0-0-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,420	5,209	10,751	2,447,647	1,252,105	991,927
- Rx Rate (L1) (Bit/s)	76.61 K	205.58 K	791.27 K	347.24 M	348.59 M	343.87 M
- Rx Rate (Fps)	114	174	358	81,588	41,737	33,064
- Flood Count (Frames)	65	60	62	59	56	55
P-0-0-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,509	5,198	11,020	2,449,118	1,252,353	992,349



- Rx Rate (L1) (Bit/s)	78.6 K	205.15 K	811.07 K	347.45 M	348.66 M	344.01 M
- Rx Rate (Fps)	117	173	367	81,637	41,745	33,078
- Flood Count (Frames)	62	58	63	56	56	56
P-0-0-4	24 240 005	47 700 474	0.540.054	4 004 400	0.544.054	2 040 220
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,490	5,229	10,723 789.21 K	2,435,673	1,252,720	992,040
- Rx Rate (L1) (Bit/s)	78.18 K	206.37 K		345.54 M	348.76 M	343.91 M
- Rx Rate (Fps)	116	174	357	81,189	41,757	33,068
- Flood Count (Frames)	64	58	63	58	58	55
P-0-0-5 - Tx (Frames)	24 240 005	17.736.474	0.540.054	4 004 400	2.514.351	0.040.000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,995	700 M	9,510,854	4,934,199	,- ,	2,019,226
(, (,	700 M 1.041.667		700 M 317.028	700 M 164.473	700 M	700 M
- Tx Rate (Fps) - Rx (Frames)	3,491	591,216 5,229	10,934	2,448,377	83,812 1,252,735	67,308 992,293
, ,		206.37 K				
- Rx Rate (L1) (Bit/s)	78.2 K		804.74 K	347.34 M	348.76 M	343.99 M
- Rx Rate (Fps)	116 28	174	364	81,613	41,758	33,076
- Flood Count (Frames) P-0-2-0	20	27	29	24	26	26
	24 240 005	17 726 474	0.510.054	4 024 100	0.514.051	2 040 226
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028 10.638	164,473 2,447,120	83,812 1,226,571	67,308 991,013
- Rx (Frames)	3,502	3,416	- ,			
- Rx Rate (L1) (Bit/s)	78.44 K	134.82 K	782.96 K	347.16 M	341.48 M	343.55 M
- Rx Rate (Fps)	117	114	355	81,571	40,886	33,034
- Flood Count (Frames) P-0-2-1	63	60	61	61	58	57
- Tx (Frames)	24 240 005	17 726 474	0.510.054	4 024 100	0.514.051	2 040 226
,	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,513	5,219	10,559 777.14 K	2,448,890	1,253,485	991,436
- Rx Rate (L1) (Bit/s)	78.69 K	205.98 K		347.42 M	348.97 M	343.7 M
- Rx Rate (Fps)	117 63	174 63	352 64	81,630	41,783	33,048
- Flood Count (Frames) P-0-2-2	03	03	04	59	60	59
	24 240 005	17 726 474	0.510.054	4 024 100	0 514 051	2 040 226
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,498	5,238	10,320	2,448,163	1,252,973	990,481
- Rx (Flames)	78.36 K	206.73 K	759.55 K	2,446,163 347.31 M	348.83 M	343.37 M
- Rx Rate (Fps)	76.30 K	175	759.55 K	81,605	41,766	33,016
- Flood Count (Frames)	64	56	62	60	59	58
P-0-2-3	04	30	02	00	33	30
- Tx (Frames)	31,249,995	17,736,474	9.510.854	4.934.199	2,514,351	2,019,226
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,527	5,218	10.479	2,448,562	1,252,871	990,658
- Rx Rate (L1) (Bit/s)	79 K	205.94 K	771.25 K	347.37 M	348.8 M	343.43 M
- Rx Rate (Fps)	118	203.94 K	349	81,619	41,762	33,022
- Flood Count (Frames)	61	59	61	58	58	56
P-0-2-4	01	39	01	30	30	30
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,496	5,231	10,328	2,448,060	1,252,222	990,805
- Rx Rate (L1) (Bit/s)	78.31 K	206.45 K	760.14 K			343.48 M
	117	200.45 K	760.14 K	347.3 M 81,602	348.62 M 41,741	33,027
- Rx Rate (Fps) - Flood Count (Frames)	62	61	61	61,002	56	53,027
P-0-2-5	02	01	01	01	30	30
	21 240 005	17 726 474	0.510.954	4 024 100	2 514 251	2 010 226
- Tx (Frames)	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M
- Tx Rate (L1) (Bit/s)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Tx Rate (Fps)						
- Rx (Frames)	2,131	3,294	10,158	2,448,730	1,252,743	991,602
- Rx Rate (L1) (Bit/s)	47.73 K	130 K	747.63 K	347.39 M	348.76 M	343.76 M
- Rx Rate (Fps)	71 62	110	339	81,624	41,758	33,053
- Flood Count (Frames)	02	61	61	57	56	59
P-0-4-0	31 340 005	17 726 474	0.510.054	4 024 100	2 514 251	2 040 220
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308



- Rx (Frames)	3,536	4,967	10,215	2,448,422	1,252,919	993,162
- Rx Rate (L1) (Bit/s)	79.21 K	196.03 K	751.82 K	347.35 M	348.81 M	344.3 M
- Rx Rate (Fps)	118	166	341	81,614	41,764	33,105
- Flood Count (Frames)	59	59	58	59	59	52
P-0-4-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,510	4,889	9,937	2,448,616	1,251,918	993,384
- Rx Rate (L1) (Bit/s)	78.62 K	192.95 K	731.36 K	347.38 M	348.53 M	344.37 M
- Rx Rate (Fps)	117	163	331	81,621	41,731	33,113
- Flood Count (Frames)	56	61	59	55	59	55
P-0-4-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,300	4,723	10,170	2,447,713	1,253,185	992,421
- Rx Rate (L1) (Bit/s)	73.92 K	186.4 K	748.51 K	347.25 M	348.89 M	344.04 M
- Rx Rate (Fps)	110	157	339	81,590	41,773	33,081
- Flood Count (Frames)	61	62	58	56	55	54
P-0-4-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,087	4,624	9,919	2,447,973	1,254,235	991,639
- Rx Rate (L1) (Bit/s)	69.15 K	182.49 K	730.04 K	347.29 M	349.18 M	343.77 M
- Rx Rate (Fps)	103	154	331	81,599	41,808	33,055
- Flood Count (Frames)	58	55	60	56	58	58
P-0-4-4						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,878	4,485	9,938	2,447,327	1,253,070	991,036
- Rx Rate (L1) (Bit/s)	64.47 K	177.01 K	731.44 K	347.19 M	348.85 M	343.56 M
- Rx Rate (Fps)	96	150	331	81,578	41,769	33,035
- Flood Count (Frames)	63	61	60	54	53	54
P-0-4-5						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,664	4,374	9,869	2,447,856	1,252,553	990,736
- Rx Rate (L1) (Bit/s)	59.67 K	172.63 K	726.36 K	347.27 M	348.71 M	343.46 M
- Rx Rate (Fps)	89	146	329	81,595	41,752	33,025
- Flood Count (Frames)	61	58	58	57	58	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12.6 G
Tx Rate (Fps)	1,024,049
Rx Rate (Percent)	34.48 %
Rx Rate (L1) (Bit/s)	6.21 G
Rx Rate (Fps)	504.39 K
Loss Rate (Percent)	50.75 %
Loss (Frames)	15,589,821
P-0-0-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	839,279
- Rx Rate (L1) (Bit/s)	344.22 M
- Rx Rate (Fps)	27,976
- Flood Count (Frames)	57
P-0-0-1	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	840,871
- Rx Rate (L1) (Bit/s)	344.87 M




D D (()	22.222
- Rx Rate (Fps) - Flood Count (Frames)	28,029
P-0-0-2	57
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	840,052
- Rx Rate (L1) (Bit/s)	344.53 M
- Rx Rate (Fps)	28,002
- Flood Count (Frames)	56
P-0-0-3	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,016 344.93 M
- Rx Rate (L1) (Bit/s)	28,034
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-0-4	58
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,653
- Rx Rate (L1) (Bit/s)	345.19 M
- Rx Rate (Fps)	28,055
- Flood Count (Frames)	54
P-0-0-5	-
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	840,361
- Rx Rate (L1) (Bit/s)	344.66 M
- Rx Rate (Fps)	28,012
- Flood Count (Frames)	30
P-0-2-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,390
- Rx Rate (L1) (Bit/s)	345.08 M
- Rx Rate (Fps)	28,046
- Flood Count (Frames) P-0-2-1	57
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	842,168
- Rx Rate (L1) (Bit/s)	345.4 M
- Rx Rate (Fps)	28,072
- Flood Count (Frames)	57
P-0-2-2	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	839,576
- Rx Rate (L1) (Bit/s)	344.34 M
- Rx Rate (Fps)	27,986
- Flood Count (Frames)	56
P-0-2-3	1 700 - 10
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	840,641
- Rx Rate (L1) (Bit/s)	344.77 M
- Rx Rate (Fps) - Flood Count (Frames)	28,021 53
P-0-2-4	53
- Tx (Frames)	1,706,749
- Tx (Hames)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,946
(5 , 5 . 5



- Rx Rate (L1) (Bit/s)	345.31 M
- Rx Rate (Fps)	28,065
- Flood Count (Frames)	55
P-0-2-5	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	838,586
- Rx Rate (L1) (Bit/s)	343.93 M
- Rx Rate (Fps)	27,953
- Flood Count (Frames)	54
P-0-4-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,479
- Rx Rate (L1) (Bit/s)	345.12 M
- Rx Rate (Fps)	28,049
- Flood Count (Frames) P-0-4-1	57
	1 706 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,166
- Rx Rate (L1) (Bit/s)	344.99 M
- Rx Rate (Fps)	28,039
- Flood Count (Frames)	57_
P-0-4-2	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	840,615
- Rx Rate (L1) (Bit/s)	344.76 M
- Rx Rate (Fps)	28,021
- Flood Count (Frames)	57
P-0-4-3	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	841,027
- Rx Rate (L1) (Bit/s)	344.93 M
- Rx Rate (Fps)	28,034
- Flood Count (Frames)	54
P-0-4-4	<u> </u>
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (E1) (Blus)	56,892
- Rx (Frames)	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	840,195 344.59 M
- Rx Rate (Fps)	28,007
- Flood Count (Frames)	54
P-0-4-5	4 700 7 10
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	839,640
- Rx Rate (L1) (Bit/s)	344.36 M
- Rx Rate (Fps)	27,988
 Flood Count (Frames) 	53



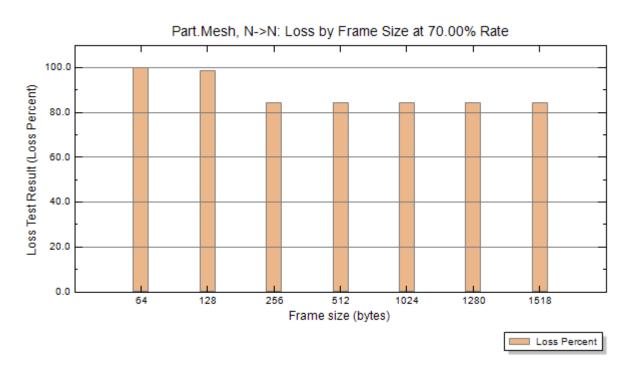

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G
Tx Rate (Fps)	21,428,568	12,162,154	6,521,737	3,383,452	1,724,137	1,384,609
Rx Rate (Percent)	0.01 %	0.02 %	0.05 %	37.99 %	37.77 %	39.9 %
Rx Rate (L1) (Bit/s)	1.05 M	3.48 M	9.55 M	6.84 G	6.8 G	7.18 G
Rx Rate (Fps)	1.56 K	2.94 K	4.32 K	1.61 M	814.03 K	690.64 K
Loss Rate (Percent)	99.99 %	99.98 %	99.93 %	52.51 %	52.79 %	50.12 %
Loss (Frames)	642,810,333	364,776,511	195,522,376	53,298,509	27,303,219	20,818,989
P-0-0-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,487	4,705	6,202	2,687,376	1,359,593	1,152,702
- Rx Rate (L1) (Bit/s)	55.71 K	185.69 K	456.47 K	381.25 M	378.51 M	399.6 M
- Rx Rate (Fps)	83	157	207	89,579	45,320	38,423
- Flood Count (Frames)	62	62	62	58	52	60
P-0-0-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,841	5,236	7,593	2,688,472	1,359,982	1,153,274
- Rx Rate (L1) (Bit/s)	63.64 K	206.65 K	558.84 K	381.4 M	378.62 M	399.8 M
- Rx Rate (Fps)	95	175	253	89,616	45,333	38,442
- Flood Count (Frames)	60	63	64	56	54	59
P-0-0-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,935	5,218	7,661	2,573,088	1,359,419	1,126,908
- Rx Rate (L1) (Bit/s)	65.74 K	205.94 K	563.85 K	365.04 M	378.46 M	390.66 M
- Rx Rate (Fps)	98	174	255	85,770	45,314	37,564
- Flood Count (Frames)	60	59	64	55	52	56
P-0-0-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,951	5,228	7,765	2,686,555	1,360,074	1,153,156



- Rx Rate (L1) (Bit/s)	66.1 K	206.33 K	571.5 K	381.13 M	378.64 M	399.76 M
- Rx Rate (Fps)	98	174	259	89,552	45,336	38,439
- Flood Count (Frames)	61	61	63	56	55	57
P-0-0-4	25 714 200	20 270 256	10.000 EGO	E 620 007	0.070 EG4	2 207 600
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 1,190,476	800 M 675,675	800 M 362,319	800 M 187,970	800 M 95,785	800 M 76,923
- Rx (Frames)	2,972	2,926	7,798	2,667,318	1,359,898	1,153,064
- Rx Rate (L1) (Bit/s)	66.57 K	115.48 K	573.93 K	378.4 M	378.6 M	399.73 N
- Rx Rate (Fps)	99	98	260	88,911	45,330	38,435
- Flood Count (Frames)	61	62	62	55	57	57
P-0-0-5	0.1	02			0.	0.
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5.639.087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	1,469	5,287	7,811	2,685,577	1,324,432	1,145,090
- Rx Rate (L1) (Bit/s)	32.91 K	208.66 K	574.89 K	380.99 M	368.72 M	396.96 M
- Rx Rate (Fps)	49	176	260	89,519	44,148	38,170
- Flood Count (Frames)	27	26	29	29	25	24
P-0-2-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,958	5,253	7,543	2,686,484	1,360,166	1,152,947
- Rx Rate (L1) (Bit/s)	66.26 K	207.32 K	555.16 K	381.12 M	378.67 M	399.69 M
- Rx Rate (Fps)	99	175	251	89,549	45,339	38,432
- Flood Count (Frames)	60	61	62	56	58	56
P-0-2-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,924	5,175	7,521	2,685,079	1,359,904	1,152,743
- Rx Rate (L1) (Bit/s)	65.5 K	204.24 K	553.55 K	380.92 M	378.6 M	399.62 M
- Rx Rate (Fps)	97	173	251	89,503	45,330	38,425
- Flood Count (Frames)	58	61	61	56	55	57
P-0-2-2 - Tx (Frames)	25 714 200	20 270 256	10.960.563	5 620 007	2 972 561	2 207 692
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35,714,280 800 M	20,270,256 800 M	10,869,562 800 M	5,639,087 800 M	2,873,561 800 M	2,307,682 800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,968	5,214	7,486	2,687,301	1,361,242	1,153,503
- Rx Rate (L1) (Bit/s)	66.48 K	205.78 K	550.97 K	381.24 M	378.97 M	399.88 M
- Rx Rate (Fps)	99	174	250	89,577	45,375	38,450
- Flood Count (Frames)	61	62	63	57	53	57
P-0-2-3	<u> </u>			0.		<u> </u>
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,982	5,182	5,871	2,657,263	1,360,401	1,152,779
- Rx Rate (L1) (Bit/s)	66.8 K	204.52 K	432.11 K	376.98 M	378.74 M	399.63 M
- Rx Rate (Fps)	99	173	196	88,575	45,347	38,426
- Flood Count (Frames)	60	61	62	59	56	54
P-0-2-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	1,469	5,248	7,275	2,686,371	1,360,254	1,152,861
- Rx Rate (L1) (Bit/s)	32.91 K	207.12 K	535.44 K	381.11 M	378.69 M	399.66 M
- Rx Rate (Fps)	49	175	243	89,546	45,342	38,429
- Flood Count (Frames)	60	62	61	54	56	57
P-0-2-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	1,470	5,199	7,270	2,687,200	1,334,772	1,152,821
- Rx Rate (L1) (Bit/s)	32.93 K	205.19 K	535.07 K	381.22 M	371.6 M	399.64 M
- Rx Rate (Fps)	49	173	242	89,573	44,492	38,427
- Flood Count (Frames)	61	61	64	55	58	57
P-0-4-0	25 714 200	20 270 256	10 060 560	E 620 007	0 070 EG4	2 207 600
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923



- Rx (Frames)	2,961	5,109	7,194	2,688,314	1,361,344	1,153,018
- Rx Rate (L1) (Bit/s)	66.33 K	201.64 K	529.48 K	381.38 M	379 M	399.71 M
- Rx Rate (Fps)	99	170	240	89,610	45,378	38,434
- Flood Count (Frames)	59	59	61	55	57	56
P-0-4-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	3,009	4,921	7,081	2,686,649	1,360,245	1,153,348
- Rx Rate (L1) (Bit/s)	67.4 K	194.22 K	521.16 K	381.15 M	378.69 M	399.83 M
- Rx Rate (Fps)	100	164	236	89,555	45,342	38,445
- Flood Count (Frames)	61	59	56	56	55	59
P-0-4-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,951	4,759	7,004	2,686,528	1,360,153	1,153,176
- Rx Rate (L1) (Bit/s)	66.1 K	187.82 K	515.49 K	381.13 M	378.67 M	399.77 M
- Rx Rate (Fps)	98	159	233	89,551	45,338	38,439
- Flood Count (Frames)	61	58	61	57	54	55
P-0-4-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,726	4,639	6,964	2,688,869	1,359,308	1,152,484
- Rx Rate (L1) (Bit/s)	61.06 K	183.09 K	512.55 K	381.46 M	378.43 M	399.53 M
- Rx Rate (Fps)	91	155	232	89,629	45,310	38,416
- Flood Count (Frames)	57	59	62	55	56	58
P-0-4-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,433	4,465	6,886	2,689,659	1,359,654	1,152,305
- Rx Rate (L1) (Bit/s)	54.5 K	176.22 K	506.81 K	381.57 M	378.53 M	399.47 M
- Rx Rate (Fps)	81	149	230	89,655	45,322	38,410
- Flood Count (Frames)	58	58	63	54	54	55
P-0-4-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,201	4,333	6,815	2,686,954	1,360,038	1,153,108
- Rx Rate (L1) (Bit/s)	49.3 K	171.01 K	501.58 K	381.19 M	378.63 M	399.74 M
- Rx Rate (Fps)	73	144	227	89,565	45,335	38,437
- Flood Count (Frames)	60	59	61	57	55	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14.4 G
Tx Rate (Fps)	1,170,348
Rx Rate (Percent)	38.15 %
Rx Rate (L1) (Bit/s)	6.87 G
Rx Rate (Fps)	558.11 K
Loss Rate (Percent)	52.31 %
Loss (Frames)	18,367,149
P-0-0-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	929,015
- Rx Rate (L1) (Bit/s)	381.02 M
- Rx Rate (Fps)	30,967
- Flood Count (Frames)	56
P-0-0-1	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	928,814
- Rx Rate (L1) (Bit/s)	380.94 M




- Rx Rate (Fps)	30,960
- Flood Count (Frames)	56
P-0-0-2	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	928,808
- Rx Rate (L1) (Bit/s)	380.94 M
- Rx Rate (Fps)	30,960
- Flood Count (Frames) P-0-0-3	56
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	928,990
- Rx Rate (L1) (Bit/s)	381.01 M
- Rx Rate (Fps)	30,966
- Flood Count (Frames)	54
P-0-0-4	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	929,488
- Rx Rate (L1) (Bit/s)	381.21 M
- Rx Rate (Fps) - Flood Count (Frames)	30,983
P-0-0-5	55
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	930,166
- Rx Rate (L1) (Bit/s)	381.49 M
- Rx Rate (Fps)	31,006
- Flood Count (Frames)	24
P-0-2-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames) - Rx Rate (L1) (Bit/s)	917,216 376.18 M
- Rx Rate (ET) (Blus)	30,574
- Flood Count (Frames)	57
P-0-2-1	<u> </u>
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	934,112
- Rx Rate (L1) (Bit/s)	383.11 M
- Rx Rate (Fps)	31,137
- Flood Count (Frames)	55
P-0-2-2	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M 65,019
- Tx Rate (Fps) - Rx (Frames)	935,320
- Rx (Frames) - Rx Rate (L1) (Bit/s)	383.61 M
- Rx Rate (ET) (Blus)	31,177
- Flood Count (Frames)	54
P-0-2-3	<u> </u>
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	932,981
- Rx Rate (L1) (Bit/s)	382.65 M
- Rx Rate (Fps)	31,099
- Flood Count (Frames)	53
P-0-2-4	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps) - Rx (Frames)	65,019 935,017
- IVX (I Iailics)	933,U1 <i>1</i>



- Rx Rate (L1) (Bit/s)	383.48 M
- Rx Rate (Fps)	31,167
- Flood Count (Frames)	57
P-0-2-5	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	932,068
- Rx Rate (L1) (Bit/s)	382.27 M
- Rx Rate (Fps)	31,069
- Flood Count (Frames) P-0-4-0	57
	1 050 500
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,950,580
	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	933,341
- Rx Rate (L1) (Bit/s)	382.79 M
- Rx Rate (Fps)	31,111
- Flood Count (Frames) P-0-4-1	55
	1 050 500
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,950,580
- Tx Rate (ET) (Blus)	800 M 65,019
- Rx (Frames)	·
	930,881
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	381.79 M 31,029
- Flood Count (Frames)	55
P-0-4-2	55
- Tx (Frames)	1,950,580
- Tx (Frames)	800 M
- Tx Rate (ET) (Bl/s)	65,019
- Rx (Frames)	930,892
- Rx Rate (L1) (Bit/s)	381.79 M
- Rx Rate (Fps)	31,030
- Flood Count (Frames)	55
P-0-4-3	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	928,749
- Rx Rate (L1) (Bit/s)	380.91 M
- Rx Rate (Fps)	30,958
- Flood Count (Frames)	57
P-0-4-4	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	928,209
- Rx Rate (L1) (Bit/s)	380.69 M
- Rx Rate (Fps)	30,940
- Flood Count (Frames)	58
P-0-4-5	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	929,224
- Rx Rate (L1) (Bit/s)	381.11 M
- Rx Rate (Fps)	30,974
- Flood Count (Frames)	59



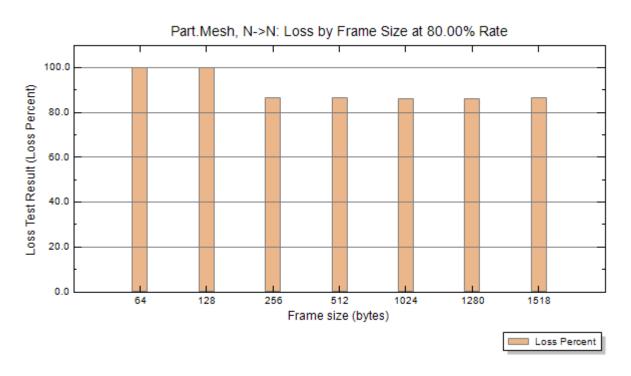

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G
Tx Rate (Fps)	24,107,139	13,682,423	7,336,952	3,806,385	1,939,652	1,557,683
Rx Rate (Percent)	0.01 %	0.01 %	0.05 %	12.26 %	16.15 %	24.21 %
Rx Rate (L1) (Bit/s)	1.17 M	2.35 M	8.46 M	2.21 G	2.91 G	4.36 G
Rx Rate (Fps)	1.74 K	1.98 K	3.83 K	518.63 K	348 K	419.04 K
Loss Rate (Percent)	99.99 %	99.99 %	99.95 %	86.37 %	82.06 %	73.1 %
Loss (Frames)	723,162,093	410,413,188	219,993,609	98,632,538	47,749,646	34,159,409
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,736	3,643	6,808	1,041,924	658,387	738,497
- Rx Rate (L1) (Bit/s)	61.29 K	143.78 K	501.07 K	147.81 M	183.29 M	256.01 M
- Rx Rate (Fps)	91	121	227	34,731	21,946	24,617
- Flood Count (Frames)	63	64	63	33	28	41
P-0-0-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,165	3,850	0	1,038,032	658,060	736,056
- Rx Rate (L1) (Bit/s)	70.9 K	151.95 K	0	147.26 M	183.2 M	255.17 M
- Rx Rate (Fps)	106	128	0	34,601	21,935	24,535
- Flood Count (Frames)	59	62	1	30	34	45
P-0-0-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,231	3,878	7,080	1,040,697	0	737,382
- Rx Rate (L1) (Bit/s)	72.37 K	153.05 K	521.09 K	147.64 M	0	255.63 M
- Rx Rate (Fps)	108	129	236	34,690	0	24,579
- Flood Count (Frames)	62	61	64	28	2	43
P-0-0-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	0	3,868	7,025	0	663,970	750,228



- Rx Rate (L1) (Bit/s)	0	152.66 K	517.04 K	0	184.85 M	260.08 M
- Rx Rate (Fps)	0	129	234	0	22,132	25,008
- Flood Count (Frames)	1	61	64	1	35	37
P-0-0-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,196	3,870	7,025	0	649,008	737,741
- Rx Rate (L1) (Bit/s)	71.59 K	152.74 K	517.04 K	0	180.68 M	255.75 M
- Rx Rate (Fps)	107	129	234	0	21,634	24,591
- Flood Count (Frames)	59	59	64	1	36	43
P-0-0-5	10 170 505	00 004 000	40.000.050	0.040.075	0.000.754	0.500.400
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,206	0	7,035	1,041,040	653,044	0
- Rx Rate (L1) (Bit/s)	71.81 K	0	517.78 K	147.69 M	181.81 M	0
- Rx Rate (Fps)	107	0	235	34,701	21,768	0
- Flood Count (Frames)	32	2	24	13	14	2
P-0-2-0	40 470 505	22 204 222	40 000 050	0.040.075	2 222 754	0.500.400
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,198	3,935	7,029	1,038,752	644,239	755,735
- Rx Rate (L1) (Bit/s)	71.64 K	155.3 K	517.33 K	147.36 M	179.36 M	261.99 M
- Rx Rate (Fps)	107	131	234	34,625	21,475	25,191
- Flood Count (Frames)	61	61	62	35	36	40
P-0-2-1	40 470 505	00 004 000	40.000.050	0.040.075	0.000.754	0.500.400
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,190	3,881	7,082	1,040,277	659,492	737,596
- Rx Rate (L1) (Bit/s)	71.46 K	153.17 K	521.24 K	147.58 M	183.6 M	255.7 M
- Rx Rate (Fps)	106	129	236	34,676	21,983	24,587
- Flood Count (Frames)	61	62	64	34	36	35
P-0-2-2	40 470 505	22 204 222	40 000 050	0.040.075	2 222 754	0.500.400
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	900 M 1,339,286	900 M 760,135	900 M 407,608	900 M	900 M 107,758	899.99 M 86,538
- Rx (Frames)	3,212	3,909	6,936	211,466 1,041,633	645,140	744,733
- Rx Rate (L1) (Bit/s)	71.95 K	154.28 K	510.49 K	1,041,033 147.77 M	179.61 M	258.17 M
- Rx Rate (Fps)	107	134.28 K	231	34,721	21,505	24,824
- Flood Count (Frames)	61	63	64	35	36	34
P-0-2-3	01	00	04	33	30	J- 1
- Tx (Frames)	40,178,565	22.804.038	12,228,253	6.343.975	3,232,754	2,596,138
- Tx (Frames)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (ET) (Blus)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,187	3,878	6,852	1,032,148	657,824	733,622
- Rx Rate (L1) (Bit/s)	71.39 K	153.05 K	504.31 K	146.43 M	183.14 M	254.32 M
- Rx Rate (Fps)	106	133.03 K	228	34,405	21,927	24,454
- Flood Count (Frames)	64	64	64	30	29	42
P-0-2-4	04	04	04	30	23	72
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx (Frames)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,185	700,135	6,813	1,035,383	0	734,734
- Rx Rate (L1) (Bit/s)	71.34 K	0	501.44 K	146.89 M	0	254.71 M
- Rx Rate (Fps)	106	0	227	34,513	0	24,491
- Flood Count (Frames)	61	1	64	29	2	24,491
P-0-2-5	01	1	04	23		+0
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,168	3,874	6,706	211,400	659,955	737,895
- Rx (Frames)	70.96 K	152.89 K	493.56 K	0	183.73 M	255.8 M
- Rx Rate (ET) (Bivs)	106	132.69 K	493.30 K	0	21,999	24,597
- Flood Count (Frames)	61	61	63	1	40	24,597
P-0-4-0	01	O I	03	I	40	41
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40,178,565 900 M	22,804,038 900 M	12,228,253 900 M	6,343,975 900 M	3,232,754 900 M	2,596,138 899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538



- Rx (Frames)	3,170	3,890	6,615	1,033,371	639,681	748,660
- Rx Rate (L1) (Bit/s)	71.01 K	153.53 K	486.86 K	146.6 M	178.09 M	259.54 M
- Rx Rate (Fps)	106	130	221	34,446	21,323	24,955
- Flood Count (Frames)	58	59	55	34	33	40
P-0-4-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,201	3,722	6,561	1,033,959	654,338	728,116
- Rx Rate (L1) (Bit/s)	71.7 K	146.89 K	482.89 K	146.68 M	182.17 M	252.41 M
- Rx Rate (Fps)	107	124	219	34,465	21,811	24,271
- Flood Count (Frames)	60	60	63	29	31	41
P-0-4-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	3,123	3,585	6,440	1,035,905	648,350	743,079
- Rx Rate (L1) (Bit/s)	69.96 K	141.49 K	473.98 K	146.96 M	180.5 M	257.6 M
- Rx Rate (Fps)	104	120	215	34,530	21,612	24,769
- Flood Count (Frames)	62	62	60	27	35	45
P-0-4-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,884	3,395	6,389	1,027,017	651,186	728,121
- Rx Rate (L1) (Bit/s)	64.6 K	133.99 K	470.23 K	145.7 M	181.29 M	252.42 M
- Rx Rate (Fps)	96	113	213	34,234	21,706	24,271
- Flood Count (Frames)	59	58	57	27	31	37
P-0-4-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,664	3,241	6,319	1,037,380	651,228	746,858
- Rx Rate (L1) (Bit/s)	59.67 K	127.91 K	465.08 K	147.17 M	181.3 M	258.91 M
- Rx Rate (Fps)	89	108	211	34,579	21,708	24,895
- Flood Count (Frames)	58	60	61	31	35	41
P-0-4-5						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,361	3,077	6,230	1,041,494	646,024	732,022
- Rx Rate (L1) (Bit/s)	52.89 K	121.44 K	458.53 K	147.75 M	179.85 M	253.77 M
- Rx Rate (Fps)	79	103	208	34,716	21,534	24,401
- Flood Count (Frames)	60	58	60	30	29	43

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16.2 G
Tx Rate (Fps)	1,316,636
Rx Rate (Percent)	23.11 %
Rx Rate (L1) (Bit/s)	4.16 G
Rx Rate (Fps)	338.13 K
Loss Rate (Percent)	74.32 %
Loss (Frames)	29,355,093
P-0-0-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	594,519
- Rx Rate (L1) (Bit/s)	243.83 M
- Rx Rate (Fps)	19,817
- Flood Count (Frames)	38
P-0-0-1	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-2	2
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	592,605
- Rx Rate (L1) (Bit/s)	243.05 M
- Rx Rate (Fps)	19,754
- Flood Count (Frames)	34
P-0-0-3	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	575,490 236.03 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	19,183
- Flood Count (Frames)	34
P-0-0-4	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	583,756
- Rx Rate (L1) (Bit/s)	239.42 M
- Rx Rate (Fps)	19,459
- Flood Count (Frames)	34
P-0-0-5	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	569,353
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	233.51 M 18,978
- Flood Count (Frames)	21
P-0-2-0	21
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	574,322
- Rx Rate (L1) (Bit/s)	235.55 M
- Rx Rate (Fps)	19,144
- Flood Count (Frames)	38
P-0-2-1	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	899.99 M 73,146
- Rx (Frames)	587,064
- Rx Rate (L1) (Bit/s)	240.77 M
- Rx Rate (Fps)	19,569
- Flood Count (Frames)	41
P-0-2-2	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	578,985
- Rx Rate (L1) (Bit/s)	237.46 M
- Rx Rate (Fps)	19,300
- Flood Count (Frames)	36
P-0-2-3	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames) - Rx Rate (L1) (Bit/s)	591,628 242.65 M
- Rx Rate (LT) (Blus)	19,721
- Flood Count (Frames)	28
P-0-2-4	20
	2 104 204
- Tx (Frames)	2,194,394
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,394 899.99 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	



- Rx Rate (L1) (Bit/s)	246.84 M
- Rx Rate (Fps)	20,062
- Flood Count (Frames)	36
P-0-2-5	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	608,205
- Rx Rate (L1) (Bit/s)	249.45 M
- Rx Rate (Fps)	20,274
- Flood Count (Frames)	43
P-0-4-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	609,367
- Rx Rate (L1) (Bit/s)	249.92 M
- Rx Rate (Fps)	20,312
- Flood Count (Frames)	40
P-0-4-1	2 104 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,394 899.99 M
- Tx Rate (LT) (Blus)	73,146
- Rx (Frames)	618,656
- Rx (Frames)	253.73 M
- Rx Rate (E1) (Blus)	20,622
- Flood Count (Frames)	29
P-0-4-2	23
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	622,234
- Rx Rate (L1) (Bit/s)	255.2 M
- Rx Rate (Fps)	20,741
- Flood Count (Frames)	38
P-0-4-3	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	620,286
- Rx Rate (L1) (Bit/s)	254.4 M
- Rx Rate (Fps)	20,676
- Flood Count (Frames)	35
P-0-4-4	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	612,627
- Rx Rate (L1) (Bit/s)	251.26 M
- Rx Rate (Fps)	20,421
- Flood Count (Frames)	38
P-0-4-5	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	603,047 247.33 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	
- Flood Count (Frames)	20,102
- i lood Count (Frames)	45



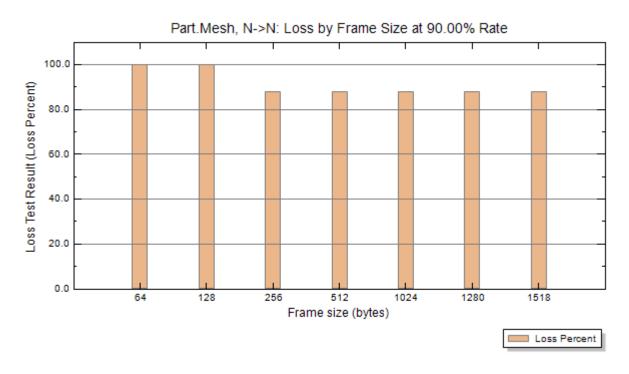

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26,785,710	15,202,702	8,152,166	4,229,318	2,155,168	1,730,767
Rx Rate (Percent)	0.01 %	0.01 %	0.03 %	23.85 %	16.01 %	16.01 %
Rx Rate (L1) (Bit/s)	1.07 M	2.23 M	5.74 M	4.29 G	2.88 G	2.88 G
Rx Rate (Fps)	1.59 K	1.88 K	2.6 K	1.01 M	345.13 K	277.13 K
Loss Rate (Percent)	99.99 %	99.99 %	99.97 %	76.15 %	83.99 %	83.99 %
Loss (Frames)	803,523,480	456,024,547	244,487,052	96,620,109	54,301,115	43,608,993
P-0-0-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,602	2,572	0	0	644,002	533,680
- Rx Rate (L1) (Bit/s)	58.28 K	101.51 K	0	0	179.29 M	185.01 M
- Rx Rate (Fps)	87	86	0	0	21,467	17,789
- Flood Count (Frames)	64	60	2	1	33	32
P-0-0-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,076	0	4,885	1,794,097	645,653	533,530
- Rx Rate (L1) (Bit/s)	68.9 K	0	359.54 K	254.52 M	179.75 M	184.96 M
- Rx Rate (Fps)	103	0	163	59,803	21,522	17,784
- Flood Count (Frames)	62	1	80	36	28	28
P-0-0-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	3,384	5,037	1,766,882	654,684	539,245
- Rx Rate (L1) (Bit/s)	0	133.56 K	370.72 K	250.66 M	182.26 M	186.94 M
- Rx Rate (Fps)	0	113	168	58,896	21,823	17,975
- Flood Count (Frames)	1	61	63	36	35	36
P-0-0-3						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,080	0	0	1,760,569	0	552,987



- Rx Rate (L1) (Bit/s)	68.99 K	0	0	249.77 M	0	191.7 M
- Rx Rate (Fps)	103	0	0	58,686	0	18,433
- Flood Count (Frames)	83	2	2	39	1	36
P-0-0-4	44.040.050	05 007 007	40.500.044	7.040.000	2 504 047	2 204 64
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863 1000 M	3,591,947 1000 M	2,884,611 1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	1000 M 844.595	1000 M 452,898	234,962	119,732	96,154
- Rx (Frames)	3,025	3,811	5,026	1,759,264	655,180	90,132
- Rx Rate (L1) (Bit/s)	67.76 K	150.41 K	369.91 K	249.58 M	182.4 M	(
- Rx Rate (Fps)	101	127	168	58,642	21,839	(
- Flood Count (Frames)	62	60	60	37	29	2
P-0-0-5	02		00	07	20	
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,036	3,773	5,037	1,766,614	0	539,003
- Rx Rate (L1) (Bit/s)	68.01 K	148.91 K	370.72 K	250.62 M	0	186.85 N
- Rx Rate (Fps)	101	126	168	58,887	0	17,967
- Flood Count (Frames)	33	43	34	17	1	17
P-0-2-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,078	3,791	5,044	1,767,282	648,552	510,496
- Rx Rate (L1) (Bit/s)	68.95 K	149.62 K	371.24 K	250.72 M	180.56 M	176.97 M
- Rx Rate (Fps)	103	126	168	58,909	21,618	17,017
- Flood Count (Frames)	63	62	62	31	30	30
P-0-2-1			10 -00 011		2 - 2 1 2 1 -	
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,025	3,829	4,973	1,770,044	634,135	506,275
- Rx Rate (L1) (Bit/s)	67.76 K	151.12 K	366.01 K	251.11 M	176.54 M	175.51 M
- Rx Rate (Fps) - Flood Count (Frames)	101	128 60	166 60	59,001 37	21,138	16,876 31
P-0-2-2	03	00	00	31	34	31
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	1,508	3,817	4,944	1,774,327	642,613	499,143
- Rx Rate (L1) (Bit/s)	33.78 K	150.64 K	363.88 K	251.72 M	178.9 M	173.04 M
- Rx Rate (Fps)	50	127	165	59,144	21,420	16,638
- Flood Count (Frames)	64	63	63	42	36	29
P-0-2-3						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,049	3,809	4,960	1,774,880	641,093	516,191
- Rx Rate (L1) (Bit/s)	68.3 K	150.33 K	365.06 K	251.8 M	178.48 M	178.95 M
- Rx Rate (Fps)	102	127	165	59,163	21,370	17,206
- Flood Count (Frames)	64	60	65	38	32	30
P-0-2-4			10 -00 011			
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,034	3,788	4,966	1,776,499	657,400	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	67.96 K	149.5 K	365.5 K	252.03 M	183.02 M	0
- Flood Count (Frames)	101	126 81	166 61	59,217 42	21,913	0
P-0-2-5	04	01	01	42	31	
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx (Frames)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,049	3,786	4,964	1,782,345	642,354	503,996
- Rx Rate (L1) (Bit/s)	68.3 K	149.42 K	365.35 K	252.86 M	178.83 M	174.72 M
- Rx Rate (Fps)	102	126	165	59,412	21,412	16,800
- Flood Count (Frames)	62	61	65	37	32	33
P-0-4-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154



- Rx (Frames)	3,054	3,812	4,822	1,795,132	650,381	495,472
- Rx Rate (L1) (Bit/s)	68.41 K	150.45 K	354.9 K	254.67 M	181.07 M	171.76 M
- Rx Rate (Fps)	102	127	161	59,838	21,679	16,516
- Flood Count (Frames)	59	59	58	32	32	30
P-0-4-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,059	3,620	4,737	1,798,158	652,479	502,470
- Rx Rate (L1) (Bit/s)	68.52 K	142.87 K	348.64 K	255.1 M	181.65 M	174.19 M
- Rx Rate (Fps)	102	121	158	59,939	21,749	16,749
- Flood Count (Frames)	59	58	60	38	30	33
P-0-4-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	3,034	3,439	4,669	1,793,798	653,167	509,103
- Rx Rate (L1) (Bit/s)	67.96 K	135.73 K	343.64 K	254.48 M	181.84 M	176.49 M
- Rx Rate (Fps)	101	115	156	59,793	21,772	16,970
- Flood Count (Frames)	58	58	60	44	33	35
P-0-4-3						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,782	3,276	4,700	1,783,040	643,161	510,752
- Rx Rate (L1) (Bit/s)	62.32 K	129.29 K	345.92 K	252.95 M	179.06 M	177.06 M
- Rx Rate (Fps)	93	109	157	59,435	21,439	17,025
- Flood Count (Frames)	60	57	59	35	29	30
P-0-4-4						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,177	3,103	4,634	1,797,622	644,672	531,829
- Rx Rate (L1) (Bit/s)	48.76 K	122.47 K	341.06 K	255.02 M	179.48 M	184.37 M
- Rx Rate (Fps)	73	103	154	59,921	21,489	17,728
- Flood Count (Frames)	59	59	60	32	32	36
P-0-4-5						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,152	2,909	4,542	1,798,872	644,405	529,833
- Rx Rate (L1) (Bit/s)	48.2 K	114.81 K	334.29 K	255.2 M	179.4 M	183.68 M
- Rx Rate (Fps)	72	97	151	59,962	21,480	17,661
- Flood Count (Frames)	62	61	55	29	27	33

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1,462,935
Rx Rate (Percent)	9.42 %
Rx Rate (L1) (Bit/s)	1.7 G
Rx Rate (Fps)	137.8 K
Loss Rate (Percent)	90.58 %
Loss (Frames)	39,754,166
P-0-0-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	298,891
- Rx Rate (L1) (Bit/s)	122.59 M
- Rx Rate (Fps)	9,963
- Flood Count (Frames)	28
P-0-0-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	2
P-0-0-2	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	295,631
- Rx Rate (L1) (Bit/s)	121.25 M
- Rx Rate (Fps)	9,854
- Flood Count (Frames)	32
P-0-0-3	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	295,609
- Rx Rate (L1) (Bit/s)	121.24 M
- Rx Rate (Fps)	9,854
- Flood Count (Frames)	25
P-0-0-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	297,291
- Rx Rate (L1) (Bit/s)	121.93 M
- Rx Rate (Fps)	9,910
- Flood Count (Frames)	29
P-0-0-5	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	294,968
- Rx Rate (L1) (Bit/s)	120.98 M
- Rx Rate (Fps)	9,832
- Flood Count (Frames)	10
P-0-2-0	10
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	297,283
- Rx Rate (L1) (Bit/s)	121.93 M
- Rx Rate (Fps)	9,909
- Flood Count (Frames)	27
P-0-2-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	01,214
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-2	I
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (ET) (Blus)	81,274
- Rx (Frames)	01,274
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
	0
P-0-2-3	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	2
P-0-2-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	295,479



D. D. t. (1.4) (Dit/s)	404.40.14
- Rx Rate (L1) (Bit/s)	121.19 M
- Rx Rate (Fps) - Flood Count (Frames)	9,849
P-0-2-5	30
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	291,944
- Rx Rate (L1) (Bit/s)	119.74 M
- Rx Rate (Fps)	9,731
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	294,799
- Rx Rate (L1) (Bit/s)	120.91 M
- Rx Rate (Fps)	9,827
- Flood Count (Frames)	31
P-0-4-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	292,599
- Rx Rate (L1) (Bit/s)	120 M
- Rx Rate (Fps)	9,753
- Flood Count (Frames)	32
P-0-4-2	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames) - Rx Rate (L1) (Bit/s)	293,406 120.34 M
- Rx Rate (E1) (Blus)	9,780
- Flood Count (Frames)	27
P-0-4-3	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	293,390
- Rx Rate (L1) (Bit/s)	120.33 M
- Rx Rate (Fps)	9,780
- Flood Count (Frames)	28
P-0-4-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	297,502
- Rx Rate (L1) (Bit/s)	122.02 M
- Rx Rate (Fps)	9,917
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	295,092
- Rx Rate (L1) (Bit/s)	121.03 M
- Rx Rate (Fps)	9,836
- Flood Count (Frames)	25



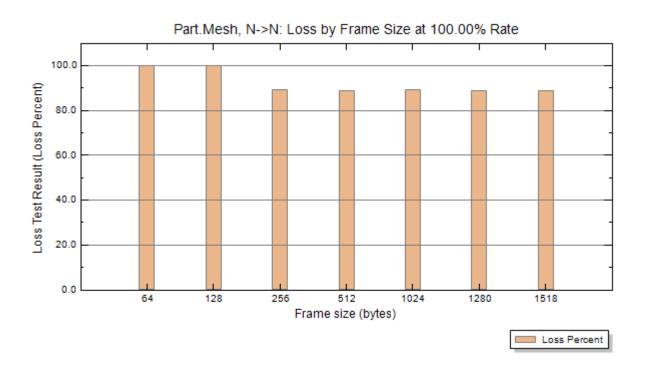



Rate Test: Part.Mesh, 1:N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: Bidirectional

Throughput Options

Initial Rate: 10.00%
Maximum Rate: 100.00%
Minimum Rate: 10.00%
Resolution: 10.00%

Used Ports

Port ID	Port Role
P-0-0-0	East
P-0-0-1	West
P-0-0-2	West
P-0-0-3	West
P-0-0-4	West
P-0-0-5	West
P-0-2-0	West
P-0-2-1	West
P-0-2-2	West
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,270	815,217	422,932	215,517	173,076
Rx Rate (Percent)	5.74 %	5.84 %	5.91 %	5.95 %	5.99 %	5.98 %
Rx Rate (L1) (Bit/s)	1.03 G	1.05 G	1.06 G	1.07 G	1.08 G	1.08 G
Rx Rate (Fps)	1.54 M	887.55 K	481.48 K	251.46 K	129.16 K	103.53 K
Loss Rate (Percent)	42.62 %	41.62 %	40.94 %	40.54 %	40.07 %	40.18 %
Loss (Frames)	34,248,977	18,981,609	10,012,209	5,144,168	2,590,616	2,086,311
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	42,675,776	24,681,175	13,402,179	7,000,864	3,581,125	2,878,108
- Rx Rate (L1) (Bit/s)	955.94 M	974.08 M	986.4 M	993.19 M	996.99 M	997.74 M
- Rx Rate (Fps)	1,422,526	822,706	446,739	233,362	119,371	95,937
- Flood Count (Frames)	37	38	40	37	53	36
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	205,985	107,392	61,923	32,576	17,807	13,675
- Rx Rate (L1) (Bit/s)	4.61 M	4.24 M	4.56 M	4.62 M	4.96 M	4.74 M
- Rx Rate (Fps)	6,866	3,580	2,064	1,086	594	456



- Flood Count (Frames)	74	58	57	58	64	61
P-0-0-2	4 464 205	0.522.702	1 250 605	704.887	350 105	288,461
- Tx (Frames)	4,464,285	2,533,783	1,358,695	- ,	359,195	
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 148,810	100 M 84,459	100 M 45,290	100 M 23,496	100 M 11,973	100 M 9,615
- Rx (Frames)	200,519	116,998	62,410	30,929	16,286	13,786
- Rx Rate (L1) (Bit/s)	4.49 M	4.62 M	4.59 M	4.39 M	4.53 M	4.78 M
- Rx Rate (Fps)	6,684	3,900	2,080	1,031	543	460
- Flood Count (Frames)	60	60	62	61	59	61
P-0-0-3			02			
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	205,925	117,426	60,773	29,576	17,631	13,858
- Rx Rate (L1) (Bit/s)	4.61 M	4.63 M	4.47 M	4.2 M	4.91 M	4.8 M
- Rx Rate (Fps)	6,864	3,914	2,026	986	588	462
- Flood Count (Frames)	60	57	61	59	59	59
P-0-0-4						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	200,318	108,423	61,092	32,658	17,727	12,678
- Rx Rate (L1) (Bit/s)	4.49 M	4.28 M	4.5 M	4.63 M	4.94 M	4.4 M
- Rx Rate (Fps)	6,677	3,614	2,036	1,089	591	423
- Flood Count (Frames)	61	57	59	59	61	60
P-0-0-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	200,070	106,425	62,155	33,177	17,280	13,616
- Rx Rate (L1) (Bit/s)	4.48 M	4.2 M	4.57 M	4.71 M	4.81 M	4.72 M
- Rx Rate (Fps)	6,669	3,548	2,072	1,106	576	454
- Flood Count (Frames)	25	29	28	34	31	23
P-0-2-0						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	202,316	115,749	55,570	31,523	16,654	13,642
- Rx Rate (L1) (Bit/s)	4.53 M	4.57 M	4.09 M	4.47 M	4.64 M	4.73 M
- Rx Rate (Fps)	6,744	3,858	1,852	1,051	555	455
- Flood Count (Frames)	58	60	58	58	63	58
P-0-2-1	4.404.005	0.500.700	4 250 605	704.007	250 405	200 404
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 148,810	100 M 84,459	100 M 45,290	100 M 23,496	100 M 11,973	100 M 9,615
- Rx (Frames)	201,422	116,446	62,976	31,342	18,050	13,610
- Rx (Frames)	4.51 M	4.6 M	4.64 M		5.03 M	4.72 M
- Rx Rate (Fps)	6,714	3,882	2,099	4.45 M 1,045	602	4.72 101
- Flood Count (Frames)	79	62	61	62	60	63
P-0-2-2	7.5	02	01	02	00	00
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	198,346	116,403	58,004	31,458	17,511	13,667
- Rx Rate (L1) (Bit/s)	4.44 M	4.59 M	4.27 M	4.46 M	4.88 M	4.74 M
- Rx Rate (Fps)	6,612	3,880	1,933	1,049	584	456
- Flood Count (Frames)	48	58	59	59	57	58
P-0-2-3					0.	
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	203,931	116,750	62,273	32,172	17,506	13,843
- Rx Rate (L1) (Bit/s)	4.57 M	4.61 M	4.58 M	4.56 M	4.87 M	4.8 M
- Rx Rate (Fps)	6,798	3,892	2,076	1,072	584	461
- Flood Count (Frames)	83	61	59	57	60	58
P-0-2-4				-		
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	203,565	109,915	62,196	31,430	16,624	13,854
- Rx Rate (L1) (Bit/s)	4.56 M	4.34 M	4.58 M	4.46 M	4.63 M	4.8 M



- Rx Rate (Fps)	6,786	3,664	2,073	1,048	554	462
- Flood Count (Frames)	61	55	58	60	62	59
P-0-2-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	203,491	117,479	62,386	33,209	16,732	8,923
- Rx Rate (L1) (Bit/s)	4.56 M	4.64 M	4.59 M	4.71 M	4.66 M	3.09 M
- Rx Rate (Fps)	6,783	3,916	2,080	1,107	558	297
- Flood Count (Frames)	57	59	57	58	62	59
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	201,327	116,200	61,208	33,341	17,549	13,749
- Rx Rate (L1) (Bit/s)	4.51 M	4.59 M	4.5 M	4.73 M	4.89 M	4.77 M
- Rx Rate (Fps)	6,711	3,873	2,040	1,111	585	458
- Flood Count (Frames)	58	56	59	57	56	56
P-0-4-1				.		
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	200,935	118,113	62,081	31,881	17,767	13,685
- Rx Rate (L1) (Bit/s)	4.5 M	4.66 M	4.57 M	4.52 M	4.95 M	4.74 M
- Rx Rate (Fps)	6,698	3,937	2,069	1,063	592	456
- Flood Count (Frames)	57	59	58	56	55	57
P-0-4-2	0.					
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	201,470	115,825	62,527	31,725	16,732	13,834
- Rx Rate (L1) (Bit/s)	4.51 M	4.57 M	4.6 M	4.5 M	4.66 M	4.8 M
- Rx Rate (Fps)	6,716	3,861	2,084	1,058	558	461
- Flood Count (Frames)	57	58	59	60	59	55
P-0-4-3	07			- 00		- 00
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (ET) (Blus)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	202,989	114,277	61,564	32,851	17,280	13,865
- Rx Rate (L1) (Bit/s)	4.55 M	4.51 M	4.53 M	4.66 M	4.81 M	4.81 M
- Rx Rate (Fps)	6,766	3,809	2,052	1,095	576	462
- Flood Count (Frames)	57	59	58	59	58	57
P-0-4-4	31	33	30	39	30	31
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Hames)	100 M	100 M	1,538,093	100 M	100 M	100 M
`	148,810	84,459	45,290	23,496	11,973	9,615
- Tx Rate (Fps)		115,017				13,840
- Rx (Frames)	199,041 4.46 M	4.54 M	61,796 4.55 M	31,825 4.51 M	17,781 4.95 M	4.8 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6,635	3,834	2,060	1,061	593	461
- Flood Count (Frames)	56	56	60	54	55	57
P-0-4-5	50	30	00	34	33	31
	4 464 205	2 522 702	1 359 605	704 997	350 105	200 464
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	200,727	116,471	61,184	31,245	16,850	13,749
- Rx Rate (L1) (Bit/s)	4.5 M	4.6 M	4.5 M	4.43 M	4.69 M	4.77 M
- Rx Rate (Fps)	6,691	3,882	2,039	1,042	562	458
- Flood Count (Frames)	59	57	54	57	60	59

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,294
Rx Rate (Percent)	4.83 %
Rx Rate (L1) (Bit/s)	869.55 M
Rx Rate (Fps)	70.67 K
Loss Rate (Percent)	51.69 %
Loss (Frames)	2,268,647



D 0 0 0	
P-0-0-0	243,814
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,614 100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	1,971,131
- Rx Rate (L1) (Bit/s)	808.43 M
- Rx Rate (Fps)	65,704
- Flood Count (Frames)	41
P-0-0-1	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,785
- Rx Rate (L1) (Bit/s)	3.6 M
- Rx Rate (Fps)	293
- Flood Count (Frames)	48
P-0-0-2	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,775
- Rx Rate (L1) (Bit/s)	3.6 M
- Rx Rate (Fps)	293
- Flood Count (Frames)	44
P-0-0-3	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,767
- Rx Rate (L1) (Bit/s)	3.6 M
- Rx Rate (Fps)	292
- Flood Count (Frames)	47
P-0-0-4	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,757
- Rx Rate (L1) (Bit/s)	3.59 M
- Rx Rate (Fps)	292
- Flood Count (Frames)	40
P-0-0-5	0.40.000
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,743
- Rx Rate (L1) (Bit/s)	3.59 M 291
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-2-0	28
- Tx (Frames)	243,823
- Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (ET) (Bibs)	8,127
- Rx (Frames)	8,749
- Rx Rate (L1) (Bit/s)	3.59 M
- Rx Rate (E1) (Bibs)	292
- Flood Count (Frames)	48
P-0-2-1	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,747
- Rx Rate (L1) (Bit/s)	3.59 M
- Rx Rate (Fps)	292
- Flood Count (Frames)	49
P-0-2-2	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,766
- Rx Rate (L1) (Bit/s)	3.6 M
- Rx Rate (Fps)	292
(F - /	-




23 M 27
M
27
93
M
93
55
23
M
27
72
M
92
13
2
23
M
27 34
64 N 1
M
2
52
2
23
M
27
71
M
2
13
2
23
M
27
34 M
93
10
10
23
M
27
30
M
92
14
-
23
M
27
35
M
92
16
23
M
27
38
M
93
19
_
23
23 M
M



- Rx Rate (Fps)	291
- Flood Count (Frames)	43

Note: One or more of the rate tests did not pass the test criteria!

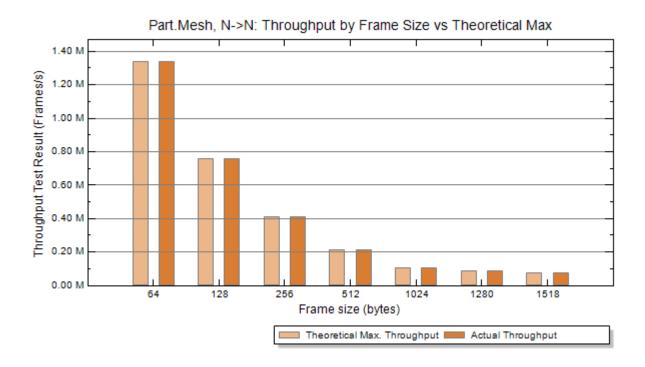

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,270	815,217	422,932	215,517	173,076
Rx Rate (Percent)	5.75 %	5.85 %	5.94 %	5.95 %	5.94 %	5.95 %
Rx Rate (L1) (Bit/s)	1.03 G	1.05 G	1.07 G	1.07 G	1.07 G	1.07 G
Rx Rate (Fps)	1.54 M	889.71 K	483.85 K	251.64 K	127.94 K	103 K
Loss Rate (Percent)	42.51 %	41.48 %	40.65 %	40.5 %	40.63 %	40.49 %
Loss (Frames)	34,156,955	18,916,787	9,941,134	5,138,733	2,627,203	2,102,184
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	42,674,086	24,687,471	13,404,586	7,001,228	3,553,775	2,877,904
- Rx Rate (L1) (Bit/s)	955.9 M	974.33 M	986.58 M	993.24 M	989.37 M	997.67 M
- Rx Rate (Fps)	1,422,470	822,916	446,820	233,374	118,459	95,930
- Flood Count (Frames)	39	47	39	46	37	41
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	201,251	118,647	64,929	32,676	17,061	12,400
- Rx Rate (L1) (Bit/s)	4.51 M	4.68 M	4.78 M	4.64 M	4.75 M	4.3 M
- Rx Rate (Fps)	6,708	3,955	2,164	1,089	569	413
- Flood Count (Frames)	60	60	59	69	63	62
P-0-0-2						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	211,615	117,454	64,855	32,968	16,801	12,487
- Rx Rate (L1) (Bit/s)	4.74 M	4.64 M	4.77 M	4.68 M	4.68 M	4.33 N
- Rx Rate (Fps)	7,054	3,915	2,162	1,099	560	416
- Flood Count (Frames)	59	58	59	61	60	60
P-0-0-3	4 404 005	0.500.700	4.050.005	704.007	050 405	000 404
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	209,687	112,891	64,929	32,302	15,923	12,533
- Rx Rate (L1) (Bit/s)	4.7 M	4.46 M	4.78 M	4.58 M	4.43 M	4.34 M
- Rx Rate (Fps)	6,990	3,763	2,164	1,077	531	418
- Flood Count (Frames)	62	59	60	63	60	64
P-0-0-4						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	205,110	115,011	66,765	28,230	16,953	12,446
- Rx Rate (L1) (Bit/s)	4.59 M	4.54 M	4.91 M	4 M	4.72 M	4.31 M
- Rx Rate (Fps)	6,837	3,834	2,226	941	565	415
- Flood Count (Frames)	60	59	72	61	60	60
P-0-0-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45.290	23,496	11,973	9,615
- Rx (Frames)	210,792	114,821	66,403	32,753	17,392	11,942
- Rx Rate (L1) (Bit/s)	4.72 M	4.53 M	4.89 M	4.65 M	4.84 M	4.14 M
- Rx Rate (Fps)	7,026	3,827	2,213	1,092	580	398
- Flood Count (Frames)	30	29	34	27	27	27
P-0-2-0	- 00	20	0-1			
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M	100 M	1,00 M	100 M	100 M	100 M
- Tx Rate (E1) (Blus)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	205,491	113,923	65,141	30,300	16,611	12,515
- Rx Rate (L1) (Bit/s)	4.6 M	4.5 M	4.79 M	4.3 M	4.62 M	4.34 M
- Rx Rate (Fps)	6,850	3,797	2,171	1,010	554	417
- Flood Count (Frames)	60	67	63	65	62	61
P-0-2-1	4 404 005	0.500.700	4.050.005	704.007	050 105	000 101
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	211,872	117,586	64,728	32,826	16,670	12,420
- Rx Rate (L1) (Bit/s)	4.75 M	4.64 M	4.76 M	4.66 M	4.64 M	4.31 M
- Rx Rate (Fps)	7,062	3,920	2,158	1,094	556	414
- Flood Count (Frames)	58	60	60	61	62	67
P-0-2-2						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	211,102	118,118	65,084	32,710	16,446	12,494
- Rx Rate (L1) (Bit/s)	4.73 M	4.66 M	4.79 M	4.64 M	4.58 M	4.33 M
- Rx Rate (Fps)	7,037	3,937	2,169	1,090	548	416
- Flood Count (Frames)	60	70	64	61	61	60
P-0-2-3						
- Tx (Frames)	4,464,285	2.533.783	1,358,695	704,887	359.195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	202,844	120,289	65,412	32,301	17,003	12,740
- Rx Rate (L1) (Bit/s)	4.54 M	4.75 M	4.81 M	4.58 M	4.73 M	4.42 M
- Rx Rate (Fps)	6,761	4,010	2,180	1,077	567	425
- Flood Count (Frames)	63	61	62	61	60	59
P-0-2-4	00	01	02	01	00	- 33
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames) - Tx Rate (L1) (Bit/s)		2,533,763 100 M		100 M	100 M	200,461 100 M
	100 M		100 M			
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	210,900	120,284	66,096	32,728	17,042	12,496
- Rx Rate (L1) (Bit/s)	4.72 M	4.75 M	4.86 M	4.64 M	4.74 M	4.33 M
- Rx Rate (Fps)	7,030	4,009	2,203	1,091	568	417
- Flood Count (Frames)	60	59	59	66	62	61
P-0-2-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	204,780	118,808	64,940	30,816	16,437	12,369
- Rx Rate (L1) (Bit/s)	4.59 M	4.69 M	4.78 M	4.37 M	4.58 M	4.29 M
- Rx Rate (Fps)	6,826	3,960	2,165	1,027	548	412
- Flood Count (Frames)	60	59	65	60	62	59
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	206.674	119.828	65.909	32.618	16.803	12.505
- Rx Rate (L1) (Bit/s)	4.63 M	4.73 M	4.85 M	4.63 M	4.68 M	4.34 M
- Rx Rate (Fps)	6,889	3,994	2,197	1,087	560	417
- Flood Count (Frames)	58	58	60	58	56	58
P-0-4-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	208,676	118,187	65,811	32,726	16,676	12,755
- Rx Rate (L1) (Bit/s)	4.67 M	4.66 M	4.84 M	4.64 M	4.64 M	4.42 M
- Rx Rate (Fps)	6,956	3,940	2,194	1,091	556	425
- Flood Count (Frames)	59	61	60	60	56	59
P-0-4-2	39	01	00	00	30	
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames)	4,404,285 100 M	2,555,765 100 M	1,356,095 100 M	100 M	100 M	200,401 100 M
` , ` ,		84,459	45.290			
- Tx Rate (Fps) - Rx (Frames)	148,810 205,643	122,266	64,547	23,496 32,144	11,973 16,479	9,615 12,606
- Rx (Frames)	4.61 M	4.83 M	4.75 M	4.56 M	4.59 M	4.37 M
` ,` ,	6,855	4.03 M	2,152	1,071	4.59 W	4.37 IVI 420
- Rx Rate (Fps)						
- Flood Count (Frames) P-0-4-3	58	58	60	57	60	61
	4 404 005	0.500.700	4.050.005	704 007	050 405	000 404
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	206,086	118,488	64,683	33,418	16,579	12,516
- Rx Rate (L1) (Bit/s)	4.62 M	4.68 M	4.76 M	4.74 M	4.62 M	4.34 M
- Rx Rate (Fps)	6,870	3,950	2,156	1,114	553	417
- Flood Count (Frames)	59	58	57	59	58	60
P-0-4-4						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	205,920	119,359	65,419	33,920	17,062	12,509
- Rx Rate (L1) (Bit/s)	4.61 M	4.71 M	4.81 M	4.81 M	4.75 M	4.34 M
- Rx Rate (Fps)	6,864	3,979	2,181	1,131	569	417
- Flood Count (Frames)	59	61	62	59	59	58
P-0-4-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	207,646	117,875	65,135	32,553	16,592	12,472
- Rx Rate (L1) (Bit/s)	4.65 M	4.65 M	4.79 M	4.62 M	4.62 M	4.32 M
- Rx Rate (Fps)	6,922	3,929	2,171	1,085	553	416
- Flood Count (Frames)	63	57	60	57	63	57

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,294
Rx Rate (Percent)	5.74 %
Rx Rate (L1) (Bit/s)	1.03 G
Rx Rate (Fps)	83.94 K
Loss Rate (Percent)	42.62 %
Loss (Frames)	1,870,699
P-0-0-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	2,376,652
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	974.74 M 79,222
- Flood Count (Frames)	38
P-0-0-1	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,513
- Rx Rate (L1) (Bit/s)	3.49 M
- Rx Rate (Fps)	284
- Flood Count (Frames) P-0-0-2	40
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	7,266
- Rx Rate (L1) (Bit/s)	2.98 M
- Rx Rate (Fps)	242
- Flood Count (Frames)	43
P-0-0-3 - Tx (Frames)	242 022
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,823 100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	6,528
- Rx Rate (L1) (Bit/s)	2.68 M
- Rx Rate (Fps)	218
- Flood Count (Frames)	49
P-0-0-4	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M
- Rx (Frames)	8,127 8,418
- Rx Rate (L1) (Bit/s)	3.45 M
- Rx Rate (Fps)	281
- Flood Count (Frames)	39
P-0-0-5	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps) - Rx (Frames)	8,127 8,449
- Rx Rate (L1) (Bit/s)	3.47 M
- Rx Rate (Fps)	282
- Flood Count (Frames)	23
P-0-2-0	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps) - Rx (Frames)	8,127 8,451
- Rx (Frames) - Rx Rate (L1) (Bit/s)	3.47 M
- Rx Rate (Fps)	282
- Flood Count (Frames)	38
P-0-2-1	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,528
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	3.5 M 284
- Flood Count (Frames)	41
P-0-2-2	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,485
- Rx Rate (L1) (Bit/s)	3.48 M
- Rx Rate (Fps)	283
- Flood Count (Frames) P-0-2-3	38
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
, , (,	



- Tx Rate (Fps)	8,127
- Rx (Frames)	8,536
- Rx Rate (L1) (Bit/s)	3.5 M
- Rx Rate (Fps)	285
- Flood Count (Frames)	37
P-0-2-4	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,440
- Rx Rate (L1) (Bit/s)	3.46 M
- Rx Rate (Fps)	281
- Flood Count (Frames)	39
P-0-2-5	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,497
- Rx Rate (L1) (Bit/s)	3.48 M
- Rx Rate (Fps)	283
- Flood Count (Frames)	47
P-0-4-0	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,554
- Rx Rate (L1) (Bit/s)	3.51 M
- Rx Rate (Fps)	285
- Flood Count (Frames)	47
P-0-4-1	71
- Tx (Frames)	243,823
- Tx (Frames)	100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	8,593
- Rx Rate (L1) (Bit/s)	3.52 M
- Rx Rate (Fps)	286
- Flood Count (Frames)	29
P-0-4-2	242.022
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	8,558
- Rx Rate (L1) (Bit/s)	3.51 M
- Rx Rate (Fps)	285
- Flood Count (Frames)	39
P-0-4-3	212 222
	243,823
- Tx (Frames)	
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 8,538
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 8,538 3.5 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 8,538 3.5 M 285
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	100 M 8,127 8,538 3.5 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4	100 M 8,127 8,538 3.5 M 285
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames)	100 M 8,127 8,538 3.5 M 285
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 8,538 3.5 M 285 37
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 8,538 3.5 M 285 37
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - To (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37 243,823 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37 243,823 100 M 8,127 8,582
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37 243,823 100 M 8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx Rate (Fps) - Rx (Frames)	100 M 8,127 8,538 3.5 M 285 37 243,823 100 M 8,127 8,582 3.52 M 286 37 243,823 100 M 8,127 8,518 3,49 M



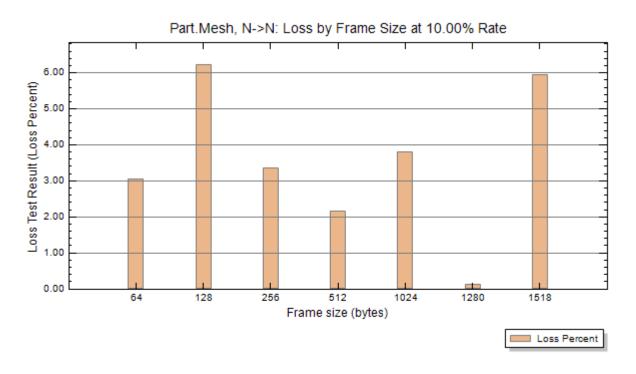

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,143	3,040,540	1,630,434	845,864	431,034	346,153
Rx Rate (Percent)	0.02 %	6.11 %	6.2 %	6.03 %	6.24 %	6.24 %
Rx Rate (L1) (Bit/s)	3.06 M	1.1 G	1.12 G	1.09 G	1.12 G	1.12 G
Rx Rate (Fps)	4.56 K	929.2 K	505.75 K	254.95 K	134.51 K	107.94 K
Loss Rate (Percent)	99.91 %	69.44 %	68.98 %	69.86 %	68.79 %	68.82 %
Loss (Frames)	160,577,539	63,340,247	33,740,523	17,727,407	8,895,800	7,146,269
P-0-0-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	126,555	24,700,487	13,413,273	6,757,284	3,582,846	2,878,766
- Rx Rate (L1) (Bit/s)	2.83 M	974.85 M	987.22 M	958.63 M	997.46 M	997.97 M
- Rx Rate (Fps)	4,219	823,350	447,109	225,243	119,428	95,959
- Flood Count (Frames)	61	32	28	25	31	32
P-0-0-1						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	705	181,364	103,416	52,535	25,732	21,258
- Rx Rate (L1) (Bit/s)	15.79 K	7.16 M	7.61 M	7.45 M	7.16 M	7.37 M
- Rx Rate (Fps)	24	6,045	3,447	1,751	858	709
- Flood Count (Frames)	63	57	60	58	60	59
P-0-0-2						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	701	190,225	103,695	52,968	27,409	21,181
- Rx Rate (L1) (Bit/s)	15.7 K	7.51 M	7.63 M	7.51 M	7.63 M	7.34 M
- Rx Rate (Fps)	23	6,341	3,457	1,766	914	706
- Flood Count (Frames)	59	58	61	60	60	59
P-0-0-3						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	691	188,920	104,321	51,795	27,239	21,232



- Rx Rate (L1) (Bit/s)	15.48 K	7.46 M	7.68 M	7.35 M	7.58 M	7.36 M
- Rx Rate (Fps)	23	6,297	3,477	1,727	908	708
- Flood Count (Frames)	62	57	57	60	60	61
P-0-0-4	0.000.574	E 067 E67	2,717,391	1 400 774	718,390	576,923
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,571 200 M	5,067,567 200 M	2,717,391 200 M	1,409,774 200 M	7 16,390 200 M	200 M
- Tx Rate (LT) (Blus)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	695	186,717	103,787	51,779	26,442	21,247
- Rx Rate (L1) (Bit/s)	15.57 K	7.37 M	7.64 M	7.35 M	7.36 M	7.37 M
- Rx Rate (Fps)	23	6,224	3,460	1,726	881	7.37 10
- Flood Count (Frames)	64	57	56	64	62	59
P-0-0-5	04	31	30	04	02	39
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297.619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	700	187,960	96,837	52,790	27,270	21,195
- Rx Rate (L1) (Bit/s)	15.68 K	7.42 M	7.13 M	7.49 M	7.59 M	7.35 M
- Rx Rate (Fps)	23	6,265	3,228	1,760	909	707
- Flood Count (Frames)	24	30	19	29	26	27
P-0-2-0						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	693	188,752	103,898	52,127	25,999	21,198
- Rx Rate (L1) (Bit/s)	15.52 K	7.45 M	7.65 M	7.4 M	7.24 M	7.35 M
- Rx Rate (Fps)	23	6,292	3,463	1,738	867	707
- Flood Count (Frames)	61	56	58	59	61	58
P-0-2-1						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	186,893	104,812	51,742	27,305	21,299
- Rx Rate (L1) (Bit/s)	0	7.38 M	7.71 M	7.34 M	7.6 M	7.38 M
- Rx Rate (Fps)	0	6,230	3,494	1,725	910	710
- Flood Count (Frames)	59	61	60	56	62	59
P-0-2-2						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	671	187,483	100,370	51,796	25,873	21,174
- Rx Rate (L1) (Bit/s)	15.03 K	7.4 M	7.39 M	7.35 M	7.2 M	7.34 M
- Rx Rate (Fps)	22	6,249	3,346	1,727	862	706
- Flood Count (Frames)	63	60	55	60	60	57
P-0-2-3	0.000.574	5 007 507	0.717.001	4 400 774	740.000	F70 000
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	669	173,757	102,911	53,306	25,758	21,089
- Rx Rate (L1) (Bit/s)	14.99 K	6.86 M	7.57 M	7.56 M	7.17 M	7.31 M
- Rx Rate (Fps)	22 63	5,792	3,430	1,777	859 60	703
- Flood Count (Frames) P-0-2-4	03	58	59	57	00	60
	0.000.571	E 067 E67	2 717 201	1 400 774	710 200	576,923
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,571 200 M	5,067,567 200 M	2,717,391 200 M	1,409,774 200 M	718,390 200 M	200 M
- Tx Rate (LT) (Bl/s)	297.619	168,919	90.580	46,992	23,946	19,231
- Rx (Frames)	662	188,280	104,786	52,549	26,363	21,122
- Rx (Frames) - Rx Rate (L1) (Bit/s)	14.83 K	7.43 M	7.71 M	7.45 M	7.34 M	7.32 M
	14.03 K	6,276	3,493	7.45 M 1,752	7.34 IVI 879	7.32 101
- Rx Rate (Fps) - Flood Count (Frames)	64	56	57	60	60	64
P-0-2-5	04	50	31	00	00	04
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx (Frames)	200 M	200 M	2,717,391 200 M	200 M	200 M	200 M
- Tx Rate (ET) (Blus)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	5	187,670	103,073	52,124	26,702	20,436
- Rx Rate (L1) (Bit/s)	112	7.41 M	7.59 M	7.39 M	7.43 M	7.08 M
- Rx Rate (Fps)	0	6,256	3,436	1,737	890	681
- Flood Count (Frames)	63	57	56	61	62	59
i iood oodiit (i idilles)	00	31	30	01	02	39
P-0-4-0						
P-0-4-0 - Tx (Frames)	8 928 571	5 067 567	2 717 391	1 409 774	718 390	576 923
P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,571 200 M	5,067,567 200 M	2,717,391 200 M	1,409,774 200 M	718,390 200 M	576,923 200 M



- Rx (Frames)	672	187,290	103,111	52,605	25,966	21,227
- Rx Rate (L1) (Bit/s)	15.05 K	7.39 M	7.59 M	7.46 M	7.23 M	7.36 M
- Rx Rate (Fps)	22	6,243	3,437	1,754	866	708
- Flood Count (Frames)	58	57	56	60	57	55
P-0-4-1						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	655	189,352	103,636	52,594	26,291	21,335
- Rx Rate (L1) (Bit/s)	14.67 K	7.47 M	7.63 M	7.46 M	7.32 M	7.4 M
- Rx Rate (Fps)	22	6,312	3,455	1,753	876	711
- Flood Count (Frames)	58	59	58	62	60	56
P-0-4-2						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	655	187,048	105,721	52,307	26,278	21,182
- Rx Rate (L1) (Bit/s)	14.67 K	7.38 M	7.78 M	7.42 M	7.32 M	7.34 M
- Rx Rate (Fps)	22	6,235	3,524	1,744	876	706
- Flood Count (Frames)	59	56	60	58	54	56
P-0-4-3						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	672	187,920	104,288	52,582	27,008	21,207
- Rx Rate (L1) (Bit/s)	15.05 K	7.42 M	7.68 M	7.46 M	7.52 M	7.35 M
- Rx Rate (Fps)	22	6,264	3,476	1,753	900	707
- Flood Count (Frames)	59	59	58	55	57	54
P-0-4-4						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	665	188,948	106,038	53,642	27,603	21,081
- Rx Rate (L1) (Bit/s)	14.9 K	7.46 M	7.8 M	7.61 M	7.68 M	7.31 M
- Rx Rate (Fps)	22	6,298	3,535	1,788	920	703
- Flood Count (Frames)	56	59	60	55	57	55
P-0-4-5						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	672	186,890	104,533	51,985	27,132	21,105
- Rx Rate (L1) (Bit/s)	15.05 K	7.38 M	7.69 M	7.37 M	7.55 M	7.32 M
- Rx Rate (Fps)	22	6,230	3,484	1,733	904	704
- Flood Count (Frames)	58	57	57	56	58	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,588
Rx Rate (Percent)	5.76 %
Rx Rate (L1) (Bit/s)	1.04 G
Rx Rate (Fps)	84.24 K
Loss Rate (Percent)	71.21 %
Loss (Frames)	6,250,442
P-0-0-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	2,393,375
- Rx Rate (L1) (Bit/s)	981.6 M
- Rx Rate (Fps)	79,779
- Flood Count (Frames)	26
P-0-0-1	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,854
- Rx Rate (L1) (Bit/s)	3.22 M




- Rx Rate (Fps)	262
- Flood Count (Frames)	33
P-0-0-2	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,934
- Rx Rate (L1) (Bit/s)	3.25 M
- Rx Rate (Fps)	264
- Flood Count (Frames)	29
P-0-0-3	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,880
- Rx Rate (L1) (Bit/s)	3.23 M
- Rx Rate (Fps)	263
- Flood Count (Frames)	30
P-0-0-4	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,997
- Rx Rate (L1) (Bit/s)	3.28 M
- Rx Rate (Fps)	267
- Flood Count (Frames)	28
P-0-0-5	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,865
- Rx Rate (L1) (Bit/s)	3.23 M
- Rx Rate (Fps)	262
- Flood Count (Frames)	17
P-0-2-0	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,973
- Rx Rate (L1) (Bit/s)	3.27 M
- Rx Rate (Fps)	266
- Flood Count (Frames)	27
P-0-2-1	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,926
- Rx Rate (L1) (Bit/s)	3.25 M
- Rx Rate (Fps)	264
- Flood Count (Frames)	28
P-0-2-2	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,951
- Rx Rate (L1) (Bit/s)	3.26 M
- Rx Rate (Fps)	265
- Flood Count (Frames)	28
P-0-2-3	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,907
- Rx Rate (L1) (Bit/s)	3.24 M
- Rx Rate (Fps)	264
- Flood Count (Frames)	31
P-0-2-4	40-0:-
- Tx (Frames)	487,646
	16,255
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	200 N



- Rx Rate (L1) (Bit/s)	3.22 M
- Rx Rate (Fps)	261
- Flood Count (Frames)	31
P-0-2-5	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,814
- Rx Rate (L1) (Bit/s)	3.2 M
- Rx Rate (Fps)	260
- Flood Count (Frames)	32
P-0-4-0	407.040
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,833
- Rx Rate (L1) (Bit/s)	3.21 M
- Rx Rate (Fps)	261
- Flood Count (Frames)	32
P-0-4-1	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,781
- Rx Rate (L1) (Bit/s)	3.19 M
- Rx Rate (Fps)	259
- Flood Count (Frames)	21
P-0-4-2	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,831
- Rx Rate (L1) (Bit/s)	3.21 M
- Rx Rate (Fps)	261
- Flood Count (Frames)	28
P-0-4-3	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,793
- Rx Rate (L1) (Bit/s)	3.2 M
- Rx Rate (Fps)	260
- Flood Count (Frames)	29
P-0-4-4	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,823
- Rx Rate (L1) (Bit/s)	3.21 M
- Rx Rate (Fps)	261
- Flood Count (Frames)	27
P-0-4-5	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,805
- Rx Rate (L1) (Bit/s)	3.2 M
- Rx Rate (Fps)	260
- Flood Count (Frames)	23
. 1004 Count (Francos)	20



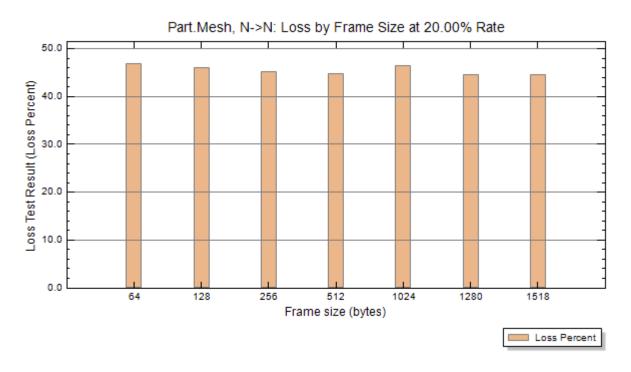

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,714	4,560,810	2,445,651	1,268,796	646,551	519,230
Rx Rate (Percent)	0.01 %	6.26 %	6.43 %	6.5 %	6.52 %	6.51 %
Rx Rate (L1) (Bit/s)	2.22 M	1.13 G	1.16 G	1.17 G	1.17 G	1.17 G
Rx Rate (Fps)	3.31 K	951.49 K	524.48 K	274.89 K	140.5 K	112.69 K
Loss Rate (Percent)	99.96 %	79.14 %	78.55 %	78.33 %	78.27 %	78.3 %
Loss (Frames)	240,972,235	108,279,518	57,635,096	29,817,174	15,181,420	12,196,078
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	87,524	24,707,012	13,416,789	7,006,085	3,583,303	2,880,686
- Rx Rate (L1) (Bit/s)	1.96 M	975.1 M	987.48 M	993.93 M	997.59 M	998.64 M
- Rx Rate (Fps)	2,917	823,567	447,226	233,536	119,443	96,023
- Flood Count (Frames)	62	28	25	23	22	27
P-0-0-1						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	826	228,869	137,043	71,272	36,659	29,508
- Rx Rate (L1) (Bit/s)	18.5 K	9.03 M	10.09 M	10.11 M	10.21 M	10.23 M
- Rx Rate (Fps)	28	7,629	4,568	2,376	1,222	984
- Flood Count (Frames)	61	54	55	58	56	58
P-0-0-2						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	783	232,638	137,673	73,860	36,835	29,441
- Rx Rate (L1) (Bit/s)	17.54 K	9.18 M	10.13 M	10.48 M	10.25 M	10.21 M
- Rx Rate (Fps)	26	7,755	4,589	2,462	1,228	981
- Flood Count (Frames)	63	47	61	62	57	56
P-0-0-3						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	0	227,706	137,472	74,165	37,113	29,777



- Rx Rate (L1) (Bit/s)	0	8.99 M	10.12 M	10.52 M	10.33 M	10.32 M
- Rx Rate (Fps) - Flood Count (Frames)	0 64	7,590 54	4,582 55	2,472 58	1,237 59	993 57
P-0-0-4	04	34	55	36	59	57
- Tx (Frames)	13,392,857	7,601,351	4.076.086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	809	188,861	137,884	74,527	36,607	29,516
- Rx Rate (L1) (Bit/s)	18.12 K	7.45 M	10.15 M	10.57 M	10.19 M	10.23 M
- Rx Rate (Fps)	27	6,295	4,596	2,484	1,220	984
- Flood Count (Frames)	63	45	57	58	59	56
P-0-0-5						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	791	221,059	136,316	73,383	37,509	29,489
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	17.72 K 26	8.72 M 7,369	10.03 M 4,544	10.41 M 2,446	10.44 M 1,250	10.22 M 983
- Flood Count (Frames)	32	25	28	2,446	28	29
P-0-2-0	32	23	20	23	20	
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	739	230,303	135,685	73,459	35,935	29,529
- Rx Rate (L1) (Bit/s)	16.55 K	9.09 M	9.99 M	10.42 M	10 M	10.24 M
- Rx Rate (Fps)	25	7,677	4,523	2,449	1,198	984
- Flood Count (Frames)	63	49	56	59	56	59
P-0-2-1						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	805	225,659	136,146	73,851	37,616	29,636
- Rx Rate (L1) (Bit/s)	18.03 K	8.91 M	10.02 M	10.48 M	10.47 M	10.27 M
- Rx Rate (Fps)	27	7,522	4,538	2,462	1,254	988
- Flood Count (Frames)	61	54	57	60	58	56
P-0-2-2	40 000 057	7 004 054	4.070.000	0.444.004	4 077 500	005.004
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 446,429	300 M 253,378	300 M 135,870	300 M 70,489	300 M 35,920	300 M 28,846
- Rx (Frames)	782	226,827	131,618	74,091	38,102	29,511
- Rx Rate (L1) (Bit/s)	17.52 K	8.95 M	9.69 M	10.51 M	10.61 M	10.23 M
- Rx Rate (Fps)	26	7,561	4,387	2,470	1,270	984
- Flood Count (Frames)	63	45	56	58	59	58
P-0-2-3						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	763	232,488	136,724	73,732	38,128	29,345
- Rx Rate (L1) (Bit/s)	17.09 K	9.18 M	10.06 M	10.46 M	10.61 M	10.17 M
- Rx Rate (Fps)	25	7,750	4,557	2,458	1,271	978
- Flood Count (Frames)	62	47	59	57	58	60
P-0-2-4	10 000 057	7 004 054	4.070.000	0.111.001	4 077 500	005.004
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps) - Rx (Frames)	446,429	253,378	135,870	70,489	35,920	28,846
, ,	762 17.07 K	232,201 9.16 M	135,760 9.99 M	62,136 8.82 M	36,583 10.18 M	27,298 9.46 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	25	7,740	4,525	2,071	1,219	9.40 10
- Flood Count (Frames)	62	52	57	57	59	57
P-0-2-5	02	- 02	07	07		- 07
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	0	228,057	135,973	73,905	36,660	29,320
- Rx Rate (L1) (Bit/s)	0	9 M	10.01 M	10.48 M	10.21 M	10.16 M
- Rx Rate (Fps)	0	7,602	4,532	2,464	1,222	977
- Flood Count (Frames)	62	54	57	59	60	58
P-0-4-0						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846



- Rx (Frames)	760	225,843	136,101	73,529	36,794	29,436
- Rx Rate (L1) (Bit/s)	17.02 K	8.91 M	10.02 M	10.43 M	10.24 M	10.2 M
- Rx Rate (Fps)	25	7,528	4,537	2,451	1,226	981
- Flood Count (Frames)	58	50	55	55	57	56
P-0-4-1						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	782	225,693	137,594	73,413	37,191	29,590
- Rx Rate (L1) (Bit/s)	17.52 K	8.91 M	10.13 M	10.41 M	10.35 M	10.26 M
- Rx Rate (Fps)	26	7,523	4,586	2,447	1,240	986
- Flood Count (Frames)	58	44	57	57	55	57
P-0-4-2						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	778	225,628	136,275	73,693	37,995	29,784
- Rx Rate (L1) (Bit/s)	17.43 K	8.9 M	10.03 M	10.45 M	10.58 M	10.33 M
- Rx Rate (Fps)	26	7,521	4,543	2,456	1,267	993
- Flood Count (Frames)	60	47	55	55	56	54
P-0-4-3						-
- Tx (Frames)	13,392,857	7,601,351	4.076.086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135.870	70,489	35,920	28,846
- Rx (Frames)	784	228,806	136,942	73,545	36,961	29,691
- Rx Rate (L1) (Bit/s)	17.56 K	9.03 M	10.08 M	10.43 M	10.29 M	10.29 M
- Rx Rate (Fps)	26	7,627	4,565	2,452	1,232	990
- Flood Count (Frames)	61	52	59	55	55	54
P-0-4-4						
- Tx (Frames)	13.392.857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	749	226,715	136,390	73,940	36,908	29,788
- Rx Rate (L1) (Bit/s)	16.78 K	8.95 M	10.04 M	10.49 M	10.28 M	10.33 M
- Rx Rate (Fps)	25	7,557	4,546	2,465	1,230	993
- Flood Count (Frames)	58	50	54	56	56	57
P-0-4-5						-
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	752	230,430	136,054	74,124	38,222	29,473
- Rx Rate (L1) (Bit/s)	16.84 K	9.09 M	10.01 M	10.52 M	10.64 M	10.22 M
- Rx Rate (Fps)	25	7,681	4,535	2,471	1,274	982
- Flood Count (Frames)	55	53	56	59	55	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,881
Rx Rate (Percent)	5.82 %
Rx Rate (L1) (Bit/s)	1.05 G
Rx Rate (Fps)	85.15 K
Loss Rate (Percent)	80.6 %
Loss (Frames)	10,611,872
P-0-0-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	2,420,609
- Rx Rate (L1) (Bit/s)	992.77 M
- Rx Rate (Fps)	80,687
- Flood Count (Frames)	24
P-0-0-1	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,998
- Rx Rate (L1) (Bit/s)	3.28 M




Dy Data (Fna)	267
- Rx Rate (Fps) - Flood Count (Frames)	267 26
P-0-0-2	20
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,665
- Rx Rate (L1) (Bit/s)	3.14 M
- Rx Rate (Fps)	256
- Flood Count (Frames)	25
P-0-0-3	724 460
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 24,382
- Rx (Frames)	8,079
- Rx Rate (L1) (Bit/s)	3.31 M
- Rx Rate (Fps)	269
- Flood Count (Frames)	26
P-0-0-4	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,111
- Rx Rate (L1) (Bit/s)	3.33 M
- Rx Rate (Fps)	270
- Flood Count (Frames)	27
P-0-0-5 - Tx (Frames)	731,469
- Tx (Frames) - Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (E1) (Bibs)	24,382
- Rx (Frames)	6,784
- Rx Rate (L1) (Bit/s)	2.78 M
- Rx Rate (Fps)	226
- Flood Count (Frames)	14
P-0-2-0	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	6,703
- Rx Rate (L1) (Bit/s)	2.75 M 223
- Rx Rate (Fps) - Flood Count (Frames)	26
P-0-2-1	20
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,132
- Rx Rate (L1) (Bit/s)	3.34 M
- Rx Rate (Fps)	271
- Flood Count (Frames)	25
P-0-2-2	=
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,101 3.32 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	270
- Flood Count (Frames)	27
P-0-2-3	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,040
- Rx Rate (L1) (Bit/s)	3.3 M
- Rx Rate (Fps)	268
- Flood Count (Frames)	35
P-0-2-4	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,951



- Rx Rate (L1) (Bit/s)	3.26 M
- Rx Rate (Fps)	265
- Flood Count (Frames)	24
P-0-2-5	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,940
- Rx Rate (L1) (Bit/s)	3.26 M
- Rx Rate (Fps)	265
- Flood Count (Frames) P-0-4-0	26
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,091
- Rx Rate (L1) (Bit/s)	3.32 M
- Rx Rate (Fps)	270
- Flood Count (Frames)	20
P-0-4-1	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,136
- Rx Rate (L1) (Bit/s)	3.34 M
- Rx Rate (Fps)	271
- Flood Count (Frames)	26
P-0-4-2	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,071
- Rx Rate (L1) (Bit/s)	3.31 M
- Rx Rate (Fps)	269
- Flood Count (Frames) P-0-4-3	26
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (ET) (Blus)	24,382
- Rx (Frames)	8,067
- Rx Rate (L1) (Bit/s)	3.31 M
- Rx Rate (Fps)	269
- Flood Count (Frames)	23
P-0-4-4	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,023
- Rx Rate (L1) (Bit/s)	3.29 M
- Rx Rate (Fps)	267
- Flood Count (Frames)	21
P-0-4-5	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	8,059
- Rx Rate (L1) (Bit/s)	3.31 M
- Rx Rate (Fps)	269
- Flood Count (Frames)	27



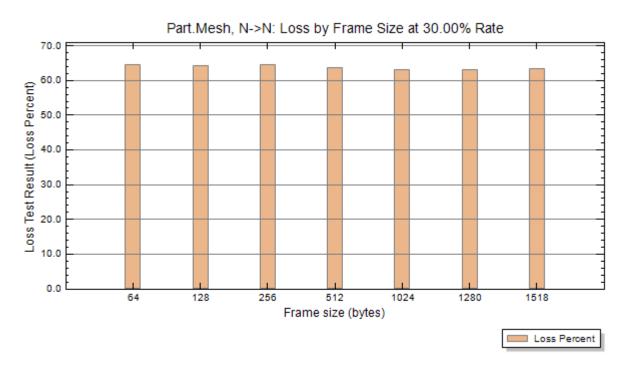

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,285	6,081,081	3,260,869	1,691,728	862,068	692,307
Rx Rate (Percent)	0.01 %	0.02 %	6.57 %	6.76 %	6.8 %	6.77 %
Rx Rate (L1) (Bit/s)	1.75 M	3.17 M	1.18 G	1.22 G	1.22 G	1.22 G
Rx Rate (Fps)	2.61 K	2.68 K	535.94 K	285.96 K	146.55 K	117.13 K
Loss Rate (Percent)	99.98 %	99.96 %	83.56 %	83.1 %	83 %	83.08 %
Loss (Frames)	321,350,222	182,352,081	81,747,843	42,173,036	21,465,578	17,255,465
P-0-0-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	61,053	69,817	13,417,293	7,007,440	3,582,332	2,880,274
- Rx Rate (L1) (Bit/s)	1.37 M	2.76 M	987.51 M	994.12 M	997.32 M	998.49 M
- Rx Rate (Fps)	2,035	2,327	447,243	233,581	119,411	96,009
- Flood Count (Frames)	61	65	27	26	27	26
P-0-0-1						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,312	755	156,922	92,690	47,281	37,276
- Rx Rate (L1) (Bit/s)	29.39 K	29.8 K	11.55 M	13.15 M	13.16 M	12.92 M
- Rx Rate (Fps)	44	25	5,231	3,090	1,576	1,243
- Flood Count (Frames)	60	64	52	58	60	57
P-0-0-2						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,300	0	157,024	93,103	47,792	37,712
- Rx Rate (L1) (Bit/s)	29.12 K	0	11.56 M	13.21 M	13.31 M	13.07 M
- Rx Rate (Fps)	43	0	5,234	3,103	1,593	1,257
- Flood Count (Frames)	60	61	48	57	62	58
P-0-0-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,296	739	155,970	91,826	47,817	37,317



- Rx Rate (L1) (Bit/s)	29.03 K	29.17 K	11.48 M	13.03 M	13.31 M	12.94 M
- Rx Rate (Fps)	43	25	5,199	3,061	1,594	1,244
- Flood Count (Frames)	60	62	48	59	58	55
P-0-0-4	17.057.110	10 105 105	5 404 700	0.040.540	4 400 704	4 450 040
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,277	686	156,262	93,163	48,264	37,481
- Rx Rate (L1) (Bit/s)	28.6 K	27.07 K	11.5 M	13.22 M	13.44 M	12.99 M
- Rx Rate (Fps)	43	23	5,209	3,105	1,609	1,249
- Flood Count (Frames)	61	62	57	60	61	58
P-0-0-5						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	155,369	93,404	47,929	36,258
- Rx Rate (L1) (Bit/s)	0	0	11.44 M	13.25 M	13.34 M	12.57 M
- Rx Rate (Fps)	0	0	5,179	3,113	1,598	1,209
- Flood Count (Frames)	32	25	29	26	26	22
P-0-2-0						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,221	737	152,382	93,066	47,705	37,455
- Rx Rate (L1) (Bit/s)	27.35 K	29.09 K	11.22 M	13.2 M	13.28 M	12.98 M
- Rx Rate (Fps)	41	25	5,079	3,102	1,590	1,249
- Flood Count (Frames)	61	64	55	59	60	58
P-0-2-1	0.1	0.1				
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,224	698	158,758	93,963	47,973	37,317
- Rx Rate (L1) (Bit/s)	27.42 K	27.55 K	11.68 M	13.2 M	13.36 M	12.94 M
- Rx Rate (Fps)	41 63	23 61	5,292 52	3,100 61	1,599 62	1,244 58
- Flood Count (Frames)	03	01	32	01	02	36
P-0-2-2	47.057.440	40 405 405	F 404 700	0.040.540	4 400 704	4 450 040
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,206	695	156,885	92,743	48,169	37,341
- Rx Rate (L1) (Bit/s)	27.01 K	27.43 K	11.55 M	13.16 M	13.41 M	12.94 M
- Rx Rate (Fps)	40	23	5,230	3,091	1,606	1,245
- Flood Count (Frames)	63	64	58	59	60	56
P-0-2-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,212	671	159,002	90,470	47,786	37,359
- Rx Rate (L1) (Bit/s)	27.15 K	26.48 K	11.7 M	12.83 M	13.3 M	12.95 M
- Rx Rate (Fps)	40	22	5,300	3,016	1,593	1,245
- Flood Count (Frames)	63	62	53	59	59	59
P-0-2-4						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	684	158,640	93,169	48,112	37,154
- Rx Rate (L1) (Bit/s)	0	27 K	11.68 M	13.22 M	13.39 M	12.88 M
- Rx Rate (Fps)	0	23	5,288	3,106	1,604	1,238
- Flood Count (Frames)	58	62	53	61	62	58
P-0-2-5				<u> </u>		
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	712	156,301	88,680	47,717	37,380
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	28.1 K	156,501 11.5 M	12.58 M	13.28 M	12.96 M
` / ` /	0					
- Rx Rate (Fps)		24	5,210	2,956	1,591	1,246
- Flood Count (Frames)	61	64	56	60	62	58
P-0-4-0	47.057.110	40 405 405	F 404 =00	0.040.510	4 400 =04	4 450 0 15
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
Ly Doto /L1\ /Dit/o\	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462



- Rx (Frames)	1,218	702	156,202	92,665	47,848	37,144
- Rx Rate (L1) (Bit/s)	27.28 K	27.71 K	11.5 M	13.15 M	13.32 M	12.88 M
- Rx Rate (Fps)	41	23	5,207	3,089	1,595	1,238
- Flood Count (Frames)	60	59	54	60	58	53
P-0-4-1						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,214	708	157,035	93,022	48,023	37,381
- Rx Rate (L1) (Bit/s)	27.19 K	27.94 K	11.56 M	13.2 M	13.37 M	12.96 M
- Rx Rate (Fps)	40	24	5,235	3,101	1,601	1,246
- Flood Count (Frames)	59	63	49	56	56	55
P-0-4-2						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,209	669	155,567	92,739	47,863	37,028
- Rx Rate (L1) (Bit/s)	27.08 K	26.4 K	11.45 M	13.16 M	13.33 M	12.84 M
- Rx Rate (Fps)	40	22	5,186	3,091	1,595	1,234
- Flood Count (Frames)	59	59	50	56	55	55
P-0-4-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,187	699	156,586	92,639	47,769	37,409
- Rx Rate (L1) (Bit/s)	26.59 K	27.59 K	11.52 M	13.14 M	13.3 M	12.97 M
- Rx Rate (Fps)	40	23	5,220	3,088	1,592	1,247
- Flood Count (Frames)	58	58	52	57	58	56
P-0-4-4						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,199	696	155,704	92,301	48,166	37,048
- Rx Rate (L1) (Bit/s)	26.86 K	27.47 K	11.46 M	13.09 M	13.41 M	12.84 M
- Rx Rate (Fps)	40	23	5,190	3,077	1,606	1,235
- Flood Count (Frames)	59	60	52	56	56	55
P-0-4-5						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1,204	674	156,330	92,685	47,925	37,424
- Rx Rate (L1) (Bit/s)	26.97 K	26.6 K	11.51 M	13.15 M	13.34 M	12.97 M
- Rx Rate (Fps)	40	22	5,211	3,090	1,598	1,247
- Flood Count (Frames)	60	59	52	56	57	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,175
Rx Rate (Percent)	5.92 %
Rx Rate (L1) (Bit/s)	1.07 G
Rx Rate (Fps)	86.59 K
Loss Rate (Percent)	85.2 %
Loss (Frames)	14,957,566
P-0-0-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	2,409,690
- Rx Rate (L1) (Bit/s)	988.29 M
- Rx Rate (Fps)	80,323
- Flood Count (Frames)	28
P-0-0-1	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,089
- Rx Rate (L1) (Bit/s)	4.55 M




Dy Data (Fac)	270
- Rx Rate (Fps) - Flood Count (Frames)	370 27
P-0-0-2	21
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,048
- Rx Rate (L1) (Bit/s)	4.53 M
- Rx Rate (Fps)	368
- Flood Count (Frames)	24
P-0-0-3	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps) - Rx (Frames)	32,510 11,041
- Rx (Harries) - Rx Rate (L1) (Bit/s)	4.53 M
- Rx Rate (Fps)	368
- Flood Count (Frames)	27
P-0-0-4	Li
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,032
- Rx Rate (L1) (Bit/s)	4.52 M
- Rx Rate (Fps)	368
- Flood Count (Frames)	34
P-0-0-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,922
- Rx Rate (L1) (Bit/s)	4.48 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	12
P-0-2-0	075 000
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M 32,510
- Rx (Frames)	11,058
- Rx Rate (L1) (Bit/s)	4.54 M
- Rx Rate (Fps)	369
- Flood Count (Frames)	25
P-0-2-1	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,003
- Rx Rate (L1) (Bit/s)	4.51 M
- Rx Rate (Fps)	367
- Flood Count (Frames)	28
P-0-2-2	075.000
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,105
- Rx Rate (L1) (Bit/s)	4.55 M
- Rx Rate (Fps) - Flood Count (Frames)	370 26
P-0-2-3	20
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,948
- Rx Rate (L1) (Bit/s)	4.49 M
- Rx Rate (Fps)	365
- Flood Count (Frames)	28
P-0-2-4	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,075



- Rx Rate (L1) (Bit/s)	4.54 M
- Rx Rate (Fps)	369
- Flood Count (Frames)	32
P-0-2-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,118
- Rx Rate (L1) (Bit/s)	4.56 M
- Rx Rate (Fps)	371
- Flood Count (Frames)	30
P-0-4-0	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,030
- Rx Rate (L1) (Bit/s)	4.52 M
- Rx Rate (Fps)	368
- Flood Count (Frames)	25
P-0-4-1	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,083
- Rx Rate (L1) (Bit/s)	4.55 M
- Rx Rate (Fps)	369
- Flood Count (Frames)	28
P-0-4-2	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,233
- Rx Rate (L1) (Bit/s)	4.61 M
- Rx Rate (Fps)	374
- Flood Count (Frames)	27
P-0-4-3	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,985
- Rx Rate (L1) (Bit/s)	4.51 M
- Rx Rate (Fps)	366
- Flood Count (Frames)	24
P-0-4-4	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,158
- Rx Rate (L1) (Bit/s)	4.58 M
- Rx Rate (Fps)	372
- Flood Count (Frames)	28
P-0-4-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Er) (Blos)	32,510
- Rx (Frames)	11,070
- Rx Rate (L1) (Bit/s)	4.54 M
- Rx Rate (Fps)	369
- Flood Count (Frames)	20
- 1 lood Count (1 fames)	20



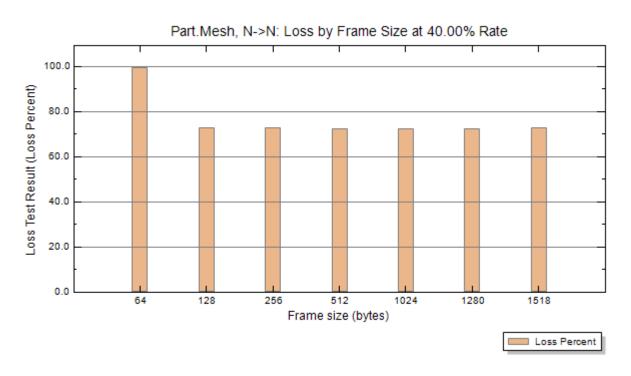

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,857	7,601,351	4,076,087	2,114,661	1,077,586	865,384
Rx Rate (Percent)	0.01 %	0.01 %	6.57 %	6.9 %	6.98 %	6.93 %
Rx Rate (L1) (Bit/s)	1.19 M	2.24 M	1.18 G	1.24 G	1.26 G	1.25 G
Rx Rate (Fps)	1.77 K	1.89 K	535.63 K	291.83 K	150.51 K	119.94 K
Loss Rate (Percent)	99.99 %	99.98 %	86.86 %	86.2 %	86.03 %	86.14 %
Loss (Frames)	401,732,521	227,983,839	106,213,807	54,684,995	27,812,342	22,363,275
P-0-0-0						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	42,800	49,174	13,419,852	7,008,181	3,584,299	2,880,127
- Rx Rate (L1) (Bit/s)	958.72 K	1.94 M	987.7 M	994.23 M	997.87 M	998.44 M
- Rx Rate (Fps)	1,427	1,639	447,328	233,606	119,477	96,004
- Flood Count (Frames)	59	61	21	22	24	24
P-0-0-1						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	770	506	156,225	103,672	54,811	42,335
- Rx Rate (L1) (Bit/s)	17.25 K	19.97 K	11.5 M	14.71 M	15.26 M	14.68 M
- Rx Rate (Fps)	26	17	5,208	3,456	1,827	1,411
- Flood Count (Frames)	62	62	47	52	57	55
P-0-0-2						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	740	498	156,339	102,767	55,032	39,855
- Rx Rate (L1) (Bit/s)	16.58 K	19.65 K	11.51 M	14.58 M	15.32 M	13.82 M
- Rx Rate (Fps)	25	17	5,211	3,426	1,834	1,329
- Flood Count (Frames)	60	61	43	52	51	55
P-0-0-3						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	766	431	155,942	100,013	55,240	42,089



- Rx Rate (L1) (Bit/s)	17.16 K	17.01 K	11.48 M	14.19 M	15.38 M	14.59 M
- Rx Rate (Fps)	26	14	5,198	3,334	1,841	1,403
- Flood Count (Frames)	59	63	44	51	58	58
P-0-0-4 - Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx (Frames)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	691	447	156,216	104,128	52,405	42,443
- Rx Rate (L1) (Bit/s)	15.48 K	17.64 K	11.5 M	14.77 M	14.59 M	14.71 M
- Rx Rate (Fps)	23	15	5,207	3,471	1,747	1,415
- Flood Count (Frames)	61	62	41	53	51	55
P-0-0-5						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	672	463	155,697	101,828	55,149	42,383
- Rx Rate (L1) (Bit/s)	15.05 K	18.27 K	11.46 M	14.45 M	15.35 M	14.69 M
- Rx Rate (Fps)	22	15	5,190	3,394	1,838	1,413
- Flood Count (Frames)	31	31	18	24	21	27
P-0-2-0	00 004 400	40,000,040	0.700.470	0.504.400	4 705 077	4 440 007
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	697	430	155,910	102,260	55,015	42,372
- Rx Rate (L1) (Bit/s)	15.61 K	16.97 K 14	11.47 M 5,197	14.51 M 3,409	15.32 M 1,834	14.69 M 1.412
- Rx Rate (Fps) - Flood Count (Frames)	61	63	5,197	3,409	1,034	1,412
P-0-2-1	01	03	44	40	52	33
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	669	447	156,010	103,309	54,906	42,395
- Rx Rate (L1) (Bit/s)	14.99 K	17.64 K	11.48 M	14.66 M	15.29 M	14.7 M
- Rx Rate (Fps)	22	15	5,200	3,444	1,830	1,413
- Flood Count (Frames)	61	63	43	51	55	54
P-0-2-2						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	419	156,309	103,578	54,996	42,428
- Rx Rate (L1) (Bit/s)	0	16.54 K	11.5 M	14.69 M	15.31 M	14.71 M
- Rx Rate (Fps)	0	14	5,210	3,453	1,833	1,414
- Flood Count (Frames)	59	63	44	45	55	56
P-0-2-3	00 004 400	40,000,040	0.700.470	0.504.400	4 705 077	4 440 007
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297	500 M	500 M	500 M	500 M
- Tx Rate (Fps) - Rx (Frames)	744,048 660	422,297	226,449 156,608	117,481 103,345	59,866 54,862	48,077 42,268
- Rx Rate (L1) (Bit/s)	14.78 K	17.13 K	11.53 M	14.66 M	15.27 M	14.65 M
- Rx Rate (Fps)	22	14	5,220	3,445	1,829	1,409
- Flood Count (Frames)	60	64	43	43	52	52
P-0-2-4		0-1			02	
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	680	423	152,518	103,416	54,834	42,394
- Rx Rate (L1) (Bit/s)	15.23 K	16.69 K	11.23 M	14.67 M	15.27 M	14.7 M
- Rx Rate (Fps)	23	14	5,084	3,447	1,828	1,413
- Flood Count (Frames)	63	61	35	47	58	54
P-0-2-5						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	422	156,018	100,767	54,594	41,930
- Rx Rate (L1) (Bit/s)	0	16.65 K	11.48 M	14.3 M	15.2 M	14.54 M
- Rx Rate (Fps)	0	14	5,201	3,359	1,820	1,398
- Flood Count (Frames)	60	61	50	52	55	56
P-0-4-0		10.555.55				
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077



- Rx (Frames)	659	425	156,099	103,066	55,166	42,273
- Rx Rate (L1) (Bit/s)	14.76 K	16.77 K	11.49 M	14.62 M	15.36 M	14.65 M
- Rx Rate (Fps)	22	14	5,203	3,436	1,839	1,409
- Flood Count (Frames)	60	58	44	54	54	52
P-0-4-1						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	683	422	156,476	102,683	54,636	42,838
- Rx Rate (L1) (Bit/s)	15.3 K	16.65 K	11.52 M	14.57 M	15.21 M	14.85 M
- Rx Rate (Fps)	23	14	5,216	3,423	1,821	1,428
- Flood Count (Frames)	56	60	41	47	51	54
P-0-4-2						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	661	430	156,005	103,022	54,757	42,324
- Rx Rate (L1) (Bit/s)	14.81 K	16.97 K	11.48 M	14.62 M	15.24 M	14.67 M
- Rx Rate (Fps)	22	14	5,200	3,434	1,825	1,411
- Flood Count (Frames)	58	56	49	48	56	47
P-0-4-3						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	680	430	155,443	103,294	54,611	42,901
- Rx Rate (L1) (Bit/s)	15.23 K	16.97 K	11.44 M	14.65 M	15.2 M	14.87 M
- Rx Rate (Fps)	23	14	5,181	3,443	1,820	1,430
- Flood Count (Frames)	61	57	50	52	51	53
P-0-4-4						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	660	440	155,081	102,642	54,849	42,492
- Rx Rate (L1) (Bit/s)	14.78 K	17.37 K	11.41 M	14.56 M	15.27 M	14.73 M
- Rx Rate (Fps)	22	15	5,169	3,421	1,828	1,416
- Flood Count (Frames)	61	57	44	44	57	57
P-0-4-5						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	692	436	156,043	102,869	55,070	42,394
- Rx Rate (L1) (Bit/s)	15.5 K	17.21 K	11.48 M	14.59 M	15.33 M	14.7 M
- Rx Rate (Fps)	23	15	5,201	3,429	1,836	1,413
- Flood Count (Frames)	60	59	48	47	51	50

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,469
Rx Rate (Percent)	5.94 %
Rx Rate (L1) (Bit/s)	1.07 G
Rx Rate (Fps)	86.93 K
Loss Rate (Percent)	88.12 %
Loss (Frames)	19,336,251
P-0-0-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	2,398,600
- Rx Rate (L1) (Bit/s)	983.75 M
- Rx Rate (Fps)	79,953
- Flood Count (Frames)	23
P-0-0-1	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,364
- Rx Rate (L1) (Bit/s)	5.07 M




D D (/F)	110
- Rx Rate (Fps)	412
- Flood Count (Frames) P-0-0-2	25
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	11,154
- Rx Rate (L1) (Bit/s)	4.57 M
- Rx Rate (Fps)	372
- Flood Count (Frames)	23
P-0-0-3	20
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,431
- Rx Rate (L1) (Bit/s)	5.1 M
- Rx Rate (Fps)	414
- Flood Count (Frames)	29
P-0-0-4	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,352
- Rx Rate (L1) (Bit/s)	5.07 M
- Rx Rate (Fps)	412
- Flood Count (Frames)	30
P-0-0-5	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,388
- Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (Fps)	413
- Flood Count (Frames)	15
P-0-2-0	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,324
- Rx Rate (L1) (Bit/s)	5.05 M
- Rx Rate (Fps)	411
- Flood Count (Frames)	24
P-0-2-1	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,285
- Rx Rate (L1) (Bit/s)	5.04 M
- Rx Rate (Fps)	410
- Flood Count (Frames)	27
P-0-2-2	1 240 445
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,308
- Rx Rate (L1) (Bit/s)	5.05 M
- Rx Rate (Fps)	410
- Flood Count (Frames)	25
P-0-2-3 - Ty (Frames)	1 210 115
- Tx (Frames)	1,219,115 500 M
- Tx Rate (L1) (Bit/s)	
- Tx Rate (Fps) - Rx (Frames)	40,637 12,396
- Rx (Frames) - Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (E1) (Bibs)	413
- Flood Count (Frames)	29
P-0-2-4	29
- Tx (Frames)	1,219,115
- Tx (Frames) - Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	12,387
100 (1100)	12,007



Dir Data (I.4) (Dit(a)	5 00 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5.08 M 413
- Flood Count (Frames)	23
P-0-2-5	23
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,385
- Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (Fps)	413
- Flood Count (Frames)	29
P-0-4-0	29
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,398
- Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (Fps)	413
- Flood Count (Frames)	21
P-0-4-1	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,411
- Rx Rate (L1) (Bit/s)	5.09 M
- Rx Rate (Fps)	414
- Flood Count (Frames)	24
P-0-4-2	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,483
- Rx Rate (L1) (Bit/s)	5.12 M
- Rx Rate (Fps)	416
- Flood Count (Frames)	22
P-0-4-3	
	4 040 445
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,390
- Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (Fps)	413
- Flood Count (Frames)	27
P-0-4-4	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,378
- Rx Rate (L1) (Bit/s)	5.08 M
- Rx Rate (Fps)	413
- Flood Count (Frames)	23
P-0-4-5	20
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	12,374
- Rx Rate (L1) (Bit/s)	5.07 M
- Rx Rate (Fps)	412 27
- Flood Count (Frames)	



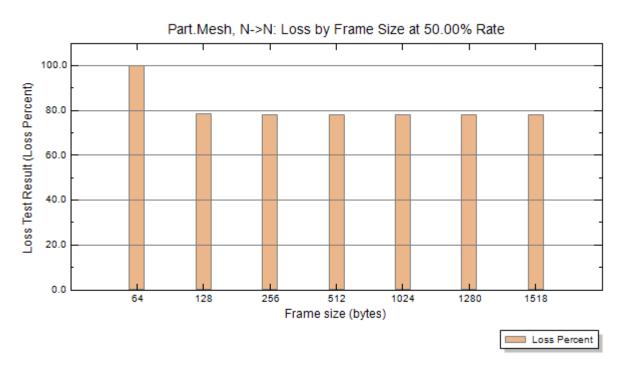

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G
Tx Rate (Fps)	16,071,428	9,121,621	4,891,303	2,537,593	1,293,103	1,038,461
Rx Rate (Percent)	0.01 %	0.01 %	0.38 %	4.51 %	6.77 %	6.86 %
Rx Rate (L1) (Bit/s)	1.14 M	1.23 M	68.95 M	811.85 M	1.22 G	1.24 G
Rx Rate (Fps)	1.7 K	1.04 K	31.23 K	190.75 K	145.81 K	118.77 K
Loss Rate (Percent)	99.99 %	99.99 %	99.36 %	92.48 %	88.72 %	88.56 %
Loss (Frames)	482,091,883	273,617,434	145,802,310	70,405,184	34,418,702	27,590,623
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	39,308	31,191	874,707	4,214,786	3,390,841	2,803,575
- Rx Rate (L1) (Bit/s)	880.5 K	1.23 M	64.38 M	597.94 M	944.01 M	971.91 M
- Rx Rate (Fps)	1,310	1,040	29,157	140,493	113,028	93,453
- Flood Count (Frames)	60	57	62	24	18	21
P-0-0-1						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	818	0	3,726	88,419	57,679	44,959
- Rx Rate (L1) (Bit/s)	18.32 K	0	274.23 K	12.54 M	16.06 M	15.59 M
- Rx Rate (Fps)	27	0	124	2,947	1,923	1,499
- Flood Count (Frames)	60	60	61	41	44	40
P-0-0-2						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	838	0	4,158	88,119	57,467	44,763
- Rx Rate (L1) (Bit/s)	18.77 K	0	306.03 K	12.5 M	16 M	15.52 M
- Rx Rate (Fps)	28	0	139	2,937	1,916	1,492
- Flood Count (Frames)	61	60	61	33	46	46
P-0-0-3	-			-	-	
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	783	0	3,812	88,946	57,716	42,846



- Rx Rate (L1) (Bit/s)	17.54 K	0	280.56 K	12.62 M	16.07 M	14.85 M
- Rx Rate (Fps)	26	0	127	2,965	1,924	1,428
- Flood Count (Frames)	60	60	61	42	45	44
P-0-0-4 - Tx (Frames)	06 705 714	15 202 702	0.150.170	4 220 222	2,155,172	1 720 760
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,714 600 M	15,202,702 600 M	8,152,173 600 M	4,229,323 600 M	2,155,172 600 M	1,730,769 600 M
- Tx Rate (ET) (Blus)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	092,007	0	3,804	88,316	57,580	44,698
- Rx Rate (L1) (Bit/s)	0	0	279.97 K	12.53 M	16.03 M	15.5 M
- Rx Rate (Fps)	0	0	127	2,944	1,919	1,490
- Flood Count (Frames)	60	60	62	33	51	45
P-0-0-5	00	00	02	33	31	40
- Tx (Frames)	26,785,714	15.202.702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892.857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	735	0	3,787	88,608	57,841	44,831
- Rx Rate (L1) (Bit/s)	16.46 K	0	278.72 K	12.57 M	16.1 M	15.54 M
- Rx Rate (Fps)	25	0	126	2,954	1,928	1,494
- Flood Count (Frames)	25	32	30	20	22	21
P-0-2-0						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	720	0	3,879	88,601	57,651	45,051
- Rx Rate (L1) (Bit/s)	16.13 K	0	285.49 K	12.57 M	16.05 M	15.62 M
- Rx Rate (Fps)	24	0	129	2,953	1,922	1,502
- Flood Count (Frames)	63	60	62	45	44	43
P-0-2-1						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	695	0	4,140	89,245	57,987	44,807
- Rx Rate (L1) (Bit/s)	15.57 K	0	304.7 K	12.66 M	16.14 M	15.53 M
- Rx Rate (Fps)	23	0	138	2,975	1,933	1,494
- Flood Count (Frames)	63	58	61	39	46	45
P-0-2-2						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	717	0	3,827	89,294	58,097	43,056
- Rx Rate (L1) (Bit/s)	16.06 K	0	281.67 K	12.67 M	16.17 M	14.93 M
- Rx Rate (Fps)	24	0	128	2,976	1,937	1,435
- Flood Count (Frames)	63	62	61	42	49	45
P-0-2-3						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	705	0	0	88,440	58,078	44,755
- Rx Rate (L1) (Bit/s)	15.79 K	0	0	12.55 M	16.17 M	15.52 M
- Rx Rate (Fps)	24	0	0	2,948	1,936	1,492
- Flood Count (Frames)	62	60	58	44	42	48
P-0-2-4	00 705 744	45 000 700	0.450.470	4 000 000	0.455.470	4 700 700
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	719	0	3,871	88,570	58,098	44,722
- Rx Rate (L1) (Bit/s)	16.11 K	0	284.91 K	12.57 M	16.17 M	15.5 M
- Rx Rate (Fps) - Flood Count (Frames)	24 61	60	129 63	2,952	1,937 49	1,491
P-0-2-5	01	00	03	41	49	47
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx (Frames)	20,765,714 600 M	600 M	600 M	4,229,323 600 M	2,155,172 600 M	1,730,769 600 M
- Tx Rate (ET) (Blus)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	713	0	4,093	89,125	58,065	45,117
- Rx Rate (L1) (Bit/s)	15.97 K	0	301.24 K	12.64 M	16.17 M	15.64 M
- Rx Rate (Fps)	24	0	136	2,971	1,936	1,504
- Flood Count (Frames)	61	63	64	41	44	49
oou oount (i idilloo)	01	00		71	77	73
P-0-4-0	The state of the s					
P-0-4-0 - Tx (Frames)	26 785 714	15 202 702	8 152 173	4 229 323	2 155 172	1 730 769
P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,714 600 M	15,202,702 600 M	8,152,173 600 M	4,229,323 600 M	2,155,172 600 M	1,730,769 600 M



- Rx (Frames)	704	0	3,730	88,929	57,809	44,852
- Rx Rate (L1) (Bit/s)	15.77 K	0	274.53 K	12.62 M	16.09 M	15.55 M
- Rx Rate (Fps)	23	0	124	2,964	1,927	1,495
- Flood Count (Frames)	60	59	58	40	38	49
P-0-4-1						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	698	0	3,611	88,412	57,989	44,954
- Rx Rate (L1) (Bit/s)	15.64 K	0	265.77 K	12.54 M	16.14 M	15.58 M
- Rx Rate (Fps)	23	0	120	2,947	1,933	1,498
- Flood Count (Frames)	61	58	58	35	51	45
P-0-4-2						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	697	0	3,878	88,466	57,964	44,962
- Rx Rate (L1) (Bit/s)	15.61 K	0	285.42 K	12.55 M	16.14 M	15.59 M
- Rx Rate (Fps)	23	0	129	2,949	1,932	1,499
- Flood Count (Frames)	55	58	58	40	36	38
P-0-4-3						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	715	0	3,972	88,547	57,900	44,977
- Rx Rate (L1) (Bit/s)	16.02 K	0	292.34 K	12.56 M	16.12 M	15.59 M
- Rx Rate (Fps)	24	0	132	2,952	1,930	1,499
- Flood Count (Frames)	58	60	58	35	49	39
P-0-4-4						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	690	0	4,143	88,887	57,821	45,218
- Rx Rate (L1) (Bit/s)	15.46 K	0	304.92 K	12.61 M	16.1 M	15.68 M
- Rx Rate (Fps)	23	0	138	2,963	1,927	1,507
- Flood Count (Frames)	60	61	55	37	46	46
P-0-4-5						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	710	1	3,656	88,908	57,797	45,060
- Rx Rate (L1) (Bit/s)	15.9 K	39.47	269.08 K	12.61 M	16.09 M	15.62 M
- Rx Rate (Fps)	24	0	122	2,964	1,927	1,502
- Flood Count (Frames)	58	58	59	34	46	46


Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10.8 G
Tx Rate (Fps)	877,763
Rx Rate (Percent)	6.07 %
Rx Rate (L1) (Bit/s)	1.09 G
Rx Rate (Fps)	88.79 K
Loss Rate (Percent)	89.88 %
Loss (Frames)	23,669,163
P-0-0-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	2,431,600
- Rx Rate (L1) (Bit/s)	997.28 M
- Rx Rate (Fps)	81,053
- Flood Count (Frames)	25
P-0-0-1	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	13,905
- Rx Rate (L1) (Bit/s)	5.7 M





- Rx Rate (Fps)	- Rx Rate (L1) (Bit/s)	5.35 M
- Flood Count (Frames) 22 P-0-2-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,674 - Rx Rate (L1) (Bit/s) 5.61 M - Rx Rate (Fps) 456 - Flood Count (Frames) 33 P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 460 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.64 M - Tx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 467 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx (Frames) 14,82,938 - Tx (Frames) 14,82,938 - Tx (Frames) 14,82,938		
P-0-2-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,674 - Rx Rate (L1) (Bit/s) 5.61 M - Rx Rate (Fps) 456 - Flood Count (Frames) 33 - P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 460 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 459 - Flood Count (Frames) 13,755 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.64 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 467 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765		
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,674 - Rx Rate (L1) (Bit/s) 5.61 M - Rx Rate (Fps) 456 - Flood Count (Frames) 33 - P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 463 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 463 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 463 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 463 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 463 - Flood Count (Frames) 1,462,938		1,462,938
- Rx (Frames) 13,674 - Rx Rate (L1) (Bit/s) 5.61 M - Rx Rate (Fps) 456 - Flood Count (Frames) 33 - P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 460 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx (Frames) 13,755 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 459 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 13,843 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Tx Rate (Fps) 462 - Flood Count (Frames) 14,62,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 14,62,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 14,62,938	- Tx Rate (L1) (Bit/s)	600 M
- Rx Rate (L1) (Bit/s) 5.61 M - Rx Rate (Fps) 456 - Flood Count (Frames) 33 P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-5 - Rx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938		
- Rx Rate (Fps)		
- Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (F		
P-0-4-0 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 13,912 - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765		
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 459 - Flood Count (Frames) 22 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 13,912 - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 13,843 - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx (F		33
- Tx Rate (L1) (Bit/s)		1 462 020
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 13,843 - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (Fps) 463 - Tx Rate (Fps) 46		
- Rx (Frames) 13,807 - Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 - P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 459 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 26 - Rx (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 463		
- Rx Rate (L1) (Bit/s) 5.66 M - Rx Rate (Fps) 460 - Flood Count (Frames) 32 P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-5 - Rx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 48,765		
- Rx Rate (Fps) 460 - Flood Count (Frames) 32 P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 3462 - Flood Count		
- Flood Count (Frames) 32 P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-5 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
P-0-4-1 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Flood Count (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx (Frames) 13,843 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Flood Count (Frames) 14,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 462		
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-5 - Rx (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.60 M - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		02
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 5.00 M - Tx Rate (Fps) 48,765 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		1,462,938
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx (Frames) 13,755 - Rx Rate (L1) (Bit/s) 5.64 M - Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx Rate (Fps) 459 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		459
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		22
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 467 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		1,462,938
- Rx (Frames) 13,912 - Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 1,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- Tx Rate (L1) (Bit/s)	600 M
- Rx Rate (L1) (Bit/s) 5.71 M - Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- Tx Rate (Fps)	48,765
- Rx Rate (Fps) 464 - Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Flood Count (Frames) 23 P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
P-0-4-3 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		23
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- Tx (Frames)	
- Rx (Frames) 13,843 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		· · · · · · · · · · · · · · · · · · ·
- Rx Rate (Fps) 461 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- RX (Frames)	
- Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
P-0-4-4 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		20
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		1 462 039
- Tx Rate (Fps) 48,765 - Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx (Frames) 13,858 - Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 1,462,938 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Rx Rate (L1) (Bit/s) 5.68 M - Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- Ry (Frames)	
- Rx Rate (Fps) 462 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
P-0-4-5 - Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765	- Flood Count (Frames)	
- Tx (Frames) 1,462,938 - Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		
- Tx Rate (L1) (Bit/s) 600 M - Tx Rate (Fps) 48,765		1,462,938
- Tx Rate (Fps) 48,765		
10,007	- Rx (Frames)	13,867
- Rx Rate (L1) (Bit/s) 5.69 M		
- Rx Rate (Fps) 462		462
- Flood Count (Frames) 21	- Flood Count (Frames)	21



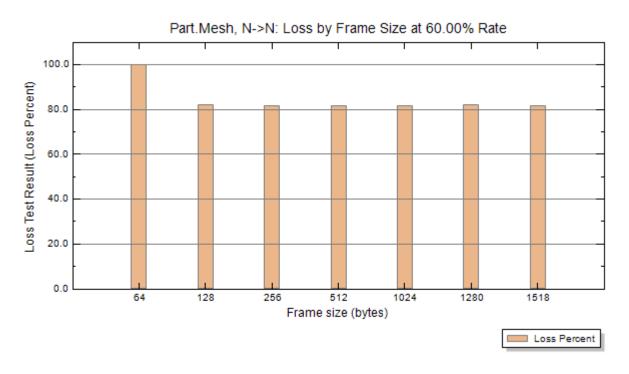

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G
Tx Rate (Fps)	18,750,000	10,641,891	5,706,521	2,960,526	1,508,620	1,211,538
Rx Rate (Percent)	0.01 %	0 %	0.23 %	7.14 %	7.17 %	7.22 %
Rx Rate (L1) (Bit/s)	1.06 M	678.35 K	42.12 M	1.29 G	1.29 G	1.3 G
Rx Rate (Fps)	1.57 K	572.93	19.08 K	302.04 K	154.48 K	124.99 K
Loss Rate (Percent)	99.99 %	99.99 %	99.67 %	89.8 %	89.76 %	89.68 %
Loss (Frames)	562,452,750	319,239,548	170,623,368	79,754,611	40,624,159	32,596,575
P-0-0-0						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	35,285	17,187	535,344	7,011,569	3,584,461	2,880,566
- Rx Rate (L1) (Bit/s)	790.38 K	678.31 K	39.4 M	994.71 M	997.91 M	998.6 M
- Rx Rate (Fps)	1,176	573	17,845	233,719	119,482	96,019
- Flood Count (Frames)	62	60	62	20	25	19
P-0-0-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	915	0	2,927	120,218	61,858	51,041
- Rx Rate (L1) (Bit/s)	20.5 K	0	215.43 K	17.05 M	17.22 M	17.69 M
- Rx Rate (Fps)	31	0	98	4,007	2,062	1,701
- Flood Count (Frames)	64	58	60	44	45	41
P-0-0-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	841	0	0	120,113	61,755	51,021
- Rx Rate (L1) (Bit/s)	18.84 K	0	0	17.04 M	17.19 M	17.69 M
- Rx Rate (Fps)	28	0	0	4,004	2,059	1,701
- Flood Count (Frames)	62	60	63	35	48	44
P-0-0-3						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	0	0	0	121,052	61,836	50,936



- Rx Rate (L1) (Bit/s)	0	0	0	17.17 M	17.22 M	17.66 N
- Rx Rate (Fps) - Flood Count (Frames)	0 62	0 59	0 64	4,035 45	2,061 45	1,698 5
P-0-0-4	02	59	04	45	40	<u> </u>
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx (Frames) - Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Er) (Bits)	1.041.667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	797	0	2,885	121,163	61,727	51,110
- Rx Rate (L1) (Bit/s)	17.85 K	0	212.34 K	17.19 M	17.18 M	17.72 N
- Rx Rate (Fps)	27	0	96	4,039	2,058	1,704
- Flood Count (Frames)	63	59	64	39	46	4
P-0-0-5						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	766	0	2,876	120,191	61,635	51,049
- Rx Rate (L1) (Bit/s)	17.16 K	0	211.67 K	17.05 M	17.16 M	17.7 N
- Rx Rate (Fps)	26	0	96	4,006	2,055	1,702
- Flood Count (Frames)	29	23	32	19	20	25
P-0-2-0						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	784	0	0	120,800	61,452	51,203
- Rx Rate (L1) (Bit/s)	17.56 K	0	0	17.14 M	17.11 M	17.75 N
- Rx Rate (Fps)	26	0	0	4,027	2,048	1,707
- Flood Count (Frames)	64	60	64	34	44	40
P-0-2-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	795	0	2,923	121,156	61,503	51,229
- Rx Rate (L1) (Bit/s)	17.81 K	0	215.13 K	17.19 M	17.12 M	17.76 N
- Rx Rate (Fps)	27	0	97	4,039	2,050	1,708
- Flood Count (Frames)	64	60	62	37	38	40
P-0-2-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	789	0	0	120,920	62,109	49,992
- Rx Rate (L1) (Bit/s)	17.67 K	0	0	17.15 M	17.29 M	17.33 N
- Rx Rate (Fps)	26	0	0	4,031	2,070	1,666
- Flood Count (Frames)	62	60	61	42	42	45
P-0-2-3						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	0	0	2,945	121,200	61,607	50,944
- Rx Rate (L1) (Bit/s)	0	0	216.75 K	17.19 M	17.15 M	17.66 N
- Rx Rate (Fps)	0	0	98	4,040	2,054	1,698
- Flood Count (Frames)	63	63	61	41	37	47
P-0-2-4						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	768	0	2,761	121,522	62,119	51,247
- Rx Rate (L1) (Bit/s)	17.2 K	0	203.21 K	17.24 M	17.29 M	17.77 N
- Rx Rate (Fps)	26	0	92	4,051	2,071	1,708
- Flood Count (Frames)	61	59	61	36	44	46
P-0-2-5						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	786	0	2,827	121,280	60,347	51,187
- Rx Rate (L1) (Bit/s)	17.61 K	0	208.07 K	17.21 M	16.8 M	17.74 N
- Rx Rate (Fps)	26	0	94	4,043	2,012	1,706
- Flood Count (Frames)	62	60	63	45	46	38
P-0-4-0						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308



- Rx (Frames)	792	0	2,732	121,378	61,731	51,104
- Rx Rate (L1) (Bit/s)	17.74 K	0	201.08 K	17.22 M	17.19 M	17.72 M
- Rx Rate (Fps)	26	0	91	4,046	2,058	1,703
- Flood Count (Frames)	58	62	63	29	41	45
P-0-4-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	799	0	2,833	120,286	62,035	51,398
- Rx Rate (L1) (Bit/s)	17.9 K	0	208.51 K	17.06 M	17.27 M	17.82 M
- Rx Rate (Fps)	27	0	94	4,010	2,068	1,713
- Flood Count (Frames)	59	58	64	42	40	43
P-0-4-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	793	0	2,729	119,260	62,133	51,359
- Rx Rate (L1) (Bit/s)	17.76 K	0	200.85 K	16.92 M	17.3 M	17.8 M
- Rx Rate (Fps)	26	0	91	3,975	2,071	1,712
- Flood Count (Frames)	57	57	61	42	41	34
P-0-4-3						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	785	0	2,941	119,501	62,259	51,422
- Rx Rate (L1) (Bit/s)	17.58 K	0	216.46 K	16.95 M	17.33 M	17.83 M
- Rx Rate (Fps)	26	0	98	3,983	2,075	1,714
- Flood Count (Frames)	56	58	60	39	41	39
P-0-4-4						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	770	0	2,676	119,824	61,922	51,450
- Rx Rate (L1) (Bit/s)	17.25 K	0	196.95 K	17 M	17.24 M	17.84 M
- Rx Rate (Fps)	26	0	89	3,994	2,064	1,715
- Flood Count (Frames)	58	58	62	43	42	48
P-0-4-5						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	780	1	2,860	119,725	61,942	51,303
- Rx Rate (L1) (Bit/s)	17.47 K	39.47	210.5 K	16.98 M	17.24 M	17.79 M
- Rx Rate (Fps)	26	0	95	3,991	2,065	1,710
- Flood Count (Frames)	61	57	60	30	31	37

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12.6 G
Tx Rate (Fps)	1,024,057
Rx Rate (Percent)	6.02 %
Rx Rate (L1) (Bit/s)	1.08 G
Rx Rate (Fps)	88.13 K
Loss Rate (Percent)	91.39 %
Loss (Frames)	28,077,871
P-0-0-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	2,402,337
- Rx Rate (L1) (Bit/s)	985.28 M
- Rx Rate (Fps)	80,078
- Flood Count (Frames)	20
P-0-0-1	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,257
- Rx Rate (L1) (Bit/s)	5.85 M




Dy Roto (Eng.)	175
- Rx Rate (Fps) - Flood Count (Frames)	475 27
P-0-0-2	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames) - Rx Rate (L1) (Bit/s)	14,218 5.83 M
- Rx Rate (Fps)	474
- Flood Count (Frames)	28
P-0-0-3	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,369
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5.89 M 479
- Flood Count (Frames)	21
P-0-0-4	21
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,255
- Rx Rate (L1) (Bit/s)	5.85 M
- Rx Rate (Fps)	475
- Flood Count (Frames) P-0-0-5	24
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,379
- Rx Rate (L1) (Bit/s)	5.9 M
- Rx Rate (Fps)	479
- Flood Count (Frames)	11
P-0-2-0	4
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M 56,892
- Rx (Frames)	14,173
- Rx Rate (L1) (Bit/s)	5.81 M
- Rx Rate (Fps)	472
- Flood Count (Frames)	27
P-0-2-1	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps) - Rx (Frames)	56,892 14,187
- Rx Rate (L1) (Bit/s)	5.82 M
- Rx Rate (Fps)	473
- Flood Count (Frames)	25
P-0-2-2	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,128
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5.79 M 471
- Flood Count (Frames)	30
P-0-2-3	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,257
- Rx Rate (L1) (Bit/s)	5.85 M
- Rx Rate (Fps)	475
- Flood Count (Frames) P-0-2-4	23
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- IX Nate (LT) (Divs)	
- Tx Rate (ET) (Bl/s)	56,892



D D ((14) (D;(/)	5.04.14
- Rx Rate (L1) (Bit/s)	5.81 M
- Rx Rate (Fps)	472
- Flood Count (Frames) P-0-2-5	19
	1 706 760
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,095
- Rx Rate (L1) (Bit/s)	5.37 M
- Rx Rate (Fps)	437
- Flood Count (Frames)	27
P-0-4-0	1 706 762
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,706,762
	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,400
- Rx Rate (L1) (Bit/s)	5.91 M
- Rx Rate (Fps)	480
- Flood Count (Frames)	21
P-0-4-1	4 700 700
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,450
- Rx Rate (L1) (Bit/s)	5.93 M
- Rx Rate (Fps)	482
- Flood Count (Frames)	29
P-0-4-2	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,296
- Rx Rate (L1) (Bit/s)	5.86 M
- Rx Rate (Fps)	477
- Flood Count (Frames)	25
P-0-4-3	4
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,354
- Rx Rate (L1) (Bit/s)	5.89 M
- Rx Rate (Fps)	478
- Flood Count (Frames)	26
P-0-4-4	4
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,359
- Rx Rate (L1) (Bit/s)	5.89 M
- Rx Rate (Fps)	479
- Flood Count (Frames)	25
P-0-4-5	4 = 00 = 00
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,152
Dv Data (I 1) (Dit/c)	5.8 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (ET) (Bibs) - Rx Rate (Fps) - Flood Count (Frames)	472 24



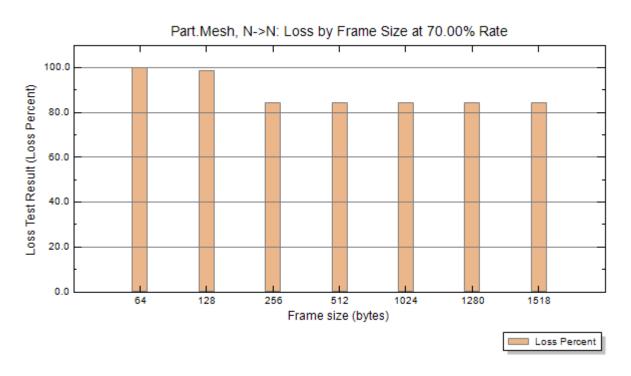

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G
Tx Rate (Fps)	21,428,571	12,162,162	6,521,739	3,383,458	1,724,138	1,384,615
Rx Rate (Percent)	0 %	0 %	0.02 %	6.56 %	7.08 %	7.26 %
Rx Rate (L1) (Bit/s)	807.5 K	796.75 K	2.94 M	1.18 G	1.28 G	1.31 G
Rx Rate (Fps)	1.2 K	672.93	1.33 K	277.57 K	152.66 K	125.73 K
Loss Rate (Percent)	99.99 %	99.99 %	99.98 %	91.8 %	91.15 %	90.92 %
Loss (Frames)	642,821,076	364,844,658	195,612,283	93,176,523	47,144,357	37,766,504
P-0-0-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	26,849	17,927	34,721	6,877,527	3,584,778	2,880,315
- Rx Rate (L1) (Bit/s)	601.42 K	707.52 K	2.56 M	975.69 M	998 M	998.51 M
- Rx Rate (Fps)	895	598	1,157	229,251	119,493	96,011
- Flood Count (Frames)	62	61	64	20	20	21
P-0-0-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	809	221	341	85,191	58,126	52,458
- Rx Rate (L1) (Bit/s)	18.12 K	8.72 K	25.1 K	12.09 M	16.18 M	18.19 M
- Rx Rate (Fps)	27	7	11	2,840	1,938	1,749
- Flood Count (Frames)	63	59	63	39	35	36
P-0-0-2						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	722	194	358	82,520	58,751	52,714
- Rx Rate (L1) (Bit/s)	16.17 K	7.66 K	26.35 K	11.71 M	16.36 M	18.27 M
- Rx Rate (Fps)	24	6	12	2,751	1,958	1,757
- Flood Count (Frames)	65	65	65	40	36	33
P-0-0-3						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	673	0	311	86,419	58,848	52,654



- Rx Rate (L1) (Bit/s)	15.08 K	0	22.89 K	12.26 M	16.38 M	18.25 M
- Rx Rate (Fps)	22	0	10	2,881	1,962	1,755
- Flood Count (Frames)	63	61	66	36	39	40
P-0-0-4 - Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx (Frames) - Tx Rate (L1) (Bit/s)	800 M	800 M	10,869,565 800 M	5,639,097 800 M	2,873,303 800 M	2,307,092 800 M
- Tx Rate (ET) (Blus)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	633	197	291	85,445	57,221	50,910
- Rx Rate (L1) (Bit/s)	14.18 K	7.77 K	21.42 K	12.12 M	15.93 M	17.65 M
- Rx Rate (Fps)	21	7.77 1	10	2,848	1,907	1,697
- Flood Count (Frames)	61	62	64	34	39	43
P-0-0-5	0.1		0.1	0.1		
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	637	169	317	84,143	58,902	52,586
- Rx Rate (L1) (Bit/s)	14.27 K	6.67 K	23.33 K	11.94 M	16.4 M	18.23 M
- Rx Rate (Fps)	21	6	11	2,805	1,963	1,753
- Flood Count (Frames)	30	33	30	14	19	18
P-0-2-0						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	309	85,138	58,610	52,518
- Rx Rate (L1) (Bit/s)	0	0	22.74 K	12.08 M	16.32 M	18.21 M
- Rx Rate (Fps)	0	0	10	2,838	1,954	1,751
- Flood Count (Frames)	59	60	66	40	32	38
P-0-2-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	628	158	308	85,505	58,789	52,803
- Rx Rate (L1) (Bit/s)	14.07 K	6.24 K	22.67 K	12.13 M	16.37 M	18.31 M
- Rx Rate (Fps)	21	5	10	2,850	1,960	1,760
- Flood Count (Frames)	63	61	64	44	44	34
P-0-2-2 - Tx (Frames)	25 714 205	20 270 270	10 960 565	5 620 007	2 072 562	2,307,692
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35,714,285 800 M	20,270,270 800 M	10,869,565 800 M	5,639,097 800 M	2,873,563 800 M	2,307,692 800 M
- Tx Rate (ET) (Blus)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	644	142	294	85,091	58,812	52,374
- Rx Rate (L1) (Bit/s)	14.43 K	5.6 K	21.64 K	12.07 M	16.37 M	18.16 M
- Rx Rate (Fps)	21	5	10	2,836	1,960	1,746
- Flood Count (Frames)	62	63	66	31	32	42
P-0-2-3				0.		·-
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	129	284	85,376	58,060	52,891
- Rx Rate (L1) (Bit/s)	0	5.09 K	20.9 K	12.11 M	16.16 M	18.34 M
- Rx Rate (Fps)	0	4	9	2,846	1,935	1,763
- Flood Count (Frames)	60	64	66	39	41	37
P-0-2-4						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	631	0	286	86,126	58,509	52,434
- Rx Rate (L1) (Bit/s)	14.13 K	0	21.05 K	12.22 M	16.29 M	18.18 M
- Rx Rate (Fps)	21	0	10	2,871	1,950	1,748
- Flood Count (Frames)	61	63	64	39	32	35
P-0-2-5						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	165	310	85,827	58,974	52,578
- Rx Rate (L1) (Bit/s)	0	6.51 K	22.82 K	12.18 M	16.42 M	18.23 M
- Rx Rate (Fps)	0	6	10	2,861	1,966	1,753
- Flood Count (Frames)	61	61	62	36	41	44
P-0-4-0	25 714 205	20 270 270	10 060 FGF	E 620 007	2 072 562	2 207 600
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923



- Rx (Frames)	643	146	293	85,366	58,776	52,526
- Rx Rate (L1) (Bit/s)	14.4 K	5.76 K	21.56 K	12.11 M	16.36 M	18.21 M
- Rx Rate (Fps)	21	5	10	2,846	1,959	1,751
- Flood Count (Frames)	58	59	66	37	39	37
P-0-4-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	633	135	300	85,233	58,401	52,453
- Rx Rate (L1) (Bit/s)	14.18 K	5.33 K	22.08 K	12.09 M	16.26 M	18.18 M
- Rx Rate (Fps)	21	5	10	2,841	1,947	1,748
- Flood Count (Frames)	58	60	57	41	32	39
P-0-4-2						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	650	164	273	85,799	58,563	52,392
- Rx Rate (L1) (Bit/s)	14.56 K	6.47 K	20.09 K	12.17 M	16.3 M	18.16 M
- Rx Rate (Fps)	22	5	9	2,860	1,952	1,746
- Flood Count (Frames)	59	59	59	30	37	37
P-0-4-3						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	619	154	292	85,946	58,676	52,754
- Rx Rate (L1) (Bit/s)	13.87 K	6.08 K	21.49 K	12.19 M	16.34 M	18.29 M
- Rx Rate (Fps)	21	5	10	2,865	1,956	1,758
- Flood Count (Frames)	58	56	58	35	38	42
P-0-4-4						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	626	159	299	85,265	58,304	52,344
- Rx Rate (L1) (Bit/s)	14.02 K	6.28 K	22.01 K	12.1 M	16.23 M	18.15 M
- Rx Rate (Fps)	21	5	10	2,842	1,943	1,745
- Flood Count (Frames)	57	58	60	41	34	42
P-0-4-5						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	652	128	297	85,296	58,675	52,238
- Rx Rate (L1) (Bit/s)	14.6 K	5.05 K	21.86 K	12.1 M	16.34 M	18.11 M
- Rx Rate (Fps)	22	4	10	2,843	1,956	1,741
- Flood Count (Frames)	56	58	59	28	38	46

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14.4 G
Tx Rate (Fps)	1,170,351
Rx Rate (Percent)	6.16 %
Rx Rate (L1) (Bit/s)	1.11 G
Rx Rate (Fps)	90.11 K
Loss Rate (Percent)	92.3 %
Loss (Frames)	32,407,264
P-0-0-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	2,419,669
- Rx Rate (L1) (Bit/s)	992.39 M
- Rx Rate (Fps)	80,656
- Flood Count (Frames)	18
P-0-0-1	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,772
- Rx Rate (L1) (Bit/s)	6.88 M




Du Data (Faa)	550
- Rx Rate (Fps)	559
- Flood Count (Frames) P-0-0-2	27
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	14,156
- Rx Rate (L1) (Bit/s)	5.81 M
- Rx Rate (Fps)	472
- Flood Count (Frames)	26
P-0-0-3	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M
- Rx (Frames)	65,020 16,955
- Rx Rate (L1) (Bit/s)	6.95 M
- Rx Rate (Fps)	565
- Flood Count (Frames)	26
P-0-0-4	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,885
- Rx Rate (L1) (Bit/s)	6.93 M
- Rx Rate (Fps)	563
- Flood Count (Frames)	26
P-0-0-5	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,231
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6.66 M 541
- Flood Count (Frames)	18
P-0-2-0	10
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,915
- Rx Rate (L1) (Bit/s)	6.94 M
- Rx Rate (Fps)	564
- Flood Count (Frames)	24
P-0-2-1	1 050 505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps) - Rx (Frames)	65,020 16,803
- Rx Rate (L1) (Bit/s)	6.89 M
- Rx Rate (Fps)	560
- Flood Count (Frames)	23
P-0-2-2	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,768
- Rx Rate (L1) (Bit/s)	6.88 M
- Rx Rate (Fps)	559
- Flood Count (Frames)	27
P-0-2-3	4.050.505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020 16,688
- Rx (Frames) - Rx Rate (L1) (Bit/s)	16,688 6.84 M
- Rx Rate (E1) (Blus)	556
- Flood Count (Frames)	23
	20
P-0-2-4	
P-0-2-4 - Tx (Frames)	1,950,585
- Tx (Frames)	1,950,585 800 M
	1,950,585 800 M 65,020



D:: Data (I.4) (D:t/a)	C 00 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	6.98 M
- Flood Count (Frames)	567 21
P-0-2-5	21
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,813
- Rx Rate (L1) (Bit/s)	6.9 M
- Rx Rate (Fps)	560
- Flood Count (Frames)	29
P-0-4-0	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	17,025
- Rx Rate (L1) (Bit/s)	6.98 M
- Rx Rate (Fps)	568
- Flood Count (Frames)	30
P-0-4-1	1 050 505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020 17,001
- Rx (Frames)	6.97 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	567
- Flood Count (Frames)	25
P-0-4-2	25
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,816
- Rx Rate (L1) (Bit/s)	6.9 M
- Rx Rate (Fps)	561
- Flood Count (Frames)	24
P-0-4-3	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,933
- Rx Rate (L1) (Bit/s)	6.94 M
- Rx Rate (Fps)	564
- Flood Count (Frames)	24
P-0-4-4	4 050 505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	16,920
- Rx Rate (L1) (Bit/s)	6.94 M
- Rx Rate (Fps)- Flood Count (Frames)	564 23
P-0-4-5	23
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (E1) (Blus)	65,020
- Rx (Frames)	16,888
- Rx Rate (L1) (Bit/s)	6.93 M
- Rx Rate (Fps)	563
- Flood Count (Frames)	22



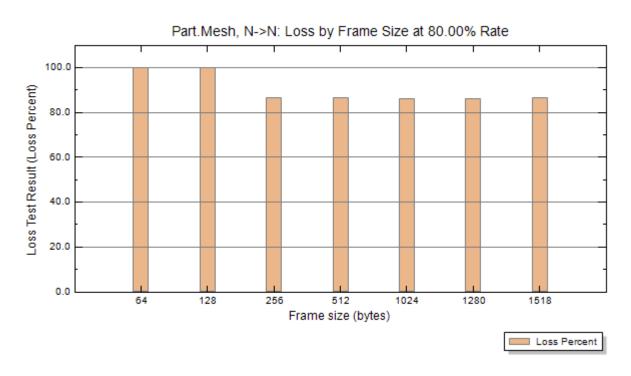

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G
Tx Rate (Fps)	24,107,142	13,682,432	7,336,956	3,806,390	1,939,655	1,557,691
Rx Rate (Percent)	0.01 %	0.02 %	0 %	6.72 %	6.92 %	6.93 %
Rx Rate (L1) (Bit/s)	1.13 M	2.92 M	0	1.21 G	1.25 G	1.25 G
Rx Rate (Fps)	1.68 K	2.47 K	0	284.3 K	149.13 K	120.02 K
Loss Rate (Percent)	99.99 %	99.98 %	100 %	92.53 %	92.31 %	92.29 %
Loss (Frames)	723,163,832	410,398,879	220,108,673	105,662,757	53,715,878	43,130,103
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	35,905	41,336	0	7,009,006	3,584,371	2,880,856
- Rx Rate (L1) (Bit/s)	804.27 K	1.63 M	0	994.34 M	997.89 M	998.7 M
- Rx Rate (Fps)	1,197	1,378	0	233,634	119,479	96,029
- Flood Count (Frames)	59	63	1	21	24	23
P-0-0-1						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,538	2,474	0	103,441	63,869	0
- Rx Rate (L1) (Bit/s)	34.45 K	97.64 K	0	14.67 M	17.78 M	0
- Rx Rate (Fps)	51	82	0	3,448	2,129	0
- Flood Count (Frames)	61	64	61	36	38	2
P-0-0-2						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	2,382	0	99,281	0	54,677
- Rx Rate (L1) (Bit/s)	0	94.01 K	0	14.08 M	0	18.95 M
- Rx Rate (Fps)	0	79	0	3,309	0	1,823
- Flood Count (Frames)	2	62	61	35	1	42
P-0-0-3						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,094	2,389	0	99,410	0	0



- Rx Rate (L1) (Bit/s)	24.51 K	94.29 K	0	14.1 M	0	C
- Rx Rate (Fps)	36	80	0	3,314	0	C
- Flood Count (Frames)	59	64	1	36	1	1
P-0-0-4						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	963	2,352	0	0	65,271	0
- Rx Rate (L1) (Bit/s)	21.57 K	92.83 K	0	0	18.17 M	0
- Rx Rate (Fps)	32	78	0	0	2,176	0
- Flood Count (Frames)	61	64	62	1	49	2
P-0-0-5						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	993	2,320	0	99,414	63,243	55,830
- Rx Rate (L1) (Bit/s)	22.24 K	91.56 K	0	14.1 M	17.61 M	19.35 M
- Rx Rate (Fps)	33	77	0	3,314	2,108	1,861
- Flood Count (Frames)	28	25	25	15	27	29
P-0-2-0						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	981	0	0	109,669	61,427	54,625
- Rx Rate (L1) (Bit/s)	21.97 K	0	0	15.56 M	17.1 M	18.94 M
- Rx Rate (Fps)	33	0	0	3,656	2,048	1,821
- Flood Count (Frames)	61	1	1	31	36	45
P-0-2-1						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	96,611	65,132	0
- Rx Rate (L1) (Bit/s)	0	0	0	13.71 M	18.13 M	0
- Rx Rate (Fps)	0	0	0	3,220	2,171	0
- Flood Count (Frames)	59	1	1	34	36	1
P-0-2-2						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	984	0	0	97,606	0	54,668
- Rx Rate (L1) (Bit/s)	22.04 K	0	0	13.85 M	0	18.95 M
- Rx Rate (Fps)	33	0	0	3,254	0	1,822
- Flood Count (Frames)	62	1	61	30	1	44
P-0-2-3			40.000.000			0 -00 /-0
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	980	2,314	0	105,952	61,215	55,648
- Rx Rate (L1) (Bit/s)	21.95 K	91.33 K	0	15.03 M	17.04 M	19.29 M
- Rx Rate (Fps)	33	77	0	3,532	2,041	1,855
- Flood Count (Frames)	61	62	1	36	45	44
P-0-2-4						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,020	2,370	0	0	67,104	54,410
- Rx Rate (L1) (Bit/s)	22.85 K	93.54 K	0	0	18.68 M	18.86 M
- Rx Rate (Fps)	34	79	0	0	2,237	1,814
- Flood Count (Frames)	59	66	63	2	48	47
P-0-2-5						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	2,314	0	99,085	60,598	55,934
- Rx Rate (L1) (Bit/s)	0	91.33 K	0	14.06 M	16.87 M	19.39 M
- Rx Rate (Fps)	0	77	0	3,303	2,020	1,864
- Flood Count (Frames)	1	64	62	45	41	48
P-0-4-0						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
	000 14	900 M	900 M	900 M	900 M	900 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	900 M 1,339,286	760,135	407,609	211,466	107,759	86,538



- Rx (Frames)	978	2,296	0	110,830	63,731	55,502
- Rx Rate (L1) (Bit/s)	21.91 K	90.62 K	0	15.72 M	17.74 M	19.24 M
- Rx Rate (Fps)	33	77	0	3,694	2,124	1,850
- Flood Count (Frames)	60	61	60	32	36	40
P-0-4-1						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	969	2,262	0	95,362	65,726	55,770
- Rx Rate (L1) (Bit/s)	21.71 K	89.27 K	0	13.53 M	18.3 M	19.33 M
- Rx Rate (Fps)	32	75	0	3,179	2,191	1,859
- Flood Count (Frames)	59	64	59	40	41	50
P-0-4-2						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,012	2,293	0	98,697	61,117	55,960
- Rx Rate (L1) (Bit/s)	22.67 K	90.5 K	0	14 M	17.01 M	19.4 M
- Rx Rate (Fps)	34	76	0	3,290	2,037	1,865
- Flood Count (Frames)	61	60	60	44	43	41
P-0-4-3						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	984	2,335	0	106,473	63,913	55,624
- Rx Rate (L1) (Bit/s)	22.04 K	92.15 K	0	15.1 M	17.79 M	19.28 M
- Rx Rate (Fps)	33	78	0	3,549	2,130	1,854
- Flood Count (Frames)	60	58	60	35	42	42
P-0-4-4						
- Tx (Frames)	40.178.571	22.804.054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,020	2,349	0	98,852	65,403	55,568
- Rx Rate (L1) (Bit/s)	22.85 K	92.71 K	0	14.02 M	18.21 M	19.26 M
- Rx Rate (Fps)	34	78	0	3,295	2,180	1,852
- Flood Count (Frames)	60	61	61	42	44	42
P-0-4-5						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,019	2,291	0	99,257	61,642	55,564
- Rx Rate (L1) (Bit/s)	22.83 K	90.42 K	0	14.08 M	17.16 M	19.26 M
- Rx Rate (Fps)	34	76	0	3,309	2,055	1,852
- Flood Count (Frames)	61	62	60	38	46	42

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16.2 G
Tx Rate (Fps)	1,316,644
Rx Rate (Percent)	6.07 %
Rx Rate (L1) (Bit/s)	1.09 G
Rx Rate (Fps)	88.86 K
Loss Rate (Percent)	93.25 %
Loss (Frames)	36,833,625
P-0-0-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	2,423,035
- Rx Rate (L1) (Bit/s)	993.77 M
- Rx Rate (Fps)	80,768
- Flood Count (Frames)	21
P-0-0-1	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,336
- Rx Rate (L1) (Bit/s)	7.11 M




D D ((E)	570
- Rx Rate (Fps)	578
- Flood Count (Frames) P-0-0-2	27
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,324
- Rx Rate (L1) (Bit/s)	7.11 M
- Rx Rate (Fps)	577
- Flood Count (Frames)	23
P-0-0-3	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,323
- Rx Rate (L1) (Bit/s)	7.1 M
- Rx Rate (Fps)	577
- Flood Count (Frames) P-0-0-4	22
	2 104 409
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,408 900 M
- Tx Rate (E1) (Bibs)	73,147
- Rx (Frames)	17,405
- Rx Rate (L1) (Bit/s)	7.14 M
- Rx Rate (E1) (Bibs)	580
- Flood Count (Frames)	29
P-0-0-5	29
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-0	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,524
- Rx Rate (L1) (Bit/s)	7.19 M
- Rx Rate (Fps)	584
- Flood Count (Frames)	30
P-0-2-1	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M 73,147
- Tx Rate (Fps)	17,125
- Rx (Frames) - Rx Rate (L1) (Bit/s)	7.02 M
- Rx Rate (Fps)	571
- Flood Count (Frames)	25
P-0-2-2	20
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-3	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,391
- Rx Rate (L1) (Bit/s)	7.13 M
- Rx Rate (Fps)	580
- Flood Count (Frames)	29
P-0-2-4	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps) - Rx (Frames)	73,147 17,326
	1/326



- Rx Rate (L1) (Bit/s)	7.11 M
- Rx Rate (Fps)	578
- Flood Count (Frames)	22
P-0-2-5	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-4-0	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,435
- Rx Rate (L1) (Bit/s)	7.15 M
- Rx Rate (Fps)	581
- Flood Count (Frames)	22
P-0-4-1	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,171
- Rx Rate (L1) (Bit/s)	7.04 M
- Rx Rate (Fps)	572
- Flood Count (Frames)	22
P-0-4-2	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,402
- Rx Rate (L1) (Bit/s)	7.14 M
- Rx Rate (Fps)	580
- Flood Count (Frames)	25
P-0-4-3	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,475
- Rx Rate (L1) (Bit/s)	7.17 M
- Rx Rate (Fps)	583
- Flood Count (Frames)	26
P-0-4-4	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,002
- Rx Rate (L1) (Bit/s)	6.97 M
- Rx Rate (Fps)	567
- Flood Count (Frames)	23
P-0-4-5	2 104 400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,431
- Rx Rate (L1) (Bit/s)	7.15 M
- Rx Rate (Fps)	581
- Flood Count (Frames)	24



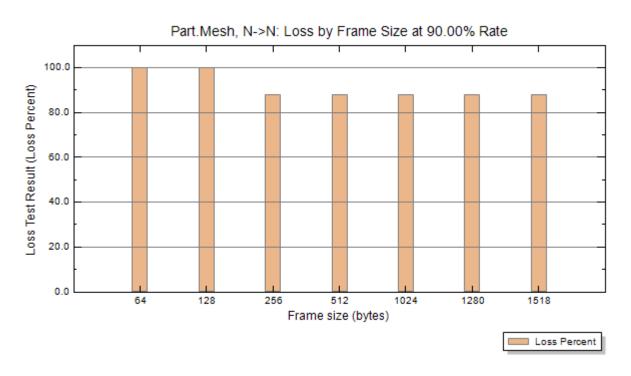

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
Rx Rate (Percent)	0 %	0.01 %	0.03 %	6.38 %	6.84 %	7.04 %
Rx Rate (L1) (Bit/s)	633.4 K	1.52 M	4.64 M	1.15 G	1.23 G	1.27 G
Rx Rate (Fps)	942.57	1.29 K	2.1 K	269.83 K	147.44 K	121.78 K
Loss Rate (Percent)	100 %	99.99 %	99.97 %	93.62 %	93.16 %	92.96 %
Loss (Frames)	803,543,142	456,042,432	244,502,173	118,784,926	60,232,046	48,269,699
P-0-0-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	18,981	27,368	28,785	7,010,681	3,566,103	2,880,930
- Rx Rate (L1) (Bit/s)	425.17 K	1.08 M	2.12 M	994.58 M	992.8 M	998.72 M
- Rx Rate (Fps)	633	912	960	233,689	118,870	96,031
- Flood Count (Frames)	61	61	82	24	19	23
P-0-0-1						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	864	902	0	64,813	57,399	48,426
- Rx Rate (L1) (Bit/s)	19.35 K	35.6 K	0	9.19 M	15.98 M	16.79 M
- Rx Rate (Fps)	29	30	0	2,160	1,913	1,614
- Flood Count (Frames)	63	61	1	31	38	39
P-0-0-2						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	699	668	2,264	65,394	56,703	48,001
- Rx Rate (L1) (Bit/s)	15.66 K	26.36 K	166.63 K	9.28 M	15.79 M	16.64 M
- Rx Rate (Fps)	23	22	75	2,180	1,890	1,600
- Flood Count (Frames)	77	64	64	28	43	37
P-0-0-3						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	646	746	2,147	64,146	0	0



- Rx Rate (L1) (Bit/s)	14.47 K	29.44 K	158.02 K	9.1 M	0	C
- Rx Rate (Fps)	22	25	72	2,138	0	(
- Flood Count (Frames)	63	64	81	34	1	1
P-0-0-4						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	658	0	2,128	62,869	55,975	48,424
- Rx Rate (L1) (Bit/s)	14.74 K	0	156.62 K	8.92 M	15.58 M	16.79 M
- Rx Rate (Fps)	22	0	71	2,096	1,866	1,614
- Flood Count (Frames)	61	1	62	38	36	34
P-0-0-5	44.040.057	05 007 007	40 500 050	7.040.070	0.504.054	0.004.045
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	0	692	2,141	63,097	56,932	48,310
- Rx Rate (L1) (Bit/s)	0	27.31 K	157.58 K	8.95 M	15.85 M	16.75 M
- Rx Rate (Fps)	0	23	71 37	2,103	1,898	1,610
- Flood Count (Frames) P-0-2-0	U	31	31	17	16	21
	44 C40 0E7	25 227 027	12 506 056	7 040 070	2 504 054	2 004 645
- Tx (Frames) - Tx Rate (L1) (Bit/s)	44,642,857 1000 M	25,337,837 1000 M	13,586,956 1000 M	7,048,872 1000 M	3,591,954 1000 M	2,884,615 1000 M
- Tx Rate (LT) (Bit/s)	1,488,095	844,595	452.899	234,962	119,732	96,154
\ I /	1,488,095		- /			
- Rx (Frames)		676	2,131	64,561	56,272	48,038
- Rx Rate (L1) (Bit/s)	0	26.68 K	156.84 K	9.16 M	15.67 M	16.65 M
- Rx Rate (Fps)	0	23	71	2,152	1,876	1,601
- Flood Count (Frames) P-0-2-1	U	81	83	40	42	35
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
		1000 M			1000 M	2,004,013 1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	844,595	1000 M 452,899	1000 M 234,962	119,732	96,154
- Rx (Frames)	632	683	2,137	63,440	0	48,191
- Rx Rate (L1) (Bit/s)	14.16 K	26.96 K	157.28 K	9 M	0	16.71 M
- Rx Rate (Fps)	21	20.90 K	71	2,115	0	1,606
- Flood Count (Frames)	63	83	81	37	1	43
P-0-2-2	0.0	00	01	31	1	
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	0	685	2,111	64,364	56,808	48,262
- Rx Rate (L1) (Bit/s)	0	27.03 K	155.37 K	9.13 M	15.82 M	16.73 M
- Rx Rate (Fps)	0	23	70	2,145	1,894	1,609
- Flood Count (Frames)	1	83	63	33	37	39
P-0-2-3	-					
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	654	689	2,126	63,529	56,410	48,038
- Rx Rate (L1) (Bit/s)	14.65 K	27.19 K	156.47 K	9.01 M	15.7 M	16.65 M
- Rx Rate (Fps)	22	23	71	2,118	1,880	1,601
- Flood Count (Frames)	65	64	85	36	37	34
P-0-2-4						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	642	675	2,136	63,130	57,919	48,306
- Rx Rate (L1) (Bit/s)	14.38 K	26.64 K	157.21 K	8.96 M	16.12 M	16.75 M
- Rx Rate (Fps)	21	23	71	2,104	1,931	1,610
- Flood Count (Frames)	61	63	64	32	36	31
P-0-2-5						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	638	697	2,123	63,771	56,799	48,410
- Rx Rate (L1) (Bit/s)	14.29 K	27.51 K	156.25 K	9.05 M	15.81 M	16.78 M
- Rx Rate (Fps)	21	23	71	2,126	1,893	1,614
- Flood Count (Frames)	80	61	62	39	39	37
P-0-4-0						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
ix (i rainoo)						
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M



- Rx (Frames)	646	687	2,147	62,300	57,527	48,313
- Rx Rate (L1) (Bit/s)	14.47 K	27.11 K	158.02 K	8.84 M	16.02 M	16.75 M
- Rx Rate (Fps)	22	23	72	2,077	1,918	1,610
- Flood Count (Frames)	55	58	60	29	33	34
P-0-4-1						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	655	708	2,132	62,867	56,314	48,492
- Rx Rate (L1) (Bit/s)	14.67 K	27.94 K	156.92 K	8.92 M	15.68 M	16.81 M
- Rx Rate (Fps)	22	24	71	2,096	1,877	1,616
- Flood Count (Frames)	63	60	61	33	39	32
P-0-4-2						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	639	684	2,138	63,894	56,889	48,591
- Rx Rate (L1) (Bit/s)	14.31 K	27 K	157.36 K	9.06 M	15.84 M	16.84 M
- Rx Rate (Fps)	21	23	71	2,130	1,896	1,620
- Flood Count (Frames)	57	59	61	27	37	30
P-0-4-3						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	658	675	2,124	63,206	57,820	48,204
- Rx Rate (L1) (Bit/s)	14.74 K	26.64 K	156.33 K	8.97 M	16.1 M	16.71 M
- Rx Rate (Fps)	22	23	71	2,107	1,927	1,607
- Flood Count (Frames)	61	60	60	29	32	32
P-0-4-4						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	630	683	2,120	64,255	59,391	48,242
- Rx Rate (L1) (Bit/s)	14.11 K	26.96 K	156.03 K	9.12 M	16.53 M	16.72 M
- Rx Rate (Fps)	21	23	71	2,142	1,980	1,608
- Flood Count (Frames)	61	62	63	29	37	34
P-0-4-5						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	635	716	2,133	64,444	57,858	48,189
- Rx Rate (L1) (Bit/s)	14.22 K	28.26 K	156.99 K	9.14 M	16.11 M	16.71 M
- Rx Rate (Fps)	21	24	71	2,148	1,929	1,606
- Flood Count (Frames)	61	62	63	25	40	40

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1,462,938
Rx Rate (Percent)	6.12 %
Rx Rate (L1) (Bit/s)	1.1 G
Rx Rate (Fps)	89.51 K
Loss Rate (Percent)	93.88 %
Loss (Frames)	41,202,962
P-0-0-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	2,424,523
- Rx Rate (L1) (Bit/s)	994.38 M
- Rx Rate (Fps)	80,817
- Flood Count (Frames)	20
P-0-0-1	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,307
- Rx Rate (L1) (Bit/s)	6.69 M




- Rx Rate (Fps) 544 - Flood Count (Frames) 26 P-0-0-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,694 - Rx Rate (L1) (Bit/s) 6.85 M - Rx Rate (Fps) 556 - Flood Count (Frames) 20 P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 15,23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Tx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Flood Count (Frames) 25 - Tx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Tx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (Fps) 557 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.86 M - Tx Rate (Fps) 557 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx (Frames) 16,663 - Rx Rate (Fps) 522 - Tx (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Tx Rate (Fps) 522 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 522 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 16,663 - Rx Rate (Fps) 522 - Flood Count (Frames) 16,660 - Rx Rate (Fps) 540	D D + (E)	
P-0-0-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 10,00 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,694 - Rx Rate (L1) (Bit/s) 6.85 M - Rx Rate (Fps) 556 - Flood Count (Frames) 20 - 0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 15,923 - Tx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Tx Rate (Fps) 531 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 531 - Flood Count (Frames) 25 - Tx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 16,715 - Rx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 557 - Flood Count (Frames) 16 - Flood Count (Frames) 16 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 522 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 553 - Flood Count (Frames) 554 - Tx (Frames) 16,664 - Tx Rate (Fps) 554 - Tx (Frames) 16,693 - Tx Rate (Fps) 554 - Tx Rate (Fps)	- Rx Rate (Fps)	544
- Tx (Frames)		20
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,694 - Rx Rate (L1) (Bit/s) 6.85 M - Rx Rate (L1) (Bit/s) 5.56 - Flood Count (Frames) 20 - P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 15,923 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Flood Count (Frames) 2,438,231 - Tx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Tx (Frames) 2,438,231 - Tx (Frames) 16,715 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 536 - Flood Count (Frames) 24,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Fps) 552 - Flood Count (Frames) 757 - Flood Count (Frames) 757 - Flood Count (Frames) 757 - Flood Count (Frames) 758 - Flood Count (Frames) 759 - Flood Count (Frames) 750 - Floo		2 438 231
- Tx Rate (Fps) 81,274 - Rx (Frames) 16,694 - Rx Rate (L1) (Bit/s) 6.85 M - Rx Rate (Fps) 556 - Flood Count (Frames) 20 P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 1000 M - Tx Rate (Fps) 1531 - Flood Count (Frames) 15,923 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Tx (Frames) 16,716 - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 16,86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - Tx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 523 - Flood Count (Frames) 6.644 M - Rx Rate (Fps) 523 - Flood Count (Frames) 72,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 72,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 72,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 72,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 72,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 1000 M - Tx Rate (
- Rx (Frames) 16,694 - Rx Rate (L1) (Bit/s) 6.85 M Rx Rate (Fps) 556 - Flood Count (Frames) 20 P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 0 - Rx Rate (Eps) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 1000 M - Tx (Frames) 15,923 - Tx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 22,438,231 - Tx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16,071 - Rx Rate (Fps) 557 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 552 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 552 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 15,693 - R		
- Rx Rate (L1) (Bit/s)		
- Flood Count (Frames) 20 P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 24 - Tx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 - Flood Count (Frames) 24 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 24 - Rx (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 24 - Tx (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Rx Rate (Fps)		6.85 M
P-0-0-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Flood Count (Frames) 1000 M - Tx Rate (Fps) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 15,923 - Rx Rate (L1) (Bit/s) 15,923 - Rx Rate (L1) (Bit/s) 15,923 - Rx Rate (Fps) 531 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 531 - Flood Count (Frames) 25 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6,86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16,071 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6,59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 225 - P-0-2-1 - Tx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6,69 M - Rx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6,79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6,44 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6,44 M - Tx Rate (Fps) 552 - Flood Count (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6,44 M - Rx Rate (Fps) 540 - Rx Rate (Fps)	- Rx Rate (Fps)	556
- Tx (Frames)	- Flood Count (Frames)	20
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps) 81,274 - Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 - Flood Count (Frames) 2,438,231 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (Fps) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - Flood Count (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 24 - Tx (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 24 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 523 - Flood Count (Frames) 24 - Tx (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 524 - Flood Count (Frames) 540 - Flood Count (Frames) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 740 - Rx Rate (Fps) 740		
- Rx (Frames) 0 - Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 - P-0-0-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 - P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 24,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 24,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 524 - Rx (Frames) 16,644 - Rx (Frames) 16,649 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 524 - Rx (Frames) 540 - Flood Count (Frames) 540 - Flood Count (Frames) 74 - Rx (F	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 0 - Rx Rate (Fps) 0 - Flood Count (Frames) 0 P-0-0-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 16,593 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 524 - Rx (Frames) 6.49 M - Tx Rate (Fps) 523 - Flood Count (Frames) 74 - Rx (Frames) 74 - Rx (Frames) 75 - Tx (Frames)		
- Rx Rate (Fps) - Flood Count (Frames) P-0-0-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) -		
- Flood Count (Frames) P-0-0-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - S31 - Flood Count (Frames) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Flood Count (Frames) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Coun		
P-0-0-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 740 - Tx Rate (Fps) 740 - Tx R	- RX Rate (Fps)	
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 - F-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - O-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 - F-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 366 - Flood Count (Frames) 25 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 31,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 24 - Tx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 24,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx R		U
- Tx Rate (L1) (Bit/s)		2 429 221
- Tx Rate (Fps)	- Tx Rate (I 1) (Rit/s)	
- Rx (Frames) 15,923 - Rx Rate (L1) (Bit/s) 6.53 M - Rx Rate (Fps) 531 - Flood Count (Frames) 25 - P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 16,563 - Rx Rate (Fps) 16,44 - Rx (Frames) 15,693 - Rx Rate (Fps) 16,44 - Rx (Frames) 16,193 - Rx Rate (Fps) 16,493 - Rx Rate (Fps) 16,494 - Rx (Frames) 16,494 - Rx (Frames) 16,494	- Tx Rate (Fns)	
- Rx Rate (L1) (Bit/s) 531 - Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Rx Rate (Fps) 536 - Rx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231	- Rx (Frames)	
- Rx Rate (Fps) 531 - Flood Count (Frames) 25 P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		
- Flood Count (Frames) P-0-0-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Tx (Frames) - Tx (Frames) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) -		
P-0-0-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 25 - Flood Count (Frames) 36 - Flood Count (Frames) 37 - Tx (Frames) 16,071 - Tx (Frames) 2,438,231 - Tx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 - P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (Eps) 536 - Flood Count (Frames) 25 - P-0-2-1 - Tx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		20
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (L1) (Bit/s) 6.59 M - Tx Rate (L1) (Bit/s) 6.59 M - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 523 - Tx (Frames) 523 - Tx (Frames) 523 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 540 - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		2,438.231
- Tx Rate (Fps) 81,274 - Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 16,193 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		
- Rx (Frames) 16,715 - Rx Rate (L1) (Bit/s) 6.86 M - Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Tx Rate (Fps) 552 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24		
- Rx Rate (L1) (Bit/s) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx (Frames) 24		
- Rx Rate (Fps) 557 - Flood Count (Frames) 16 P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 523 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx (Frames) 24		
P-0-2-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - Flood Count (Frames) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231		557
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (Fps) 536 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 10,000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 51,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274	- Flood Count (Frames)	16
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 15,693 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 51,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Rx Rate (Fps) 540 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 31,274	P-0-2-0	
- Tx Rate (Fps) 81,274 - Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 343,231		
- Rx (Frames) 16,071 - Rx Rate (L1) (Bit/s) 6.59 M - Rx Rate (Fps) 536 - Flood Count (Frames) 25 - P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 - P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (Fps) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 343,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 343,231	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 536 - Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Tx Rate (Fps) 31,274		
- Rx Rate (Fps) 536 - Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (Fps) 523 - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 340 - Tx Rate (Fps)		
- Flood Count (Frames) 25 P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Tx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 340,274		
P-0-2-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 6.64 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 3400 M		2 438 231
- Tx Rate (Fps) 81,274 - Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 523 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx (Frames) 16,563 - Rx Rate (L1) (Bit/s) 6.79 M - Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 16,44 M - Tx Rate (Fps) 540 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx Rate (L1) (Bit/s) 5.79 M - Rx Rate (Fps) 5.52 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 31,274		
- Rx Rate (Fps) 552 - Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Flood Count (Frames) 23 P-0-2-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 540 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274	- Flood Count (Frames)	23
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274	P-0-2-2	
- Tx Rate (Fps) 81,274 - Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx (Frames) 15,693 - Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 - P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx Rate (L1) (Bit/s) 6.44 M - Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx Rate (Fps) 523 - Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Flood Count (Frames) 27 P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
P-0-2-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		27
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		0.400.004
- Tx Rate (Fps) 81,274 - Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx (Frames) 16,193 - Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx Rate (L1) (Bit/s) 6.64 M - Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Rx Rate (Fps) 540 - Flood Count (Frames) 24 P-0-2-4 2,438,231 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Flood Count (Frames) 24 P-0-2-4 2,438,231 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
P-0-2-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274	- Flood Count (Frames)	
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274		2 438 231
- Tx Rate (Fps) 81,274		



D. D. t. (1.4) (Dit/s)	0.04.14
- Rx Rate (L1) (Bit/s)	6.84 M
- Rx Rate (Fps) - Flood Count (Frames)	556 21
P-0-2-5	21
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,018
- Rx Rate (L1) (Bit/s)	6.57 M
- Rx Rate (Fps)	534
- Flood Count (Frames)	33
P-0-4-0	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,184
- Rx Rate (L1) (Bit/s)	6.64 M
- Rx Rate (Fps)	539
- Flood Count (Frames)	22
P-0-4-1	<u> </u>
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,397
- Rx Rate (L1) (Bit/s)	6.72 M
- Rx Rate (Fps)	547
- Flood Count (Frames)	20
P-0-4-2	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,220
- Rx Rate (L1) (Bit/s)	6.65 M
- Rx Rate (Fps)	541
- Flood Count (Frames)	21
P-0-4-3	0.400.004
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	16,365
- Rx Rate (L1) (Bit/s)	6.71 M
- Rx Rate (Fps) - Flood Count (Frames)	546 27
P-0-4-4	21
	2 428 224
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,438,231 1000 M
- Tx Rate (LT) (Bil/s)	81,274
- Rx (Frames)	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	16,806 6.89 M
- Rx Rate (E1) (Blus)	560
- Flood Count (Frames)	28
P-0-4-5	20
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	15,838
- Rx Rate (L1) (Bit/s)	6.5 M
- Rx Rate (Fps)	528
- Flood Count (Frames)	29
. 1000 Count (i funico)	20



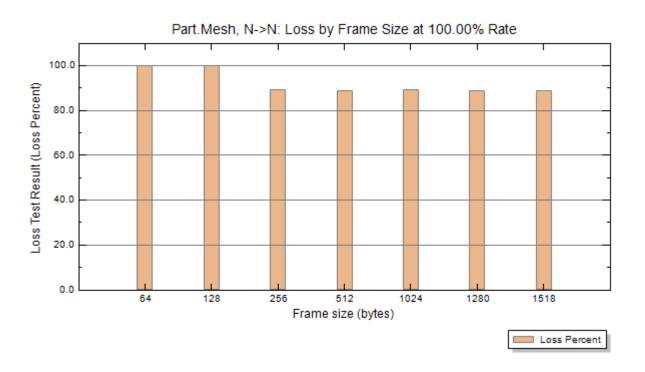



Rate Test: Part.Mesh, N->N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: East-to-West

Throughput Options

 Initial Rate:
 10.00%

 Maximum Rate:
 100.00%

 Minimum Rate:
 10.00%

 Resolution:
 10.00%

Used Ports

Port ID	Port Role
P-0-0-0	East
P-0-0-1	East
P-0-0-2	East
P-0-0-3	East
P-0-0-4	East
P-0-0-5	East
P-0-2-0	East
P-0-2-1	East
P-0-2-2	East
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	899.99 M	899.99 M	899.99 M
Tx Rate (Fps)	1,339,284	760,134	407,608	211,464	107,757	86,538
Rx Rate (Percent)	9.85 %	9.85 %	9.76 %	9.64 %	9.82 %	9.84 %
Rx Rate (L1) (Bit/s)	886.77 M	886.48 M	878.7 M	867.76 M	883.48 M	885.88 M
Rx Rate (Fps)	1.32 M	748.72 K	397.96 K	203.89 K	105.78 K	85.18 K
Loss Rate (Percent)	1.47 %	1.5 %	2.37 %	3.58 %	1.83 %	1.57 %
Loss (Frames)	590,709	342,524	289,363	227,200	59,296	40,711
P-0-0-0						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0



- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2 - Tx (Frames)	4,464,279	2.533.779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84.459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0,010
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3				•	•	
- Tx (Frames)	4.464.279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0 1, 100	0	0	0	0,010
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4				•		
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	04,439	45,290	23,490	0	9,013
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	U	U	0	0	0	0
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288.459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	04,439	45,290	23,490	0	9,013
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	0	U
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
, ,		2,555,779 100 M		100 M	100 M	200,439 100 M
- Tx Rate (L1) (Bit/s)	100 M		100 M			
- Tx Rate (Fps)	148,809	84,459	45,290 0	23,496	11,973	9,615
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
` ' ' ` '	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	U	U	0	0	0	- 0
- Tx (Frames)	4.464.279	2.533.779	1,358,694	704,880	359.190	288,459
- Tx Rate (L1) (Bit/s)	100 M	2,555,779 100 M	1,356,094 100 M	100 M	100 M	200,439 100 M
- Tx Rate (ET) (Blus)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	04,439	45,290	23,490	0	9,013
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	U	0	0	0	- 0
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	1,356,094 100 M	100 M	100 M	200,439 100 M
- Tx Rate (ET) (Blus)				23,496		
- Rx (Frames)	148,809	84,459	45,290		11,973	9,615
	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,417,512	2,495,719	1,326,542	681,718	354,400	283,933
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.66 M	98.43 M
- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,464
- Flood Count (Frames)	61	62	61	61	60	61
P-0-2-4		_				-
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,417,512	2,495,720	1,326,542	681,718	354,401	283,934
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M



- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,464
- Flood Count (Frames)	62	61	59	59	60	61
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,247,834	2,495,720	1,326,542	662,965	338,206	283,935
- Rx Rate (L1) (Bit/s)	95.15 M	98.5 M	97.63 M	94.05 M	94.16 M	98.43 M
- Rx Rate (Fps)	141,594	83,191	44,218	22,099	11,274	9,465
- Flood Count (Frames)	60	60	61	60	58	61
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,417,512	2,495,720	1,326,542	681,719	354,401	283,936
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,465
- Flood Count (Frames)	59	56	59	57	57	60
P-0-4-1				01	01	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (ET) (Blus)	0	0	0	0	0	0
- Rx (Frames)	4,417,402	2.495.720	1,326,542	681,720	354,401	283,936
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (ET) (Blus)	147,247	83,191	44,218	22,724	11,813	9,465
- Flood Count (Frames)	56	56	59	56	57	59
P-0-4-2	30	30	39	30	31	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Eps)	0	0	0	0	0	0
- Rx (Frames)	4,417,512	2,495,722	1,326,542	681,720	354,401	283,936
- Rx (Frames)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (Fps)	147,250 60	83,191 60	44,218	22,724 57	11,813 56	9,465
- Flood Count (Frames) P-0-4-3	00	60	59	57	30	58
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 405 700	0	0	0	0
- Rx (Frames)	4,417,493	2,495,722	1,326,543	681,720	354,401	283,936
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,465
- Flood Count (Frames)	60	59	56	60	56	56
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,417,512	2,495,722	1,326,544	681,720	354,401	283,937
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,465
- Flood Count (Frames)	56	58	58	58	58	60
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,417,513	2,495,722	1,326,544	681,720	354,402	283,937
- Rx Rate (L1) (Bit/s)	98.95 M	98.5 M	97.63 M	96.71 M	98.67 M	98.43 M
- Rx Rate (Fps)	147,250	83,191	44,218	22,724	11,813	9,465
- Flood Count (Frames)	58	57	58	59	57	57

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	899.98 M
Tx Rate (Fps)	73,146
Rx Rate (Percent)	9.57 %
Rx Rate (L1) (Bit/s)	861.22 M
Rx Rate (Fps)	70 K
Loss Rate (Percent)	4.31 %
Loss (Frames)	94,508



P-0-0-0	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	243,819
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,619 100 M
- Tx Rate (E1) (Blus)	8,127
- Rx (Frames)	0,127
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	-
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	040.040
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
	0
- Flood Count (Frames) P-0-2-0	0
- Tx (Frames)	243,819
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,619 100 M
- Tx Rate (E1) (Blus)	8,127
- Rx (Frames)	0,127
- Rx (Frames)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	243,819
	100 M
- Tx Rate (L1) (Bit/s)	100 101
	8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	8,127




P-0-2-3 - Tx (Frames)	- Flood Count (Frames)	0
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 216,368 - Rx Rate (L1) (Bit/s) 88.74 M - Rx Rate (Fps) 7,212 - Flood Count (Frames) 60 - P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 0 - Tx (Frames) 235,435 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fp	P-0-2-3	
- Tx Rate (Fps)	- Tx (Frames)	
- Rx (Frames) 216,368 - Rx Rate (L1) (Bit/s) 88.74 M - Rx Rate (Fps) 7,212 - Flood Count (Frames) 60 - P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood		
- Rx Rate (L1) (Bit/s) 88.74 M - Rx Rate (Fps) 7,212 - Flood Count (Frames) 60 P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (L1) (Bit/s) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps)		
- Rx Rate (Fps) 7,212 - Flood Count (Frames) 60 P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (E1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Tx (Frames) 0 - Tx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate		
- Flood Count (Frames) 60 P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - P-0-4-2 - Tx (Frames) 235,433 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.		
P-0-2-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 235,435 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Fx (Fx (Fx (Fx (Fx (Fx (Fx (
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx (Frames) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 0 - Tx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,		00
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 99 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848		0
- Tx Rate (Fps)		
- Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Eps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Eps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848		
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 58 P-0-4-2 - Tx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 7,848 - Flood Count (Frames) 7,84		
- Rx Rate (Fps)		
- Flood Count (Frames) 61 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 77 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 77 - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 97 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 97 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rx Rate (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx Rx Rx Rx Rx Rx Rx Rx Rx (L1) (Bit/s) 96.56 M - Rx		
P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 - 0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - 0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - 0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 7,848 - Flood Count (Frames) 7,84	- Flood Count (Frames)	61
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - P-0-4-2 - Tx (Frames) 58 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames)		
- Tx Rate (Fps)	- Tx (Frames)	0
- Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 97.848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - P-0-4-3 - Tx (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.5	- Tx Rate (L1) (Bit/s)	0
- Rx Rate (L1) (Bit/s)		0
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-4 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848		
- Flood Count (Frames) 59 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Tx		
P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 -0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 -0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 -0-4-2 - Tx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 -0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx (Frames) 58 - Rx (Frames) 58 - Tx (Frames) 59 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,848		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 7,848		59
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - O-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - O-4-3 - Tx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - O-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - O-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - O-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - O-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 7,848		
- Tx Rate (Fps)		
- Rx (Frames) 235,435 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - 0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - 0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 - 0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - 10-4-4 - Tx (Frames) 7,848 - Flood Count (Frames) 7,848		
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx Rate (Fps) 9 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M		
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Rx Rate (Fps) 10 - Rx Rate (Fps) 10 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Tx Rate		
- Flood Count (Frames) 57 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Rx Rate (Fps) 10 - Tx		
P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 0 - Rx (Frames)		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Tx Rate (L1) (Bit/s) 96.56 M - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Tx Rate (Fps) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M		31
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 96.56 M - Rx Rate (Fps) 96.56 M		0
- Tx Rate (Fps) 0 - Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,848		
- Rx (Frames) 235,437 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 9 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0		
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 56 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 50 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 50 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx Rate (Fps) 0		
- Flood Count (Frames) 58 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 0 - Rx (Frames) 57 Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0		
P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 7,848 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 7,848 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439	- Tx (Frames)	0
- Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 57 Rx (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 50 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 56 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 -		0
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		0
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 57 Rx (Frames) 57 P-0-4-4 - Tx (Frames) 57 - Tx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0	- Rx (Frames)	235,438
- Flood Count (Frames) 58 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0	- Rx Rate (L1) (Bit/s)	
P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 -0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 - O-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 - O-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		58
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		-
- Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Rx (Frames) 235,439		
- Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 -0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439	```	
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 235,438 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Flood Count (Frames) 57 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		37
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		n
- Tx Rate (Fps) 0 - Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Rx (Frames) 235,438 - Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Rx Rate (L1) (Bit/s) 96.56 M - Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Rx Rate (Fps) 7,848 - Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Flood Count (Frames) 56 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 235,439		0
- Tx Rate (Fps) 0 - Rx (Frames) 235,439		0
- Rx (Frames) 235,439		0
- Rx Rate (L1) (Bit/s) 96.56 M	- Rx (Frames)	235,439
	- Rx Rate (L1) (Bit/s)	96.56 M



- Rx Rate (Fps)	7,848
- Flood Count (Frames)	61

Note: One or more of the rate tests did not pass the test criteria!

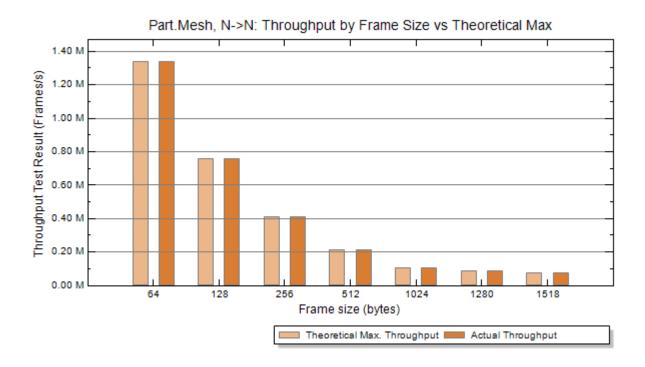

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	899.99 M	899.99 M	899.99 M
Tx Rate (Fps)	1,339,284	760,134	407,608	211,464	107,757	86,538
Rx Rate (Percent)	9.69 %	9.38 %	9.66 %	9.78 %	9.62 %	9.99 %
Rx Rate (L1) (Bit/s)	872.47 M	843.92 M	869.67 M	880.51 M	865.7 M	898.91 M
Rx Rate (Fps)	1.3 M	712.77 K	393.87 K	206.89 K	103.65 K	86.43 K
Loss Rate (Percent)	3.06 %	6.23 %	3.37 %	2.16 %	3.81 %	0.12 %
Loss (Frames)	1,228,791	1,420,908	412,076	137,311	123,171	3,119
P-0-0-0						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	4 404 070	0.500.770	4.050.004	704.000	050 100	000 450
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	4 404 070	0.500.770	4.050.004	704.000	050 100	000 450
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0			4.0=0.004		0-0 100	
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	4 404 070	0.500.770	4.050.004	704.000	250 400	200 450
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880 100 M	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M		100 M	100 M
- Tx Rate (Fps) - Rx (Frames)	148,809	84,459	45,290 0	23,496	11,973	9,615 0
- Rx (Flames)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	U	0	0	0	- 0
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	1,558,694 100 M	100 M	100 M	200,439 100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	04,439	43,290	25,490	0	9,013
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Er) (Blus)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2,417,897	1,350,510	689,623	345,503	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,204	80,597	45,017	22,987	11,517	9,615
- Flood Count (Frames)	61	61	63	59	61	59
P-0-2-4	O I	O I	US	39	01	59
- Tx (Frames)	0	0	0	0	0	0
	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)				-	-	
- Rx (Frames)	4,158,234	2,401,077	1,012,088	689,623	345,503	288,459
- Rx Rate (L1) (Bit/s)	93.14 M	94.76 M	74.49 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	138,608	80,036	33,736	22,987	11,517	9,615
- Flood Count (Frames)	61	64	60	60	61	61
P-0-2-5				•		
- Tx (Frames)	0	0	0	0	0	0



- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,878,638	2,056,741	1,350,510	689,623	345,504	285,340
- Rx Rate (L1) (Bit/s)	86.88 M	81.17 M	99.4 M	97.83 M	96.19 M	98.92 M
- Rx Rate (Fps)	129,288	68,558	45,017	22,987	11,517	9,511
- Flood Count (Frames)	58	60	64	60	61	63
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2,417,898	1,350,510	689,623	345,504	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,204	80,597	45,017	22,987	11,517	9,615
- Flood Count (Frames)	60	58	62	59	58	63
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2.417.898	1,350,510	689.623	345,505	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,204	80,597	45,017	22,987	11,517	9,615
- Flood Count (Frames)	58	59	59	60	57	59
P-0-4-2					4.	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2,417,898	1,350,510	689,623	345,505	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,204	80,597	45,017	22,987	11,517	9,615
- Flood Count (Frames)	57	58	56	59	60	57
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2,417,898	1,350,510	689.623	345,505	288.459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,204	80,597	45,017	22.987	11.517	9.615
- Flood Count (Frames)	59	58	58	60	61	60
P-0-4-4					.	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,050	2,417,898	1,350,511	689,624	345,505	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
- Rx Rate (Fps)	147,202	80,597	45,017	22,987	11,517	9,615
- Flood Count (Frames)	59	59	61	59	62	59
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,416,133	2,417,898	1,350,511	689,624	345,505	288,459
- Rx Rate (L1) (Bit/s)	98.92 M	95.43 M	99.4 M	97.83 M	96.19 M	100 M
		80.597	45.017	22.987	11,517	9.615
- Rx Rate (Fps)	147.204	XII SU /			77 577	นการ

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	899.98 M
Tx Rate (Fps)	73,146
Rx Rate (Percent)	9.41 %
Rx Rate (L1) (Bit/s)	846.57 M
Rx Rate (Fps)	68.8 K
Loss Rate (Percent)	5.93 %
Loss (Frames)	130,233
P-0-0-0	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-1	U
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0,127
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-3	0
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Er) (Bibs)	8,127
- Rx (Frames)	0,127
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-5	0
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Er) (Bibs)	8,127
- Rx (Frames)	0,:_:
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-2-1	0
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0,121
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3 - Tx (Frames)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- IX Rate (I I / Rive)	U



Try Data (Fra)	0
- Tx Rate (Fps)	0
- Rx (Frames)	206,006
- Rx Rate (L1) (Bit/s)	84.49 M
- Rx Rate (Fps)	6,867
- Flood Count (Frames)	60
P-0-2-4	•
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	192,718
- Rx Rate (L1) (Bit/s)	79.04 M
- Rx Rate (Fps)	6,424
- Flood Count (Frames)	60
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	226,095
- Rx Rate (L1) (Bit/s)	92.73 M
- Rx Rate (Fps)	7,537
- Flood Count (Frames)	63
P-0-4-0	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,886
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	61
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,886
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	61
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,886
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	58
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,886
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	59
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,887
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	64
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	239,888
- Rx Rate (L1) (Bit/s)	98.39 M
- Rx Rate (Fps)	7,996
- Flood Count (Frames)	60



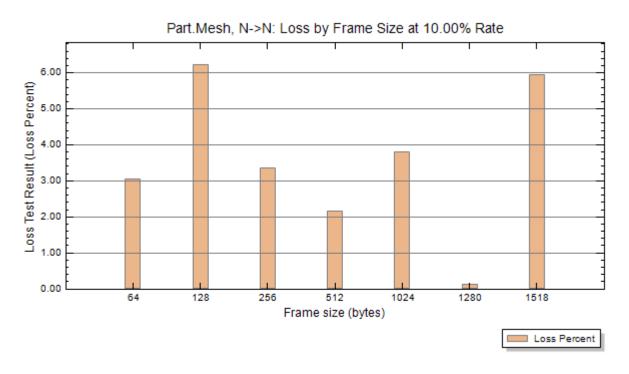

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,570	1,520,270	815,216	422,931	215,517	173,075
Rx Rate (Percent)	10.62 %	10.81 %	10.95 %	11.03 %	10.72 %	11.08 %
Rx Rate (L1) (Bit/s)	955.77 M	972.6 M	985.6 M	993.03 M	965.14 M	997.46 M
Rx Rate (Fps)	1.42 M	821.45 K	446.38 K	233.32 K	115.56 K	95.91 K
Loss Rate (Percent)	46.9 %	45.97 %	45.24 %	44.83 %	46.38 %	44.59 %
Loss (Frames)	37,688,788	20,964,612	11,065,158	5,688,177	2,998,772	2,314,981
P-0-0-0						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	0.000.507	5 007 507	0.747.000	4 400 700	740,000	570.040
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,567 200 M	5,067,567 200 M	2,717,388 200 M	1,409,769 200 M	718,389 200 M	576,918 200 M
- Tx Rate (LT) (Blus)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	23,940	19,231
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	0.000 567	E 067 E67	0.747.000	1 400 760	710 200	E76 010
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,567 200 M	5,067,567 200 M	2,717,388 200 M	1,409,769 200 M	718,389 200 M	576,918 200 M
- Tx Rate (L1) (Bit/s)	200 M 297,619	168,919	90,580	46,992	200 M 23,946	19,231
- Rx (Frames)	297,019	0	90,360	40,992	23,940	19,231
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2 - Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	2,717,366 200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,739,764	2,698,031	1,487,331	777,750	335,101	319,204
- Rx Rate (L1) (Bit/s)	106.17 M	106.48 M	109.47 M	110.34 M	93.29 M	110.66 M
- Rx Rate (Fps) - Flood Count (Frames)	157,992 37	89,934 37	49,578 34	25,925 42	11,170 40	10,640 37
P-0-2-4	31	31	34	42	40	31
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,715,616	2,741,725	1,477,701	777,462	374,283	319,195
- Rx Rate (L1) (Bit/s)	105.63 M	108.21 M	108.76 M	110.3 M	104.2 M	110.65 M
- Rx Rate (Fps)	157,187	91,391	49,257	25,915	12,476	10,640
- Flood Count (Frames)	38	35	35	46	32	36
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)			0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	-			
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 4,713,656	2,744,212	1,489,187	777,692	372,606	319,612
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0 4,713,656 105.59 M	2,744,212 108.3 M	1,489,187 109.6 M	110.33 M	103.73 M	110.8 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 4,713,656 105.59 M 157,122	2,744,212 108.3 M 91,474	1,489,187 109.6 M 49,640	110.33 M 25,923	103.73 M 12,420	110.8 M 10,654
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 4,713,656 105.59 M	2,744,212 108.3 M	1,489,187 109.6 M	110.33 M	103.73 M	110.8 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	0 4,713,656 105.59 M 157,122 46	2,744,212 108.3 M 91,474 36	1,489,187 109.6 M 49,640 31	110.33 M 25,923 49	103.73 M 12,420 32	110.8 M 10,654 35
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 4,713,656 105.59 M 157,122	2,744,212 108.3 M 91,474	1,489,187 109.6 M 49,640	110.33 M 25,923	103.73 M 12,420	110.8 M 10,654



- Rx (Frames)	4,729,928	2,743,095	1,488,601	777,420	396,684	319,958
- Rx Rate (L1) (Bit/s)	105.95 M	108.26 M	109.56 M	110.29 M	110.44 M	110.92 M
- Rx Rate (Fps)	157,664	91,437	49,620	25,914	13,223	10,665
- Flood Count (Frames)	39	38	40	37	37	36
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,749,981	2,745,017	1,491,516	777,343	396,915	320,439
- Rx Rate (L1) (Bit/s)	106.4 M	108.34 M	109.78 M	110.28 M	110.5 M	111.09 M
- Rx Rate (Fps)	158,333	91,501	49,717	25,911	13,231	10,681
- Flood Count (Frames)	33	35	37	31	36	36
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,761,683	2,744,951	1,491,751	777,742	397,789	319,728
- Rx Rate (L1) (Bit/s)	106.66 M	108.33 M	109.79 M	110.34 M	110.74 M	110.84 M
- Rx Rate (Fps)	158,723	91,498	49,725	25,925	13,260	10,658
- Flood Count (Frames)	31	36	32	39	39	36
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,745,429	2,741,613	1,490,763	778,065	397,719	319,650
- Rx Rate (L1) (Bit/s)	106.3 M	108.2 M	109.72 M	110.38 M	110.72 M	110.81 M
- Rx Rate (Fps)	158,181	91,387	49,692	25,936	13,257	10,655
- Flood Count (Frames)	40	33	30	36	34	35
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,767,651	2,743,715	1,487,531	778,382	398,088	319,771
- Rx Rate (L1) (Bit/s)	106.8 M	108.29 M	109.48 M	110.43 M	110.83 M	110.85 M
- Rx Rate (Fps)	158,922	91,457	49,584	25,946	13,270	10,659
- Flood Count (Frames)	38	28	35	41	37	36
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,744,607	2,741,132	1,486,953	777,888	397,544	319,724
- Rx Rate (L1) (Bit/s)	106.28 M	108.18 M	109.44 M	110.36 M	110.68 M	110.84 M
- Rx Rate (Fps)	158,154	91,371	49,565	25,930	13,251	10,657
- Flood Count (Frames)	39	34	35	36	32	33

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,291
Rx Rate (Percent)	11.07 %
Rx Rate (L1) (Bit/s)	996.47 M
Rx Rate (Fps)	80.99 K
Loss Rate (Percent)	44.64 %
Loss (Frames)	1,959,118
P-0-0-0	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	407.000
- Tx (Frames)	487,638 200 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	16,255
- Rx (Frames)	10,233
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	407.000
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3 - Tx (Frames)	0
	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	270,057
- Rx (Frames) - Rx Rate (L1) (Bit/s)	110.76 M
- Rx Rate (E1) (Bibs)	9,002
- Flood Count (Frames)	38
P-0-2-4	30
- Tx (Frames)	0
- Tx (Harries)	0
- Tx Rate (ET) (Bl/s)	0
- Rx (Frames)	270,303
(1 1411166)	210,000



- Rx Rate (L1) (Bit/s)	110.86 M
- Rx Rate (Fps)	9,010
- Flood Count (Frames)	38
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	266,179
- Rx Rate (L1) (Bit/s)	109.17 M
- Rx Rate (Fps)	8,873
- Flood Count (Frames)	43
P-0-4-0	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,798
- Rx Rate (L1) (Bit/s)	111.06 M
- Rx Rate (Fps)	9,027
- Flood Count (Frames)	35
P-0-4-1	33
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,448
- Rx Rate (L1) (Bit/s)	110.92 M
- Rx Rate (Fps)	9,015
- Flood Count (Frames)	44
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,487
- Rx Rate (L1) (Bit/s)	110.94 M
- Rx Rate (Fps)	9,016
- Flood Count (Frames)	38
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,461
- Rx Rate (L1) (Bit/s)	110.93 M
- Rx Rate (Fps)	9,015
- Flood Count (Frames)	37
P-0-4-4	<u> </u>
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Blus)	0
- Rx (Frames)	270,293
	110.86 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (Fps)	9,010
- Flood Count (Frames)	37
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,598
- Rx Rate (L1) (Bit/s)	110.98 M
- Rx Rate (Fps)	9,020
- Flood Count (Frames)	34



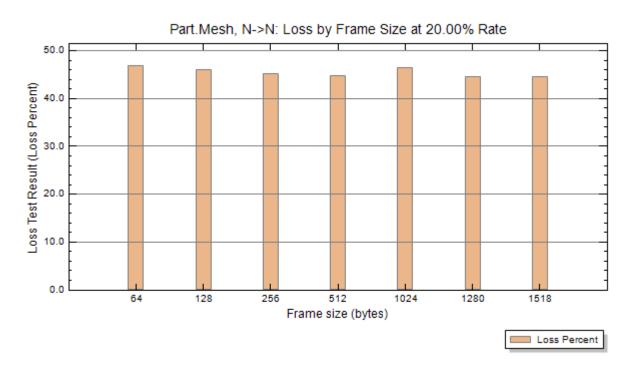

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	2.7 G	2.7 G	2.7 G	2.7 G	2.7 G	2.7 G
Tx Rate (Fps)	4,017,857	2,280,404	1,222,825	634,397	323,274	259,613
Rx Rate (Percent)	10.62 %	10.76 %	10.63 %	10.91 %	11.08 %	11.09 %
Rx Rate (L1) (Bit/s)	955.84 M	968.35 M	956.94 M	981.62 M	996.8 M	997.65 M
Rx Rate (Fps)	1.42 M	817.86 K	433.4 K	230.64 K	119.35 K	95.93 K
Loss Rate (Percent)	64.6 %	64.14 %	64.56 %	63.64 %	63.08 %	63.05 %
Loss (Frames)	77,864,140	43,876,319	23,682,812	12,112,637	6,117,735	4,910,565
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	40,000,055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658 300 M	1,077,579	865,377
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 446.429	300 M 253,378	300 M 135,869	70,489	300 M 35,919	300 M 28,846
- Rx (Frames)	0	255,576	0	0	0	20,040
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	12 202 055	7 601 246	4.076.000	2 114 650	1 077 570	065 277
- Tx (Frames) - Tx Rate (L1) (Bit/s)	13,392,855 300 M	7,601,346 300 M	4,076,082 300 M	2,114,658 300 M	1,077,579 300 M	865,377 300 M
- Tx Rate (ET) (Bivs)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	440,429	255,576	135,669	70,469	0	20,040
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	10.000.055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 446,429	300 M 253,378	300 M 135,869	300 M 70,489	300 M 35,919	300 M 28,846
- Rx (Frames)	440,429	255,576	135,669	70,469	0	20,040
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,731,244	2,721,655	1,490,636	781,055	399,026	320,432
- Rx Rate (L1) (Bit/s)	105.98 M	107.41 M	109.71 M	110.81 M	111.09 M	111.08 M
- Rx Rate (Fps)	157,708	90,722	49,688	26,035	13,301	10,681
- Flood Count (Frames)	36	29	31	25	25	37
P-0-2-4	•	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	-	-	-	-	219.674
- Rx (Frames) - Rx Rate (L1) (Bit/s)	4,744,107 106.27 M	2,642,531 104.29 M	1,087,217 80.02 M	695,993 98.74 M	397,512 110.67 M	318,674 110.47 M
- Rx Rate (Fps)	158,137	88,084	36,241	23,200	13,250	10,47 10
- Flood Count (Frames)	32	29	29	32	24	27
P-0-2-5	02	20	20	02		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,718,123	2,755,585	1,487,535	777,359	397,976	317,700
- Rx Rate (L1) (Bit/s)	105.69 M	108.75 M	109.48 M	110.28 M	110.8 M	110.14 M
- Rx Rate (Fps)	157,271	91,853	49,585	25,912	13,266	10,590
- Flood Count (Frames)	29	29	30	32	27	32
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
TX Trate (LT) (Divo)	0		0		0	0



- Rx (Frames)	4,745,918	2,729,025	1,487,158	779,486	397,435	321,124
- Rx Rate (L1) (Bit/s)	106.31 M	107.71 M	109.45 M	110.58 M	110.65 M	111.32 M
- Rx Rate (Fps)	158,197	90,968	49,572	25,983	13,248	10,704
- Flood Count (Frames)	29	36	28	30	25	32
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,731,739	2,724,391	1,487,421	776,313	397,586	320,734
- Rx Rate (L1) (Bit/s)	105.99 M	107.52 M	109.47 M	110.13 M	110.69 M	111.19 M
- Rx Rate (Fps)	157,725	90,813	49,581	25,877	13,253	10,691
- Flood Count (Frames)	34	34	27	32	26	32
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,742,021	2,727,396	1,490,348	777,264	396,470	319,193
- Rx Rate (L1) (Bit/s)	106.22 M	107.64 M	109.69 M	110.27 M	110.38 M	110.65 M
- Rx Rate (Fps)	158,067	90,913	49,678	25,909	13,216	10,640
- Flood Count (Frames)	33	30	29	31	23	31
P-0-4-3			-	-	-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,750,211	2,742,467	1,490,557	779,066	399,855	321,141
- Rx Rate (L1) (Bit/s)	106.4 M	108.24 M	109.7 M	110.52 M	111.32 M	111.33 M
- Rx Rate (Fps)	158,340	91,416	49,685	25,969	13,329	10,705
- Flood Count (Frames)	34	32	34	31	22	32
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,752,670	2,745,730	1,490,534	775,715	397,935	319,971
- Rx Rate (L1) (Bit/s)	106.46 M	108.36 M	109.7 M	110.05 M	110.79 M	110.92 M
- Rx Rate (Fps)	158,422	91,524	49,684	25,857	13,265	10,666
- Flood Count (Frames)	36	31	29	32	26	28
P-0-4-5		-	-	-	-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,755,522	2,747,015	1,490,520	777,034	396,681	318,859
- Rx Rate (L1) (Bit/s)	106.52 M	108.42 M	109.7 M	110.24 M	110.44 M	110.54 M
- Rx Rate (Fps)	158,517	91,567	49,684	25,901	13,223	10,629
- Flood Count (Frames)	34	33	32	28	24	36

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	2.7 G
Tx Rate (Fps)	219,440
Rx Rate (Percent)	10.95 %
Rx Rate (L1) (Bit/s)	985.05 M
Rx Rate (Fps)	80.06 K
Loss Rate (Percent)	63.52 %
Loss (Frames)	4,181,414
P-0-0-0	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	721 466
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731,466 300 M
- Tx Rate (ET) (Blus)	24,382
- Rx (Frames)	24,302
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,133
- Rx Rate (L1) (Bit/s)	110.79 M
- Rx Rate (Fps)	9,004
- Flood Count (Frames) P-0-2-4	27
	^
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (LT) (Blus)	0
- Rx (Frames)	264,486
1 (A (1 1011100)	207,700



- Rx Rate (L1) (Bit/s)	108.47 M
- Rx Rate (Fps)	8,816
- Flood Count (Frames)	33
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	243,759
- Rx Rate (L1) (Bit/s)	99.97 M
- Rx Rate (Fps)	8,125
- Flood Count (Frames)	31
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,676
- Rx Rate (L1) (Bit/s)	111.01 M
- Rx Rate (Fps)	9,023
- Flood Count (Frames)	24
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,288
- Rx Rate (L1) (Bit/s)	110.85 M
- Rx Rate (Fps)	9,010
	33
- Flood Count (Frames) P-0-4-2	33
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,357
- Rx Rate (L1) (Bit/s)	110.88 M
- Rx Rate (Fps)	9,012
- Flood Count (Frames)	32
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,707
- Rx Rate (L1) (Bit/s)	111.03 M
- Rx Rate (Fps)	9,024
- Flood Count (Frames)	32
P-0-4-4	32
- Tx (Frames)	0
	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	270.776
- Rx (Frames)	270,776
- Rx Rate (L1) (Bit/s)	111.05 M
- Rx Rate (Fps)	9,026
- Flood Count (Frames) P-0-4-5	32
- Tx (Frames)	0
- Tx (Frames)	0
- Tx Rate (ET) (Blus)	0
- Rx (Frames)	270,598
- Rx Rate (L1) (Bit/s)	110.98 M
- Rx Rate (Fps)	9,020
- Flood Count (Frames)	32



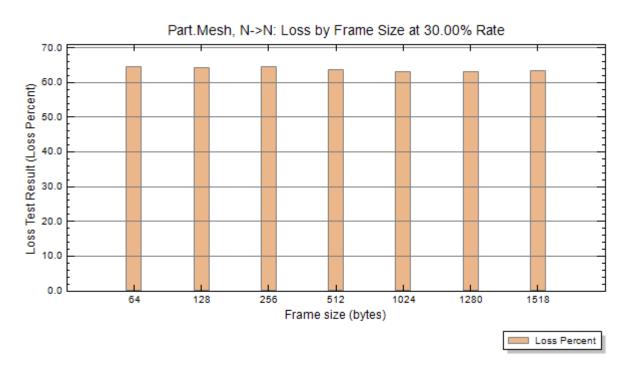

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,140	3,040,540	1,630,433	845,864	431,033	346,154
Rx Rate (Percent)	0.17 %	10.83 %	10.9 %	11.04 %	11.08 %	11.09 %
Rx Rate (L1) (Bit/s)	14.91 M	974.53 M	980.96 M	993.32 M	996.88 M	997.98 M
Rx Rate (Fps)	22.18 K	823.08 K	444.28 K	233.39 K	119.36 K	95.96 K
Loss Rate (Percent)	99.59 %	72.93 %	72.75 %	72.41 %	72.31 %	72.28 %
Loss (Frames)	160,048,674	66,523,680	35,584,674	18,374,106	9,350,237	7,505,807
P-0-0-0						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	47.057.404	40 405 404	F 40 4 770	0.040.547	4 400 770	4 450 045
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,134 400 M	10,135,134 400 M	5,434,776 400 M	2,819,547 400 M	1,436,778 400 M	1,153,845 400 M
- Tx Rate (ET) (Bil/S)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0 0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-0	0	0	U	U	U	0
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	2,619,547 400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	007,000	0	0	0	00,402
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	U	U	U	U	0
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 744 000	0	770.000	0	0 0 0 4 7
- Rx (Frames) - Rx Rate (L1) (Bit/s)	83,958 1.88 M	2,744,602 108.32 M	1,489,015 109.59 M	779,022 110.52 M	398,842 111.04 M	319,847 110.88 M
- Rx Rate (ET) (Bit/s)	2,799	91,487	49,634	25,967	13,295	10,662
- Flood Count (Frames)	59	30	25	28	25	26
P-0-2-4		- 00	20	20	20	20
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	83,708	2,738,396	1,464,810	781,107	398,807	318,785
- Rx Rate (L1) (Bit/s)	1.88 M	108.08 M	107.81 M	110.81 M	111.03 M	110.51 M
- Rx Rate (Fps)	2,790	91,280	48,827	26,037	13,294	10,626
- Flood Count (Frames)	58	32	32	29	24	24
D 0 2 E						
P-0-2-5		0	0	0	0	0
- Tx (Frames)	0			0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	^	^	
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	705 440	0	
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 0 3,869	0 0 2,751,128	0 1,432,752	785,419	397,660	319,016
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0 0 3,869 86.67 K	0 0 2,751,128 108.58 M	0 1,432,752 105.45 M	785,419 111.42 M	397,660 110.71 M	0 319,016 110.59 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0 0 3,869 86.67 K 129	0 0 2,751,128 108.58 M 91,704	0 1,432,752 105.45 M 47,758	785,419 111.42 M 26,181	397,660 110.71 M 13,255	319,016 110.59 M 10,634
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 0 3,869 86.67 K	0 0 2,751,128 108.58 M	0 1,432,752 105.45 M	785,419 111.42 M	397,660 110.71 M	319,016 110.59 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	0 0 3,869 86.67 K 129 60	0 0 2,751,128 108.58 M 91,704 27	0 1,432,752 105.45 M 47,758 30	785,419 111.42 M 26,181 28	397,660 110.71 M 13,255 21	319,016 110.59 M 10,634 29
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	0 0 3,869 86.67 K 129	0 0 2,751,128 108.58 M 91,704	0 1,432,752 105.45 M 47,758	785,419 111.42 M 26,181	397,660 110.71 M 13,255	319,016 110.59 M 10,634



- Rx (Frames)	82,387	2,736,047	1,489,744	780,925	396,846	320,315
- Rx Rate (L1) (Bit/s)	1.85 M	107.98 M	109.65 M	110.79 M	110.48 M	111.04 M
- Rx Rate (Fps)	2,746	91,202	49,658	26,031	13,228	10,677
- Flood Count (Frames)	56	22	34	22	23	32
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	81,934	2,747,426	1,491,450	777,161	396,221	320,079
- Rx Rate (L1) (Bit/s)	1.84 M	108.43 M	109.77 M	110.25 M	110.31 M	110.96 M
- Rx Rate (Fps)	2,731	91,581	49,715	25,905	13,207	10,669
- Flood Count (Frames)	56	24	31	22	20	32
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	82,629	2,746,031	1,493,489	777,249	397,160	320,871
- Rx Rate (L1) (Bit/s)	1.85 M	108.38 M	109.92 M	110.27 M	110.57 M	111.24 M
- Rx Rate (Fps)	2,754	91,534	49,783	25,908	13,239	10,696
- Flood Count (Frames)	60	27	27	30	22	32
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	82,160	2,749,815	1,489,748	774,245	397,748	319,497
- Rx Rate (L1) (Bit/s)	1.84 M	108.53 M	109.65 M	109.84 M	110.73 M	110.76 M
- Rx Rate (Fps)	2,739	91,661	49,658	25,808	13,258	10,650
- Flood Count (Frames)	57	26	28	28	26	33
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	82,663	2,745,230	1,490,044	774,708	398,462	320,569
- Rx Rate (L1) (Bit/s)	1.85 M	108.35 M	109.67 M	109.91 M	110.93 M	111.13 M
- Rx Rate (Fps)	2,755	91,508	49,668	25,824	13,282	10,686
- Flood Count (Frames)	60	26	23	28	24	26
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	82,224	2,733,851	1,487,258	771,981	399,019	319,819
- Rx Rate (L1) (Bit/s)	1.84 M	107.9 M	109.46 M	109.52 M	111.09 M	110.87 M
- Rx Rate (Fps)	2,741	91,128	49,575	25,733	13,301	10,661
- Flood Count (Frames)	55	30	30	28	24	29

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,586
Rx Rate (Percent)	10.96 %
Rx Rate (L1) (Bit/s)	986.73 M
Rx Rate (Fps)	80.2 K
Loss Rate (Percent)	72.59 %
Loss (Frames)	6,371,689
P-0-0-0	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	075 005
- Tx (Frames)	975,285 400 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	32,510
- Rx (Frames)	32,310
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	-
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-0	0
	075 205
- Tx (Frames) - Tx Rate (L1) (Bit/s)	975,285 400 M
- Tx Rate (E1) (Blus)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,078
- Rx Rate (L1) (Bit/s)	110.77 M
- Rx Rate (Fps)	9,003
- Flood Count (Frames)	29
P-0-2-4	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- TX Rate (FPS) - Rx (Frames)	270,536
in (i idilica)	۵،0,000



- Rx Rate (L1) (Bit/s) 9,018 - Rx Rate (Fps) 9,018 - Flood Count (Frames) 29 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (I1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 9,000 - Flood Count (Frames) 9,000 - Flood Count (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 270,003 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,005 - Fx (Frames) 270,005 - Fx (Frames) 270,005 - Fx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.19 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 9,035 - Flood Count (Frames) 9,035 - Flood Count (Frames) 9,036 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036		
- Flood Count (Frames) 29 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 111.19 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,028 - Flood Count (Frames) 9,028 - Flood Count (Frames) 9,036 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,036 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,032	- Rx Rate (L1) (Bit/s)	110.96 M
P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 31 P-0-4-1 - Tx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 270,003 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,005 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 26 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,036 - Rx (
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 270,003 - Rx (Frames) 270,005 - Rx (Frames) 270,005 - Rx (Frames) 270,005 - Rx (Frames) 270,005 - Rx (Frames) 30 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		29
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,003 - Rx (Frames) 271,060 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.19 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 30 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,002 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Tx Rate (Fps)	- Tx (Frames)	0
- Rx (Frames) 241,310 - Rx Rate (L1) (Bit/s) 98.97 M - Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 26 P-0-4-2 - Tx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.10 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		0
- Rx Rate (L1) (Bit/s)		0
- Rx Rate (Fps) 8,044 - Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,285 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Rx (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 271,060 - Rx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 270,852 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 270,852 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Rx Rate (Fps) 9,028 - Rx Rate (Fps) 9,028 - Rx Rate (Fps) 9,036		
- Flood Count (Frames) 28 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 9,035 - Flood Count (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,035 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 9,028 - Flood Count (Frames) 9,028 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036	- Rx Rate (L1) (Bit/s)	98.97 M
P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 271,060 - Fx (Frames) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 9,035 - Flood Count (Frames) 9,035 - Flood Count (Frames) 9,035 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 9,028 - Flood Count (Frames) 9,028 - Flood Count (Frames) 9,028 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,036		8,044
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx Rate (L1) (Bit/s) 31 - Tx Rate (L1) (Bit/s) 31 - Tx Rate (Fps) 30 - Rx (Frames) 30 - Rx Rate (Fps) 30 - Rx Rate (Fps) 30 - Rx (Frames) 30 - Tx Rate (Fps) 30	- Flood Count (Frames)	28
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.89 M - Rx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Rx (Frames) 270,003 - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (Fps) 9,000 - Flood Count (Frames) 31 - Tx (Frames) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.19 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012	P-0-4-0	
- Tx Rate (Fps)	- Tx (Frames)	0
- Tx Rate (Fps)	- Tx Rate (L1) (Bit/s)	0
- Rx (Frames) 271,285 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 10 - Rx (Frames) 10 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 10 - Flood Count (Frames) 10 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 10 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 10 - Rx (Frames) 111.17 M - Rx Rate (Fps) 111.17 M - Rx Rate (Fps	- Tx Rate (Fps)	0
- Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		271,285
- Rx Rate (Fps) 9,043 - Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012	- Rx Rate (L1) (Bit/s)	111.26 M
- Flood Count (Frames) 31 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,387 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-5 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (9,043
P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 26 P-0-4-4 - Tx (Frames) 26 P-0-4-5 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 30 P-0-4-5 - Tx (Frames) 30 P-0-4-5 - Tx (Frames) 30 - Rx (Frames) 30 - Rx (Frames) 30 - Rx Rate (Fps) 30 - Rx (Frames) 30 - Rx Rate (Fps) 30 - Rx		·
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (L1) (Bit/s) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Tx Ra		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (L1) (Bit/s) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Tx Ra		0
- Tx Rate (Fps) 0 - Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx (Frames) 270,387 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,003 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012	- Tx Rate (Fps)	
- Rx Rate (L1) (Bit/s) 9,013 - Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (Fps) 9,013 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,003 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 30 P-0-4-5		
P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 26 - Tx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Rx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10.89 M - Rx Rate (Fps) 9,012		20
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 26 P-0-4-5 - Rx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10.89 M - Rx Rate (Fps) 9,012		n
- Tx Rate (Fps) 0 - Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (Fps) 9,012		
- Rx (Frames) 270,003 - Rx Rate (L1) (Bit/s) 110.74 M - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 271,060 - Rx (Frames) 271,060 - Rx (Frames) 111.17 M - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (L1) (Bit/s) 9,000 - Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,035 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (Fps) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (Fps) 9,000 - Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Rx (Frames) 111.09 M - Rx Rate (Fps) 10 - Tx (Frames) 10 - Tx (Frames) 10 - Tx (Frames) 10 - Tx Rate (L1) (Bit/s) 111.08 M - Rx Rate (Fps) 110.89 M - Rx Rate (Fps) 110.89 M - Rx Rate (Fps) 9,012		
- Flood Count (Frames) 31 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Tx Rate (Fps) 11.09 M - Rx Rate (Fps) 10 - Tx (Frames) 10 - Tx (Frames) 10 - Tx (Frames) 10 - Tx Rate (L1) (Bit/s) 11.09 M - Tx Rate (Fps) 10 - Tx Rate (Fps) 110.89 M - Rx Rate (Fps) 110.89 M - Rx Rate (Fps) 9,012		
P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,060 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - O-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		31
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 - Rx (Frames) 270,365 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		0
- Tx Rate (Fps) 0 - Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 110.89 M - Rx Rate (Fps) 9,012		
- Rx (Frames) 271,060 - Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,852 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (L1) (Bit/s) 111.17 M - Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,852 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (Fps) 9,035 - Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,852 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 1 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Flood Count (Frames) 26 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		·
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		20
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012	-	
- Tx Rate (Fps) 0 - Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx (Frames) 270,852 - Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (L1) (Bit/s) 111.09 M - Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (Fps) 9,028 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		30
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Tx Rate (Fps) 0 - Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx (Frames) 270,365 - Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		-
- Rx Rate (L1) (Bit/s) 110.89 M - Rx Rate (Fps) 9,012		
- Rx Rate (Fps) 9,012		
- Flood Count (Frames) 26		9,012
	- Flood Count (Frames)	26



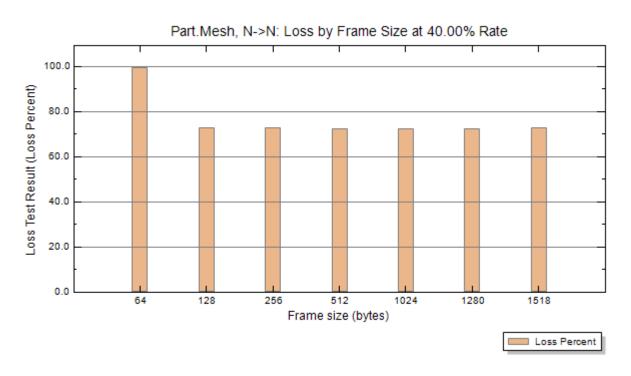

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	4.5 G	4.5 G	4.5 G	4.5 G	4.5 G	4.5 G
Tx Rate (Fps)	6,696,427	3,800,674	2,038,041	1,057,331	538,793	432,691
Rx Rate (Percent)	0.02 %	10.83 %	10.97 %	11.04 %	10.97 %	11.08 %
Rx Rate (L1) (Bit/s)	1.39 M	974.72 M	987.04 M	993.72 M	987.21 M	997.17 M
Rx Rate (Fps)	2.07 K	823.24 K	447.03 K	233.49 K	118.2 K	95.88 K
Loss Rate (Percent)	99.97 %	78.34 %	78.07 %	77.92 %	78.06 %	77.84 %
Loss (Frames)	200,830,824	89,323,003	47,730,316	24,715,349	12,617,790	10,104,293
P-0-0-0						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	22 22 4 422	10.000.010		0 = 0 1 100		
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	00 004 400	40,000,040	0.700.470	2 524 420	4 705 077	4 440 004
- Tx (Frames)	22,321,422	12,668,913	6,793,470 500 M	3,524,436 500 M	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297			500 M	500 M
- Tx Rate (Fps) - Rx (Frames)	744,047	422,297	226,449	117,481 0	59,866 0	48,077 0
` ,	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-0	U	U	U	U	U	U
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx (Frames)			500 M			
- Tx Rate (LT) (Bit/s)	500 M 744,047	500 M 422,297	226,449	500 M 117,481	500 M 59,866	500 M 48,077
- Rx (Frames)	744,047	422,297	220,449	0	09,666	40,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	U	U	U	U	U	U
- Tx (Frames)	22,321,422	12,668,913	6 702 470	2 524 426	1,795,977	1,442,304
			6,793,470	3,524,436		
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	500 M 744,047	500 M 422,297	500 M 226,449	500 M 117,481	500 M 59,866	500 M 48,077
- Rx (Frames)	0	422,297	220,449	0	0	
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	0	U	U	U	0
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	5,524,430 500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,364	2,742,836	1,491,301	778,378	363,072	317,324
- Rx Rate (L1) (Bit/s)	75.35 K	108.25 M	109.76 M	110.43 M	101.08 M	110.01 M
- Rx Rate (Fps)	112	91,428	49,710	25,946	12,102	10,577
- Flood Count (Frames)	62	22	23	28	25	30
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,501	2,749,101	1,498,390	779,810	397,893	317,768
- Rx Rate (L1) (Bit/s)	78.42 K	108.5 M	110.28 M	110.63 M	110.77 M	110.16 M
- Rx Rate (Fps)	117	91,637	49,946	25,994	13,263	10,592
- Flood Count (Frames)	62	27	24	23	24	25
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,816	2,739,444	1,495,754	778,746	397,740	318,450
- Rx Rate (L1) (Bit/s)	175.08 K	108.12 M	110.09 M	110.48 M	110.73 M	110.4 M
- Rx Rate (Fps)	261	91,315	49,858	25,958	13,258	10,615
- Flood Count (Frames)	60	26	21	28	27	28
P-0-4-0						
		0	0	0	0	0
- Tx (Frames)	0	0	U	0	U	U
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0



- Rx (Frames)	7,885	2,756,368	1,486,218	779,825	398,168	319,110
- Rx Rate (L1) (Bit/s)	176.62 K	108.78 M	109.39 M	110.63 M	110.85 M	110.62 M
- Rx Rate (Fps)	263	91,879	49,541	25,994	13,272	10,637
- Flood Count (Frames)	58	28	26	27	27	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,974	2,729,362	1,482,350	778,147	397,986	320,038
- Rx Rate (L1) (Bit/s)	178.62 K	107.72 M	109.1 M	110.39 M	110.8 M	110.95 M
- Rx Rate (Fps)	266	90,979	49,412	25,938	13,266	10,668
- Flood Count (Frames)	58	22	26	21	26	23
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,873	2,762,000	1,483,428	776,608	397,890	320,559
- Rx Rate (L1) (Bit/s)	176.36 K	109.01 M	109.18 M	110.17 M	110.77 M	111.13 M
- Rx Rate (Fps)	262	92,067	49,448	25,887	13,263	10,685
- Flood Count (Frames)	59	28	24	22	28	27
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,830	2,733,825	1,492,911	776,456	397,727	321,145
- Rx Rate (L1) (Bit/s)	175.39 K	107.89 M	109.88 M	110.15 M	110.73 M	111.33 M
- Rx Rate (Fps)	261	91,128	49,764	25,882	13,258	10,705
- Flood Count (Frames)	59	24	26	25	21	27
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,826	2,753,764	1,488,903	777,550	397,801	320,520
- Rx Rate (L1) (Bit/s)	175.3 K	108.68 M	109.58 M	110.31 M	110.75 M	111.11 M
- Rx Rate (Fps)	261	91,792	49,630	25,918	13,260	10,684
- Flood Count (Frames)	58	30	25	24	21	25
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,905	2,730,514	1,491,659	779,055	397,726	321,529
- Rx Rate (L1) (Bit/s)	177.07 K	107.76 M	109.79 M	110.52 M	110.73 M	111.46 M
- Rx Rate (Fps)	264	91,017	49,722	25,969	13,258	10,718
- Flood Count (Frames)	58	21	24	26	22	30

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	4.5 G
Tx Rate (Fps)	365,734
Rx Rate (Percent)	11.05 %
Rx Rate (L1) (Bit/s)	994.76 M
Rx Rate (Fps)	80.85 K
Loss Rate (Percent)	77.89 %
Loss (Frames)	8,546,570
P-0-0-0	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	1 010 110
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M 40,637
- Tx Rate (Fps) - Rx (Frames)	40,037
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	-
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	4 040 440
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-2-0	U
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	264 260
- Rx (Frames)	264,260 108.38 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	8,809
- Flood Count (Frames)	28
P-0-2-4	20
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	259,200
	_00,_00



- Rx Rate (L1) (Bit/s)	106.31 M
- Rx Rate (Fps)	8,640
- Flood Count (Frames)	29
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	279,978
- Rx Rate (L1) (Bit/s)	114.83 M
- Rx Rate (Fps)	9,333
- Flood Count (Frames)	34
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	262,776
- Rx Rate (L1) (Bit/s)	107.77 M
- Rx Rate (Fps)	8,759
- Flood Count (Frames)	31
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	267,738
- Rx Rate (L1) (Bit/s)	109.81 M
- Rx Rate (Fps)	8,925
- Flood Count (Frames)	28
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	279,486
- Rx Rate (L1) (Bit/s)	114.63 M
- Rx Rate (Fps)	9,316
- Flood Count (Frames)	32
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	263,879
- Rx Rate (L1) (Bit/s)	108.23 M
- Rx Rate (Fps)	8,796
- Flood Count (Frames)	34
P-0-4-4	<u> </u>
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	267,991
- Rx Rate (L1) (Bit/s)	109.91 M
- Rx Rate (Fps)	8,933
- Flood Count (Frames)	25
P-0-4-5	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	280,139
	44400 14
- Rx Rate (L1) (Bit/s)	114.89 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	9,338 27



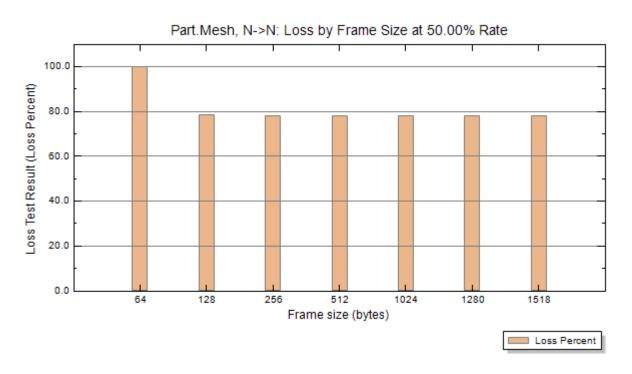

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,713	4,560,810	2,445,652	1,268,795	646,550	519,229
Rx Rate (Percent)	0.01 %	10.83 %	10.97 %	11.03 %	11.08 %	10.67 %
Rx Rate (L1) (Bit/s)	959.68 K	974.57 M	987 M	992.63 M	996.93 M	960.38 M
Rx Rate (Fps)	1.43 K	823.11 K	447.01 K	233.23 K	119.36 K	92.34 K
Loss Rate (Percent)	99.98 %	81.95 %	81.72 %	81.62 %	81.54 %	82.22 %
Loss (Frames)	241,028,547	112,130,919	59,959,253	31,066,897	15,815,585	12,806,554
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	00 -010	1= 000 =01	0.450.450		0.1==.10=	
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M 892.857	600 M 506.757	600 M	600 M	600 M	600 M 57,692
- Tx Rate (Fps)	,	, -	271,739	140,977	71,839	
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	-	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	20. 70.5 74.0	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	00 705 740	45 000 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	U	U	U	U
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)						
- Rx (Frames)	5,390 120.74 K	2,764,494	1,488,158	767,530	397,249	313,713
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)		109.11 M	109.53 M	108.89 M	110.59 M	108.75 M
- Flood Count (Frames)	180 64	92,150	49,605	25,584	13,242	10,457
, ,	04	29	21	23	26	24
P-0-2-4	0	0	0	0	0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0 700 500	0	0	0	0
- Rx (Frames)	2,389	2,732,522	1,490,629	776,641	397,514	216,926
- Rx Rate (L1) (Bit/s)	53.51 K	107.84 M	109.71 M	110.18 M	110.67 M	75.2 M
- Rx Rate (Fps)	80	91,084	49,688	25,888	13,250	7,231
- Flood Count (Frames)	61	25	22	22	24	23
P-0-2-5		0	0	0	0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	2,406	2,729,381	1,489,089	776,860	397,634	318,527
- Rx Rate (L1) (Bit/s)	53.89 K	107.72 M	109.6 M	110.21 M	110.7 M	110.42 M
- Rx Rate (Fps)	80	90,979	49,636	25,895	13,254	10,618
- Flood Count (Frames)	64	30	27	19	24	28
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
T D (// A) /D'//)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	5,444	2,748,317	1,492,402	777,845	398,112	321,202
- Rx Rate (L1) (Bit/s)	121.95 K	108.47 M	109.84 M	110.35 M	110.83 M	111.35 M
- Rx Rate (Fps)	181	91,611	49,747	25,928	13,270	10,707
- Flood Count (Frames)	57	25	21	27	24	23
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,472	2,754,061	1,489,889	779,666	398,270	320,087
- Rx Rate (L1) (Bit/s)	122.57 K	108.69 M	109.66 M	110.61 M	110.88 M	110.96 M
- Rx Rate (Fps)	182	91,802	49,663	25,989	13,276	10,670
- Flood Count (Frames)	58	23	26	21	23	27
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,453	2,740,165	1,489,000	778,214	398,450	319,321
- Rx Rate (L1) (Bit/s)	122.15 K	108.15 M	109.59 M	110.4 M	110.93 M	110.7 M
- Rx Rate (Fps)	182	91,339	49,633	25,940	13,282	10,644
- Flood Count (Frames)	58	20	25	32	28	22
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,479	2,720,071	1,489,583	780,671	398,219	320,418
- Rx Rate (L1) (Bit/s)	122.73 K	107.35 M	109.63 M	110.75 M	110.86 M	111.08 M
- Rx Rate (Fps)	183	90,669	49,653	26,022	13,274	10,681
- Flood Count (Frames)	55	22	28	26	22	25
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,366	2,739,759	1,490,106	779,213	398,118	320,471
- Rx Rate (L1) (Bit/s)	120.2 K	108.13 M	109.67 M	110.54 M	110.84 M	111.1 M
- Rx Rate (Fps)	179	91,325	49,670	25,974	13,271	10,682
- Flood Count (Frames)	58	25	28	23	25	23
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,444	2,764,620	1,491,448	780,307	397,352	319,648
- Rx Rate (L1) (Bit/s)	121.95 K	109.11 M	109.77 M	110.7 M	110.62 M	110.81 M
- Rx Rate (Fps)	181	92,154	49,715	26,010	13,245	10,655
- Flood Count (Frames)	57	25	27	27	27	22

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,880
Rx Rate (Percent)	10.98 %
Rx Rate (L1) (Bit/s)	987.76 M
Rx Rate (Fps)	80.28 K
Loss Rate (Percent)	81.71 %
Loss (Frames)	10,758,009
P-0-0-0	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




D D (/ E)	
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-2	0
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	4 400 000
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	<u> </u>
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,818
- Rx Rate (L1) (Bit/s)	111.07 M
- Rx Rate (Fps)	9,027
- Flood Count (Frames)	25
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	242,743



- Rx Rate (L1) (Bit/s)	99.56 M
- Rx Rate (Fps)	8,091
- Flood Count (Frames)	25
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,966
- Rx Rate (L1) (Bit/s)	110.72 M
- Rx Rate (Fps)	8,999
- Flood Count (Frames)	27
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,900
- Rx Rate (L1) (Bit/s)	111.11 M
- Rx Rate (Fps)	9,030
- Flood Count (Frames)	27
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,427
- Rx Rate (L1) (Bit/s)	110.91 M
- Rx Rate (Fps)	9,014
- Flood Count (Frames)	24
P-0-4-2	
- Tx (Frames)	0
	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	270,699
- Rx Rate (L1) (Bit/s)	111.02 M
- Rx Rate (Fps)	9,023
- Flood Count (Frames)	22
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,243
- Rx Rate (L1) (Bit/s)	111.25 M
- Rx Rate (Fps)	9,041
- Flood Count (Frames)	28
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,233
- Rx Rate (L1) (Bit/s)	111.24 M
- Rx Rate (Fps)	9,041
- Flood Count (Frames)	24
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,350
- Rx Rate (L1) (Bit/s)	110.88 M
- Rx Rate (Fps)	9,012
- Flood Count (Frames)	24



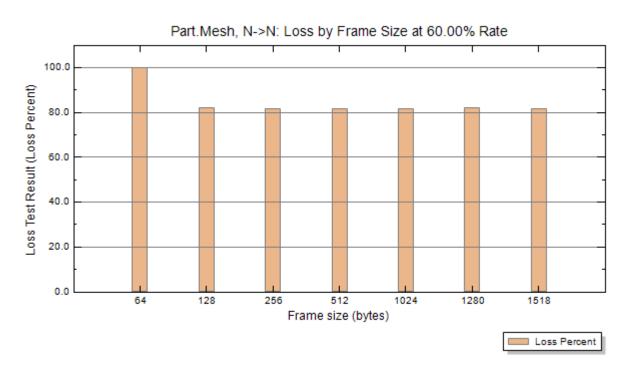

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	6.3 G	6.3 G	6.3 G	6.3 G	6.3 G	6.3 G
Tx Rate (Fps)	9,374,999	5,320,944	2,853,260	1,480,262	754,310	605,767
Rx Rate (Percent)	0.01 %	0.96 %	10.93 %	11.04 %	11.08 %	11.03 %
Rx Rate (L1) (Bit/s)	960.44 K	86.18 M	983.32 M	993.63 M	997.14 M	992.93 M
Rx Rate (Fps)	1.43 K	72.79 K	445.35 K	233.47 K	119.39 K	95.47 K
Loss Rate (Percent)	99.98 %	98.63 %	84.39 %	84.23 %	84.17 %	84.24 %
Loss (Frames)	281,207,105	157,444,628	72,237,426	37,403,883	19,047,624	15,308,763
P-0-0-0						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	24 240 000	17 726 400	0.540.067	4.024.205	2 514 266	2 040 222
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,998 700 M	17,736,480 700 M	9,510,867 700 M	4,934,205 700 M	2,514,366 700 M	2,019,222 700 M
- Tx Rate (E1) (Blus)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0 0	07,307
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	04 040 000	47 700 400	0.540.007	4 004 005	0.544.000	0.040.000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222 700 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M 1,041,667	700 M 591,216	700 M 317,029	700 M 164,474	700 M 83,812	67,307
- Rx (Frames)	1,041,067	591,216	317,029	164,474	83,812	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	0	0	0	0	0	
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	U	U	U	0
- Tx (Frames)	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,822	228,236	1,491,292	779,394	397,907	318,746
- Rx Rate (L1) (Bit/s)	108.01 K	9.01 M	109.76 M	110.57 M	110.78 M	110.5 M
- Rx Rate (Fps)	161	7,608	49,710	25,980	13,264	10,625
- Flood Count (Frames)	62	59	25	23	25	29
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
/- /- /		0	0	0	0	0
- Tx Rate (Fps)	0	U				
	4,787	238,332	1,492,547	777,002	397,370	319,725
- Rx (Frames) - Rx Rate (L1) (Bit/s)	4,787 107.23 K	238,332 9.41 M	109.85 M	110.23 M	110.63 M	110.84 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	4,787 107.23 K 160	238,332 9.41 M 7,944	109.85 M 49,752	110.23 M 25,900	110.63 M 13,246	110.84 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	4,787 107.23 K	238,332 9.41 M	109.85 M	110.23 M	110.63 M	110.84 M 10,658
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5	4,787 107.23 K 160 64	238,332 9.41 M 7,944 60	109.85 M 49,752 24	110.23 M 25,900 25	110.63 M 13,246 23	110.84 M 10,658 21
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames)	4,787 107.23 K 160 64	238,332 9.41 M 7,944 60	109.85 M 49,752 24	110.23 M 25,900 25	110.63 M 13,246 23	110.84 M 10,658 21
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	4,787 107.23 K 160 64 0	238,332 9.41 M 7,944 60 0	109.85 M 49,752 24 0	110.23 M 25,900 25 0	110.63 M 13,246 23 0	110.84 M 10,658 21 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	4,787 107.23 K 160 64 0 0	238,332 9.41 M 7,944 60 0 0	109.85 M 49,752 24 0 0	110.23 M 25,900 25 0 0	110.63 M 13,246 23 0 0	110.84 M 10,658 21 0 0
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	4,787 107.23 K 160 64 0 0 0 4,781	238,332 9.41 M 7,944 60 0 0 0 256,274	109.85 M 49,752 24 0 0 0 1,438,811	110.23 M 25,900 25 0 0 0 776,351	110.63 M 13,246 23 0 0 0 397,632	110.84 M 10,658 21 0 0 0 304,098
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	4,787 107.23 K 160 64 0 0 0 4,781 107.09 K	238,332 9.41 M 7,944 60 0 0 0 256,274 10.11 M	109.85 M 49,752 24 0 0 0 1,438,811 105.9 M	110.23 M 25,900 25 0 0 0 776,351 110.14 M	110.63 M 13,246 23 0 0 0 397,632 110.7 M	110.84 M 10,658 21 0 0 0 304,098 105.42 M
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	4,787 107.23 K 160 64 0 0 0 4,781 107.09 K	238,332 9.41 M 7,944 60 0 0 0 256,274 10.11 M 8,542	109.85 M 49,752 24 0 0 0 1,438,811 105.9 M 47,960	110.23 M 25,900 25 0 0 776,351 110.14 M 25,878	110.63 M 13,246 23 0 0 0 397,632 110.7 M 13,254	110.84 M 10,658 21 0 0 0 304,098 105.42 M 10,137
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	4,787 107.23 K 160 64 0 0 0 4,781 107.09 K	238,332 9.41 M 7,944 60 0 0 0 256,274 10.11 M	109.85 M 49,752 24 0 0 0 1,438,811 105.9 M	110.23 M 25,900 25 0 0 0 776,351 110.14 M	110.63 M 13,246 23 0 0 0 397,632 110.7 M	110.84 M 10,658 21 0 0 0 304,098 105.42 M 10,137
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	4,787 107.23 K 160 64 0 0 0 4,781 107.09 K 159 64	238,332 9.41 M 7,944 60 0 0 0 256,274 10.11 M 8,542 58	109.85 M 49,752 24 0 0 0 1,438,811 105.9 M 47,960 26	110.23 M 25,900 25 0 0 776,351 110.14 M 25,878 22	110.63 M 13,246 23 0 0 0 397,632 110.7 M 13,254 22	110.84 M 10,658 21 0 0 304,098 105.42 M 10,137 24
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	4,787 107.23 K 160 64 0 0 0 4,781 107.09 K	238,332 9.41 M 7,944 60 0 0 0 256,274 10.11 M 8,542	109.85 M 49,752 24 0 0 0 1,438,811 105.9 M 47,960	110.23 M 25,900 25 0 0 776,351 110.14 M 25,878	110.63 M 13,246 23 0 0 0 397,632 110.7 M 13,254	319,725 110.84 M 10,658 21 0 0 304,098 105.42 M 10,137 24



- Rx (Frames)	4,793	261,385	1,487,786	777,161	398,082	321,182
- Rx Rate (L1) (Bit/s)	107.36 K	10.32 M	109.5 M	110.25 M	110.83 M	111.34 M
- Rx Rate (Fps)	160	8,713	49,593	25,905	13,269	10,706
- Flood Count (Frames)	59	60	23	20	25	21
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,809	259,606	1,490,667	775,960	398,091	320,700
- Rx Rate (L1) (Bit/s)	107.72 K	10.25 M	109.71 M	110.08 M	110.83 M	111.18 M
- Rx Rate (Fps)	160	8,654	49,689	25,865	13,270	10,690
- Flood Count (Frames)	58	58	22	20	25	27
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,735	246,994	1,490,080	776,672	397,961	319,762
- Rx Rate (L1) (Bit/s)	106.06 K	9.75 M	109.67 M	110.18 M	110.79 M	110.85 M
- Rx Rate (Fps)	158	8,233	49,669	25,889	13,265	10,659
- Flood Count (Frames)	58	60	25	24	27	25
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,651	237,117	1,490,945	778,176	397,982	320,226
- Rx Rate (L1) (Bit/s)	104.18 K	9.36 M	109.73 M	110.4 M	110.8 M	111.01 M
- Rx Rate (Fps)	155	7,904	49,698	25,939	13,266	10,674
- Flood Count (Frames)	58	58	24	24	25	24
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,719	230,296	1,489,683	781,236	398,443	319,312
- Rx Rate (L1) (Bit/s)	105.71 K	9.09 M	109.64 M	110.83 M	110.93 M	110.69 M
- Rx Rate (Fps)	157	7,677	49,656	26,041	13,281	10,644
- Flood Count (Frames)	59	58	27	24	23	29
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,780	225,452	1,488,566	782,010	398,202	320,484
- Rx Rate (L1) (Bit/s)	107.07 K	8.9 M	109.56 M	110.94 M	110.86 M	111.1 M
- Rx Rate (Fps)	159	7,515	49,619	26,067	13,273	10,683
- Flood Count (Frames)	63	60	24	26	25	23

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	6.3 G
Tx Rate (Fps)	512,028
Rx Rate (Percent)	11.1 %
Rx Rate (L1) (Bit/s)	998.55 M
Rx Rate (Fps)	81.16 K
Loss Rate (Percent)	84.15 %
Loss (Frames)	12,926,143
P-0-0-0	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




Dy Data (Fra)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	<u> </u>
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	4
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	U
- Tx (Frames)	1,706,760
- Tx (Harries) - Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	0
- Tx (Frames)	1,706,760
- Tx (Hames) - Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,004
- Rx Rate (L1) (Bit/s)	110.74 M
- Rx Rate (Fps)	9,000
- Flood Count (Frames)	28
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	260 526
	269,526



- Rx Rate (L1) (Bit/s)		
- Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx Rate (L1	- Rx Rate (L1) (Bit/s)	110.54 M
P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 269,346 - Rx Rate (L1) (Bit/s) 110.47 M - Rx Rate (Fps) 8,978 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 9,032 - Flood Count (Frames) 270,964 - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 270,497 - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,045 - Tx Rate (Fps) 9,045 - Tx Rate (Fps) 9,045 - Rx Rate (Fps) 9,045		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 269,346 - Rx Rate (L1) (Bit/s) 110.47 M - Rx Rate (Fps) 8,978 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 - P-0-4-1 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 271,200 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,045 - Tx Rate (Fps) 9,045 - Tx Rate (Fps) 9,045 - Tx Rate (Fps) 9,045 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		30
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 269,346 - Rx Rate (L1) (Bit/s) 110.47 M - Rx Rate (Fps) 8,978 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 0 - Rx (Frames) 26 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 10.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.124 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Rx Rate (L1) (Bit/s) 111.124 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Rx Rate (L1) (Bit/s) 111.124 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Rx Rate (L1) (Bit/s) 111.124 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Tx Rate (Fps)		
- Rx (Frames) 269,346 - Rx Rate (L1) (Bit/s) 110.47 M - Rx Rate (Fps) 8,978 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 270,964 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 30 P-0-4-2 - Tx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 270,999 - Rx (Frames) 270,999 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045 - Rx Rate (Fps) 9,045		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps)		
- Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fp		
P-0-4-0 - Tx (Frames)	- Rx Rate (Fps)	8,978
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.13 M - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		24
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.13 M - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	P-0-4-0	
- Tx Rate (Fps)		0
- Rx (Frames) 270,879 - Rx Rate (L1) (Bit/s) 111.1 M - Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Tx Rate (L1) (Bit/s)	0
- Rx Rate (L1) (Bit/s) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Tx Rate (Fps)	0
- Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,964 - Rx Rate (Fps) 9,032 - Flood Count (Frames) 9,032 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,032 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-5 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Rx (Frames)	270,879
- Rx Rate (Fps) 9,029 - Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,964 - Rx Rate (Fps) 9,032 - Flood Count (Frames) 9,032 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,032 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-5 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Rx Rate (L1) (Bit/s)	111.1 M
- Flood Count (Frames) 26 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (Fps) 9,032 - Flood Count (Frames) 9,032 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Rx Rate (Fps)	9,029
P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (Fps) 9,017 - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 271,322 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045 - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Flood Count (Frames)	26
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Tx (Frames)	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		0
- Rx (Frames) 270,964 - Rx Rate (L1) (Bit/s) 111.13 M - Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,017 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,017 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (Fps) 9,030 - Tx Rate (Fps) 9,030 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 271,352 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		0
- Rx Rate (L1) (Bit/s) 9,032 - Flood Count (Frames) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,497 - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		270.964
- Rx Rate (Fps) 9,032 - Flood Count (Frames) 30 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (L1) (Bit/s) 111.25 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Flood Count (Frames) P-0-4-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps) - Rx Rate (Fps)		
P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx (Frames) 270,909 - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 24 - Tx (Frames) 25 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Rx Rate (Fps) 9,041 - Rx Rate (Fps) 9,041 - Rx Rate (Fps) 9,045 - Rx Rate (Fps) 111.29 M - Rx Rate (Fps) 9,045	- Flood Count (Frames)	
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 30 - Tx Rate (L1) (Bit/s) 31 - Tx Rate (Fps) 30		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	_	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- Tx Rate (I 1) (Bit/s)	
- Rx (Frames) 270,497 - Rx Rate (L1) (Bit/s) 110.94 M - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,909 - Rx (Frames) 24 P-0-4-4 - Tx (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 24 P-0-4-5 - Tx (Frames) 10 - Tx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (L1) (Bit/s) 9,017 - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Rx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 24 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 9,041 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (Fps) 9,017 - Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Rx Rate (Fps) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Tx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Tx Rate (L1) (Bit/s) 111.29 M - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		110 Q4 M
- Flood Count (Frames) 24 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,909 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (Fps) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 271,352 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		•
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 24 - Tx (Frames) 24 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Tx (Frames) 271,352 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - P-0-4-5 - Tx (Frames) 24 - Tx (Frames) 24 - Tx (Frames) 24 - Tx (Frames) 24 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Tx (Frames) 271,352 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		0
- Tx Rate (Fps) 0 - Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Tx (Frames) 24 - Tx (Frames) 271,352 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	Ty Poto (L1) (Pit/o)	
- Rx (Frames) 270,909 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 - Flood Count (Frames) 24 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 1 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 1 - Rx (Frames) 1 - Rx (Frames) 1 - Rx Rate (Fps) 9,045		
- Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 271,220 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (Fps) 9,030 - Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 271,220 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Flood Count (Frames) 24 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045	- RX Rate (Fps)	· · · · · · · · · · · · · · · · · · ·
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		24
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Tx Rate (Fps) 0 - Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx (Frames) 271,220 - Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (L1) (Bit/s) 111.24 M - Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (Fps) 9,041 - Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		271,220
- Flood Count (Frames) 24 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		·
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		24
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Tx Rate (Fps) 0 - Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx (Frames) 271,352 - Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		0
- Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
- Rx Rate (L1) (Bit/s) 111.29 M - Rx Rate (Fps) 9,045		
		111.29 M
- Flood Count (Frames) 25		
	- Flood Count (Frames)	25



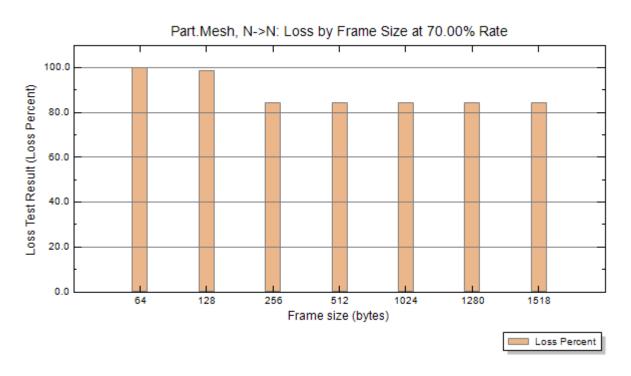

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,283	6,081,080	3,260,868	1,691,728	862,067	692,307
Rx Rate (Percent)	0.01 %	0.02 %	10.97 %	10.93 %	11.07 %	11.09 %
Rx Rate (L1) (Bit/s)	922.92 K	1.98 M	987.01 M	983.36 M	996.29 M	998.22 M
Rx Rate (Fps)	1.37 K	1.67 K	447.02 K	231.05 K	119.29 K	95.98 K
Loss Rate (Percent)	99.99 %	99.97 %	86.29 %	86.34 %	86.16 %	86.14 %
Loss (Frames)	321,387,291	182,382,331	84,415,520	43,820,257	22,283,387	17,889,743
P-0-0-0						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	25 714 277	20.270.260	10 000 E01	5.639.094	2 072 556	2 207 600
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35,714,277 800 M	20,270,268 800 M	10,869,561 800 M	5,639,094 800 M	2,873,556 800 M	2,307,690 800 M
- Tx Rate (ET) (Blus)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0,020
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	0
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx (Traines)	800 M	800 M	800 M	800 M	800 M	2,307,090 800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	M 008	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	0	0	U	U	0
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps) - Rx (Frames)	1,881	2,811	1.490.084	761,279	0 397,227	0 319,269
- Rx (Frames)	42.13 K	110.94 K	1,490,084 109.67 M	108 M	110.59 M	110.68 M
- Rx Rate (Fps)	63	94	49,669	25,376	13,241	10,642
- Flood Count (Frames)	60	61	28	24	23	24
P-0-2-4		0.				
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,867	5,862	1,488,566	778,592	397,337	317,724
- Rx Rate (L1) (Bit/s)	109.02 K	231.35 K	109.56 M	110.46 M	110.62 M	110.14 M
- Rx Rate (Fps)	162	195	49,619	25,953	13,245	10,591
- Flood Count (Frames)	61	62	26	21	29	25
P-0-2-5					_	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	5.053	1 490 020	721 945	302 226	219.465
- Rx (Frames)	4,853 108.71 K	5,953 234.95 K	1,489,929 109.66 M	721,845 102.41 M	392,326 109.22 M	318,465 110.4 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	108.71 K	234.95 K	49,664	24,062	109.22 M 13,078	10.4 M 10,616
	62	62	49,664	24,062	25	27
	02	02		20	20	21
		1				
- Flood Count (Frames) P-0-4-0 - Tx (Frames)	0	0	0	n	n	n
	0	0	0	0	0	0



- Rx (Frames)	4,875	5,973	1,494,405	776,658	398,478	320,354
- Rx Rate (L1) (Bit/s)	109.2 K	235.73 K	109.99 M	110.18 M	110.94 M	111.06 M
- Rx Rate (Fps)	163	199	49,814	25,889	13,283	10,678
- Flood Count (Frames)	58	55	21	26	22	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,946	5,894	1,490,779	777,276	398,536	320,627
- Rx Rate (L1) (Bit/s)	110.79 K	232.62 K	109.72 M	110.27 M	110.95 M	111.15 M
- Rx Rate (Fps)	165	196	49,693	25,909	13,285	10,688
- Flood Count (Frames)	60	58	22	21	20	30
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,973	5,892	1,493,951	778,267	398,223	320,333
- Rx Rate (L1) (Bit/s)	111.4 K	232.54 K	109.95 M	110.41 M	110.87 M	111.05 M
- Rx Rate (Fps)	166	196	49,798	25,942	13,274	10,678
- Flood Count (Frames)	58	60	23	25	23	22
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,974	5,954	1,488,274	780,026	398,918	320,889
- Rx Rate (L1) (Bit/s)	111.42 K	234.98 K	109.54 M	110.66 M	111.06 M	111.24 M
- Rx Rate (Fps)	166	198	49,609	26,001	13,297	10,696
- Flood Count (Frames)	60	59	19	20	21	25
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,914	5,898	1,489,166	780,156	398,582	320,643
- Rx Rate (L1) (Bit/s)	110.07 K	232.77 K	109.6 M	110.68 M	110.97 M	111.16 M
- Rx Rate (Fps)	164	197	49,639	26,005	13,286	10,688
- Flood Count (Frames)	57	60	22	24	22	24
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,919	5,844	1,485,375	777,490	398,990	321,163
- Rx Rate (L1) (Bit/s)	110.19 K	230.64 K	109.32 M	110.3 M	111.08 M	111.34 M
- Rx Rate (Fps)	164	195	49,513	25,916	13,300	10,705
- Flood Count (Frames)	58	58	23	25	23	20

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,174
Rx Rate (Percent)	10.71 %
Rx Rate (L1) (Bit/s)	964.15 M
Rx Rate (Fps)	78.36 K
Loss Rate (Percent)	86.61 %
Loss (Frames)	15,204,385
P-0-0-0	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




D. D. t. (Fr.)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	U
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	-
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	U
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	270 129
- Rx (Frames)	270,128
- Rx Rate (L1) (Bit/s)	110.79 M
- Rx Rate (Fps) - Flood Count (Frames)	9,004 22
P-0-2-4	22
- Tx (Frames)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Bl03)	0
- Rx (Frames)	272,958
101 (11411100)	2,2,000



- Rx Rate (L1) (Bit/s)	111.95 M
- Rx Rate (Fps)	9,099
- Flood Count (Frames)	23
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	186,819
- Rx Rate (L1) (Bit/s)	76.62 M
- Rx Rate (Fps)	6,227
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,876
- Rx Rate (L1) (Bit/s)	110.69 M
- Rx Rate (Fps)	8,996
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,668
- Rx Rate (L1) (Bit/s)	110.6 M
- Rx Rate (Fps)	8,989
- Flood Count (Frames)	24
P-0-4-2	2-7
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,621
- Rx Rate (L1) (Bit/s)	111.4 M
- Rx Rate (Fps)	9,054
- Flood Count (Frames)	24
P-0-4-3	27
- Tx (Frames)	0
- Tx (Hames)	0
- Tx Rate (ET) (Bl/s)	0
- Rx (Frames)	269,333
- Rx Rate (L1) (Bit/s)	110.46 M
- Rx Rate (Fps)	8,978
- Flood Count (Frames)	21
P-0-4-4	21
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,926
- Rx Rate (L1) (Bit/s)	110.71 M
- Rx Rate (Fps)	8,998
- Flood Count (Frames)	23
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,497
- Rx Rate (L1) (Bit/s)	110.94 M
- Rx Rate (Fps)	9,017
- Flood Count (Frames)	25



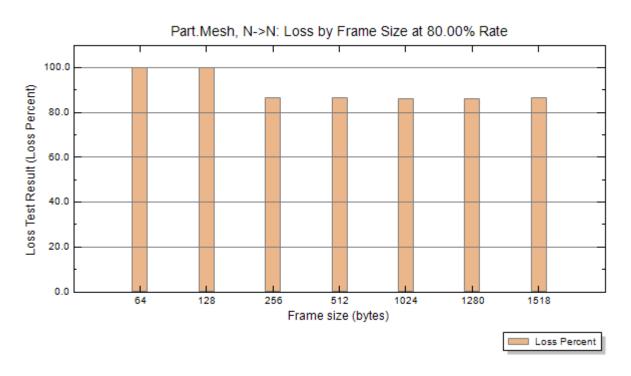

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	8.1 G	8.1 G	8.1 G	8.1 G	8.1 G	8.1 G
Tx Rate (Fps)	12,053,570	6,841,214	3,668,477	1,903,195	969,827	778,845
Rx Rate (Percent)	0.01 %	0.02 %	10.75 %	11.04 %	10.97 %	11.04 %
Rx Rate (L1) (Bit/s)	1.1 M	1.46 M	967.79 M	993.39 M	987.1 M	993.7 M
Rx Rate (Fps)	1.64 K	1.23 K	438.31 K	233.41 K	118.19 K	95.55 K
Loss Rate (Percent)	99.99 %	99.98 %	88.05 %	87.74 %	87.81 %	87.73 %
Loss (Frames)	361,557,787	205,199,404	96,904,993	50,093,559	25,549,185	20,498,908
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (ET) (Blus)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	0	0	0	0	0	0
- Tx (Frames)	40,178,565	22.804.047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407.609	211.466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	40 170 EGE	22 204 047	12 220 255	6 242 002	2 222 755	2 506 140
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40,178,565 900 M	22,804,047 900 M	12,228,255 900 M	6,343,983 900 M	3,232,755 900 M	2,596,149 900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,339,200	0	0	0	0	00,550
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	2,396	4,433	1,493,528	779,287	361,776	316,237
- Rx Rate (L1) (Bit/s)	53.67 K	174.96 K	109.92 M	110.55 M	100.72 M	109.63 M
- Rx Rate (Fps)	80	148	49,784	25,976	12,059	10,541
- Flood Count (Frames)	61	63	28	23	28	22
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,820	4,396	1,234,399	777,044	397,109	320,165
- Rx Rate (L1) (Bit/s)	130.37 K	173.5 K	90.85 M	110.24 M	110.56 M	110.99 M
- Rx Rate (Fps)	194	147	41,147	25,901	13,237	10,672
- Flood Count (Frames)	58	64	25	24	24	26
P-0-2-5	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps) - Rx (Frames)	5,977	2,121	1,490,977	777,250	397,289	310,066
- Rx Rate (L1) (Bit/s)	133.88 K		1,490,977 109.74 M	110.27 M	110.61 M	107.49 M
- Rx Rate (LT) (Bivs)	133.00 K	83.71 K	49,699	25,908	13,243	107.49 M
- Flood Count (Frames)	60	60	49,099	25,906	13,243	10,330
P-0-4-0	UU	00	21	22	22	29
- Tx (Frames)	0	0	0	0	0	0
			0	0	0	0
- Ty Rate (I 1) (Rit/e)						
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	6,086	4,356	1,490,458	776,277	398,317	319,577
- Rx Rate (L1) (Bit/s)	136.33 K	171.92 K	109.7 M	110.13 M	110.89 M	110.79 M
- Rx Rate (Fps)	203	145	49,682	25,876	13,277	10,653
- Flood Count (Frames)	60	59	21	22	24	24
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,624	4,299	1,478,492	776,600	398,959	320,185
- Rx Rate (L1) (Bit/s)	125.98 K	169.67 K	108.82 M	110.17 M	111.07 M	111 M
- Rx Rate (Fps)	187	143	49,283	25,887	13,299	10,673
- Flood Count (Frames)	57	59	24	26	22	27
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,748	4,335	1,492,010	777,528	398,705	318,989
- Rx Rate (L1) (Bit/s)	128.76 K	171.09 K	109.81 M	110.31 M	111 M	110.58 M
- Rx Rate (Fps)	192	145	49,734	25,918	13,290	10,633
- Flood Count (Frames)	60	59	25	25	24	26
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,836	4,314	1,485,580	778,997	397,725	319,695
- Rx Rate (L1) (Bit/s)	130.73 K	170.26 K	109.34 M	110.51 M	110.73 M	110.83 M
- Rx Rate (Fps)	195	144	49,519	25,967	13,258	10,657
- Flood Count (Frames)	60	59	28	28	21	24
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,045	4,399	1,495,647	779,880	397,850	320,416
- Rx Rate (L1) (Bit/s)	135.41 K	173.61 K	110.08 M	110.64 M	110.76 M	111.08 M
- Rx Rate (Fps)	202	147	49,855	25,996	13,262	10,681
- Flood Count (Frames)	60	60	23	23	23	23
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,766	4,366	1,488,211	779,425	397,880	321,103
- Rx Rate (L1) (Bit/s)	129.16 K	172.31 K	109.53 M	110.57 M	110.77 M	111.32 M
- Rx Rate (Fps)	192	146	49,607	25,981	13,263	10,703
- Flood Count (Frames)	63	59	25	24	24	26

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	8.1 G
Tx Rate (Fps)	658,322
Rx Rate (Percent)	11.1 %
Rx Rate (L1) (Bit/s)	998.98 M
Rx Rate (Fps)	81.19 K
Loss Rate (Percent)	87.67 %
Loss (Frames)	17,313,919
P-0-0-0	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	900 M
- Rx (Frames)	73,147 0
- Rx (Frames)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5 - Tx (Frames)	2,194,407
- Tx (Frames)	900 M
- Tx Rate (ET) (Blus)	73,147
- Rx (Frames)	73,147
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	0.404.407
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272,798
- Rx Rate (L1) (Bit/s)	111.88 M
- Rx Rate (Fps)	9,093
- Flood Count (Frames) P-0-2-4	22
	^
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Blus)	0
- Rx (Frames)	269,063
. 5. (5.1100)	_00,000



- Rx Rate (L1) (Bit/s)	110.35 M
- Rx Rate (Fps)	8,969
- Flood Count (Frames)	22
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,308
- Rx Rate (L1) (Bit/s)	110.45 M
- Rx Rate (Fps)	8,977
- Flood Count (Frames)	26
P-0-4-0	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	273,218
- Rx Rate (L1) (Bit/s)	112.06 M
- Rx Rate (Fps)	9,107
- Flood Count (Frames)	26
P-0-4-1	20
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,443
- Rx Rate (L1) (Bit/s)	110.51 M
- Rx Rate (Fps)	8,981
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,574
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	110.56 M 8,986
- Flood Count (Frames)	27
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272,354
- Rx Rate (L1) (Bit/s)	111.7 M
- Rx Rate (Fps)	9,078
- Flood Count (Frames)	29
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,375
- Rx Rate (L1) (Bit/s)	110.89 M
- Rx Rate (Fps)	9,013
- Flood Count (Frames)	24
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	260 611
- Rx (Frames)	269,611
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	110.58 M 8,987
- Flood Count (Frames)	19
- 1 1000 Court (Frames)	19



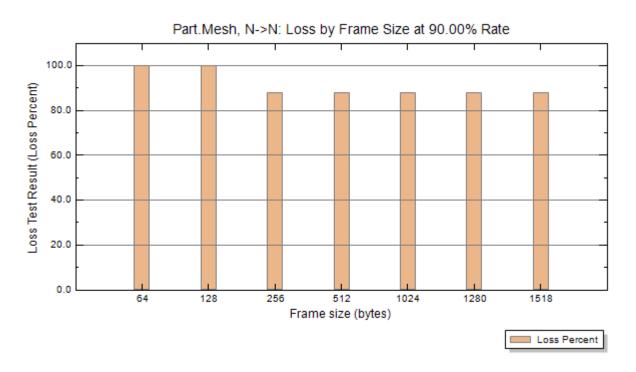

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,856	7,601,351	4,076,085	2,114,662	1,077,586	865,382
Rx Rate (Percent)	0.01 %	0.01 %	10.88 %	11.05 %	10.97 %	11.09 %
Rx Rate (L1) (Bit/s)	755.91 K	1.27 M	979.4 M	994.38 M	987.41 M	998.07 M
Rx Rate (Fps)	1.12 K	1.07 K	443.57 K	233.64 K	118.22 K	95.97 K
Loss Rate (Percent)	99.99 %	99.99 %	89.12 %	88.95 %	89.03 %	88.91 %
Loss (Frames)	401,751,931	228,008,462	108,975,422	56,430,569	28,780,842	23,082,430
P-0-0-0						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4			10 -00 0 10		0 =04 0=4	
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	1000 M 844,595	1000 M 452,898	1000 M 234,962	1000 M 119,732	1000 M 96,154
- Rx (Frames)	1,466,095	044,595	452,696	234,962	0	96,154
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5					0	
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames) P-0-2-1	0	U	0	0	U	U
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	25,337,835 1000 M	1000 M	1000 M	1000 M	2,004,000 1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	044,595	432,696	234,902	0	90,134
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps) - Rx (Frames)	4,037	3,533	1,486,506	776,239	398,131	319,495
- Rx (Frames)	90.43 K	139.44 K	1,466,506 109.41 M	110.12 M	110.84 M	110.76 M
- Rx Rate (Fps)	135	118	49,550	25,875	13,271	10,650
- Flood Count (Frames)	61	62	24	22	21	28
P-0-2-4	01	02	27			
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	1,792	3,558	1,490,701	779,716	361,954	320,242
- Rx Rate (L1) (Bit/s)	40.14 K	140.42 K	109.72 M	110.62 M	100.77 M	111.02 M
- Rx Rate (Fps)	60	119	49,690	25,991	12,065	10,675
- Flood Count (Frames)	58	61	25	20	24	26
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,924	3,575	1,393,937	774,038	397,175	318,480
- Rx Rate (L1) (Bit/s)	87.9 K	141.09 K	102.59 M	109.81 M	110.57 M	110.41 M
- Rx Rate (Fps)	131	119	46,465	25,801	13,239	10,616
- Flood Count (Frames)	63	61	20	22	21	26
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
Ly Doto (L1) (Dit/o)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	4,018	3,572	1,495,023	776,012	398,251	319,458
- Rx Rate (L1) (Bit/s)	90 K	140.97 K	110.03 M	110.09 M	110.87 M	110.75 M
- Rx Rate (Fps)	134	119	49,834	25,867	13,275	10,649
- Flood Count (Frames)	57	58	24	21	22	20
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,055	3,585	1,489,877	776,020	398,311	319,847
- Rx Rate (L1) (Bit/s)	90.83 K	141.49 K	109.65 M	110.09 M	110.89 M	110.88 M
- Rx Rate (Fps)	135	120	49,663	25,867	13,277	10,662
- Flood Count (Frames)	58	57	22	20	21	26
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,962	3,567	1,491,598	782,663	398,055	320,025
- Rx Rate (L1) (Bit/s)	88.75 K	140.78 K	109.78 M	111.03 M	110.82 M	110.94 M
- Rx Rate (Fps)	132	119	49,720	26,089	13,269	10,668
- Flood Count (Frames)	59	56	21	23	25	23
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,026	3,548	1,491,076	781,880	398,777	320,330
- Rx Rate (L1) (Bit/s)	90.18 K	140.03 K	109.74 M	110.92 M	111.02 M	111.05 M
- Rx Rate (Fps)	134	118	49,703	26,063	13,293	10,678
- Flood Count (Frames)	58	55	19	21	22	27
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,941	3,554	1,486,716	781,860	397,755	319,991
- Rx Rate (L1) (Bit/s)	88.28 K	140.26 K	109.42 M	110.92 M	110.73 M	110.93 M
- Rx Rate (Fps)	131	118	49,557	26,062	13,259	10,666
- Flood Count (Frames)	58	58	23	24	24	20
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,991	3,561	1,481,685	780,851	398,335	321,174
- Rx Rate (L1) (Bit/s)	89.4 K	140.54 K	109.05 M	110.78 M	110.9 M	111.34 M
- Rx Rate (Fps)	133	119	49,390	26,028	13,278	10,706
- Flood Count (Frames)	59	60	22	23	23	28

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,468
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.43 M
Rx Rate (Fps)	81.15 K
Loss Rate (Percent)	88.91 %
Loss (Frames)	19,509,632
P-0-0-0	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Dy Pata (Fnc)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	0.400.000
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M 81,274
- Tx Rate (Fps) - Rx (Frames)	01,274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	0
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	_
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	0
	2,438,226
- Tx (Frames)	1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	81,274
- Rx (Frames)	01,274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,962
- Rx Rate (L1) (Bit/s)	111.54 M
- Rx Rate (Fps)	9,065
- Flood Count (Frames)	23
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	268,432
- Rx (Frames)	



- Rx Rate (L1) (Bit/s)	110.09 M
- Rx Rate (Fps)	8,948
- Flood Count (Frames)	21
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,663
- Rx Rate (L1) (Bit/s)	111.01 M
- Rx Rate (Fps)	9,022
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,661
- Rx Rate (L1) (Bit/s)	111.42 M
- Rx Rate (Fps)	9,055
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	
- Rx (Frames)	268,352
- Rx Rate (L1) (Bit/s)	110.06 M
- Rx Rate (Fps)	8,945
- Flood Count (Frames)	26
P-0-4-2	•
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,317
- Rx Rate (L1) (Bit/s)	111.28 M
- Rx Rate (Fps)	9,044
- Flood Count (Frames)	26
P-0-4-3	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272,276
- Rx Rate (L1) (Bit/s)	111.67 M
- Rx Rate (Fps)	9,076
- Flood Count (Frames)	25
P-0-4-4	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268,527
- Rx Rate (L1) (Bit/s)	110.13 M
- Rx Rate (Fps)	8,951
- Flood Count (Frames)	24
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,212
- Rx Rate (L1) (Bit/s)	111.23 M
- Rx Rate (Fps)	9,040
- Flood Count (Frames)	25



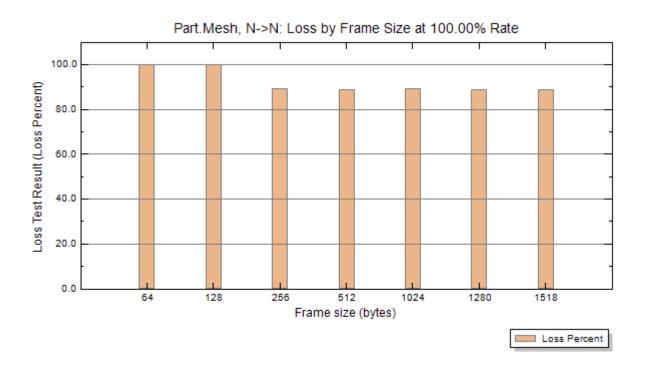



Congestion Control Results

Test Setup

Duration: 30 seconds Iteration: 1

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Source
P-0-4-4	Destination
P-0-4-5	Destination

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	89,285,715	50,675,676	27,173,914	14,097,746	7,183,910	5,769,232
Uncongested Port: (P-0-4-4)						
- Tx (Frames)	22,321,429	12,668,919	6,793,479	3,524,437	1,795,978	1,442,308
- Rx (Frames)	22,321,429	12,668,919	6,793,479	3,524,437	1,795,978	1,442,308
- Loss (Frames)	0	0	0	0	0	0
- Loss (Percent)	0.00	0.00	0.00	0.00	0.00	0.00
Congested Port: (P-0-4-5)						
- Tx (Frames)	66,964,286	38,006,757	20,380,435	10,573,309	5,387,932	4,326,924
- Rx (Frames)	42,623,199	24,672,649	13,393,749	6,996,762	3,578,523	2,876,002
- Loss (Frames)	24,341,087	13,334,108	6,986,686	3,576,547	1,809,409	1,450,922
- Loss (Percent)	36.35	35.08	34.28	33.83	33.58	33.53

Result State FAIL Iter. # 1 Tx Rate (Percent) 100 % Tx (Frames) 4,876,464 Uncongested Port: (P-0-4-4) - Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235 - Loss (Percent) 33.50	Frame Size	1518
Tx Rate (Percent) 100 % Tx (Frames) 4,876,464 Uncongested Port: (P-0-4-4) - Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	Result State	FAIL
Tx (Frames) 4,876,464 Uncongested Port: (P-0-4-4) - Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	Iter. #	1
Uncongested Port: (P-0-4-4) - Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	Tx Rate (Percent)	100 %
(P-0-4-4) - Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	Tx (Frames)	4,876,464
- Tx (Frames) 1,219,116 - Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235		
- Rx (Frames) 465,077 - Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	(P-0-4-4)	
- Loss (Frames) 754,039 - Loss (Percent) 61.85 Congested Port: (P-0-4-5) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	- Tx (Frames)	1,219,116
- Loss (Percent) 61.85 Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	- Rx (Frames)	465,077
Congested Port: (P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	- Loss (Frames)	754,039
(P-0-4-5) - Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	- Loss (Percent)	61.85
- Tx (Frames) 3,657,348 - Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	Congested Port:	
- Rx (Frames) 2,432,113 - Loss (Frames) 1,225,235	(P-0-4-5)	
- Loss (Frames) 1,225,235	- Tx (Frames)	3,657,348
, , , , , , ,	- Rx (Frames)	2,432,113
- Loss (Percent) 33.50	- Loss (Frames)	1,225,235
	- Loss (Percent)	33.50



Forward Pressure Results

Test Setup

Duration: 30 seconds

Iteration:

InterFrame Gap Delta: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx (Frames)	45,180,722	25,510,204	13,636,363	7,062,146	3,595,397	2,886,836
Tx Rate (Fps)	1,506,024	850,340	454,545	235,405	119,847	96,228
Tx IFG (Bytes)	20	20	20	20	20	20
Tx Max. Util. (Percent)	101.205	100.680	100.364	100.188	100.096	100.077
Rx (Frames)	42,613,672	24,671,101	13,392,910	6,996,323	3,578,301	2,875,825
Rx Rate (Fps)	1,420,453	822,367	446,428	233,209	119,275	95,859
Rx Max. Util. (Percent)	95.454	97.368	98.571	99.254	99.618	99.693
Loss (Frames)	2,567,050	839,103	243,453	65,823	17,096	11,011
Loss (Percent)	5.68	3.29	1.79	0.93	0.48	0.38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx (Frames)	2,439,817
Tx Rate (Fps)	81,327
Tx IFG (Bytes)	20
Tx Max. Util. (Percent)	100.065
Rx (Frames)	2,431,964
Rx Rate (Fps)	81,063
Rx Max. Util. (Percent)	99.740
Loss (Frames)	7,853
Loss (Percent)	0.32



Maximum Forwarding Rate Results

Test Setup

Duration: 30 seconds Iteration: 1

Port ID	Port Role
P-0-0-0	Source
P-0-4-5	Destination

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	90 %	100 %	100 %	100 %
Tx (Frames)	44,642,857	25,337,837	12,228,260	7,048,872	3,591,954	2,884,615
Tx Rate (L1) (Bit/s)	1000 M	1000 M	900 M	1000 M	1000 M	1000 M
Tx Rate (Fps)	1,488,095	844,595	407,609	234,962	119,732	96,154
Rx (Frames)	42,613,730	24,671,129	12,228,260	6,996,336	3,578,310	2,875,831
Rx Rate (L1) (Bit/s)	954.55 M	973.69 M	900 M	992.55 M	996.2 M	996.95 M
Rx Rate (Fps)	1,420,458	822,371	407,609	233,211	119,277	95,861

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx (Frames)	1,950,585
Tx Rate (L1) (Bit/s)	800 M
Tx Rate (Fps)	65,020
Rx (Frames)	1,950,585
Rx Rate (L1) (Bit/s)	800 M
Rx Rate (Fps)	65,020



Address Caching Capacity Results

Test Setup

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC

Address Initial Count: 4,096
Address Maximum Count: 65,535
Address Minimum Count: 100
Address Resolution: 100

Learning Rate: 1,000 Fps
Toggle Port Sync State: Yes
Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds
Switch Test Ports: No

DUT Aging Time: 300 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Duration (Seconds)	2	2	2	2	2	2
Address Count	162	162	162	162	162	162
TestPort Tx (Frames)	162	162	162	162	162	162
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	162	162	162	162	162	162
MonPort Rx (Frames)	162	162	162	162	162	162

Frame Size	1518
Result State	FAIL
Iter. #	1
Duration (Seconds)	2
Address Count	162
TestPort Tx (Frames)	162
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	162
MonPort Rx (Frames)	162



Address Learning Rate Results

Test Setup

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC
Only Use Max. Capacity: No
Set End = Max. Capacity: Yes

Base Learning Rate: 1,000 Fps Initial Rate: 10.00% Maximum Rate: 100.00% Minimum Rate: 10.00% Resolution: 10.00%

Toggle Port Sync State: Yes
Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds
Switch Test Ports: No

DUT Aging Time: 300 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port


Test Results

Results for 13,107 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Learning Rate (Fps)	100	100	100	100	100	100
Duration (Seconds)	133	133	133	133	133	133
Address Count	13,107	13,107	13,107	13,107	13,107	13,107
TestPort Tx (Frames)	13,107	13,107	13,107	13,107	13,107	13,107
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	13,107	13,107	13,107	13,107	13,107	13,107
MonPort Rx (Frames)	11,079	12,065	12,065	12,065	12,065	12,065

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	10 %
Learning Rate (Fps)	100
Duration (Seconds)	133
Address Count	13,107
TestPort Tx (Frames)	13,107
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	13,107
MonPort Rx (Frames)	12.065



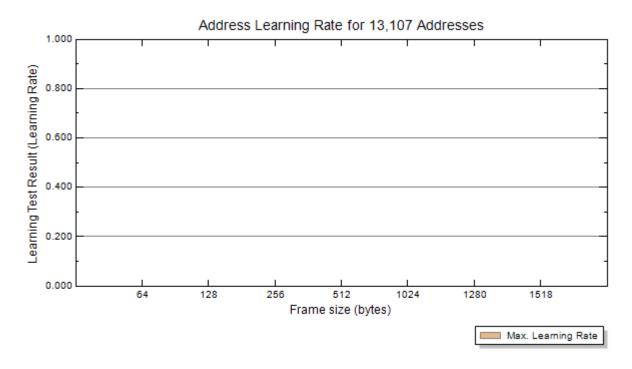


Results for 26,214 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Learning Rate (Fps)	100	100	100	100	100	100
Duration (Seconds)	264	264	264	264	264	264
Address Count	26,214	26,214	26,214	26,214	26,214	26,214
TestPort Tx (Frames)	26,214	26,214	26,214	26,214	26,214	26,214
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	26,214	26,214	26,214	26,214	26,214	26,214
MonPort Rx (Frames)	24,186	25,172	25,172	25,172	25,172	25,172

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	10 %
Learning Rate (Fps)	100
Duration (Seconds)	264
Address Count	26,214
TestPort Tx (Frames)	26,214
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	26,214
MonPort Rx (Frames)	25,172



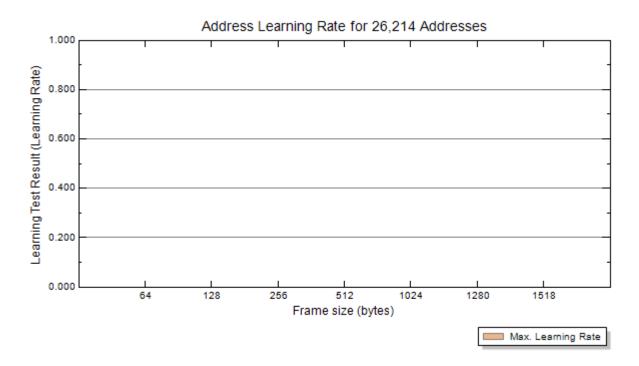


Results for 39,321 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Learning Rate (Fps)	100	100	100	100	100	100
Duration (Seconds)	395	395	395	395	395	395
Address Count	39,321	39,321	39,321	39,321	39,321	39,321
TestPort Tx (Frames)	39,321	39,321	39,321	39,321	39,321	39,321
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	39,321	39,321	39,321	39,321	39,321	39,321
MonPort Rx (Frames)	38,316	38,316	38,316	38,316	38,316	38,316

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	10 %
Learning Rate (Fps)	100
Duration (Seconds)	395
Address Count	39,321
TestPort Tx (Frames)	39,321
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	39,321
MonPort Rx (Frames)	38,316



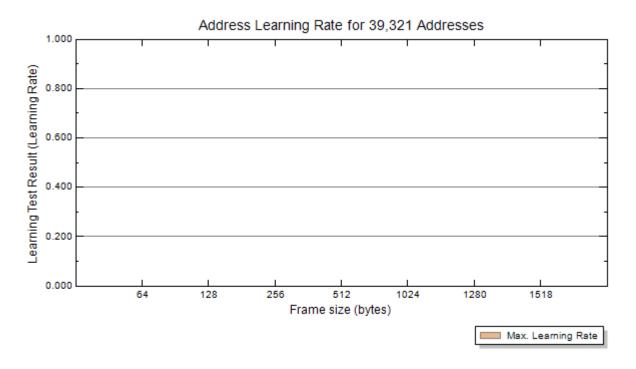


Results for 52,428 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Learning Rate (Fps)	100	100	100	100	100	100
Duration (Seconds)	526	526	526	526	526	526
Address Count	52,428	52,428	52,428	52,428	52,428	52,428
TestPort Tx (Frames)	52,428	52,428	52,428	52,428	52,428	52,428
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	52,428	52,428	52,428	52,428	52,428	52,428
MonPort Rx (Frames)	51,423	51,423	51,423	51,423	51,423	51,423

1518
FAIL
1
10 %
100
526
52,428
52,428
0
52,428
51,423



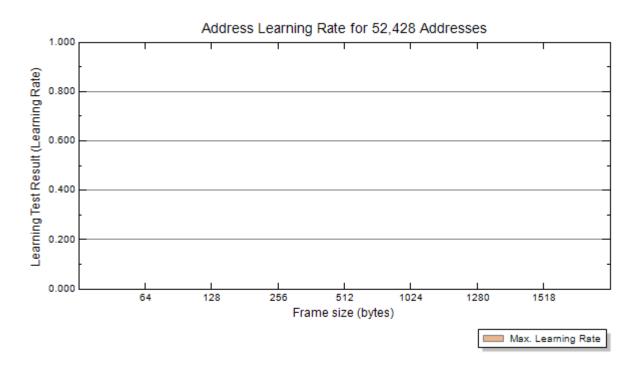


Results for 65,535 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Learning Rate (Fps)	100	100	100	100	100	100
Duration (Seconds)	657	657	657	657	657	657
Address Count	65,535	65,535	65,535	65,535	65,535	65,535
TestPort Tx (Frames)	65,535	65,535	65,535	65,535	65,535	65,535
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	65,535	65,535	65,535	65,535	65,535	65,535
MonPort Rx (Frames)	64,530	64,530	64,530	64,530	64,530	64,530

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	10 %
Learning Rate (Fps)	100
Duration (Seconds)	657
Address Count	65,535
TestPort Tx (Frames)	65,535
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	65,535
MonPort Rx (Frames)	64,530



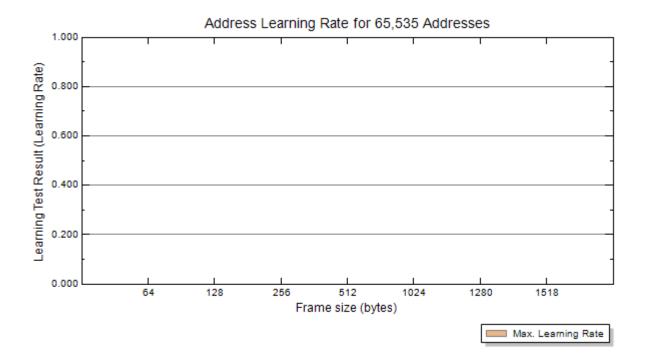



Errored Frames Filtering Results

Test Setup

Duration: 30 seconds

Iteration: 1

Oversize Test Enabled: Yes
Max. Valid Frame Size: 1518 bytes
Min. Valid Frame Size: 64 bytes
Oversize Frame Span: 1 bytes
Undersize Frame Span: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

Test Results

Tx Rate (Percent)	10 %	20 %	30 %	40 %	50 %	60 %
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (L1) (Bit/s)	100 M	200 M	300 M	400 M	500 M	600 M
Tx (Frames)	1,741,375	3,482,752	5,224,128	6,965,504	8,706,880	10,448,257
Rx (Frames)	1,740,703	3,472,967	5,144,625	6,648,132	8,198,220	9,538,222
Tx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Rx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Tx Oversize (Frames)	81,221	162,443	243,664	324,886	406,107	487,329
Rx Oversize (Frames)	81,221	162,443	243,664	324,886	406,107	487,329
Tx Undersize (Frames)	1,506,024	3,012,048	4,518,072	6,024,096	7,530,120	9,036,144
Rx Undersize (Frames)	1,505,352	3,002,263	4,438,569	5,706,724	7,021,460	8,126,109
Tx FCS Error (Frames)	58	58	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0	0	0

Tx Rate (Percent)	70 %	80 %	90 %	100 %
Result State	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1
Tx Rate (L1) (Bit/s)	700 M	800 M	900 M	1000 M
Tx (Frames)	12,189,633	13,931,009	15,672,386	17,413,762
Rx (Frames)	10,829,901	12,320,757	13,712,283	13,685,909
Tx Valid (Frames)	1,078,914	1,233,045	1,387,176	1,541,307
Rx Valid (Frames)	1,078,914	1,233,045	1,387,176	1,477,277
Tx Oversize (Frames)	568,551	649,772	730,994	812,215
Rx Oversize (Frames)	568,551	649,772	730,994	635,620
Tx Undersize (Frames)	10,542,168	12,048,192	13,554,216	15,060,240
Rx Undersize (Frames)	9,182,436	10,437,940	11,594,113	11,573,012
Tx FCS Error (Frames)	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0



Broadcast Forwarding Results

Test Setup

Duration: 30 seconds

Iteration:

Initial Rate: 10.00%
Maximum Rate: 100.00%
Minimum Rate: 10.00%
Resolution: 10.00%

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Destination
P-0-0-2	Destination
P-0-0-3	Destination
P-0-0-4	Destination
P-0-0-5	Destination
P-0-2-0	Destination
P-0-2-1	Destination
P-0-2-2	Destination
P-0-2-3	Destination
P-0-2-4	Destination
P-0-2-5	Destination
P-0-4-0	Destination
P-0-4-1	Destination
P-0-4-2	Destination
P-0-4-3	Destination
P-0-4-4	Destination
P-0-4-5	Destination

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	66.294 %	77.852 %	83.125 %	91.563 %	94.375 %	94.375 %
Tx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
Tx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
Tx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
Loss Rate (Percent)	0 %	0 %	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0	0	0
P-0-0-1						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.264	3.510	2.973	37.705	3.031	2.938
- Min Latency (micsec)	2.238	2.727	2.719	2.896	2.767	2.727
- Max Latency (micsec)	7.963	7.707	5.197	76.285	5.461	5.253
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.742	2.140	2.188	2.164	2.285	2.285
P-0-0-2						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.085	3.237	3.015	13.451	3.046	2.953
- Min Latency (micsec)	2.262	2.727	2.743	2.751	2.791	2.751
- Max Latency (micsec)	7.843	8.332	5.894	29.331	5.437	5.325
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.357	2.116	2.188	2.164	2.212	2.333
P-0-0-3						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.024	3.443	2.985	3.638	3.018	2.937



- Min Latency (micsec)	2.286	2.727	2.719	2.727	2.767	2.727
- Max Latency (micsec)	7.241	8.452	5.293	12.806	5.461	5.349
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.003	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.525	2.140	2.140	2.237	2.501	2.477
P-0-0-4						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.129	3.562	2.997	3.207	3.033	2.956
- Min Latency (micsec)	2.286	2.727	2.719	2.727	2.767	2.727
- Max Latency (micsec)	7.867	7.201	5.485	11.363	5.461	5.133
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.003	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.140	2.285	2.164	2.405	2.188
P-0-0-5						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	2.690	3.099	2.970	3.090	3.017	2.954
- Min Latency (micsec)	2.262	2.727	2.719	2.727	2.767	2.751
- Max Latency (micsec)	5.558	5.349	5.173	8.236	5.197	5.133
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.742	2.333	2.116	1.972	2.309	2.261
P-0-2-0		2.000	20		2.555	
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.682	4.301	2.436	83.810	2.479	2.403
- Min Latency (micsec)	1.733	2.174	2.166	2.174	2.214	2.174
- Max Latency (micsec)	7.867	9.150	5.293	169.471	4.908	4.772
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.005
- Min Jitter (micsec)	0.003	0.002	0.000	0.002	0.004	0.000
- Max Jitter (micsec)	2.429	2.140	2.285	2.188	2.405	2.333
	2.429	2.140	2.203	2.100	2.405	2.333
P-0-2-1	20 505 544	40 705 000	44 004 457	0.454.400	2 200 000	0.700.055
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.355	4.388	2.428	64.515	2.483	2.407
- Min Latency (micsec)	1.709	2.174	2.166	2.174	2.238	2.174
- Max Latency (micsec)	7.386	9.246	4.692	122.806	4.956	4.796
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.429	2.140	2.405	2.164	2.333	2.309
P-0-2-2	00 -011	40 -0- 000				
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.329	3.691	2.447	51.414	2.496	2.414
- Min Latency (micsec)	1.709	2.198	2.166	2.198	2.214	2.198
- Max Latency (micsec)	7.410	8.621	4.956	104.044	4.860	4.676
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.429	2.140	2.405	2.116	2.309	2.261
P-0-2-3						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	3.027	3.699	2.442	52.828	2.497	2.414
- Min Latency (micsec)	1.709	2.174	2.166	2.174	2.214	2.198
- Max Latency (micsec)	9.238	7.682	4.932	108.494	4.836	4.844
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.549	2.140	2.309	2.164	2.309	2.573
P-0-2-4						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
(= . / (= . /			376,472	215,137	112,997	90,745
- Rx Rate (Fps)	9ธก ธา/ □	U.G.G. 1.G.G				
- Rx Rate (Fps) - Avg Latency (micsec)	986,517 2.872	657,530 3.065	2.426	22.770	2.494	2.410



- Max Latency (micsec)	7.217	8.981	4.620	49.657	4.956	4.604
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec) P-0-2-5	2.549	2.044	2.309	2.164	2.381	2.261
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 N
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	2.698	2.937	2.425	13.151	2.489	2.403
- Min Latency (micsec)	1.733	2.198	2.190	2.366	2.214	2.198
- Max Latency (micsec)	7.266	8.933	4.668	29.043	4.908	4.820
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.333	2.140	2.309	2.164	2.405	2.453
P-0-4-0						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	7.930	4.985	2.622	100.732	2.662	2.557
- Min Latency (micsec)	1.885	2.350	2.342	2.471	2.391	2.350
- Max Latency (micsec)	17.857	9.591	5.012	171.884	5.109	4.828
- Avg Jitter (micsec)	0.003	0.002	0.010	0.002	0.003	0.005
- Min Jitter (micsec) - Max Jitter (micsec)	0.000 2.044	0.000 2.140	0.000 2.212	0.000 2.164	0.000 2.333	0.000 2.237
P-0-4-1	2.044	2.140	2.212	2.104	2.333	2.231
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx (Frames)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	2,722,355 943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	4.698	4.965	2.587	72.357	2.614	2.518
- Min Latency (micsec)	1.861	2.302	2.294	2.447	2.342	2.302
- Max Latency (micsec)	8.789	9.495	4.916	140.061	4.940	4.924
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.003	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.140	2.140	2.429	2.164	2.477	2.549
P-0-4-2						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	4.797	4.842	2.617	76.807	2.643	2.557
- Min Latency (micsec)	1.885	2.350	2.318	2.471	2.391	2.350
- Max Latency (micsec)	9.679	10.962	5.061	145.353	4.988	4.900
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.003	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.333	2.116	2.212	2.164	2.405	2.429
P-0-4-3 - Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	4.509	4.456	2.594	102.283	2.627	2.528
- Min Latency (micsec)	1.837	2.326	2.294	2.639	2.366	2.326
- Max Latency (micsec)	8.524	9.326	4.844	212.031	5.181	4.924
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.003	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.501	2.140	2.212	2.140	2.429	2.453
P-0-4-4					-	
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	4.274	5.146	2.598	76.548	2.619	2.522
- Min Latency (micsec)	1.837	2.302	2.294	2.519	2.366	2.302
- Max Latency (micsec)	8.572	11.106	5.229	156.033	4.988	4.684
- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.405	2.140	2.309	2.044	2.333	2.285
P-0-4-5						
- Rx (Frames)	29,595,511	19,725,902	11,294,157	6,454,123	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.94 M	778.52 M	831.25 M	915.62 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,517	657,530	376,472	215,137	112,997	90,745
- Avg Latency (micsec)	4.419	4.356	2.597	73.399	2.635	2.547
- Min Latency (micsec) - Max Latency (micsec)	1.861	2.326	2.318	2.639	2.366	2.326
nuov Lotopov (miccoo)	9.102	10.745	4.868	127.937	4.988	5.020



- Avg Jitter (micsec)	0.003	0.002	0.008	0.002	0.004	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.549	2.116	2.212	2.140	2.429	2.381

Frame Size	1518
Result State	PASS
Iter.#	1
Tx Rate (Percent)	94.375 %
Tx (Frames)	2,301,080
Tx Rate (L1) (Bit/s)	943.75 M
Tx Rate (Fps)	76,703
Loss Rate (Percent)	0 %
Loss (Frames)	0
P-0-0-1	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
	2.964
- Avg Latency (micsec)	2.735
- Min Latency (micsec)	
- Max Latency (micsec)	5.020
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.140
P-0-0-2	0.00/
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.972
- Min Latency (micsec)	2.735
- Max Latency (micsec)	5.213
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.381
P-0-0-3	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.942
- Min Latency (micsec)	2.735
- Max Latency (micsec)	5.213
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.212
P-0-0-4	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.939
- Min Latency (micsec)	2.735
- Max Latency (micsec)	5.165
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.188
P-0-0-5	2.100
- Rx (Frames)	2,301,080
- Rx (Flames)	943.75 M
	76,703
- Rx Rate (Fps)	
- Avg Latency (micsec) - Min Latency (micsec)	2.930 2.735
- Max Latency (micsec)	5.045 0.003
- Avg Jitter (micsec)	
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.164
P-0-2-0	0.004.000
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.427
- Min Latency (micsec)	2.182
 Max Latency (micsec) 	4.587



- Avg Jitter (micsec)	0.003
- Min Jitter (micsec) - Max Jitter (micsec)	0.000 2.261
P-0-2-1	2.201
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.433
- Min Latency (micsec)	2.182
- Max Latency (micsec)	4.660
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.140
P-0-2-2	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.438
- Min Latency (micsec)	2.182
- Max Latency (micsec)	5.189
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec) P-0-2-3	2.670
	2 201 000
- Rx (Frames) - Rx Rate (L1) (Bit/s)	2,301,080
- Rx Rate (LT) (Bit/S)	943.75 M 76,703
- Avg Latency (micsec)	2.429
- Min Latency (micsec)	2.182
- Max Latency (micsec)	4.587
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.285
P-0-2-4	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.441
- Min Latency (micsec)	2.182
- Max Latency (micsec)	4.636
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.164
P-0-2-5	0.004.000
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.447 2.206
- Min Latency (micsec)	
- Max Latency (micsec)	4.539 0.002
- Avg Jitter (micsec) - Min Jitter (micsec)	0.002
- Max Jitter (micsec)	2.212
P-0-4-0	2.212
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.534
- Min Latency (micsec)	2.358
- Max Latency (micsec)	5.173
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.621
P-0-4-1	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.492
- Min Latency (micsec)	2.310
	4.788
- Max Latency (micsec)- Avg Jitter (micsec)	0.003



- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.357
P-0-4-2	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.528
- Min Latency (micsec)	2.358
- Max Latency (micsec)	4.788
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.333
P-0-4-3	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.499
- Min Latency (micsec)	2.310
- Max Latency (micsec)	4.908
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.477
P-0-4-4	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.518
- Min Latency (micsec)	2.310
- Max Latency (micsec)	4.764
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.381
P-0-4-5	
- Rx (Frames)	2,301,080
- Rx Rate (L1) (Bit/s)	943.75 M
- Rx Rate (Fps)	76,703
- Avg Latency (micsec)	2.548
- Min Latency (micsec)	2.334
- Max Latency (micsec)	4.740
- Avg Jitter (micsec)	0.004
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.261



