

Valkyrie2889 Test Report

Test Summary

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2023-11-29, 11:13 Test Duration: 00:56:13 (h:m:s)

Generated By: Valkyrie2889 v1.41, running on 'Microsoft Windows 10 Enterprise'

Comments: DM broadcast, up to 4 timing events, 4 layers:

- host: aconbg027

- chassis: Xenabay (140.181.139.228)

DUT:

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/16/296/297

- fw: v6.1

- dot-config: production

Test Setup

Test Configuration

Subtest Selection

Rate Test: Full Mesh
Rate Test: Part.Mesh, 1:N
Disabled
Rate Test: Part.Mesh, N->N
- Throughput
- Forwarding
Disabled
Enabled
Enabled

Congestion Control: Disabled
Forward Pressure: Disabled
Maximum Forwarding Rate: Disabled
Address Caching Capacity: Disabled
Address Learning Rate: Disabled
Errored Frames Filtering: Disabled
Broadcast Forwarding: Disabled

Test Options

Packet Sizes Used: 90,134,178,222

Rate Type: Fraction
Fraction per Port: 100,00%

Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

Traffic Configuration

Used Chassis

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:22606

Used Ports



Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



Rate Test: Part.Mesh, N->N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: West-to-East

Throughput Options

Initial Rate: 1,00%
Maximum Rate: 100,00%
Minimum Rate: 1,00%
Resolution: 1,00%

Used Ports


Port ID	Port Role
P-0-0-0	East
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	15,019 %	15,309 %	15,695 %	15,695 %
Tx Rate (L1) (Bit/s)	901,11 M	918,52 M	941,72 M	941,72 M
Tx Rate (Fps)	1.023.992	745.548	594.519	486.425
Rx Rate (Percent)	15,02 %	15,31 %	15,7 %	15,7 %
Rx Rate (L1) (Bit/s)	901,11 M	918,52 M	941,72 M	941,72 M
Rx Rate (Fps)	1,02 M	745,55 K	594,52 K	486,42 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.719.766	22.366.446	17.835.582	14.592.744
- Rx Rate (L1) (Bit/s)	901,11 M	918,52 M	941,72 M	941,72 M
- Rx Rate (Fps)	1.023.992	745.548	594.519	486.425
- Flood Count (Frames)	58	62	59	60
P-0-4-0				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124



Ty Data (L1) (Dit(a)	150 10 M	152.00 M	1EC OF M	150 OF M
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	5.119.961	3.727.741	2.972.597	2.432.124
- Tx Rate (L1) (Bit/s)	150,19 M	153,09 M	156,95 M	156,95 M
- Tx Rate (Fps)	170.665	124.258	99.087	81.071
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

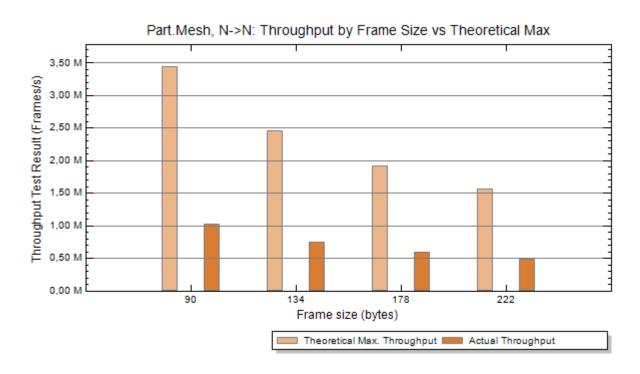

Forwarding Test Results


Results for 1,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	1 %	1 %	1 %	1 %
Tx Rate (L1) (Bit/s)	60 M	60 M	60 M	60 M



Tx Rate (Fps)	68.182	48.701	37.879	30.992
Rx Rate (Percent)	1 %	1 %	1 %	1 %
Rx Rate (L1) (Bit/s)	59,99 M	60 M	60 M	60 M
Rx Rate (Fps)	68,17 K	48,7 K	37,88 K	30,99 K
Loss Rate (Percent)	0,02 %	0 %	0 %	0 %
Loss (Frames)	438	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.045.016	1.461.036	1.136.358	929.748
- Rx Rate (L1) (Bit/s)	59,99 M	60 M	60 M	60 M
- Rx Rate (Fps)	68.167	48.701	37.879	30.992
- Flood Count (Frames)	58	58	57	58
P-0-4-0				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0.117	0.515	0.103
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	0	U	0	
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx (Frames)	10 M	10 M	10 M	104.906 10 M
- Tx Rate (ET) (Bit/s)	11.364	8.117	6.313	5.165
`				
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)		-	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3	0.40,000	040.500	400.000	454.050
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0



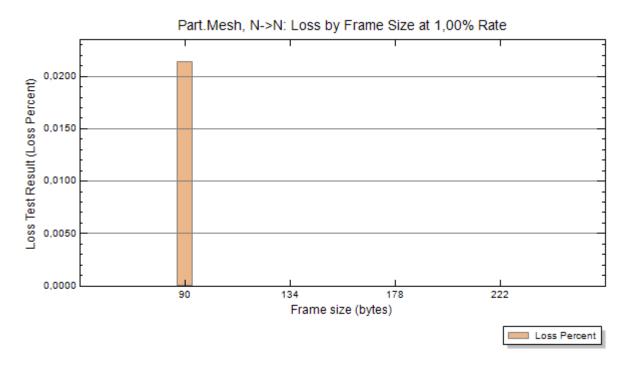


Results for 11,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	11 %	11 %	11 %	11 %
Tx Rate (L1) (Bit/s)	660 M	660 M	660 M	660 M
Tx Rate (Fps)	750.000	535.714	416.667	340.909
Rx Rate (Percent)	11 %	11 %	11 %	11 %
Rx Rate (L1) (Bit/s)	660 M	660 M	660 M	660 M
Rx Rate (Fps)	750 K	535,71 K	416,67 K	340,91 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	22.500.000	16.071.426	12.499.998	10.227.270
- Rx Rate (L1) (Bit/s)	660 M	660 M	660 M	660 M
- Rx Rate (Fps)	750.000	535.714	416.667	340.909
- Flood Count (Frames)	58	55	57	58
P-0-4-0				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0



D D ((14) (B'())	•	•	•	•
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	3.750.000	2.678.571	2.083.333	1.704.545
- Tx Rate (L1) (Bit/s)	110 M	110 M	110 M	110 M
- Tx Rate (Fps)	125.000	89.286	69.444	56.818
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

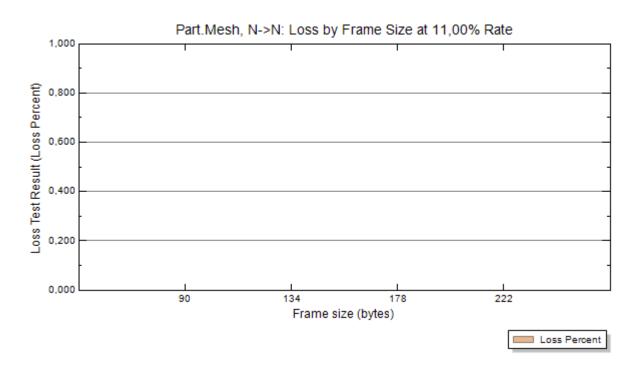


Results for 21,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	21 %	21 %	21 %	21 %
Tx Rate (L1) (Bit/s)	1,26 G	1,26 G	1,26 G	1,26 G
Tx Rate (Fps)	1.431.818	1.022.727	795.454	650.826
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	28,44 %	26,37 %	25,17 %	24,38 %
Loss (Frames)	12.216.731	8.091.346	6.006.379	4.760.893



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.809	22.590.470	17.857.253	14.763.899
- Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.594	753.016	595.242	492.130
- Flood Count (Frames)	57	755.010	58	492.130
P-0-4-0	31	39	36	00
	7 450 000	E 440 000	2.077.070	2 254 422
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3			•	
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	238.030	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
			0	
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	U	U
P-0-4-4	7.450.000	F 440 000	0.077.070	0.054.400
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	7.159.090	5.113.636	3.977.272	3.254.132
- Tx Rate (L1) (Bit/s)	210 M	210 M	210 M	210 M
- Tx Rate (Fps)	238.636	170.455	132.576	108.471
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



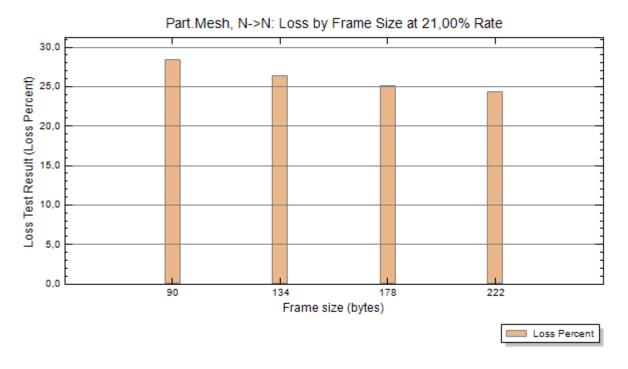


Results for 31,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	31 %	31 %	31 %	31 %
Tx Rate (L1) (Bit/s)	1,86 G	1,86 G	1,86 G	1,86 G
Tx Rate (Fps)	2.113.636	1.509.740	1.174.242	960.744
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	51,52 %	50,12 %	49,31 %	48,78 %
Loss (Frames)	32.671.284	22.701.741	17.370.003	14.058.419
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.802	22.590.465	17.857.269	14.763.895
- Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.593	753.016	595.242	492.130
- Flood Count (Frames)	58	58	60	60
P-0-4-0				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0



Dv. Data (I.4) (Dit/a)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0		0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	10.568.181	7.548.701	5.871.212	4.803.719
- Tx Rate (L1) (Bit/s)	310 M	310 M	310 M	310 M
- Tx Rate (Fps)	352.273	251.623	195.707	160.124
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

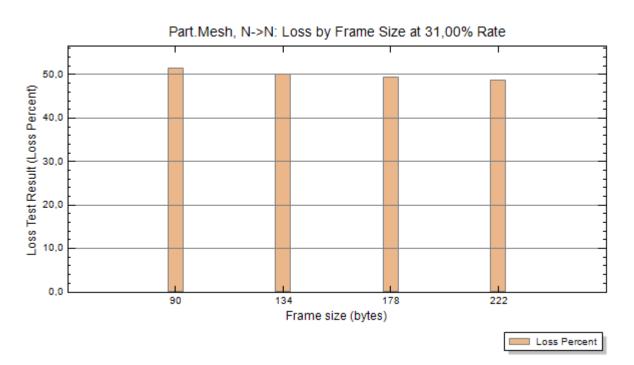


Results for 41,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	41 %	41 %	41 %	41 %
Tx Rate (L1) (Bit/s)	2,46 G	2,46 G	2,46 G	2,46 G
Tx Rate (Fps)	2.795.454	1.996.753	1.553.030	1.270.661
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,64 M	927,71 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	63,35 %	62,29 %	61,67 %	61,27 %
Loss (Frames)	53.125.797	37.312.135	28.733.652	23.355.949



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.835	22.590.461	17.857.254	14.763.881
- Rx Rate (L1) (Bit/s)	901,64 M	927,71 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.595	753.015	595.242	492.129
- Flood Count (Frames)	62	733.013	55	58
P-0-4-0	02	39	33	30
	12 077 272	0.002.766	7 705 151	6 252 205
- Tx (Frames) - Tx Rate (L1) (Bit/s)	13.977.272	9.983.766	7.765.151	6.353.305
	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	13.977.272	9.983.766	7.765.151	6.353.305
- Tx Rate (L1) (Bit/s)	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	13.977.272	9.983.766	7.765.151	6.353.305
- Tx Rate (L1) (Bit/s)	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	13.977.272	9.983.766	7.765.151	6.353.305
- Tx Rate (L1) (Bit/s)	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4	-	-		
- Tx (Frames)	13.977.272	9.983.766	7.765.151	6.353.305
- Tx Rate (L1) (Bit/s)	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	U	0	0	0
- Tx (Frames)	13.977.272	9.983.766	7.765.151	6.353.305
- Tx Rate (L1) (Bit/s)	410 M	410 M	410 M	410 M
- Tx Rate (Fps)	465.909	332.792	258.838	211.777
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



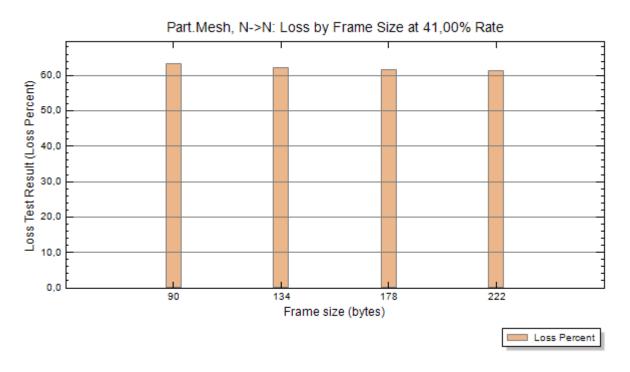



Results for 51,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	51 %	51 %	51 %	51 %
Tx Rate (L1) (Bit/s)	3,06 G	3,06 G	3,06 G	3,06 G
Tx Rate (Fps)	3.477.273	2.483.766	1.931.818	1.580.578
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,64 M	927,71 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,01 K	595,24 K	492,13 K
Loss Rate (Percent)	70,53 %	69,68 %	69,19 %	68,86 %
Loss (Frames)	73.580.348	51.922.542	40.097.294	32.653.455
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.830	22.590.444	17.857.246	14.763.897
- Rx Rate (L1) (Bit/s)	901,64 M	927,71 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.594	753.015	595.242	492.130
- Flood Count (Frames)	57	59	60	60
P-0-4-0				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	17.386.363	12.418.831	9.659.090	7.902.892
- Tx Rate (L1) (Bit/s)	510 M	510 M	510 M	510 M
- Tx Rate (Fps)	579.545	413.961	321.970	263.430
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



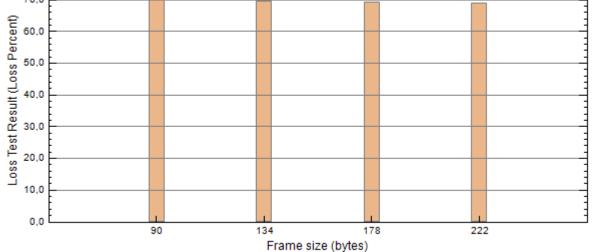

Part.Mesh, N->N: Loss by Frame Size at 51,00% Rate

Loss Percent


Results for 61,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	61 %	61 %	61 %	61 %
Tx Rate (L1) (Bit/s)	3,66 G	3,66 G	3,66 G	3,66 G
Tx Rate (Fps)	4.159.091	2.970.779	2.310.606	1.890.496
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	75,36 %	74,65 %	74,24 %	73,97 %
Loss (Frames)	94.034.935	66.532.907	51.460.928	41.950.974



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.789	22.590.469	17.857.252	14.763.900
- Rx Rate (L1) (Bit/s)	901,64 M	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.593	753.016	595.242	492.130
- Flood Count (Frames)	1.024.393	60	58	492.130
P-0-4-0	33	00	30	30
	20 705 454	14 052 006	11 552 020	0.450.470
- Tx (Frames) - Tx Rate (L1) (Bit/s)	20.795.454 610 M	14.853.896	11.553.030	9.452.479
- Tx Rate (LT) (Bit/S)		610 M	610 M	610 M
\ 1 /	693.182	495.130	385.101	315.083
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	00 705 45 4	14.050.000	14.550.000	0.450.450
- Tx (Frames)	20.795.454	14.853.896	11.553.030	9.452.479
- Tx Rate (L1) (Bit/s)	610 M	610 M	610 M	610 M
- Tx Rate (Fps)	693.182	495.130	385.101	315.083
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	20.795.454	14.853.896	11.553.030	9.452.479
- Tx Rate (L1) (Bit/s)	610 M	610 M	610 M	610 M
- Tx Rate (Fps)	693.182	495.130	385.101	315.083
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	20.795.454	14.853.896	11.553.030	9.452.479
- Tx Rate (L1) (Bit/s)	610 M	610 M	610 M	610 M
- Tx Rate (Fps)	693.182	495.130	385.101	315.083
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	20.795.454	14.853.896	11.553.030	9.452.479
- Tx Rate (L1) (Bit/s)	610 M	610 M	610 M	610 M
- Tx Rate (Fps)	693.182	495.130	385.101	315.083
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	20.795.454	14.853.896	11.553.030	9.452.479
- Tx Rate (L1) (Bit/s)	610 M	610 M	610 M	610 M
- Tx Rate (Fps)	693.182	495.130	385.101	315.083
- Rx (Frames)	033.102	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
	U	U	U	U
- Rx Rate (Fps)	0	0	0	0



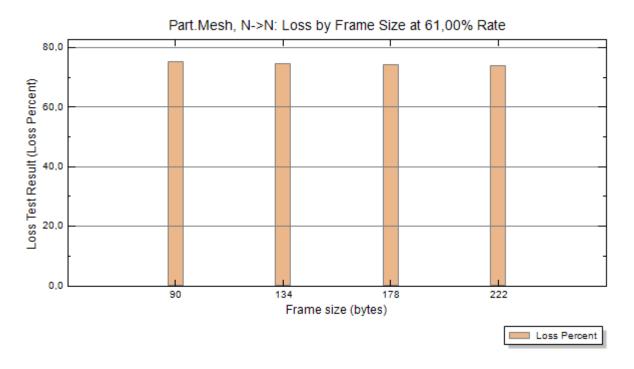


Results for 71,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	71 %	71 %	71 %	71 %
Tx Rate (L1) (Bit/s)	4,26 G	4,26 G	4,26 G	4,26 G
Tx Rate (Fps)	4.840.909	3.457.792	2.689.394	2.200.413
Rx Rate (Percent)	15,03 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	901,62 M	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	1,02 M	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	78,84 %	78,22 %	77,87 %	77,63 %
Loss (Frames)	114.490.062	81.143.272	62.824.561	51.248.488
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	30.737.208	22.590.494	17.857.253	14.763.908
- Rx Rate (L1) (Bit/s)	901,62 M	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	1.024.574	753.016	595.242	492.130
- Flood Count (Frames)	60	59	59	60
P-0-4-0				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0



			_	
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	24.204.545	17.288.961	13.446.969	11.002.066
- Tx Rate (L1) (Bit/s)	710 M	710 M	710 M	710 M
- Tx Rate (Fps)	806.818	576.299	448.232	366.736
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

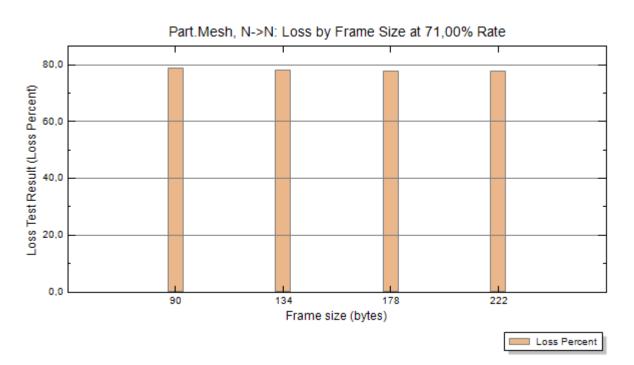


Results for 81,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	81 %	81 %	81 %	81 %
Tx Rate (L1) (Bit/s)	4,86 G	4,86 G	4,86 G	4,86 G
Tx Rate (Fps)	5.522.727	3.944.805	3.068.182	2.510.330
Rx Rate (Percent)	0 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	616	927,71 M	942,86 M	952,76 M
Rx Rate (Fps)	0,7	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	100 %	80,91 %	80,6 %	80,4 %
Loss (Frames)	165.681.795	95.753.696	74.188.195	60.546.008



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	21	22.590.454	17.857.259	14.763.904
- Rx Rate (L1) (Bit/s)	616	927,71 M	942,86 M	952,76 M
- Rx Rate (Fps)	1	753.015	595.242	492.130
- Flood Count (Frames)	57	59	58	61
P-0-4-0	31	39	30	01
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	920.455	037.408	0	410.300
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (ET) (Bit/s)			-	
	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	07.040.000	40.704.005	45.040.000	40 554 050
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	0			
- Tx (Frames)	27.613.636	19.724.025	15.340.909	12.551.652
- Tx Rate (L1) (Bit/s)	810 M	810 M	810 M	810 M
- Tx Rate (Fps)	920.455	657.468	511.364	418.388
- Rx (Frames)	920.455	057.408	0	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
	0	0	0	0
- Rx Rate (Fps)				



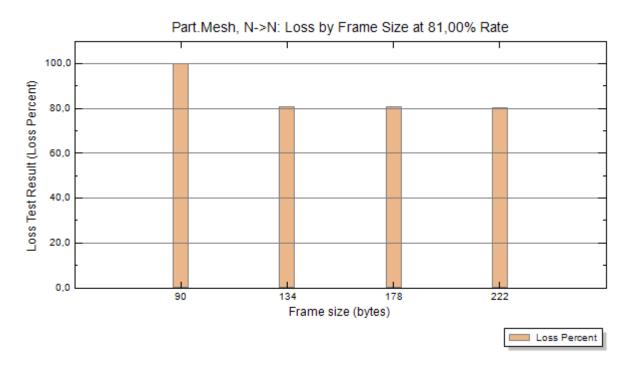


Results for 91,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	91 %	91 %	91 %	91 %
Tx Rate (L1) (Bit/s)	5,46 G	5,46 G	5,46 G	5,46 G
Tx Rate (Fps)	6.204.545	4.431.818	3.446.970	2.820.248
Rx Rate (Percent)	0 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	498,67	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	0,57	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	100 %	83,01 %	82,73 %	82,55 %
Loss (Frames)	186.136.345	110.364.053	85.551.826	69.843.542
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	17	22.590.487	17.857.262	14.763.892
- Rx Rate (L1) (Bit/s)	498,67	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	1	753.016	595.242	492.130
- Flood Count (Frames)	58	53	60	60
P-0-4-0				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	31.022.727	22.159.090	17.234.848	14.101.239
- Tx Rate (L1) (Bit/s)	910 M	910 M	910 M	910 M
- Tx Rate (Fps)	1.034.091	738.636	574.495	470.041
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

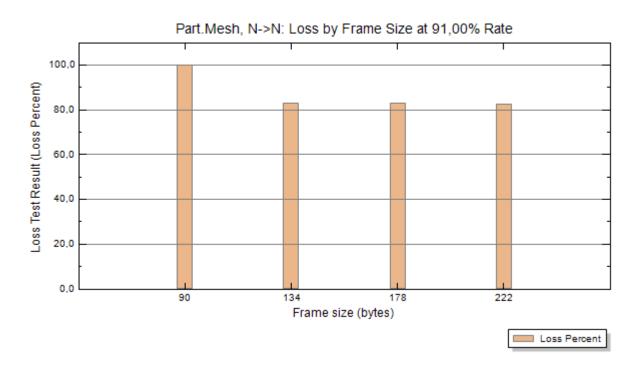

Results for 100,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	6 G	6 G	6 G	6 G
Tx Rate (Fps)	6.818.182	4.870.130	3.787.879	3.099.173
Rx Rate (Percent)	0 %	15,46 %	15,71 %	15,88 %
Rx Rate (L1) (Bit/s)	410,67	927,72 M	942,86 M	952,76 M
Rx Rate (Fps)	0,47	753,02 K	595,24 K	492,13 K
Loss Rate (Percent)	100 %	84,54 %	84,29 %	84,12 %
Loss (Frames)	204.545.440	123.513.429	95.779.103	78.211.311



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	14	22.590.465	17.857.255	14.763.891
- Rx Rate (L1) (Bit/s)	410,67	927,72 M	942,86 M	952,76 M
- Rx Rate (Fps)	0	753.016	595.242	492.130
- Flood Count (Frames)	57	59	58	60
P-0-4-0	31	33	30	00
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	1.130.304	0 0 0	031.313	0
- Rx (Frames)	0	0	0	0
- Rx Rate (E1) (Bit/s)				
	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	04.000.000	04.050.040	40.000.000	45 405 007
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	34.090.909	24.350.649	18.939.393	15.495.867
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.136.364	811.688	631.313	516.529
- Rx (Frames)	0	0	0	0 10.020
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



