

Valkyrie2889 Test Report

Test Summary

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2023-11-28, 15:26 Test Duration: 00:33:51 (h:m:s)

Generated By: Valkyrie2889 v1.41, running on 'Microsoft Windows 10 Enterprise'

Comments: DM broadcast, up to 4 timing events, 4 layers:

- host: aconbg027

- chassis: Xenabay (140.181.139.228)

DUT:

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/16/296/297

- fw: v6.1

- dot-config: production

Test Setup

Test Configuration

Subtest Selection

Rate Test: Full Mesh
Rate Test: Part.Mesh, 1:N
Disabled
Rate Test: Part.Mesh, N->N
- Throughput
- Forwarding
Disabled
Disabled
Enabled
Enabled

Congestion Control: Disabled
Forward Pressure: Disabled
Maximum Forwarding Rate: Disabled
Address Caching Capacity: Disabled
Address Learning Rate: Disabled
Errored Frames Filtering: Disabled
Broadcast Forwarding: Disabled

Test Options

Packet Sizes Used: 90,134,178,222

Rate Type: Fraction
Fraction per Port: 100,00%

Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

Traffic Configuration

Used Chassis

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:2260

Used Ports



Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



Rate Test: Part.Mesh, N->N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: West-to-East

Throughput Options

Initial Rate: 0,01%
Maximum Rate: 1,00%
Minimum Rate: 0,01%
Resolution: 0,01%

Used Ports

Port ID	Port Role
P-0-2-0	West
P-0-2-1	West
P-0-2-2	West
P-0-0-0	East
P-0-2-4	West
P-0-2-3	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	90	134	178	222
Result State	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1
Tx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Tx Rate (L1) (Bit/s)	1,2 M	1,2 M	1,2 M	1,2 M
Tx Rate (Fps)	1.364	974	757	620
Rx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Rx Rate (L1) (Bit/s)	1,2 M	1,2 M	1,2 M	1,2 M
Rx Rate (Fps)	1,36 K	972,57	756,5	618,3
Loss Rate (Percent)	0,18 %	0,15 %	0,09 %	0,21 %
Loss (Frames)	73	43	21	39
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	40.835	29.177	22.695	18.549
- Rx Rate (L1) (Bit/s)	1,2 M	1,2 M	1,2 M	1,2 M
- Rx Rate (Fps)	1.361	973	757	618
- Flood Count (Frames)	60	58	63	56
P-0-2-0				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52




- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames) P-0-2-3	0	0	0	0
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames) P-0-2-5	U	U	U	0
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1 - Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (ET) (Bil/S)	114	81	99,95 K	99,96 K
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3	0.400	0.405	4.000	4 = 10
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps) - Rx (Frames)	114	81	63	52
	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4	U	U	U	0
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
(= .) (5145)			55,5511	20,0010



- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

Note: One or more of the rate tests did not pass the test criteria!

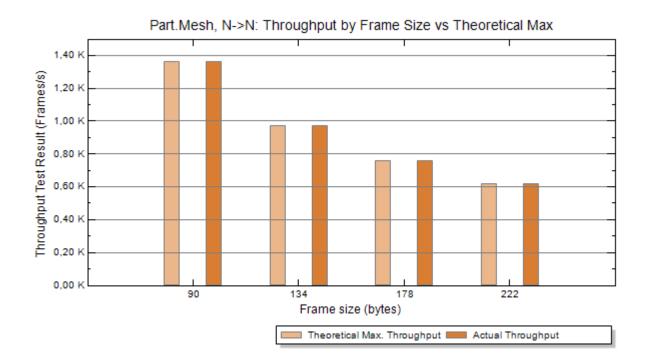

Forwarding Test Results

Results for 0,01% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Tx Rate (L1) (Bit/s)	1,2 M	1,2 M	1,2 M	1,2 M
Tx Rate (Fps)	1.364	974	757	620
Rx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Rx Rate (L1) (Bit/s)	1,15 M	1,19 M	1,18 M	1,18 M
Rx Rate (Fps)	1,3 K	965,63	744,37	611,37
Loss Rate (Percent)	4,58 %	0,86 %	1,69 %	1,33 %
Loss (Frames)	1.873	251	385	247
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	39.035	28.969	22.331	18.341
- Rx Rate (L1) (Bit/s)	1,15 M	1,19 M	1,18 M	1,18 M
- Rx Rate (Fps)	1.301	966	744	611
- Flood Count (Frames)	59	58	60	60



P-0-2-0				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0



- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

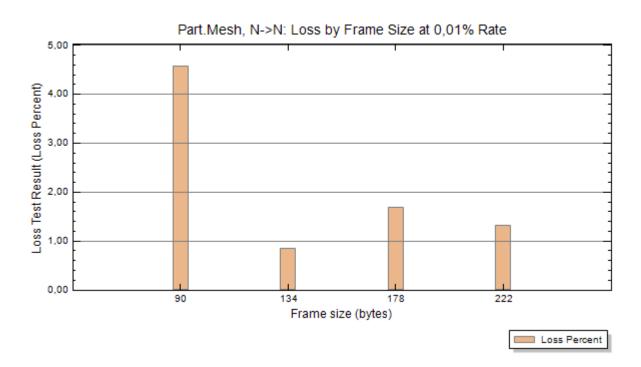

Results for 0,11% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Tx Rate (L1) (Bit/s)	13,2 M	13,2 M	13,2 M	13,2 M
Tx Rate (Fps)	15.000	10.714	8.333	6.818
Rx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Rx Rate (L1) (Bit/s)	13,2 M	13,2 M	13,02 M	13,06 M
Rx Rate (Fps)	15 K	10,71 K	8,22 K	6,75 K
Loss Rate (Percent)	0 %	0 %	1,37 %	1,04 %
Loss (Frames)	0	0	3.414	2.129
P-0-0-0				
- Tx (Frames)	0	0	0	0



Ty Data (I.1) (Dit/a)	0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	450.000	321.420	246.582	202.411
				13,06 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	13,2 M 15.000	13,2 M 10.714	13,02 M 8.219	6.747
- Flood Count (Frames)	60	61	60	56
P-0-2-0	00	01	00	30
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	17.043 1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (ET) (Bit/s)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1	U	U	0	0
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2	0	0	0	0
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx (Frames)	1,1 M	1,1 M	1,1 M	17.043 1,1 M
- Tx Rate (LT) (Bil/s)	1,1 101	893	694	568
- Rx (Frames)	0	093	094	0
- Rx (Frames)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3	0	0	0	0
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	-	-	-	
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
			0	0
- Flood Count (Frames)	0	0	U	U



- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1.1 M	1,1 M	1.1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

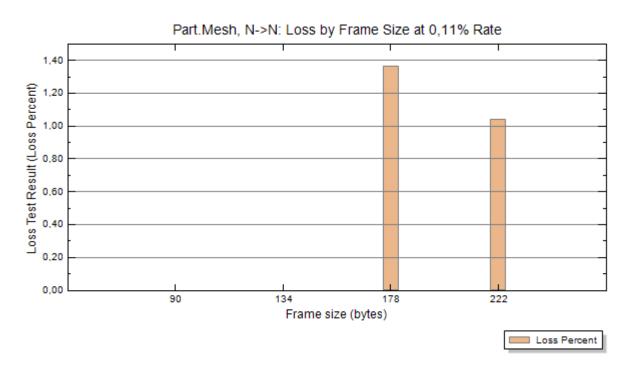

Results for 0,21% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Tx Rate (L1) (Bit/s)	25,2 M	25,2 M	25,2 M	25,2 M
Tx Rate (Fps)	28.636	20.454	15.909	13.016
Rx Rate (Percent)	0,21 %	0,21 %	0,21 %	0.21 %



Rx Rate (L1) (Bit/s)	24,9 M	24,7 M	24,91 M	25,2 M
Rx Rate (Fps)	28,29 K	20,05 K	15,73 K	13,02 K
Loss Rate (Percent)	1,2 %	1,98 %	1,14 %	0 %
Loss (Frames)	10.279	12.128	5.460	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	848.801	601.504	471.804	390.492
- Rx Rate (L1) (Bit/s)	24,9 M	24,7 M	24,91 M	25,2 M
- Rx Rate (Fps)	28.293	20.050	15.727	13.016
- Flood Count (Frames) P-0-2-0	58	60	57	60
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3 - Tx (Frames)	71.590	51.136	39.772	32.541
- Tx (Frames)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5	74 500	E4 400	00.770	00 544
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (LT) (Bit/s)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	0	0	0	0
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M



- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

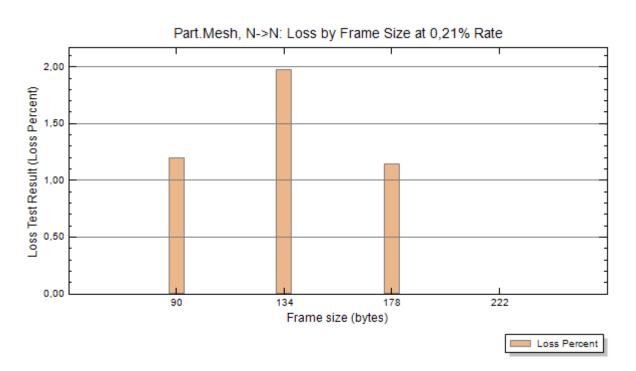

Results for 0,31% Rate

Frame Size	90	134	178	222




Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Tx Rate (L1) (Bit/s)	37,2 M	37,2 M	37,2 M	37,2 M
Tx Rate (Fps)	42.272	30.195	23.485	19.215
Rx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Rx Rate (L1) (Bit/s)	37,1 M	37,2 M	37,19 M	37,2 M
Rx Rate (Fps)	42,16 K	30,19 K	23,48 K	19,21 K
Loss Rate (Percent)	0,26 %	0 %	0,03 %	0 %
Loss (Frames)	3.237	29	215	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.264.935	905.815	704.329	576.444
- Rx Rate (L1) (Bit/s)	37,1 M	37,2 M	37,19 M	37,2 M
- Rx Rate (Fps)	42.165	30.194	23.478	19.215
- Flood Count (Frames)	60	62	56	58
P-0-2-0				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0.020	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2	U	0	0	0
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M		
	3.523	2.516	3,1 M 1.957	3,1 M 1.601
- Tx Rate (Fps) - Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3	U	U	U	U
	10F 601	75 407	E0 710	40.027
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps) - Rx (Frames)	3.523	2.516	1.957	1.601
,	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4	405.004	75 407	E0 740	40.00=
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	105.681	75.487	58.712	48.037
	3,1 M	3,1 M	3,1 M	3.1 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	3,1 M 3.523	3,1 M 2.516	3,1 M 1.957	3,1 M 1.601



Dy Data (L1) (Dit/a)	0	0	0	
- Rx Rate (L1) (Bit/s)	-		-	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	10= 001			40.00=
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0.020	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	0	•	0	
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3,523	2.516	1.957	1.601
- Rx (Frames)	0	2.510	0	0.001
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
	0	0	0	0
- Rx Rate (Fps)		-	-	
- Flood Count (Frames)	0	0	0	0



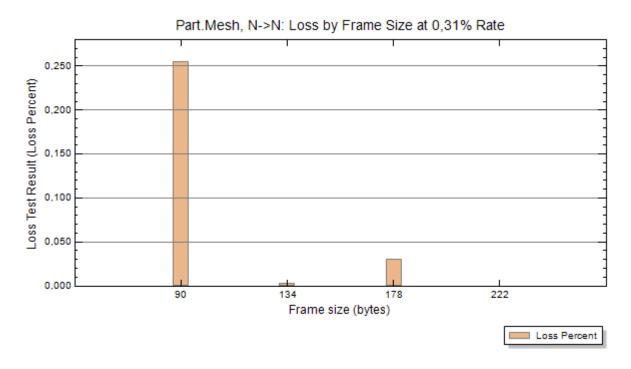

Results for 0,41% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Tx Rate (L1) (Bit/s)	49,2 M	49,2 M	49,2 M	49,2 M
Tx Rate (Fps)	55.909	39.935	31.060	25.413
Rx Rate (Percent)	0,4 %	0,41 %	0,41 %	0,41 %
Rx Rate (L1) (Bit/s)	48,24 M	48,82 M	49,2 M	49,2 M
Rx Rate (Fps)	54,82 K	39,63 K	31,06 K	25,41 K
Loss Rate (Percent)	1,96 %	0,77 %	0 %	0 %
Loss (Frames)	32.795	9.203	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.644.469	1.188.841	931.812	762.396
- Rx Rate (L1) (Bit/s)	48,24 M	48,82 M	49,2 M	49,2 M
- Rx Rate (Fps)	54.816	39.628	31.060	25.413
- Flood Count (Frames)	60	58	58	58
P-0-2-0				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M 4.659	4,1 M 3.328	4,1 M 2.588	4,1 M 2.118
- Tx Rate (Fps) - Rx (Frames)	4.039	0	2.566	2.110
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	4,1 M 4.659	4,1 M 3.328	4,1 M 2.588	4,1 M 2.118
- Rx (Frames)	4.039	0	0	2.110
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps) - Rx (Frames)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4	-	-	-	
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5		<u> </u>		0
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118



- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	n	0	0	0

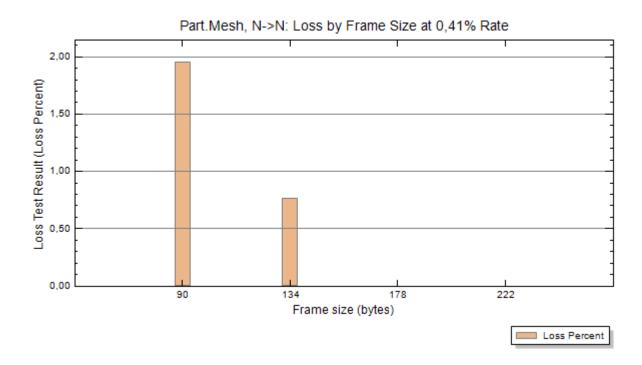

Results for 0,51% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Tx Rate (L1) (Bit/s)	61,2 M	61,2 M	61,2 M	61,2 M
Tx Rate (Fps)	69.545	49.675	38.636	31.611
Rx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Rx Rate (L1) (Bit/s)	60,96 M	61,2 M	60,99 M	61,2 M
Rx Rate (Fps)	69,27 K	49,67 K	38,51 K	31,61 K
Loss Rate (Percent)	0,39 %	0 %	0,34 %	0 %
Loss (Frames)	8.214	49	3.929	7
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.078.142	1.490.207	1.155.151	948.329
- Rx Rate (L1) (Bit/s)	60,96 M	61,2 M	60,99 M	61,2 M
- Rx Rate (Fps)	69.271	49.674	38.505	31.611
 Flood Count (Frames) 	62	60	58	59
P-0-2-0				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0



- Flood Count (Frames)	0	0	0	0
P-0-2-2 - Tx (Frames)	173.863	124.188	96.590	79.028
- Tx (Frames)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Er) (Bits)	5.795	4.140	3.220	2.634
- Rx (Frames)	0.730	0	0.220	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4 - Tx (Frames)	173.863	124.188	06 500	79.028
- Tx (Frames)	5,1 M	5,1 M	96.590 5,1 M	5,1 M
- Tx Rate (Er) (Blus)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	2.034
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	<u> </u>	0	0	
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-3	U	U	U	U
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0



- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	-	-	-	-
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

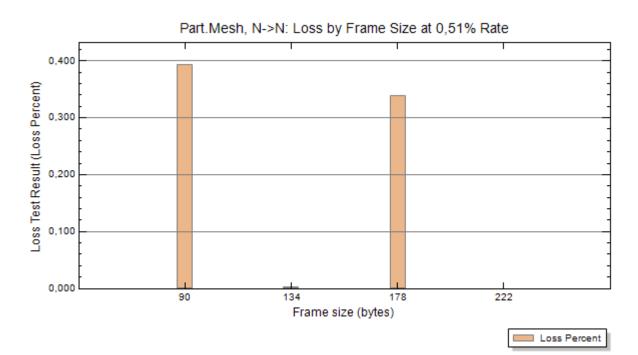

Results for 0,61% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,61 %
Tx Rate (L1) (Bit/s)	73,2 M	73,2 M	73,2 M	73,2 M
Tx Rate (Fps)	83.182	59.415	46.212	37.810
Rx Rate (Percent)	0,61 %	0,6 %	0,6 %	0,6 %
Rx Rate (L1) (Bit/s)	73,19 M	72,52 M	72,41 M	72,07 M
Rx Rate (Fps)	83,17 K	58,86 K	45,71 K	37,23 K
Loss Rate (Percent)	0,01 %	0,93 %	1,08 %	1,54 %
Loss (Frames)	251	16.576	15.029	17.427
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.495.197	1.765.880	1.371.331	1.116.861
- Rx Rate (L1) (Bit/s)	73,19 M	72,52 M	72,41 M	72,07 M
- Rx Rate (Fps)	83.173	58.863	45.711	37.229
- Flood Count (Frames)	62	61	59	61
P-0-2-0				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				



- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames) P-0-2-2	U	U	U	0
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3	207.054	440.500	445 520	04.504
- Tx (Frames)	207.954 6,1 M	148.538 6,1 M	115.530 6,1 M	94.524 6,1 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0.932	0	0	0.131
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				·
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5	0	0	0	
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0 - Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	007.054	440.500	115 500	04.504
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	6,1 M 6.932	6,1 M 4.951	6,1 M 3.851	6,1 M 3.151
- Rx (Frames)	0.932	0	0	0.101
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3			<u> </u>	<u> </u>
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



P-0-4-4				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

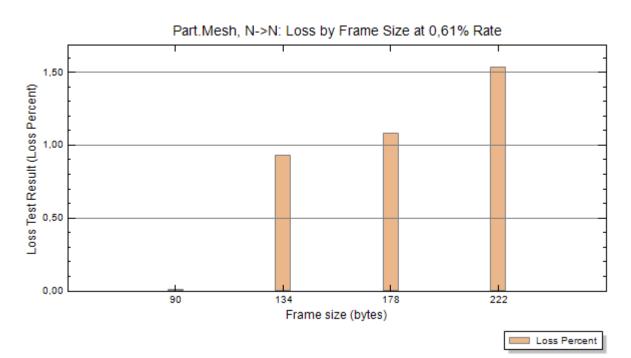

Results for 0,71% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Tx Rate (L1) (Bit/s)	85,2 M	85,2 M	85,2 M	85,2 M
Tx Rate (Fps)	96.818	69.156	53.788	44.008
Rx Rate (Percent)	0,7 %	0,7 %	0,69 %	0,66 %
Rx Rate (L1) (Bit/s)	84,04 M	84,46 M	83,03 M	79,06 M
Rx Rate (Fps)	95,49 K	68,56 K	52,42 K	40,84 K
Loss Rate (Percent)	1,37 %	0,86 %	2,54 %	7,21 %
Loss (Frames)	39.706	17.908	41.020	95.159
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.864.834	2.056.760	1.572.608	1.225.081
- Rx Rate (L1) (Bit/s)	84,04 M	84,46 M	83,03 M	79,06 M
- Rx Rate (Fps)	95.494	68.559	52.420	40.836
- Flood Count (Frames)	59	60	58	56
P-0-2-0				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M



- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames) P-0-2-2	0	0	0	0
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0.007
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3		-		
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-2-5	0	0	0	0
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	242.045	170 000	124 460	110.000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	242.045	172.889	134.469	110.020
- Tx Rate (LT) (Bit/s)	7,1 M 8.068	7,1 M 5.763	7,1 M 4.482	7,1 M 3.667
- Rx (Frames)	0.008	0	0	0.007
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	-	-	-	
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	242.045	172.889	134.469	110.020



- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

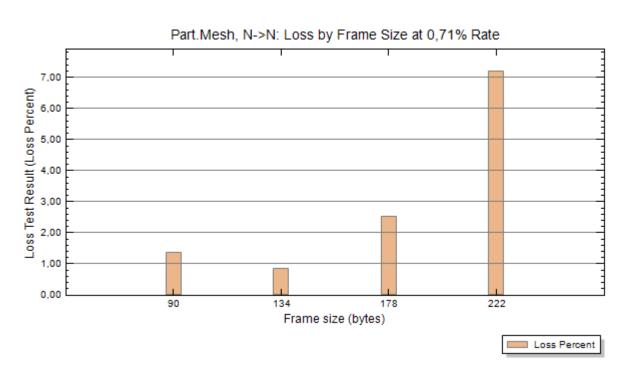

Results for 0,81% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Tx Rate (L1) (Bit/s)	97,2 M	97,2 M	97,2 M	97,2 M
Tx Rate (Fps)	110.454	78.896	61.364	50.206
Rx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Rx Rate (L1) (Bit/s)	96,75 M	97,2 M	97,02 M	97,2 M
Rx Rate (Fps)	109,94 K	78,9 K	61,25 K	50,21 K
Loss Rate (Percent)	0,46 %	0 %	0,19 %	0 %
Loss (Frames)	15.340	0	3.496	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	3.298.292	2.366.880	1.837.412	1.506.192



- Rx Rate (L1) (Bit/s)	96,75 M	97,2 M	97,02 M	97,2 M
- Rx Rate (Fps)	109.943	78.896	61.247	50.206
- Flood Count (Frames) P-0-2-0	60	60	58	56
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (E1) (Bit/s)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0.070	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2	070.400	407.040	452.400	405 540
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps) - Rx (Frames)	9.205	6.575	5.114	4.184
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (LT) (Blvs)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3	0	U	0	0
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5	070.400	407.040	450 400	405 540
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M 5.114	8,1 M 4.184
- Tx Rate (Fps) - Rx (Frames)	9.205	6.575	0	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (Er) (Blus)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	0			
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	0=0.155	10= 0:5	150 165	
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	8,1 M 9.205	8,1 M 6.575	8,1 M 5.114	8,1 M 4.184



- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

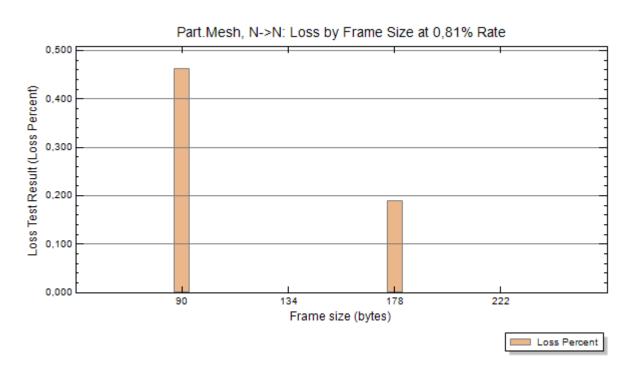

Results for 0,91% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Tx Rate (L1) (Bit/s)	109,2 M	109,2 M	109,2 M	109,2 M
Tx Rate (Fps)	124.091	88.636	68.939	56.405
Rx Rate (Percent)	0,91 %	0,9 %	0,91 %	0,91 %
Rx Rate (L1) (Bit/s)	109,19 M	107,42 M	108,92 M	109 M
Rx Rate (Fps)	124,08 K	87,19 K	68,76 K	56,3 K
Loss Rate (Percent)	0,01 %	1,63 %	0,25 %	0,19 %



Loss (Frames)	408	43.269	5.263	3.161
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0 700 040	0	0	0
- Rx (Frames)	3.722.316	2.615.811	2.062.913	1.688.983
- Rx Rate (L1) (Bit/s)	109,19 M	107,42 M	108,92 M	109 M
- Rx Rate (Fps)	124.077	87.194	68.764	56.299
- Flood Count (Frames)	60	59	56	54
P-0-2-0	240 007	224 500	470.040	111 010
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	9,1 M 10.341	9,1 M 7.386	9,1 M 5.745	9,1 M 4.700
- Rx (Frames)				
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (E1) (Bivs)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1	U	U	U	U
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (ET) (Bit/s)	10.341	7.386	5.745	4.700
- Rx (Frames)				
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (LT) (Bivs)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2	U	U	U	0
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M		9,1 M
- Tx Rate (ET) (Bit/s)	10.341	7.386	9,1 M 5.745	4.700
\ . ,				
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3	U	U	U	U
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (LT) (Bit/s)	10.341	7.386	9, 1 M 5.745	4.700
- Rx (Frames)	0	0	0	4.700
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4	0	U	0	0
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	-		-	
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
(/ (= /			5.745	4.700
- Tx Rate (Fps)	10.341	7.300	J.14J	
- Tx Rate (Fps) - Rx (Frames)	10.341	7.386	0	0



- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

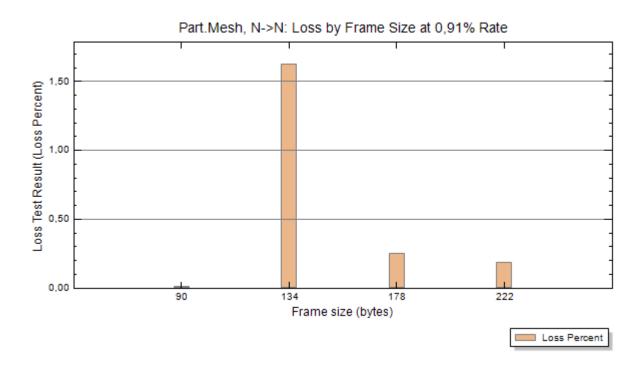

Results for 1,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	1 %	1 %	1 %	1 %



Tx Rate (L1) (Bit/s)	120 M	120 M	120 M	120 M
Tx Rate (Fps)	136.364	97.402	75.757	61.983
Rx Rate (Percent)	0,99 %	1 %	0,99 %	1 %
Rx Rate (L1) (Bit/s)	118,55 M	119,49 M	119,01 M	119,93 M
Rx Rate (Fps)	134,71 K	96,99 K	75,13 K	61,95 K
Loss Rate (Percent)	1,21 %	0,42 %	0,83 %	0,06 %
Loss (Frames)	49.559	12.301	18.825	1.090
P-0-0-0	0	0	0	
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	4.041.349	2.909.771	2.253.891	1.858.406
- Rx Rate (L1) (Bit/s)	118,55 M	119,49 M	119,01 M	119,93 M
- Rx Rate (Fps)	134.712	96.992	75.130	61.947
- Flood Count (Frames)	60	60	58	60
P-0-2-0				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-1				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-2	240,000	242 506	100 202	154.050
- Tx (Frames) - Tx Rate (L1) (Bit/s)	340.909 10 M	243.506 10 M	189.393 10 M	154.958 10 M
- Tx Rate (E1) (blus)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0.117	0.313	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-3				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-4	0.40.000	040 500	400.000	454.050
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps) - Rx (Frames)	11.364	8.117	6.313	5.165 0
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-2-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	0.10.5	646.555	400.000	
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
	U	U	U	()



P-0-4-1				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

