

# Valkyrie2889 Test Report

## **Test Summary**

Test company: Xena Networks
Customer: GSI TOS

Test Date and Time: 2023-11-28, 17:33 Test Duration: 00:54:07 (h:m:s)

Generated By: Valkyrie2889 v1.41, running on 'Microsoft Windows 10 Enterprise'

Comments: DM broadcast, up to 4 timing events, 4 layers:

- host: aconbg027

- chassis: Xenabay (140.181.139.228)

DUT:

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/16/296/297

- fw: v6.1

- dot-config: production

### **Test Setup**

### **Test Configuration**

#### **Subtest Selection**

Rate Test: Full Mesh
Rate Test: Part.Mesh, 1:N
Disabled
Rate Test: Part.Mesh, N->N
- Throughput
- Forwarding
Disabled
Disabled
Enabled
Enabled

Congestion Control:
Forward Pressure:
Maximum Forwarding Rate:
Address Caching Capacity:
Address Learning Rate:
Disabled

#### **Test Options**

Packet Sizes Used: 90,134,178,222

Rate Type: Fraction
Fraction per Port: 100,00%

Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

### **Traffic Configuration**

### **Used Chassis**

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:22606

#### **Used Ports**



Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



# Rate Test: Part.Mesh, N->N Results

### **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: West-to-East

### **Throughput Options**

Initial Rate: 0,01%
Maximum Rate: 1,00%
Minimum Rate: 0,01%
Resolution: 0,01%

### **Used Ports**


Port ID	Port Role
P-0-0-0	East
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

# **Throughput Test Results**

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,416 %	0,992 %	0,992 %	0,992 %
Tx Rate (L1) (Bit/s)	24,96 M	59,54 M	59,54 M	59,54 M
Tx Rate (Fps)	28.367	48.325	37.586	30.752
Rx Rate (Percent)	0,42 %	0,99 %	0,99 %	0,99 %
Rx Rate (L1) (Bit/s)	24,96 M	59,54 M	59,54 M	59,54 M
Rx Rate (Fps)	28,37 K	48,32 K	37,59 K	30,75 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	851.016	1.449.738	1.127.574	922.560
- Rx Rate (L1) (Bit/s)	24,96 M	59,54 M	59,54 M	59,54 M
- Rx Rate (Fps)	28.367	48.325	37.586	30.752
- Flood Count (Frames)	56	59	59	58
P-0-4-0				
- Tx (Frames)	141.836	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	141.836	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	141.836	241.623	187.929	153.760



- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	141.836	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	141.836	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	141.836	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	4,16 M	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	4.728	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

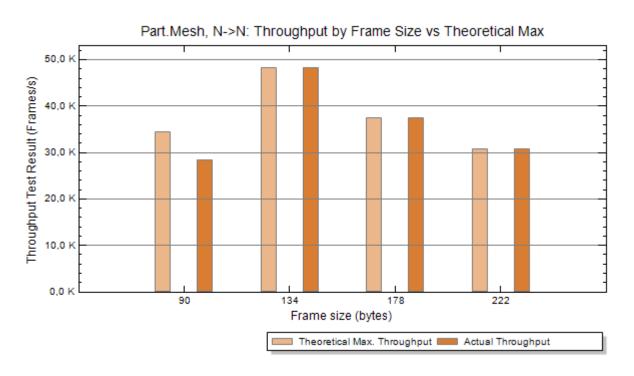

## **Forwarding Test Results**


### Results for 0,01% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Tx Rate (L1) (Bit/s)	599.98 K	599.98 K	599.7 K	599.77 K



Tx Rate (Fps)	682	487	379	310
Rx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Rx Rate (L1) (Bit/s)	599,98 K	599,98 K	599,7 K	599,77 K
Rx Rate (Fps)	681,8	487	378,6	309,8
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	C
P-0-0-0	0	0	0	
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0 454	0	0	0 004
- Rx (Frames)	20.454	14.610	11.358	9.294
- Rx Rate (L1) (Bit/s)	599,98 K	599,98 K	599,7 K	599,77 K
- Rx Rate (Fps)	682	487	379	310
- Flood Count (Frames)	60	58	59	61
P-0-4-0	2 122		1 000	
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	C
- Rx Rate (Fps)	0	0	0	C
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	C
- Rx Rate (L1) (Bit/s)	0	0	0	C
- Rx Rate (Fps)	0	0	0	C
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	C
- Rx Rate (Fps)	0	0	0	C
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	(
- Rx Rate (L1) (Bit/s)	0	0	0	(
- Rx Rate (Fps)	0	0	0	C
- Flood Count (Frames)	0	0	0	
P-0-4-5		-	-	·
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52,50 1
- Rx (Frames)	0	0	0	(
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



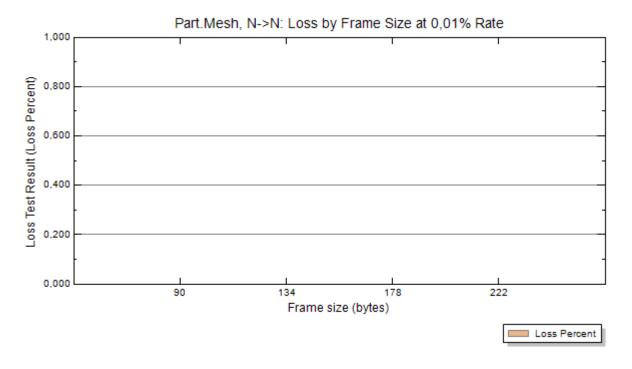


### Results for 0,11% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Tx Rate (L1) (Bit/s)	6,6 M	6,6 M	6,6 M	6,6 M
Tx Rate (Fps)	7.500	5.357	4.167	3.409
Rx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Rx Rate (L1) (Bit/s)	6,6 M	6,6 M	6,6 M	6,6 M
Rx Rate (Fps)	7,5 K	5,36 K	4,17 K	3,41 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	225.000	160.710	124.998	102.270
- Rx Rate (L1) (Bit/s)	6,6 M	6,6 M	6,6 M	6,6 M
- Rx Rate (Fps)	7.500	5.357	4.167	3.409
- Flood Count (Frames)	58	60	58	54
P-0-4-0				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

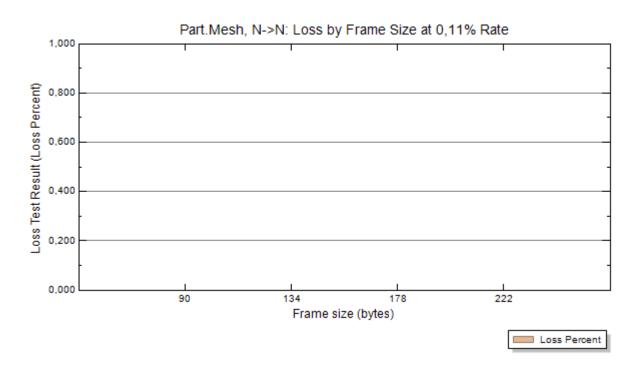


### Results for 0,21% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Tx Rate (L1) (Bit/s)	12,6 M	12,6 M	12,6 M	12,6 M
Tx Rate (Fps)	14.318	10.227	7.954	6.508
Rx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Rx Rate (L1) (Bit/s)	12,6 M	12,6 M	12,6 M	12,6 M
Rx Rate (Fps)	14,32 K	10,23 K	7,95 K	6,51 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	429.540	306.816	238.632	195.246
- Rx Rate (L1) (Bit/s)	12,6 M	12,6 M	12,6 M	12,6 M
- Rx Rate (Fps)	14.318	10.227	7.954	6.508
- Flood Count (Frames)	58	60	60	55
P-0-4-0				- 00
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	U	0	U	0
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx (Frames)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (ET) (Bit/s)	2,1 101	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	U	U	U	U
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx (Frames)	2,1 M		2,1 M	2,1 M
- Tx Rate (ET) (Bit/s)	2.386	2,1 M 1.705	1.326	1.085
- Rx (Frames)			0	
,	0	0	-	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-3	U	U	U	U
	71 500	E1 126	20.772	32.541
- Tx (Frames)	71.590 2,1 M	51.136 2,1 M	39.772 2,1 M	2,1 M
- Tx Rate (L1) (Bit/s)	2,1 101			
- Tx Rate (Fps)		1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-4	U	U	U	0
	71 500	E4 126	20.772	20 544
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5	74 500	F4 400	20.770	20 544
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



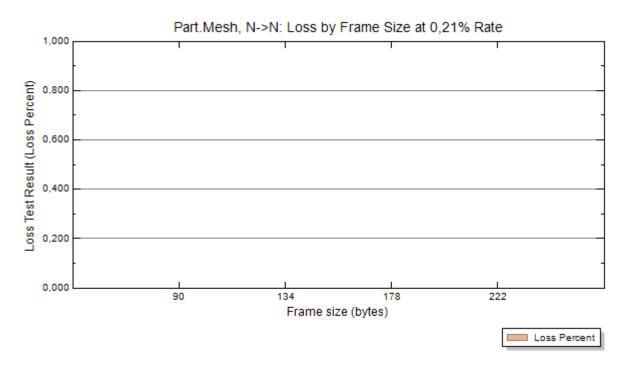


### Results for 0,31% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Tx Rate (L1) (Bit/s)	18,6 M	18,6 M	18,6 M	18,6 M
Tx Rate (Fps)	21.136	15.097	11.742	9.607
Rx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Rx Rate (L1) (Bit/s)	18,6 M	18,6 M	18,6 M	18,6 M
Rx Rate (Fps)	21,14 K	15,1 K	11,74 K	9,61 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	634.086	452.922	352.272	288.222
- Rx Rate (L1) (Bit/s)	18,6 M	18,6 M	18,6 M	18,6 M
- Rx Rate (Fps)	21.136	15.097	11.742	9.607
- Flood Count (Frames)	58	60	62	60
P-0-4-0				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3	-			-
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

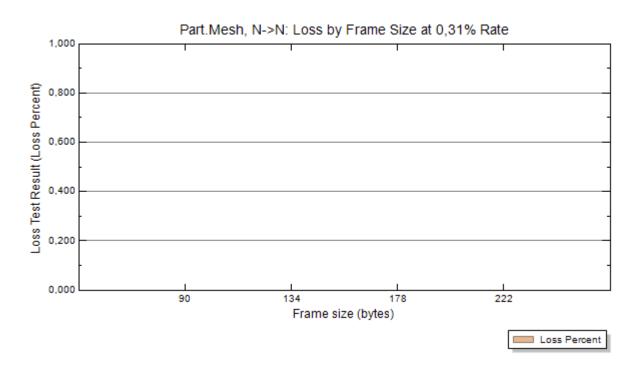


### Results for 0,41% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Tx Rate (L1) (Bit/s)	24,6 M	24,6 M	24,6 M	24,6 M
Tx Rate (Fps)	27.954	19.967	15.530	12.707
Rx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Rx Rate (L1) (Bit/s)	24,6 M	24,6 M	24,6 M	24,6 M
Rx Rate (Fps)	27,95 K	19,97 K	15,53 K	12,71 K
Loss Rate (Percent)	0,01 %	0 %	0 %	0 %
Loss (Frames)	51	0	0	0



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	838.581	599.022	465.906	381.198
- Rx Rate (L1) (Bit/s)	24,6 M	24,6 M	24,6 M	24,6 M
- Rx Rate (Fps)	27.953	19.967		12.707
			15.530	
- Flood Count (Frames)	58	57	60	59
P-0-4-0	400.770	00.007	77.054	00.500
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	2.300	2.110
- Rx Rate (L1) (Bit/s)	0	0	0	0
. , , ,	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-4	U	U	U	0
-	400.770	00.007	77.054	CO FOO
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



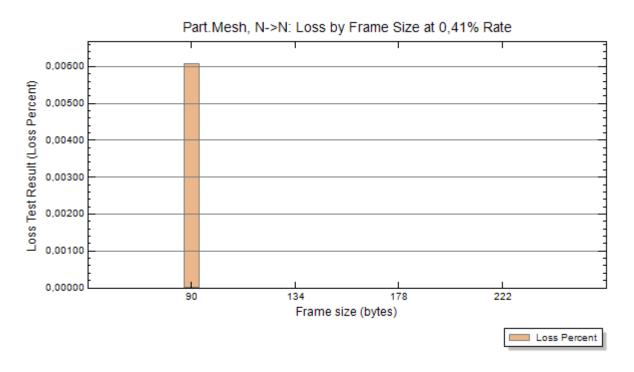


### Results for 0,51% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Tx Rate (L1) (Bit/s)	30,6 M	30,6 M	30,6 M	30,6 M
Tx Rate (Fps)	34.773	24.838	19.318	15.806
Rx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Rx Rate (L1) (Bit/s)	30,6 M	30,6 M	30,6 M	30,6 M
Rx Rate (Fps)	34,77 K	24,84 K	19,32 K	15,81 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.043.178	745.128	579.540	474.168
- Rx Rate (L1) (Bit/s)	30,6 M	30,6 M	30,6 M	30,6 M
- Rx Rate (Fps)	34.773	24.838	19.318	15.806
- Flood Count (Frames)	60	58	58	60
P-0-4-0				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

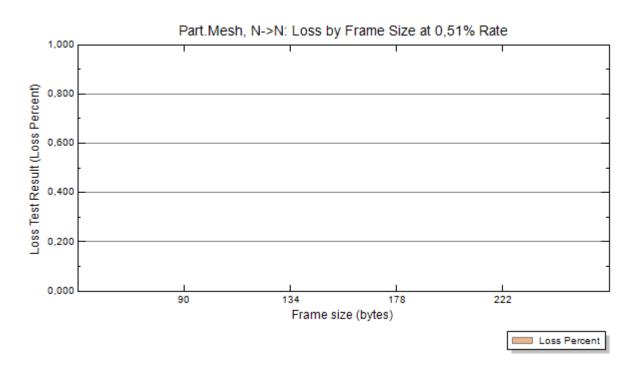


### Results for 0,61% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,61 %
Tx Rate (L1) (Bit/s)	36,6 M	36,6 M	36,6 M	36,6 M
Tx Rate (Fps)	41.591	29.708	23.106	18.905
Rx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,61 %
Rx Rate (L1) (Bit/s)	36,6 M	36,6 M	36,6 M	36,6 M
Rx Rate (Fps)	41,59 K	29,71 K	23,11 K	18,9 K
Loss Rate (Percent)	0,01 %	0 %	0 %	0 %
Loss (Frames)	89	0	0	0



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.247.635	891.228	693.180	567.144
- Rx Rate (L1) (Bit/s)	36,6 M	36,6 M	36,6 M	36,6 M
- Rx Rate (Fps)	41.588	29.708	23.106	18.905
- Flood Count (Frames)	57	61	58	58
P-0-4-0	31	01	30	30
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (ET) (Bl/s)	6.932	4.951	3.851	3.151
- Rx (Frames)	0.932	0	0	3.131
- Rx (Frames)	0	0	0	0
- Rx Rate (LT) (Bit/S)			-	
	0	0	0	0
- Flood Count (Frames)	0	0	U	0
P-0-4-1	207.054	140 500	115 500	04.504
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2		440 -00	115 500	
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



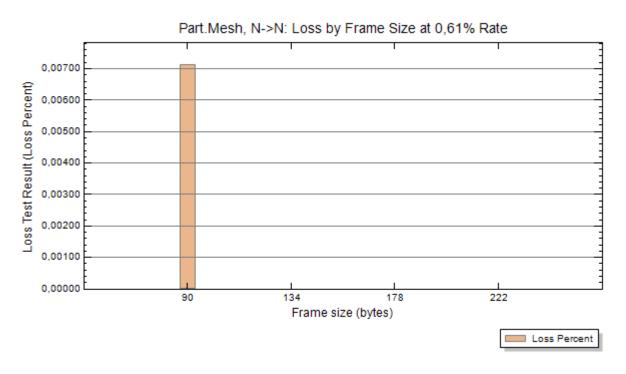


### Results for 0,71% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Tx Rate (L1) (Bit/s)	42,6 M	42,6 M	42,6 M	42,6 M
Tx Rate (Fps)	48.409	34.578	26.894	22.004
Rx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Rx Rate (L1) (Bit/s)	42,6 M	42,6 M	42,6 M	42,6 M
Rx Rate (Fps)	48,41 K	34,58 K	26,89 K	22 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.452.270	1.037.334	806.814	660.120
- Rx Rate (L1) (Bit/s)	42,6 M	42,6 M	42,6 M	42,6 M
- Rx Rate (Fps)	48.409	34.578	26.894	22.004
- Flood Count (Frames)	62	58	58	59
P-0-4-0				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Er) (Bit/s)	0	0	0	0
	0	0	0	0
- Flood Count (Frames)	U	U	U	U
P-0-4-3				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

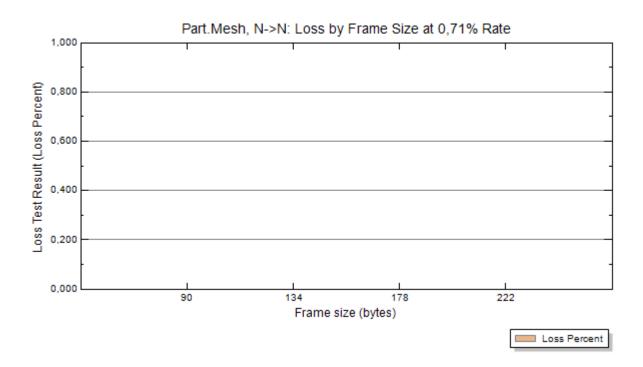


### Results for 0,81% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Tx Rate (L1) (Bit/s)	48,6 M	48,6 M	48,6 M	48,6 M
Tx Rate (Fps)	55.227	39.448	30.682	25.103
Rx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Rx Rate (L1) (Bit/s)	48,6 M	48,6 M	48,6 M	48,6 M
Rx Rate (Fps)	55,23 K	39,45 K	30,68 K	25,1 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.656.816	1.183.440	920.454	753.096
- Rx Rate (L1) (Bit/s)	48,6 M	48,6 M	48,6 M	48,6 M
- Rx Rate (Fps)	55.227	39.448	30.682	25.103
- Flood Count (Frames)	58	58	59	58
P-0-4-0				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0.575	0	4.104
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	U	U	U	0
-	276 126	107 240	153 400	105 516
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M 9.205	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)		6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	070 400	407.040	450 400	405 540
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



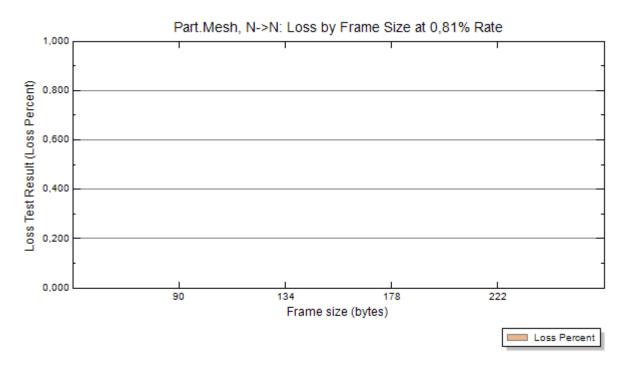


### Results for 0,91% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Tx Rate (L1) (Bit/s)	54,6 M	54,6 M	54,6 M	54,6 M
Tx Rate (Fps)	62.045	44.318	34.470	28.202
Rx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Rx Rate (L1) (Bit/s)	54,6 M	54,6 M	54,6 M	54,6 M
Rx Rate (Fps)	62,05 K	44,32 K	34,47 K	28,2 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.861.362	1.329.540	1.034.088	846.072
- Rx Rate (L1) (Bit/s)	54,6 M	54,6 M	54,6 M	54,6 M
- Rx Rate (Fps)	62.045	44.318	34.470	28.202
- Flood Count (Frames)	60	59	58	58
P-0-4-0				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

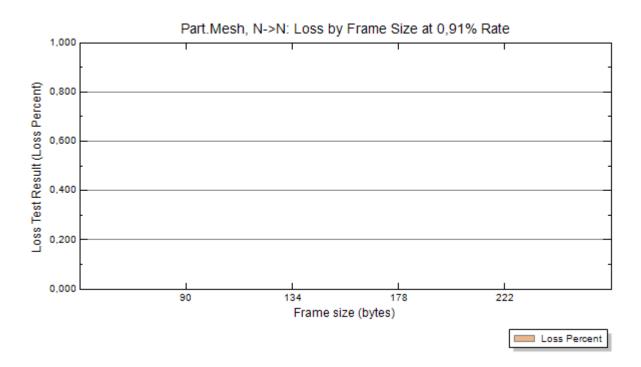

### Results for 1,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	1 %	1 %	1 %	1 %
Tx Rate (L1) (Bit/s)	60 M	60 M	60 M	60 M
Tx Rate (Fps)	68.182	48.701	37.879	30.992
Rx Rate (Percent)	1 %	1 %	1 %	1 %
Rx Rate (L1) (Bit/s)	60 M	60 M	60 M	60 M
Rx Rate (Fps)	68,18 K	48,7 K	37,88 K	30,99 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0



P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.045.454	1.461.036	1.136.358	929.748
- Rx Rate (L1) (Bit/s)	60 M	60 M	60 M	60 M
- Rx Rate (Fps)	68.182	48.701	37.879	30.992
- Flood Count (Frames)	60	60	60	57
P-0-4-0	00	00	00	31
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx (Frames)	10 M	10 M	109.393	10 M
- Tx Rate (ET) (Bit/s)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0.117	0.515	0.100
- Rx (Frames)	0	0	0	0
- Rx Rate (LT) (Bit/S)	0	0		
			0	0
- Flood Count (Frames)	0	0	U	0
P-0-4-1	240.000	242 500	100 202	151050
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	0.40.000	0.40 =00	400 000	
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



