

# Valkyrie2889 Test Report

## Test Summary

Test company: Xena Networks Customer: **GSI TOS** 

Test Date and Time: 2023-11-29, 10:08 Test Duration: 00:54:07 (h:m:s)

Valkyrie2889 v1.41, running on 'Microsoft Windows 10 Enterprise' Generated By:

Comments: DM broadcast, up to 4 timing events, 4 layers:

- host: aconbg027

- chassis: Xenabay (140.181.139.228)

DUT:

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/16/296/297

- fw: v6.1

- dot-config: production

## **Test Setup**

### **Test Configuration**

#### **Subtest Selection**

Rate Test: Full Mesh Disabled Rate Test: Part.Mesh, 1:N Disabled Rate Test: Part.Mesh, N->N Enabled - Throughput Enabled - Forwarding Enabled

Congestion Control: Disabled Forward Pressure: Disabled Maximum Forwarding Rate: Disabled Address Caching Capacity: Disabled Address Learning Rate: Disabled Errored Frames Filtering: Disabled Broadcast Forwarding: Disabled

#### **Test Options**

Packet Sizes Used: 90,134,178,222

Rate Type: Fraction Fraction per Port: 100,00% Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

### **Traffic Configuration**

### **Used Chassis**

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:22606

#### **Used Ports**



Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



# Rate Test: Part.Mesh, N->N Results

# **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: West-to-East

### **Throughput Options**

Initial Rate: 0,01%
Maximum Rate: 1,00%
Minimum Rate: 0,01%
Resolution: 0,01%

### **Used Ports**


Port ID	Port Role
P-0-0-0	East
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

# **Throughput Test Results**

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,091 %	0,992 %	0,992 %	0,992 %
Tx Rate (L1) (Bit/s)	6,38 M	69,46 M	69,46 M	69,46 M
Tx Rate (Fps)	7.255	56.379	43.850	35.877
Rx Rate (Percent)	0,09 %	0,99 %	0,99 %	0,99 %
Rx Rate (L1) (Bit/s)	6,38 M	69,46 M	69,46 M	69,46 M
Rx Rate (Fps)	7,26 K	56,38 K	43,85 K	35,88 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	217.658	1.691.361	1.315.503	1.076.320
- Rx Rate (L1) (Bit/s)	6,38 M	69,46 M	69,46 M	69,46 M
- Rx Rate (Fps)	7.255	56.379	43.850	35.877
- Flood Count (Frames)	55	59	53	60
P-0-2-5				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				



- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	31.094	241.623	187.929	153.760
- Tx Rate (L1) (Bit/s)	912,09 K	9,92 M	9,92 M	9,92 M
- Tx Rate (Fps)	1.036	8.054	6.264	5.125
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

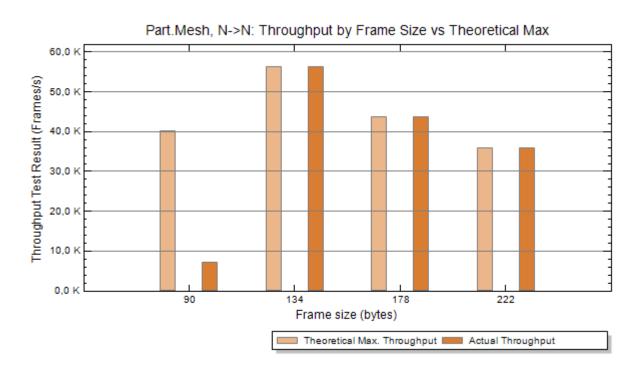




# **Forwarding Test Results**

# Results for 0,01% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Tx Rate (L1) (Bit/s)	699,98 K	699,98 K	699,65 K	699,73 K
Tx Rate (Fps)	795	568	442	361
Rx Rate (Percent)	0,01 %	0,01 %	0,01 %	0,01 %
Rx Rate (L1) (Bit/s)	699,98 K	699,98 K	697,44 K	699,73 K
	795,43			361,43
Rx Rate (Fps)		568,17	440,3	
Loss Rate (Percent)	0 %	0 %	0,32 %	0 %
Loss (Frames)	0	0	42	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	C
- Rx (Frames)	23.863	17.045	13.209	10.843
- Rx Rate (L1) (Bit/s)	699,98 K	699,98 K	697,44 K	699,73 K
- Rx Rate (Fps)	795	568	440	361
- Flood Count (Frames)	61	59	54	
P-0-2-5	01	39	54	57
	2 400	0.405	1 000	4 5 4 6
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	(
- Rx Rate (L1) (Bit/s)	0	0	0	C
- Rx Rate (Fps)	0	0	0	(
- Flood Count (Frames)	0	0	0	C
P-0-4-0				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	
- Rx Rate (L1) (Bit/s)	0	0	0	
- Rx Rate (Fps)	0	0	0	(
- Flood Count (Frames)	0	0	0	(
P-0-4-1				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	(
			-	
- Rx Rate (L1) (Bit/s)	0	0	0	
- Rx Rate (Fps)	0	0	0	(
- Flood Count (Frames)	0	0	0	(
P-0-4-2				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	(
- Rx Rate (L1) (Bit/s)	0	0	0	(
- Rx Rate (Fps)	0	0	0	(
- Flood Count (Frames)				
	0	0	0	(
P-0-4-3				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
· Tx Rate (Fps)	114	81	63	52
· Rx (Frames)	0	0	0	(
- Rx Rate (L1) (Bit/s)	0	0	0	
- Rx Rate (Fps)	0	0	0	
Flood Count (Frames)	0	0	0	
, ,	U	U	U	
P-0-4-4	0.400	0.40=	1 000	
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 k
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	(



- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	3.409	2.435	1.893	1.549
- Tx Rate (L1) (Bit/s)	100 K	100 K	99,95 K	99,96 K
- Tx Rate (Fps)	114	81	63	52
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

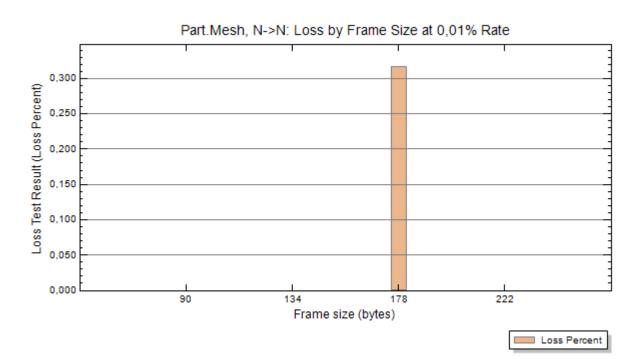


### Results for 0,11% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Tx Rate (L1) (Bit/s)	7,7 M	7,7 M	7,7 M	7,7 M
Tx Rate (Fps)	8.750	6.250	4.861	3.977
Rx Rate (Percent)	0,11 %	0,11 %	0,11 %	0,11 %
Rx Rate (L1) (Bit/s)	7,7 M	7,66 M	7,7 M	7,7 M
Rx Rate (Fps)	8,75 K	6,22 K	4,86 K	3,98 K
Loss Rate (Percent)	0 %	0,54 %	0 %	0 %
Loss (Frames)	0	1.017	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	262.500	186.478	145.831	119.315
- Rx Rate (L1) (Bit/s)	7,7 M	7,66 M	7,7 M	7,7 M
- Rx Rate (Fps)	8.750	6.216	4.861	3.977
- Flood Count (Frames)	55	60	60	60
P-0-2-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				



- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	37.500	26.785	20.833	17.045
- Tx Rate (L1) (Bit/s)	1,1 M	1,1 M	1,1 M	1,1 M
- Tx Rate (Fps)	1.250	893	694	568
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



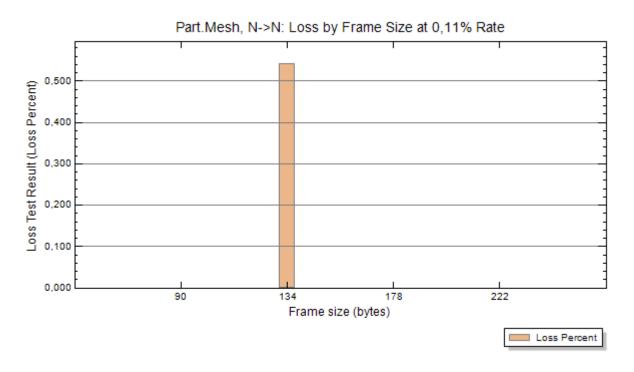


### Results for 0,21% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Tx Rate (L1) (Bit/s)	14,7 M	14,7 M	14,7 M	14,7 M
Tx Rate (Fps)	16.704	11.932	9.280	7.593
Rx Rate (Percent)	0,21 %	0,21 %	0,21 %	0,21 %
Rx Rate (L1) (Bit/s)	14,7 M	14,7 M	14,7 M	14,7 M
Rx Rate (Fps)	16,7 K	11,93 K	9,28 K	7,59 K
Loss Rate (Percent)	0,02 %	0 %	0 %	0 %
Loss (Frames)	110	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	501.020	357.952	278.404	227.787
- Rx Rate (L1) (Bit/s)	14,7 M	14,7 M	14,7 M	14,7 M
- Rx Rate (Fps)	16.701	11.932	9.280	7.593
- Flood Count (Frames)	60	60	59	60
P-0-2-5				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	71.590	51.136	39.772	32.541
- Tx Rate (L1) (Bit/s)	2,1 M	2,1 M	2,1 M	2,1 M
- Tx Rate (Fps)	2.386	1.705	1.326	1.085
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

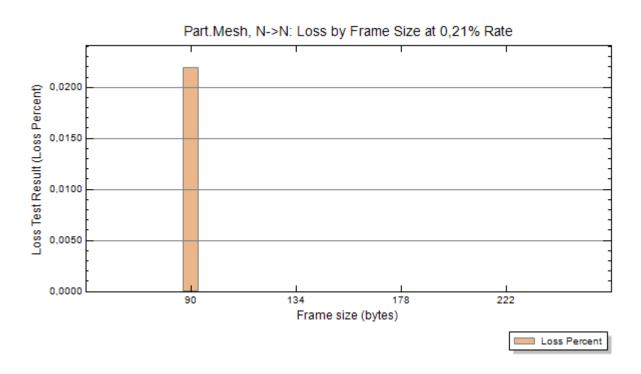

### Results for 0,31% Rate


Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1



Tx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Tx Rate (L1) (Bit/s)	21,7 M	21,7 M	21,7 M	21,7 M
Tx Rate (Fps)	24.659	17.614	13.699	11.209
Rx Rate (Percent)	0,31 %	0,31 %	0,31 %	0,31 %
Rx Rate (L1) (Bit/s)	21,7 M	21,7 M	21,7 M	21,7 M
Rx Rate (Fps)	24.66 K	17,61 K	13,7 K	11,21 K
Loss Rate (Percent)	0 %	0 %	0 %	0 %
Loss (Frames)	5	0 /8	0 /8	
	5	U	U	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	739.762	528.409	410.984	336.259
- Rx Rate (L1) (Bit/s)	21,7 M	21,7 M	21,7 M	21,7 M
- Rx Rate (Fps)	24.659	17.614	13.699	11.209
- Flood Count (Frames)	58	62	58	59
P-0-2-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	0	-	•	
	10E 604	75 407	E0 740	40.007
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	0	0	-	
	105 601	75 407	E0 710	40.027
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2		-		
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx (Frames)	3,1 M		3,1 M	
		3,1 M		3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4		-	-	
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)				
	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	105.681	75.487	58.712	48.037
- Tx Rate (L1) (Bit/s)	3,1 M	3,1 M	3,1 M	3,1 M
- Tx Rate (Fps)	3.523	2.516	1.957	1.601
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0



- Flood Count (Frames)	0	0	0	0

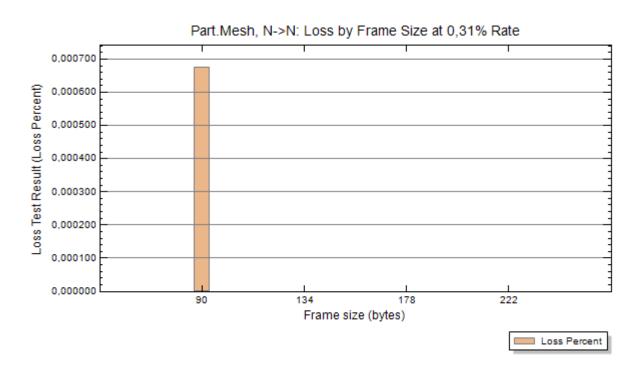


### Results for 0,41% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Tx Rate (L1) (Bit/s)	28,7 M	28,7 M	28,7 M	28,7 M
Tx Rate (Fps)	32.613	23.295	18.119	14.824
Rx Rate (Percent)	0,41 %	0,41 %	0,41 %	0,41 %
Rx Rate (L1) (Bit/s)	28,7 M	28,7 M	28,7 M	28,7 M
Rx Rate (Fps)	32,61 K	23,3 K	18,12 K	14,82 K
Loss Rate (Percent)	0,01 %	0 %	0 %	0 %
Loss (Frames)	72	3	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	978.332	698.856	543.557	444.731
- Rx Rate (L1) (Bit/s)	28,7 M	28,7 M	28,7 M	28,7 M
- Rx Rate (Fps)	32.611	23.295	18.119	14.824
- Flood Count (Frames)	60	58	58	60
P-0-2-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	139.772	99.837	77.651	63.533



- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	139.772	99.837	77.651	63.533
- Tx Rate (L1) (Bit/s)	4,1 M	4,1 M	4,1 M	4,1 M
- Tx Rate (Fps)	4.659	3.328	2.588	2.118
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

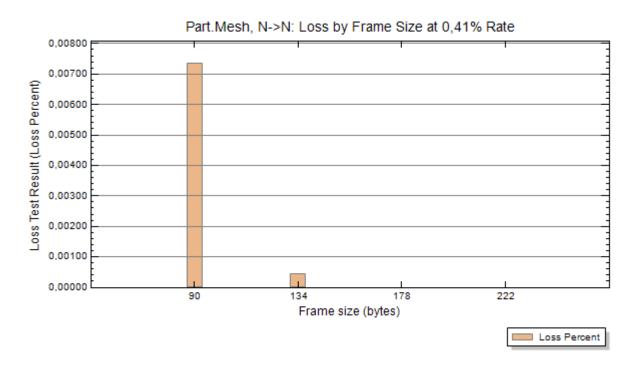


### Results for 0,51% Rate



Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,51 %	0,51 %	0,51 %	0,51 %
Tx Rate (L1) (Bit/s)	35,7 M	35,7 M	35,7 M	35,7 M
Tx Rate (Fps)	40.568	28.977	22.538	18.440
Rx Rate (Percent)	0,49 %	0,51 %	0,5 %	0,51 %
Rx Rate (L1) (Bit/s)	34,56 M	35,7 M	34,96 M	35,7 M
Rx Rate (Fps)	39,28 K	28,98 K	22,07 K	18,44 K
Loss Rate (Percent)	3,19 %	0 %	2,07 %	0 %
Loss (Frames)	38.763	0	14.019	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.178.278	869.316	662.111	553.196
- Rx Rate (L1) (Bit/s)	34,56 M	35,7 M	34,96 M	35,7 M
- Rx Rate (Fps)	39.276	28.977	22.070	18.440
- Flood Count (Frames)	60	62	60	61
P-0-2-5				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	-		-	
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	-		-	
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0.750	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4	0	U	0	0
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx (Frames)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (E1) (Bl/s)	5.795	4.140	3.220	2.634
- Rx (Frames)	0.795	0	0	2.034
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
	U	U	U	0
P-0-4-5	172 062	124 100	06 500	70.000
- Tx (Frames)	173.863	124.188	96.590	79.028
- Tx Rate (L1) (Bit/s)	5,1 M	5,1 M	5,1 M	5,1 M
- Tx Rate (Fps)	5.795	4.140	3.220	2.634



- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

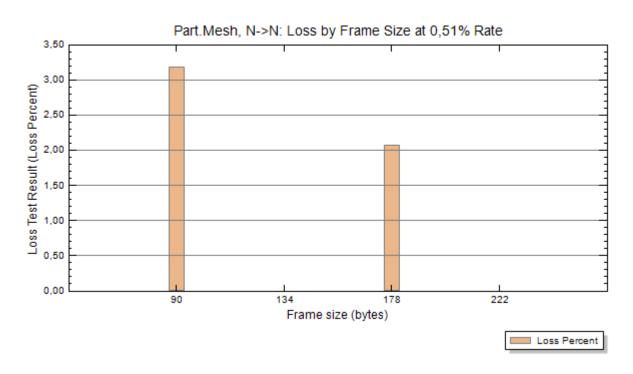


### Results for 0,61% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,61 %
Tx Rate (L1) (Bit/s)	42,7 M	42,7 M	42,7 M	42,7 M
Tx Rate (Fps)	48.523	34.659	26.957	22.056
Rx Rate (Percent)	0,61 %	0,61 %	0,61 %	0,6 %
Rx Rate (L1) (Bit/s)	42,7 M	42,7 M	42,7 M	41,96 M
Rx Rate (Fps)	48,52 K	34,66 K	26,96 K	21,67 K
Loss Rate (Percent)	0 %	0 %	0 %	1,73 %
Loss (Frames)	32	0	0	11.438
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.455.646	1.039.766	808.710	650.230
- Rx Rate (L1) (Bit/s)	42,7 M	42,7 M	42,7 M	41,96 M
- Rx Rate (Fps)	48.522	34.659	26.957	21.674
- Flood Count (Frames)	58	63	60	58
P-0-2-5				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0



- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	207.954	148.538	115.530	94.524
- Tx Rate (L1) (Bit/s)	6,1 M	6,1 M	6,1 M	6,1 M
- Tx Rate (Fps)	6.932	4.951	3.851	3.151
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

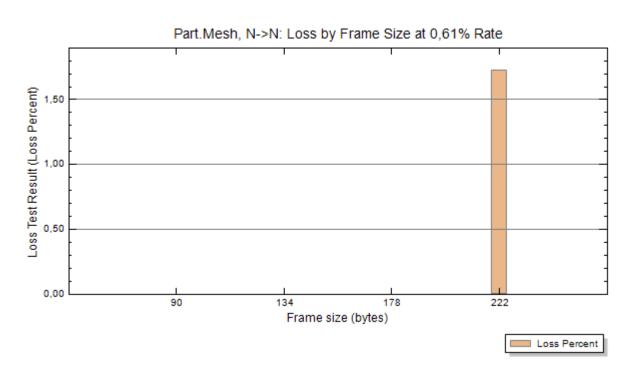





### Results for 0,71% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Tx Rate (L1) (Bit/s)	49,7 M	49,7 M	49,7 M	49,7 M
Tx Rate (Fps)	56.477	40.341	31.376	25.671
Rx Rate (Percent)	0,71 %	0,71 %	0,71 %	0,71 %
Rx Rate (L1) (Bit/s)	49,69 M	49,42 M	49,7 M	49,7 M
Rx Rate (Fps)	56,46 K	40,11 K	31,38 K	25,67 K
Loss Rate (Percent)	0,02 %	0,56 %	0 %	0 %
Loss (Frames)	373	6.795	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.693.942	1.203.428	941.283	770.140
- Rx Rate (L1) (Bit/s)	49,69 M	49,42 M	49,7 M	49,7 M
- Rx Rate (Fps)	56.465	40.114	31.376	25.671
- Flood Count (Frames)	58	62	60	58
P-0-2-5				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0.000	0	0	0.007
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0	-	-	-	
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0.000	0	0	0.007
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1	U	0	0	0
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx (Frames)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (ET) (Blus)	8.068	5.763	4.482	3.667
- Rx (Frames)	0.000	0	0	0.007
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2	U	U	U	0
- Tx (Frames)	242.045	170 000	134.469	110.000
` '	242.045	172.889		110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3	0.40.04=	4=0.000	404 400	
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				



- Tx (Frames)	242.045	172.889	134.469	110.020
- Tx Rate (L1) (Bit/s)	7,1 M	7,1 M	7,1 M	7,1 M
- Tx Rate (Fps)	8.068	5.763	4.482	3.667
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



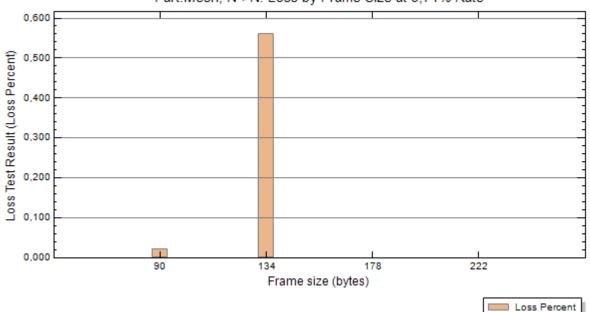

## Loss Percent


## Results for 0,81% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,81 %
Tx Rate (L1) (Bit/s)	56,7 M	56,7 M	56,7 M	56,7 M
Tx Rate (Fps)	64.432	46.023	35.795	29.287
Rx Rate (Percent)	0,81 %	0,81 %	0,81 %	0,8 %
Rx Rate (L1) (Bit/s)	56,7 M	56,7 M	56,7 M	55,75 M
Rx Rate (Fps)	64,43 K	46,02 K	35,8 K	28,8 K
Loss Rate (Percent)	0 %	0 %	0 %	1,67 %
Loss (Frames)	0	0	0	14.699
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	1.932.952	1.380.680	1.073.863	863.913
- Rx Rate (L1) (Bit/s)	56,7 M	56,7 M	56,7 M	55,75 M
- Rx Rate (Fps)	64.432	46.023	35.795	28.797
- Flood Count (Frames)	59	60	57	55
P-0-2-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184



- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	276.136	197.240	153.409	125.516
- Tx Rate (L1) (Bit/s)	8,1 M	8,1 M	8,1 M	8,1 M
- Tx Rate (Fps)	9.205	6.575	5.114	4.184
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0



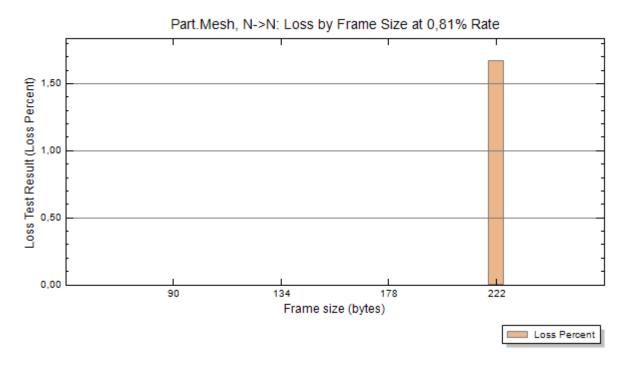


### Results for 0,91% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1
Tx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Tx Rate (L1) (Bit/s)	63,7 M	63,7 M	63,7 M	63,7 M
Tx Rate (Fps)	72.386	51.704	40.215	32.903
Rx Rate (Percent)	0,91 %	0,91 %	0,91 %	0,91 %
Rx Rate (L1) (Bit/s)	63,43 M	63,7 M	63,7 M	63,7 M
Rx Rate (Fps)	72,08 K	51,7 K	40,21 K	32,9 K
Loss Rate (Percent)	0,42 %	0 %	0 %	0 %
Loss (Frames)	9.165	0	0	0
P-0-0-0				
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.162.424	1.551.130	1.206.436	987.084
- Rx Rate (L1) (Bit/s)	63,43 M	63,7 M	63,7 M	63,7 M
- Rx Rate (Fps)	72.081	51.704	40.215	32.903
- Flood Count (Frames)	59	60	61	60
P-0-2-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-0				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-2				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-4				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	310.227	221.590	172.348	141.012
- Tx Rate (L1) (Bit/s)	9,1 M	9,1 M	9,1 M	9,1 M
- Tx Rate (Fps)	10.341	7.386	5.745	4.700
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0

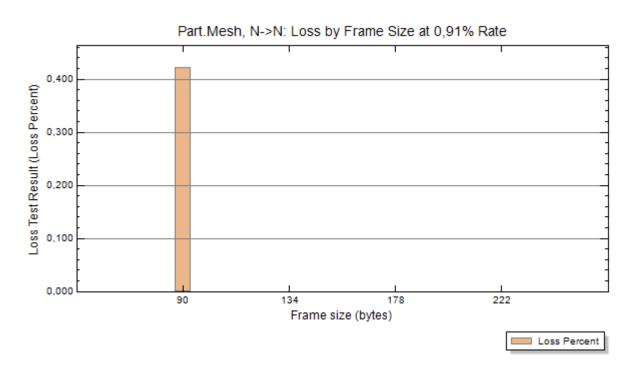

# Results for 1,00% Rate

Frame Size	90	134	178	222
Result State	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1



Tx Rate (Percent)	1 %	1 %	1 %	1 %
Tx Rate (L1) (Bit/s)	70 M	70 M	70 M	70 M
Tx Rate (Fps)	79.545	56.818	44.192	36.157
Rx Rate (Percent)	1 %	1 %	1 %	1 %
Rx Rate (L1) (Bit/s)	70 M	69,79 M	70 M	70 M
Rx Rate (Fps) Loss Rate (Percent)	79,54 K	56,64 K	44,19 K 0 %	36,16 K 0 %
Loss (Frames)	0 % 47	0,31 % 5.226	0 %	0 %
P-0-0-0	41	3.220	U	0
- Tx (Frames)	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0
- Tx Rate (Fps)	0	0	0	0
- Rx (Frames)	2.386.316	1.699.316	1.325.751	1.084.706
- Rx Rate (L1) (Bit/s)	70 M	69,79 M	70 M	70 M
- Rx Rate (Fps)	79.544	56.644	44.192	36.157
- Flood Count (Frames)	60	59	60	59
P-0-2-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames) P-0-4-0	0	0	U	0
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	109.393	104.936 10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0.010	0.100
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-1				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-2	U	U	U	0
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-3				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0
P-0-4-4	U	0	0	0
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0.100
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0
- Flood Count (Frames)	0	0	0	0
P-0-4-5				
- Tx (Frames)	340.909	243.506	189.393	154.958
- Tx Rate (L1) (Bit/s)	10 M	10 M	10 M	10 M
- Tx Rate (Fps)	11.364	8.117	6.313	5.165
- Rx (Frames)	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0
- Rx Rate (Fps)	0	0	0	0



- Flood Count (Frames) 0 0 0

