

Valkyrie2889 Test Report

Test Summary

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2023-11-07, 22:22 Test Duration: 09:19:30 (h:m:s)

Generated By: Valkyrie2889 v1.40, running on 'Microsoft Windows 8.1 Enterprise Evaluation'

Comments: Partial test

host: acopc061 (VB guest Win81)chassis: Xenabay (140.181.139.228)

- configuration: https://github.com/GSI-CS-CO/network testing

DUT

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0297 - fw: v6.1

- dot-config: default

Test Setup

Test Configuration

Subtest Selection

Rate Test: Full Mesh Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, 1:N Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh, N->N Enabled
- Throughput Enabled
- Forwarding Enabled

Congestion Control: Enabled
Forward Pressure: Enabled
Maximum Forwarding Rate: Enabled
Address Caching Capacity: Enabled
Address Learning Rate: Enabled
Errored Frames Filtering: Enabled
Broadcast Forwarding: Enabled

Test Options

Packet Sizes Used: 64,128,256,512,1024,1280,1518

Rate Type: Fraction
Fraction per Port: 100.00%

Latency Measurement Mode: Last-To-Last
Toggle Port Sync States: Yes

Traffic Configuration



Used Chassis

Chassis Name	Address
xenatos	140.181.139.228:22606

Used Ports

Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



Rate Test: Full Mesh Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Mesh
Direction: Bidirectional

Throughput Options

Initial Rate: 1.00%
Maximum Rate: 100.00%
Minimum Rate: 0.01%
Resolution: 0.01%

Used Ports

Port ID
P-0-0-0
P-0-0-1
P-0-0-2
P-0-0-3
P-0-0-4
P-0-0-5
P-0-2-0
P-0-2-1
P-0-2-2
P-0-2-3
P-0-2-4
P-0-2-5
P-0-4-0
P-0-4-1
P-0-4-2
P-0-4-3
P-0-4-4
P-0-4-5

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	PASS	FAIL	FAIL	FAIL	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0.018 %	0.027 %	0.018 %	0.018 %	0.018 %	0.025 %
Tx Rate (L1) (Bit/s)	3.19 M	4.93 M	3.18 M	3.17 M	3.15 M	4.56 M
Tx Rate (Fps)	4,743	4,162	1,438	745	377	439
Rx Rate (Percent)	0.02 %	0.03 %	0.02 %	0.02 %	0.02 %	0.03 %
Rx Rate (L1) (Bit/s)	3.08 M	4.93 M	3.17 M	3.11 M	2.93 M	4.56 M
Rx Rate (Fps)	4.58 K	4.16 K	1.44 K	730	351.03	438.6
Loss Rate (Percent)	3.47 %	0 %	0.04 %	1.96 %	6.99 %	0 %
Loss (Frames)	4,938	0	18	438	791	0
P-0-0-0						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,756	6,936	2,396	1,139	419	731
- Rx Rate (L1) (Bit/s)	173.73 K	273.74 K	176.35 K	161.59 K	116.65 K	253.41 K
- Rx Rate (Fps)	259	231	80	38	14	24
- Flood Count (Frames)	27	33	28	31	28	31
P-0-0-1						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,756	6,936	2,397	1,227	580	731
- Rx Rate (L1) (Bit/s)	173.73 K	273.74 K	176.42 K	174.07 K	161.47 K	253.41 K
- Rx Rate (Fps)	259	231	80	41	19	24



- Flood Count (Frames)	59	61	61	60	56	58
P-0-0-2	7.005	0.000	2.207	4.044	000	704
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,481	6,936	2,397	1,228	610	731
- Rx Rate (L1) (Bit/s)	167.57 K	273.74 K	176.42 K	174.21 K	169.82 K	253.41 K
- Rx Rate (Fps)	249	231	80	41	20	24
- Flood Count (Frames)	58	59	61	60	59	60
P-0-0-3						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,755	6,936	2,397	1,200	521	731
- Rx Rate (L1) (Bit/s)	173.71 K	273.74 K	176.42 K	170.24 K	145.05 K	253.41 K
- Rx Rate (Fps)	259	231	80	40	17	24
- Flood Count (Frames)	57	61	61	60	60	59
P-0-0-4						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	6,479	6,936	2,397	1,199	607	731
- Rx Rate (L1) (Bit/s)	145.13 K	273.74 K	176.42 K	170.1 K	168.99 K	253.41 K
- Rx Rate (ET) (Blus)	216	273.74 K	80	40	20	255.41 K
` ' '						
- Flood Count (Frames)	56	62	61	59	59	61
P-0-0-5						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,193	6,936	2,397	1,226	608	731
- Rx Rate (L1) (Bit/s)	161.12 K	273.74 K	176.42 K	173.93 K	169.27 K	253.41 K
- Rx Rate (Fps)	240	231	80	41	20	24
- Flood Count (Frames)	58	61	62	61	59	59
P-0-2-0						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,753	6,936	2,397	1,226	598	731
- Rx Rate (L1) (Bit/s)	173.67 K	273.74 K	176.42 K	173.93 K	166.48 K	253.41 K
` ' ' '	258	273.74 K	80	41	20	233.41 K
- Rx Rate (Fps)		61	63	60	-	
- Flood Count (Frames)	59	01	03	00	61	59
P-0-2-1	7.005	0.000	0.007	4.044	200	701
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,753	6,936	2,397	1,224	572	731
- Rx Rate (L1) (Bit/s)	173.67 K	273.74 K	176.42 K	173.64 K	159.24 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	19	24
- Flood Count (Frames)	61	59	63	61	58	59
P-0-2-2						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,753	6,936	2,397	1,227	607	731
- Rx Rate (L1) (Bit/s)	173.67 K	273.74 K	176.42 K	174.07 K	168.99 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	59	61	63	62	58	59
P-0-2-3	39	01	03	02	30	39
	7.005	0.000	2 207	4 044	000	704
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,397	1,227	557	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.42 K	174.07 K	155.07 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	19	24
- Flood Count (Frames)	59	59	59	60	58	57
P-0-2-4						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
	264	231	80	41	21	24
- Tx Rate (Fps)	ZU 4					
- Tx Rate (Fps) - Rx (Frames)	7,642	6,936	2,397	1,185	582	731



- Rx Rate (Fps)	255	231	80	40	19	24
- Flood Count (Frames)	57	60	61	60	59	59
P-0-2-5						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,753	6,936	2,386	1,226	610	731
- Rx Rate (L1) (Bit/s)	173.67 K	273.74 K	175.61 K	173.93 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	59	61	59	62	59	57
P-0-4-0						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7.754	6,936	2,396	1,227	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.07 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	58	59	58	56	58	56
P-0-4-1						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,396	1,227	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.07 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	273.74 K	80	41	20	233.41 K
- Flood Count (Frames)	55	58	55	60	57	58
P-0-4-2	33	36	33	00	37	36
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,396	1,228	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.21 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	58	59	57	63	58	55
P-0-4-3	7.005	0.000	0.007	4.044	200	704
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,396	1,228	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.21 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	58	56	61	60	58	53
P-0-4-4						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,396	1,228	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.21 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	58	58	57	57	58	58
P-0-4-5						
- Tx (Frames)	7,905	6,936	2,397	1,241	629	731
- Tx Rate (L1) (Bit/s)	177.07 K	273.74 K	176.42 K	176.06 K	175.11 K	253.41 K
- Tx Rate (Fps)	264	231	80	41	21	24
- Rx (Frames)	7,754	6,936	2,396	1,228	610	731
- Rx Rate (L1) (Bit/s)	173.69 K	273.74 K	176.35 K	174.21 K	169.82 K	253.41 K
- Rx Rate (Fps)	258	231	80	41	20	24
- Flood Count (Frames)	58	58	57	59	60	57

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0.018 %
Tx Rate (L1) (Bit/s)	3.14 M
Tx Rate (Fps)	255
Rx Rate (Percent)	0.02 %
Rx Rate (L1) (Bit/s)	3.07 M
Rx Rate (Fps)	249.47
Loss Rate (Percent)	2.17 %
Loss (Frames)	166



P-0-0-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps) - Rx (Frames)	14 412
- Rx Rate (L1) (Bit/s)	168.97 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	28
P-0-0-1	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	422
- Rx Rate (L1) (Bit/s)	173.08 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-0-2	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
- Tx Rate (ET) (Blus)	174.51 K
- Rx (Frames)	375
- Rx Rate (L1) (Bit/s)	153.8 K
- Rx Rate (Fps)	13
- Flood Count (Frames)	58
P-0-0-3	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	418
- Rx Rate (L1) (Bit/s)	171.44 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	59
P-0-0-4	405
- Tx (Frames)	425 174.31 K
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	174.31 K
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-0-5	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	397
- Rx Rate (L1) (Bit/s)	162.82 K
- Rx Rate (Fps)	13
- Flood Count (Frames) P-0-2-0	58_
	125
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
- Tx Rate (ET) (Blus)	174.51 K
- Rx (Frames)	419
- Rx Rate (L1) (Bit/s)	171.85 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	57
P-0-2-1	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	419
- Rx Rate (L1) (Bit/s)	171.85 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	61
P-0-2-2	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
- Tx Rate (ET) (Blus)	174.31 K
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14




Flood Count (Framos)	61
- Flood Count (Frames) P-0-2-3	61
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	61
P-0-2-4	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-2-5	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425
- Tx Rate (ET) (Blus)	174.31 K
- Rx (Frames)	420
- Rx (Frames)	172.26 K
- Rx Rate (Fps)	172.20 K
- Flood Count (Frames)	59
P-0-4-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	57
P-0-4-1	-
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-2	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-4-3	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
- Tx Rate (LT) (Bit/s)	1/4.31 K
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	53
P-0-4-4	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	421
- Rx Rate (L1) (Bit/s)	172.67 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	56
P-0-4-5	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	421
- Rx Rate (L1) (Bit/s)	172.67 K



- Rx Rate (Fps)	14
- Flood Count (Frames)	56

Note: One or more of the rate tests did not pass the test criteria!

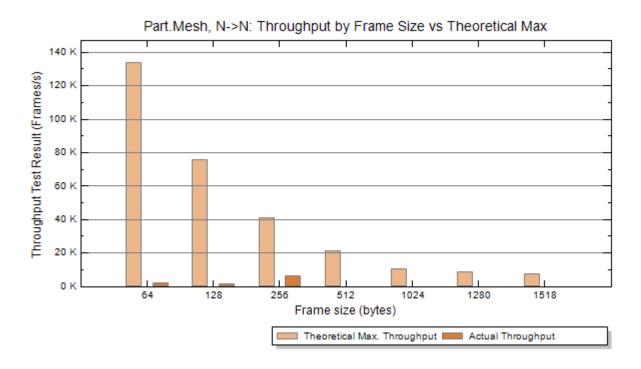

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,269	815,215	422,923	215,516	173,074
Rx Rate (Percent)	7.56 %	7.76 %	7.66 %	7.9 %	8.08 %	7.65 %
Rx Rate (L1) (Bit/s)	1.36 G	1.4 G	1.38 G	1.42 G	1.45 G	1.38 G
Rx Rate (Fps)	2.02 M	1.18 M	624.29 K	333.96 K	174.09 K	132.38 K
Loss Rate (Percent)	24.43 %	22.36 %	23.42 %	21.03 %	19.22 %	23.51 %
Loss (Frames)	19,634,123	10,198,631	5,727,840	2,668,785	1,242,693	1,220,926
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,732	1,979,615	1,004,525	555,720	291,608	224,253
- Rx Rate (L1) (Bit/s)	76.42 M	78.13 M	73.93 M	78.84 M	81.18 M	77.74 M
- Rx Rate (Fps)	113,724	65,987	33,484	18,524	9,720	7,475
- Flood Count (Frames)	28	27	29	26	29	24
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,410,494	1,986,318	1,041,157	551,320	259,961	224,497
- Rx Rate (L1) (Bit/s)	76.4 M	78.39 M	76.63 M	78.21 M	72.37 M	77.83 M
- Rx Rate (Fps)	113,683	66,211	34,705	18,377	8,665	7,483
- Flood Count (Frames)	60	58	59	59	56	56
P-0-0-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,378	1,947,980	1,041,186	553,368	286,616	160,434
- Rx Rate (L1) (Bit/s)	76.41 M	76.88 M	76.63 M	78.5 M	79.79 M	55.62 M
- Rx Rate (Fps)	113,713	64,933	34,706	18,446	9,554	5,348
- Flood Count (Frames)	59	67	59	56	60	59
P-0-0-3						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	2,780,654	1,980,531	1,043,516	535,448	292,211	224,259
- Rx Rate (L1) (Bit/s)	62.29 M	78.16 M	76.8 M	75.96 M	81.35 M	77.74 M
- Rx Rate (Fps)	92,688	66,018	34,784	17,848	9,740	7,475
- Flood Count (Frames)	58	56	59	59	58	60
P-0-0-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,365,686	1,965,726	1,042,999	557,716	291,765	223,364
- Rx Rate (L1) (Bit/s)	75.39 M	77.58 M	76.76 M	79.12 M	81.23 M	77.43 M
- Rx Rate (Fps)	112,190	65,524	34,767	18,591	9,726	7,445
- Flood Count (Frames)	57	58	57	55	71	61
P-0-0-5						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,412,404	1,972,963	1,043,399	559,117	287,280	223,313
- Rx Rate (L1) (Bit/s)	76.44 M	77.87 M	76.79 M	79.32 M	79.98 M	77.42 M
- Rx Rate (Fps)	113,747	65,765	34,780	18,637	9,576	7,444
- Flood Count (Frames)	58	58	57	57	62	58
P-0-2-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,409,435	1,970,901	1,041,898	560,197	300,209	224,228
- Rx Rate (L1) (Bit/s)	76.37 M	77.78 M	76.68 M	79.47 M	83.58 M	77.73 M
- Rx Rate (Fps)	113,648	65,697	34,730	18,673	10,007	7,474
- Flood Count (Frames)	60	61	59	61	58	60
P-0-2-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,108	1,977,998	1,042,370	552,354	295,448	223,775
- Rx Rate (L1) (Bit/s)	76.41 M	78.06 M	76.72 M	78.36 M	82.25 M	77.58 M
- Rx Rate (Fps)	113,704	65,933	34,746	18,412	9,848	7,459
- Flood Count (Frames)	58	59	55	68	58	60
P-0-2-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,678	1,955,010	1,042,036	560,180	295,083	223,672
- Rx Rate (L1) (Bit/s)	76.42 M	77.16 M	76.69 M	79.47 M	82.15 M	77.54 M
- Rx Rate (Fps)	113,723	65,167	34,735	18,673	9,836	7,456
- Flood Count (Frames)	57	60	56	57	74	58
P-0-2-3						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,410,025	1,964,031	1,043,530	562,507	290,543	224,244
- Rx Rate (L1) (Bit/s)	76.38 M	77.51 M	76.8 M	79.8 M	80.89 M	77.74 M
- Rx Rate (Fps)	113,668	65,468	34,784	18,750	9,685	7,475
- Flood Count (Frames)	59	56	56	57	72	60
P-0-2-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
	3,413,093	1,956,507	1,041,584	563,192	261,186	223,929
- Rx (Frames)	0,110,000					
- Rx (Frames) - Rx Rate (L1) (Bit/s)	76.45 M	77.22 M	76.66 M	79.9 M	72.71 M	77.63 M
			76.66 M 34,719	79.9 M 18,773	72.71 M 8,706	77.63 M 7,464
- Rx Rate (L1) (Bit/s)	76.45 M	77.22 M 65,217 59				
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	76.45 M 113,770	65,217	34,719	18,773	8,706	7,464



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,410,914	1,953,400	1,042,941	562,498	294,906	224,111
- Rx Rate (L1) (Bit/s)	76.4 M	77.09 M	76.76 M	79.8 M	82.1 M	77.69 M
- Rx Rate (Fps)	113,697	65,113	34,765	18,750	9,830	7,470
- Flood Count (Frames)	59	58	58	60	58	60
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,408,965	1,957,161	1,043,194	553,433	293,798	225,121
- Rx Rate (L1) (Bit/s)	76.36 M	77.24 M	76.78 M	78.51 M	81.79 M	78.04 M
- Rx Rate (Fps)	113,632	65,239	34,773	18,448	9,793	7,504
- Flood Count (Frames)	52	58	59	58	57	57
P-0-4-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9.615
- Rx (Frames)	3,411,579	1,960,598	1,043,944	559,117	294,893	224,247
- Rx Rate (L1) (Bit/s)	76.42 M	77.38 M	76.83 M	79.32 M	82.1 M	77.74 M
- Rx Rate (Fps)	113,719	65,353	34,798	18,637	9,830	7,475
- Flood Count (Frames)	57	57	56	55	54	58
P-0-4-2		-				
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23.496	11,973	9.615
- Rx (Frames)	3,409,952	1,954,520	1,042,212	557,895	300,110	224,571
- Rx Rate (L1) (Bit/s)	76.38 M	77.14 M	76.71 M	79.15 M	83.55 M	77.85 M
- Rx Rate (Fps)	113,665	65,151	34,740	18,597	10,004	7,486
- Flood Count (Frames)	56	56	54	57	58	58
P-0-4-3				4.		
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9.615
- Rx (Frames)	3,411,130	1,974,995	1,042,562	557,788	296,145	224,608
- Rx Rate (L1) (Bit/s)	76.41 M	77.95 M	76.73 M	79.13 M	82.45 M	77.86 M
- Rx Rate (Fps)	113,704	65,833	34,752	18,593	9,872	7,487
- Flood Count (Frames)	58	56	56	61	55	59
P-0-4-4				<u> </u>		
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,502	1,977,304	1,042,617	556,860	299,089	224,313
- Rx Rate (L1) (Bit/s)	76.42 M	78.04 M	76.74 M	79 M	83.27 M	77.76 M
- Rx Rate (Fps)	113,717	65,910	34,754	18,562	9,970	7,477
- Flood Count (Frames)	53	57	59	57	58	56
P-0-4-5		31	33		30	30
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	200,430 100 M
- Tx Rate (E1) (Blus)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	3,411,278	1,973,887	1.042.928	560.183	291,930	224.343
- Rx Rate (L1) (Bit/s)	76.41 M	77.9 M	76.76 M	79.47 M	81.27 M	77.77 M
- Rx Rate (LT) (Bil/S)	113,709	65,796	34,764	18,673	9,731	7,478
- IVY Lair (Lhz)	113,709	05,790	34,704	10,013	७,/७।	1,418

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,288
Rx Rate (Percent)	7.5 %
Rx Rate (L1) (Bit/s)	1.35 G
Rx Rate (Fps)	109.77 K
Loss Rate (Percent)	24.96 %
Loss (Frames)	1,095,548
P-0-0-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	96,066
- Rx Rate (L1) (Bit/s)	39.4 M
- Rx Rate (Fps)	3,202
- Flood Count (Frames) P-0-0-1	27
- Tx (Frames)	243,814
- Tx (Harries) - Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	185,321
- Rx Rate (L1) (Bit/s)	76.01 M
- Rx Rate (Fps)	6,177
- Flood Count (Frames)	61
P-0-0-2	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	189,624
- Rx Rate (L1) (Bit/s)	77.77 M
- Rx Rate (Fps)	6,321
- Flood Count (Frames)	66
P-0-0-3	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	187,265
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	76.8 M 6,242
- Flood Count (Frames)	58
P-0-0-4	30
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	191,633
- Rx Rate (L1) (Bit/s)	78.6 M
- Rx Rate (Fps)	6,388
- Flood Count (Frames)	61
P-0-0-5	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,807
- Rx Rate (L1) (Bit/s)	77.44 M
- Rx Rate (Fps)	6,294
- Flood Count (Frames)	58
P-0-2-0	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M
- Rx (Frames)	8,127 187,557
- Rx (Frames) - Rx Rate (L1) (Bit/s)	76.92 M
- Rx Rate (Fps)	6,252
- Flood Count (Frames)	60
P-0-2-1	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	167,925
- Rx Rate (L1) (Bit/s)	68.87 M
- Rx Rate (Fps)	5,598
- Flood Count (Frames)	60
P-0-2-2	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	191,670
- Rx Rate (L1) (Bit/s)	78.61 M
- Rx Rate (Fps)	6,389
- Rx Rate (Fps) - Flood Count (Frames)	
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-3	6,389 59
- Rx Rate (Fps) - Flood Count (Frames)	6,389



- Tx Rate (Fps)	8,127
- Rx (Frames)	188,893
- Rx Rate (L1) (Bit/s)	77.47 M
- Rx Rate (Fps)	6,296
- Flood Count (Frames)	59
P-0-2-4	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	192,033
- Rx Rate (L1) (Bit/s)	78.76 M
- Rx Rate (Fps)	6,401
- Flood Count (Frames)	58
P-0-2-5	242.014
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	189,227
- Rx Rate (L1) (Bit/s)	77.61 M 6,308
- Rx Rate (Fps) - Flood Count (Frames)	60
P-0-4-0	00
- Tx (Frames)	243,814
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,614 100 M
- Tx Rate (LT) (Blvs)	8,127
- Rx (Frames)	187,890
- Rx (Frames) - Rx Rate (L1) (Bit/s)	77.06 M
- Rx Rate (E1) (Blus)	6,263
- Flood Count (Frames)	57
P-0-4-1	31
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	189,757
- Rx Rate (L1) (Bit/s)	77.83 M
- Rx Rate (Fps)	6,325
- Flood Count (Frames)	56
P-0-4-2	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	188,394
- Rx Rate (L1) (Bit/s)	77.27 M
- Rx Rate (Fps)	6,280
- Flood Count (Frames)	55
P-0-4-3	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	187,992
- Rx Rate (L1) (Bit/s)	77.1 M
- Rx Rate (Fps)	6,266
- Flood Count (Frames)	56
P-0-4-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	192,522
- Rx Rate (L1) (Bit/s)	78.96 M
- Rx Rate (Fps)	6,417
- Flood Count (Frames)	57
P-0-4-5	
	243,814
- Tx (Frames)	
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	8,127
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	8,127 190,528
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	8,127 190,528 78.14 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	8,127 190,528



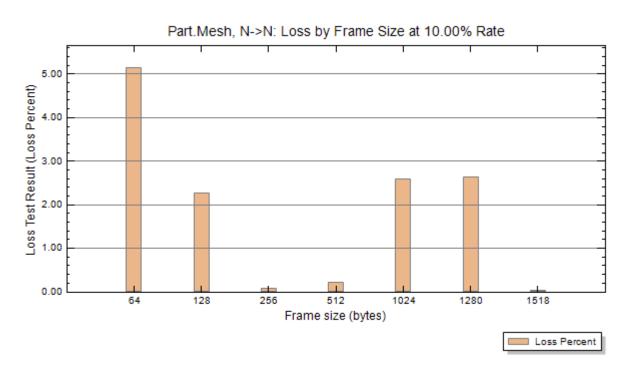

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,142	3,040,538	1,630,429	845,855	431,032	346,147
Rx Rate (Percent)	0.02 %	12.05 %	12.07 %	12.35 %	12.1 %	12.13 %
Rx Rate (L1) (Bit/s)	4.33 M	2.17 G	2.17 G	2.22 G	2.18 G	2.18 G
Rx Rate (Fps)	6.44 K	1.83 M	983.73 K	522.23 K	260.88 K	209.86 K
Loss Rate (Percent)	99.88 %	39.73 %	39.66 %	38.26 %	39.48 %	39.37 %
Loss (Frames)	160,520,946	36,239,919	19,400,846	9,708,679	5,104,691	4,088,619
P-0-0-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,279	3,076,848	1,634,697	873,335	358,947	351,213
- Rx Rate (L1) (Bit/s)	252.65 K	121.43 M	120.31 M	123.9 M	99.93 M	121.75 M
- Rx Rate (Fps)	376	102,562	54,490	29,111	11,965	11,707
- Flood Count (Frames)	26	24	23	24	23	23
P-0-0-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,375	2,975,783	1,638,171	868,893	439,583	354,334
- Rx Rate (L1) (Bit/s)	254.8 K	117.44 M	120.57 M	123.27 M	122.38 M	122.84 M
- Rx Rate (Fps)	379	99,193	54,606	28,963	14,653	11,811
- Flood Count (Frames)	59	55	58	58	55	56
P-0-0-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,449	3,075,238	1,636,804	872,812	434,904	311,518
- Rx Rate (L1) (Bit/s)	166.86 K	121.37 M	120.47 M	123.82 M	121.08 M	107.99 M
- Rx Rate (Fps)	248	102,508	54,560	29,094	14,497	10,384
- Flood Count (Frames)	59	55	57	56	56	56
P-0-0-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,411	2,973,243	1,633,691	873,445	440,668	354,209



- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	255.61 K	117.34 M	120.24 M	123.91 M	122.68 M	122.79 N
- RX Rate (Fps) - Flood Count (Frames)	380 61	99,108 57	54,456 60	29,115 58	14,689 56	11,807 55
P-0-0-4	01	31	00	36	30	J.
- Tx (Frames)	8,928,570	5.067.564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,399	3,062,882	1,635,297	872,359	440,091	352,240
- Rx Rate (L1) (Bit/s)	255.34 K	120.88 M	120.36 M	123.76 M	122.52 M	122.11 M
- Rx Rate (Fps)	380	102,096	54,510	29,079	14,670	11,74
- Flood Count (Frames)	59	60	57	57	56	5
P-0-0-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,444	3,070,911	1,635,564	871,866	441,210	353,678
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	256.35 K	121.2 M 102,364	120.38 M	123.69 M	122.83 M	122.61 N
- Flood Count (Frames)	381 59	102,364	54,519 58	29,062 58	14,707 58	11,789 58
P-0-2-0	39	36	36	36	36	30
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M	200 M	2,717,362 200 M	200 M	200 M	200 N
- Tx Rate (ET) (Blus)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,394	3,066,781	1,637,249	872,008	439,153	354,443
- Rx Rate (L1) (Bit/s)	255.23 K	121.04 M	120.5 M	123.71 M	122.26 M	122.87 N
- Rx Rate (Fps)	380	102,226	54,575	29,067	14,638	11,815
- Flood Count (Frames)	63	55	59	55	55	59
P-0-2-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,135	3,064,695	1,634,967	871,899	440,611	353,999
- Rx Rate (L1) (Bit/s)	159.82 K	120.95 M	120.33 M	123.69 M	122.67 M	122.72 N
- Rx Rate (Fps)	238	102,157	54,499	29,063	14,687	11,800
- Flood Count (Frames)	60	55	57	57	57	54
P-0-2-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,351	2,853,961	1,637,277	871,910	439,273	353,945
- Rx Rate (L1) (Bit/s)	254.26 K	112.64 M	120.5 M	123.69 M	122.29 M	122.7 N
- Rx Rate (Fps)	378	95,132	54,576	29,064	14,642	11,798
- Flood Count (Frames)	59	57	56	55	57	57
P-0-2-3	0.000.570	E 007 E04	0.747.000	4 400 750	740.000	F70 040
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M 297,619	200 M 168,919	200 M 90,579	200 M	200 M	200 N
- Tx Rate (Fps)	11,274	3,070,672	1,609,417	46,992 839,090	23,946 439,898	19,230 321,070
- Rx (Frames)	252.54 K	121.19 M	118.45 M	119.04 M	122.47 M	111.3 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	376	102,356	53,647	27,970	14,663	10,702
- Flood Count (Frames)	62	57	53,047	55	60	54
P-0-2-4	02		- 33	33	- 00	
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,197	3,070,505	1,638,151	871,970	429,916	354,483
- Rx Rate (L1) (Bit/s)	250.81 K	121.18 M	120.57 M	123.7 M	119.69 M	122.89 N
- Rx Rate (Fps)	373	102,350	54,605	29,066	14,331	11,816
- Flood Count (Frames)	61	55	60	56	55	54
P-0-2-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	11,084	3,072,998	1,640,333	872,000	440,332	355,357
- Rx Rate (L1) (Bit/s)	248.28 K	121.28 M	120.73 M	123.71 M	122.59 M	123.19 N
- Rx Rate (Fps)	369	102,433	54,678	29,067	14,678	11,84
- Flood Count (Frames)	59	57	57	57	57	56
P-0-4-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 N
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230



- Rx (Frames)	11,099	3,085,836	1,652,798	873,302	440,864	355,433
- Rx Rate (L1) (Bit/s)	248.62 K	121.79 M	121.65 M	123.89 M	122.74 M	123.22 M
- Rx Rate (Fps)	370	102,861	55,093	29,110	14,695	11,848
- Flood Count (Frames)	61	59	56	56	56	58
P-0-4-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	10,959	3,088,247	1,651,755	872,944	440,073	354,448
- Rx Rate (L1) (Bit/s)	245.48 K	121.88 M	121.57 M	123.84 M	122.52 M	122.88 M
- Rx Rate (Fps)	365	102,942	55,059	29,098	14,669	11,815
- Flood Count (Frames)	55	57	58	54	53	59
P-0-4-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	10,943	3,084,323	1,651,342	872,177	439,736	352,605
- Rx Rate (L1) (Bit/s)	245.12 K	121.73 M	121.54 M	123.73 M	122.42 M	122.24 M
- Rx Rate (Fps)	365	102,811	55,045	29,073	14,658	11,754
- Flood Count (Frames)	57	57	52	55	55	59
P-0-4-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	10,942	3,092,063	1,641,054	871,242	441,672	353,731
- Rx Rate (L1) (Bit/s)	245.1 K	122.03 M	120.78 M	123.6 M	122.96 M	122.63 M
- Rx Rate (Fps)	365	103,069	54,702	29,041	14,722	11,791
- Flood Count (Frames)	58	57	58	55	52	55
P-0-4-4						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	10,779	3,093,947	1,651,788	873,180	440,269	354,732
- Rx Rate (L1) (Bit/s)	241.45 K	122.11 M	121.57 M	123.88 M	122.57 M	122.97 M
- Rx Rate (Fps)	359	103,132	55,060	29,106	14,676	11,824
- Flood Count (Frames)	60	55	55	57	53	59
P-0-4-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	10,800	3,097,300	1,651,675	872,551	439,057	354,359
- Rx Rate (L1) (Bit/s)	241.92 K	122.24 M	121.56 M	123.79 M	122.23 M	122.84 M
- Rx Rate (Fps)	360	103,243	55,056	29,085	14,635	11,812
- Flood Count (Frames)	58	55	54	56	56	59

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,587
Rx Rate (Percent)	11.52 %
Rx Rate (L1) (Bit/s)	2.07 G
Rx Rate (Fps)	168.54 K
Loss Rate (Percent)	42.4 %
Loss (Frames)	3,721,470
P-0-0-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	207,200
- Rx Rate (L1) (Bit/s)	84.98 M
- Rx Rate (Fps)	6,907
- Flood Count (Frames)	24
P-0-0-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	292,160
- Rx Rate (L1) (Bit/s)	119.82 M




- Rx Rate (Fps)	9,739
- Flood Count (Frames)	56
P-0-0-2	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	283,635
- Rx Rate (L1) (Bit/s)	116.33 M
- Rx Rate (Fps)	9,455 54
- Flood Count (Frames) P-0-0-3	34
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	286,588
- Rx Rate (L1) (Bit/s)	117.54 M
- Rx Rate (Fps)	9,553
- Flood Count (Frames)	58
P-0-0-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	241,175
- Rx Rate (L1) (Bit/s)	98.91 M
- Rx Rate (Fps) - Flood Count (Frames)	8,039 55
P-0-0-5	35
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	292,613
- Rx Rate (L1) (Bit/s)	120.01 M
- Rx Rate (Fps)	9,754
- Flood Count (Frames)	55
P-0-2-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	282,284 115.77 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	9,409
- Flood Count (Frames)	55
P-0-2-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	284,402
- Rx Rate (L1) (Bit/s)	116.64 M
- Rx Rate (Fps)	9,480
- Flood Count (Frames)	54
P-0-2-2	407.07
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames) - Rx Rate (L1) (Bit/s)	290,943 119.33 M
- Rx Rate (LT) (Blus)	9,698
- Flood Count (Frames)	58
P-0-2-3	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	292,484
- Rx Rate (L1) (Bit/s)	119.96 M
- Rx Rate (Fps)	9,749
- Flood Count (Frames)	56
P-0-2-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	284,766



	=
- Rx Rate (L1) (Bit/s)	116.79 M
- Rx Rate (Fps)	9,492
- Flood Count (Frames)	57
P-0-2-5	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	269,235
- Rx Rate (L1) (Bit/s)	110.42 M
- Rx Rate (Fps)	8,975
- Flood Count (Frames)	53
P-0-4-0	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	289,850
- Rx Rate (L1) (Bit/s)	118.88 M
- Rx Rate (Fps)	9,662
- Flood Count (Frames)	53
P-0-4-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	293,428
- Rx Rate (L1) (Bit/s)	120.34 M
- Rx Rate (Fps)	9,781
- Flood Count (Frames)	55
P-0-4-2	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	292,450
- Rx Rate (L1) (Bit/s)	119.94 M
- Rx Rate (Fps)	9,748
- Flood Count (Frames)	56
P-0-4-3	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	293,300
- Rx Rate (L1) (Bit/s)	120.29 M
- Rx Rate (Fps)	9,777
- Flood Count (Frames)	54
P-0-4-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	290,692
- Rx Rate (L1) (Bit/s)	119.22 M
- Rx Rate (Fps)	9,690
- Flood Count (Frames)	55
P-0-4-5	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Er) (Bits)	16,255
- Rx (Frames)	288,935
- Rx Rate (L1) (Bit/s)	118.5 M
- Rx Rate (Fps)	9,631
- Flood Count (Frames)	57
- 1 lood Coulit (1 fairles)	31



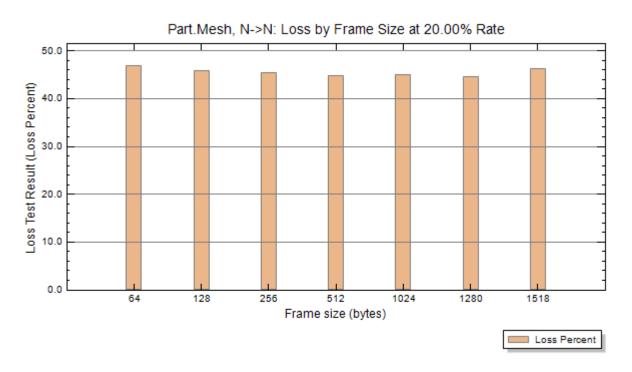

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,713	4,560,808	2,445,644	1,268,788	646,547	519,221
Rx Rate (Percent)	0.02 %	16.46 %	16.32 %	16.84 %	16.39 %	16.66 %
Rx Rate (L1) (Bit/s)	2.92 M	2.96 G	2.94 G	3.03 G	2.95 G	3 G
Rx Rate (Fps)	4.35 K	2.5 M	1.33 M	712.32 K	353.27 K	288.31 K
Loss Rate (Percent)	99.95 %	45.13 %	45.61 %	43.86 %	45.36 %	44.47 %
Loss (Frames)	240,940,904	61,746,655	33,462,837	16,694,109	8,798,221	6,927,272
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,383	4,160,182	2,219,046	1,168,240	531,759	479,964
- Rx Rate (L1) (Bit/s)	165.38 K	164.19 M	163.32 M	165.73 M	148.04 M	166.39 M
- Rx Rate (Fps)	246	138,673	73,968	38,941	17,725	15,999
- Flood Count (Frames)	25	25	22	24	21	27
P-0-0-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,900	4,154,923	2,215,556	1,192,658	593,074	478,949
- Rx Rate (L1) (Bit/s)	109.76 K	163.98 M	163.06 M	169.2 M	165.11 M	166.04 M
- Rx Rate (Fps)	163	138,497	73,852	39,755	19,769	15,965
- Flood Count (Frames)	58	57	55	59	57	56
P-0-0-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,649	4,153,517	2,213,973	1,191,925	595,361	481,680
- Rx Rate (L1) (Bit/s)	171.34 K	163.93 M	162.95 M	169.09 M	165.75 M	166.98 M
- Rx Rate (Fps)	255	138,451	73,799	39,731	19,845	16,056
- Flood Count (Frames)	58	57	55	55	55	57
P-0-0-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,705	4,154,267	2,215,296	1,190,935	585,035	480,809



- Rx Rate (L1) (Bit/s)	172.59 K	163.96 M	163.05 M	168.95 M	162.87 M	166.68 M
- Rx Rate (Fps)	257	138,476	73,843	39,698	19,501	16,027
- Flood Count (Frames)	59	56	55	56	54	60
P-0-0-4	12 202 055	7.601.346	4.076.072	2 114 647	1,077,579	065.260
- Tx (Frames) - Tx Rate (L1) (Bit/s)	13,392,855 300 M	300 M	4,076,073 300 M	2,114,647 300 M	300 M	865,368 299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,902	4,084,303	2,215,790	1,192,662	596,957	481,405
- Rx Rate (L1) (Bit/s)	109.8 K	161.19 M	163.08 M	169.2 M	166.19 M	166.89 M
- Rx Rate (Fps)	163	136,143	73,860	39,755	19,899	16,047
- Flood Count (Frames)	58	56	55	54	57	61
P-0-0-5					-	
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,881	4,167,579	2,221,751	1,194,225	595,691	480,283
- Rx Rate (L1) (Bit/s)	176.53 K	164.48 M	163.52 M	169.42 M	165.84 M	166.5 M
- Rx Rate (Fps)	263	138,919	74,058	39,808	19,856	16,009
- Flood Count (Frames)	59	54	56	58	57	55
P-0-2-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,930	4,173,053	2,193,281	1,193,661	574,410	476,724
- Rx Rate (L1) (Bit/s)	177.63 K	164.7 M	161.43 M	169.34 M	159.92 M	165.26 M
- Rx Rate (Fps)	264	139,102	73,109	39,789	19,147	15,891
- Flood Count (Frames) P-0-2-1	61	54	53	59	55	54
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	2,114,047 300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	299.99 101
- Rx (Frames)	7,931	4,178,558	2,224,478	1,191,204	594,550	480,897
- Rx Rate (L1) (Bit/s)	177.65 K	164.91 M	163.72 M	168.99 M	165.52 M	166.71 M
- Rx Rate (Fps)	264	139,285	74,149	39,707	19,818	16,030
- Flood Count (Frames)	59	56	54	57	58	56
P-0-2-2			0.	0.		
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,826	4,181,335	2,224,448	1,194,492	584,526	480,511
- Rx Rate (L1) (Bit/s)	175.3 K	165.02 M	163.72 M	169.46 M	162.73 M	166.58 M
- Rx Rate (Fps)	261	139,378	74,148	39,816	19,484	16,017
- Flood Count (Frames)	59	57	55	60	56	57
P-0-2-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,736	4,179,261	2,195,779	1,158,729	584,500	480,291
- Rx Rate (L1) (Bit/s)	173.29 K	164.94 M	161.61 M	164.39 M	162.72 M	166.5 M
- Rx Rate (Fps) - Flood Count (Frames)	258	139,309	73,193	38,624	19,483	16,010
P-0-2-4	59	55	54	58	54	56
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,660	4,174,533	2,150,150	1,156,344	596,112	480,996
- Rx Rate (L1) (Bit/s)	171.58 K	164.75 M	158.25 M	164.05 M	165.96 M	166.75 M
- Rx Rate (Fps)	255	139,151	71,672	38,545	19,870	16,033
- Flood Count (Frames)	59	58	56	60	57	57
P-0-2-5					<u> </u>	
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,589	4,176,742	2,222,037	1,191,047	597,984	480,421
- Rx Rate (L1) (Bit/s)	169.99 K	164.84 M	163.54 M	168.97 M	166.48 M	166.55 M
- Rx Rate (Fps)	253	139,225	74,068	39,702	19,933	16,014
- Flood Count (Frames)	59	58	56	58	55	56
P-0-4-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846



- Rx (Frames)	7,449	4,210,618	2,236,257	1,191,191	597,368	481,797
- Rx Rate (L1) (Bit/s)	166.86 K	166.18 M	164.59 M	168.99 M	166.31 M	167.02 M
- Rx Rate (Fps)	248	140,354	74,542	39,706	19,912	16,060
- Flood Count (Frames)	55	55	54	57	54	56
P-0-4-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,381	4,197,126	2,237,259	1,192,580	595,184	481,774
- Rx Rate (L1) (Bit/s)	165.33 K	165.65 M	164.66 M	169.19 M	165.7 M	167.01 M
- Rx Rate (Fps)	246	139,904	74,575	39,753	19,839	16,059
- Flood Count (Frames)	58	54	54	52	59	53
P-0-4-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,255	4,196,442	2,235,485	1,192,181	595,859	480,780
- Rx Rate (L1) (Bit/s)	162.51 K	165.62 M	164.53 M	169.13 M	165.89 M	166.67 M
- Rx Rate (Fps)	242	139,881	74,516	39,739	19,862	16,026
- Flood Count (Frames)	55	55	54	55	52	57
P-0-4-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,191	4,188,986	2,234,672	1,192,374	595,210	480,144
- Rx Rate (L1) (Bit/s)	161.08 K	165.33 M	164.47 M	169.16 M	165.71 M	166.45 M
- Rx Rate (Fps)	240	139,633	74,489	39,746	19,840	16,005
- Flood Count (Frames)	58	54	54	55	55	54
P-0-4-4						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,110	4,185,253	2,220,597	1,192,230	592,833	481,029
- Rx Rate (L1) (Bit/s)	159.26 K	165.18 M	163.44 M	169.14 M	165.04 M	166.76 M
- Rx Rate (Fps)	237	139,508	74,020	39,741	19,761	16,034
- Flood Count (Frames)	59	53	54	60	56	53
P-0-4-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,008	4,160,895	2,230,622	1,192,859	591,788	480,898
- Rx Rate (L1) (Bit/s)	156.98 K	164.22 M	164.17 M	169.23 M	164.75 M	166.71 M
- Rx Rate (Fps)	234	138,697	74,354	39,762	19,726	16,030
- Flood Count (Frames)	57	59	55	56	56	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,875
Rx Rate (Percent)	16.11 %
Rx Rate (L1) (Bit/s)	2.9 G
Rx Rate (Fps)	235.66 K
Loss Rate (Percent)	46.3 %
Loss (Frames)	6,096,412
P-0-0-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	346,200
- Rx Rate (L1) (Bit/s)	141.99 M
- Rx Rate (Fps)	11,540
- Flood Count (Frames)	26
P-0-0-1	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	398,276
- Rx Rate (L1) (Bit/s)	163.35 M




- Rx Rate (Fps)	13,276
- Flood Count (Frames)	54
P-0-0-2	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	388,227
- Rx Rate (L1) (Bit/s)	159.22 M
- Rx Rate (Fps)	12,941
- Flood Count (Frames)	56
P-0-0-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	398,447
- Rx Rate (L1) (Bit/s)	163.42 M
- Rx Rate (Fps)	13,282
- Flood Count (Frames)	54
P-0-0-4	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	398,779
- Rx Rate (L1) (Bit/s)	163.55 M
- Rx Rate (Fps)	13,293
- Flood Count (Frames)	53
P-0-0-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	399,179
- Rx Rate (L1) (Bit/s)	163.72 M
- Rx Rate (Fps)	13,306
- Flood Count (Frames)	59
P-0-2-0	
	721 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	399,401
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	163.81 M 13,313
- Flood Count (Frames) P-0-2-1	53
	724 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	399,527
- Rx Rate (L1) (Bit/s)	163.86 M
- Rx Rate (Fps)	13,318
- Flood Count (Frames)	54
P-0-2-2	704 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	378,739
- Rx Rate (L1) (Bit/s)	155.33 M
- Rx Rate (Fps)	12,625
- Flood Count (Frames)	57
P-0-2-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	380,266
- Rx Rate (L1) (Bit/s)	155.96 M
- Rx Rate (Fps)	12,676
- Flood Count (Frames)	56
P-0-2-4	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	398,982
()	500,00 <u>2</u>



- Rx Rate (L1) (Bit/s)	163.64 M
- Rx Rate (Fps)	13,299
- Flood Count (Frames)	55
P-0-2-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	397,325
- Rx Rate (L1) (Bit/s)	162.96 M
- Rx Rate (Fps)	13,244
- Flood Count (Frames)	55
P-0-4-0	704 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps) - Rx (Frames)	24,382 398,851
- Rx (Frames) - Rx Rate (L1) (Bit/s)	163.58 M
- Rx Rate (ET) (Blus)	13,295
- Flood Count (Frames)	15,295
P-0-4-1	30
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	394,784
- Rx Rate (L1) (Bit/s)	161.91 M
- Rx Rate (Fps)	13,159
- Flood Count (Frames)	55
P-0-4-2	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	399,685
- Rx Rate (L1) (Bit/s)	163.92 M
- Rx Rate (Fps)	13,323
- Flood Count (Frames)	54
P-0-4-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	399,025
- Rx Rate (L1) (Bit/s)	163.65 M
- Rx Rate (Fps)	13,301
- Flood Count (Frames) P-0-4-4	57
- Tx (Frames)	731,459
- Tx (Frames)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	395,984
- Rx Rate (L1) (Bit/s)	162.41 M
- Rx Rate (Fps)	13,199
- Flood Count (Frames)	54
P-0-4-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	398,173
- Rx Rate (L1) (Bit/s)	163.3 M
- Rx Rate (Fps)	13,272
- Flood Count (Frames)	57



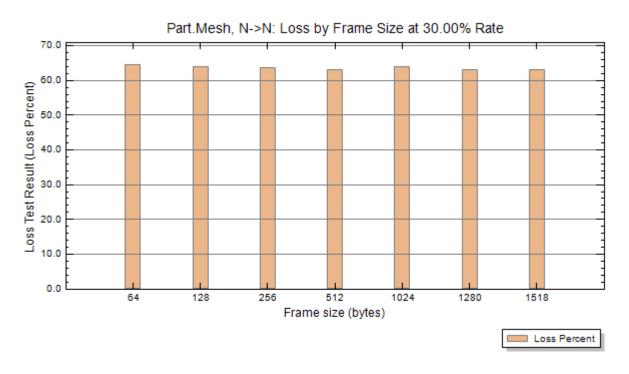

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,284	6,081,077	3,260,869	1,691,721	862,063	692,305
Rx Rate (Percent)	0.01 %	0.03 %	20.57 %	20.72 %	20.87 %	21.02 %
Rx Rate (L1) (Bit/s)	2.18 M	5.55 M	3.7 G	3.73 G	3.76 G	3.78 G
Rx Rate (Fps)	3.25 K	4.69 K	1.68 M	876.11 K	449.76 K	363.75 K
Loss Rate (Percent)	99.97 %	99.92 %	48.57 %	48.21 %	47.83 %	47.46 %
Loss (Frames)	321,331,080	182,291,744	47,514,934	24,468,369	12,369,130	9,856,499
P-0-0-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,323	8,234	2,798,117	1,222,784	748,703	609,098
- Rx Rate (L1) (Bit/s)	119.24 K	324.97 K	205.94 M	173.47 M	208.44 M	211.15 M
- Rx Rate (Fps)	177	274	93,271	40,759	24,957	20,303
- Flood Count (Frames)	24	37	29	22	23	23
P-0-0-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,452	8,318	2,795,403	1,399,235	749,328	608,791
- Rx Rate (L1) (Bit/s)	122.12 K	328.28 K	205.74 M	198.5 M	208.61 M	211.05 M
- Rx Rate (Fps)	182	277	93,180	46,641	24,978	20,293
- Flood Count (Frames)	59	59	55	53	56	55
P-0-0-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,568	8,400	2,793,459	1,479,870	750,967	609,749
- Rx Rate (L1) (Bit/s)	124.72 K	331.52 K	205.6 M	209.94 M	209.07 M	211.38 M
- Rx Rate (Fps)	186	280	93,115	49,329	25,032	20,325
- Flood Count (Frames)	59	59	57	56	54	56
P-0-0-3				-		
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,608	8,434	2,797,575	1,478,937	750,550	610,926



- Rx Rate (L1) (Bit/s)	125.62 K	332.86 K	205.9 M	209.81 M	208.95 M	211.79 M
- Rx Rate (Fps)	187	281	93,253	49,298	25,018	20,364
- Flood Count (Frames)	58	59	54	56	55	54
P-0-0-4 - Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx (Frames)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,622	6,088	2,727,217	1,479,738	750,866	609,677
- Rx Rate (L1) (Bit/s)	125.93 K	240.27 K	200.72 M	209.93 M	209.04 M	211.35 M
- Rx Rate (Fps)	187	203	90,907	49,325	25,029	20,323
- Flood Count (Frames)	58	58	52	57	57	54
P-0-0-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,610	8,381	2,797,776	1,478,084	750,052	609,281
- Rx Rate (L1) (Bit/s)	125.66 K	330.77 K	205.92 M	209.69 M	208.81 M	211.22 M
- Rx Rate (Fps)	187	279	93,259	49,269	25,002	20,309
- Flood Count (Frames) P-0-2-0	60	59	58	56	59	54
	17.857.140	10 125 120	E 121 701	2 010 525	1 426 772	1 152 0/1
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,140 400 M	10,135,128 400 M	5,434,781 400 M	2,819,535 400 M	1,436,772 400 M	1,153,841 400 M
- Tx Rate (LT) (Blvs) - Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,657	8,268	2,804,423	1,479,291	750,120	609,526
- Rx (Frames)	126.72 K	6,∠66 326.31 K	2,804,423 206.41 M	209.86 M	208.83 M	211.3 M
- Rx Rate (ET) (Bibs)	120.72 K	276	93,481	49,310	25,004	20,318
- Flood Count (Frames)	59	59	52	56	53	55
P-0-2-1	00	00	02			
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,626	8,246	2,796,148	1,479,407	748,908	609,604
- Rx Rate (L1) (Bit/s)	126.02 K	325.44 K	205.8 M	209.88 M	208.5 M	211.33 M
- Rx Rate (Fps)	188	275	93,205	49,314	24,964	20,320
- Flood Count (Frames)	59	59	54	57	57	55
P-0-2-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,683	5,819	2,734,900	1,478,761	749,616	568,203
- Rx Rate (L1) (Bit/s)	127.3 K	229.66 K	201.29 M	209.79 M	208.69 M	196.98 M
- Rx Rate (Fps)	189	194	91,163	49,292	24,987	18,940
- Flood Count (Frames)	57	57	56	58	57	56
P-0-2-3	47.057.440	10 105 100	5 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985 1,478,820	47,892	38,461 610,924
- Rx (Frames) - Rx Rate (L1) (Bit/s)	5,646 126.47 K	8,095 319.48 K	2,804,874 206.44 M	209.8 M	744,045 207.14 M	211.79 M
- Rx Rate (Fps)	120.47 K	270	93,496	49,294	24,802	20,364
- Flood Count (Frames)	61	60	54	56	56	55
P-0-2-4	01	00	J-1	30	30	
- Tx (Frames)	17,857,140	10.135.128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,639	8,063	2,801,839	1,478,430	750,484	604,771
- Rx Rate (L1) (Bit/s)	126.31 K	318.22 K	206.22 M	209.74 M	208.93 M	209.65 M
- Rx Rate (Fps)	188	269	93,395	49,281	25,016	20,159
- Flood Count (Frames)	57	61	55	54	54	57
P-0-2-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,502	7,946	2,799,116	1,478,119	750,436	594,023
- Rx Rate (L1) (Bit/s)	123.24 K	313.6 K	206.01 M	209.7 M	208.92 M	205.93 M
- Rx Rate (Fps)	183	265	93,304	49,271	25,015	19,801
- Flood Count (Frames)	59	59	59	56	56	57
P-0-4-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461



- Rx (Frames)	5,387	7,889	2,816,002	1,478,831	750,267	610,125
- Rx Rate (L1) (Bit/s)	120.67 K	311.35 K	207.26 M	209.8 M	208.87 M	211.51 M
- Rx Rate (Fps)	180	263	93,867	49,294	25,009	20,338
- Flood Count (Frames)	55	60	56	54	56	53
P-0-4-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,264	7,821	2,812,208	1,478,133	749,964	611,223
- Rx Rate (L1) (Bit/s)	117.91 K	308.67 K	206.98 M	209.7 M	208.79 M	211.89 M
- Rx Rate (Fps)	175	261	93,740	49,271	24,999	20,374
- Flood Count (Frames)	56	59	53	55	54	55
P-0-4-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,176	7,708	2,812,482	1,478,613	748,962	609,472
- Rx Rate (L1) (Bit/s)	115.94 K	304.21 K	207 M	209.77 M	208.51 M	211.28 M
- Rx Rate (Fps)	173	257	93,749	49,287	24,965	20,316
- Flood Count (Frames)	55	57	51	56	51	56
P-0-4-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	5,039	7,664	2,812,607	1,479,413	749,921	609,059
- Rx Rate (L1) (Bit/s)	112.87 K	302.47 K	207.01 M	209.88 M	208.78 M	211.14 M
- Rx Rate (Fps)	168	255	93,754	49,314	24,997	20,302
- Flood Count (Frames)	55	59	57	53	54	56
P-0-4-4						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	4,883	7,627	2,798,853	1,478,295	750,059	609,166
- Rx Rate (L1) (Bit/s)	109.38 K	301.01 K	206 M	209.72 M	208.82 M	211.18 M
- Rx Rate (Fps)	163	254	93,295	49,277	25,002	20,306
- Flood Count (Frames)	55	56	55	56	54	57
P-0-4-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	4,755	7,559	2.808.125	1,478,500	749,518	609,021
- Rx Rate (L1) (Bit/s)	106.51 K	298.33 K	206.68 M	209.75 M	208.67 M	211.13 M
- Rx Rate (Fps)	159	252	93,604	49,283	24,984	20,301
- Flood Count (Frames)	59	61	54	52	52	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,174
Rx Rate (Percent)	20.65 %
Rx Rate (L1) (Bit/s)	3.72 G
Rx Rate (Fps)	302.12 K
Loss Rate (Percent)	48.37 %
Loss (Frames)	8,491,588
P-0-0-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	494,477
- Rx Rate (L1) (Bit/s)	202.8 M
- Rx Rate (Fps)	16,483
- Flood Count (Frames)	24
P-0-0-1	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	505,963
- Rx Rate (L1) (Bit/s)	207.51 M




- Rx Rate (Fps)	16,865
- Flood Count (Frames)	51
P-0-0-2	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	505,597
- Rx Rate (L1) (Bit/s)	207.36 M
- Rx Rate (Fps)	16,853
- Flood Count (Frames)	56
P-0-0-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	486,944
- Rx Rate (L1) (Bit/s)	199.71 M
- Rx Rate (Fps)	16,231
- Flood Count (Frames)	55
P-0-0-4	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	506,239
- Rx Rate (L1) (Bit/s)	207.63 M
- Rx Rate (Fps)	16,875
- Flood Count (Frames)	62
P-0-0-5	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	505,884
- Rx Rate (L1) (Bit/s)	207.48 M
- Rx Rate (Fps)	16,863
- Flood Count (Frames)	54
P-0-2-0	J 1
	075 200
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	500,827
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	205.41 M
	16,694
- Flood Count (Frames) P-0-2-1	60
	075 200
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	506,042
- Rx Rate (L1) (Bit/s)	207.54 M
- Rx Rate (Fps)	16,868
- Flood Count (Frames)	53
P-0-2-2	075 005
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	500,186
- Rx Rate (L1) (Bit/s)	205.14 M
- Rx Rate (Fps)	16,673
- Flood Count (Frames)	55
P-0-2-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	506,309
- Rx Rate (L1) (Bit/s)	207.65 M
- Rx Rate (Fps)	16,877
- Flood Count (Frames)	56
P-0-2-4	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	506,567
(223,001



- Rx Rate (L1) (Bit/s)	D D ((14) (D)()	007.70.14
- Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Flood Count (Frames) - Flood Count (Frames) - Rx	- Rx Rate (L1) (Bit/s)	207.76 M
P-0-2-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,528 - Rx Rate (L1) (Bit/s) 207.33 M - Rx Rate (Fps) 16,851 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 504,984 - Rx Rate (Fps) 504,984 - Rx Rate (Fps) 505,171 - Rx Rate (F	- RX Rate (Fps)	
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,528 - Rx Rate (L1) (Bit/s) 207.33 M - Rx Rate (Fps) 16,851 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.4 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 506,95 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 506,95 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 506,95 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,658 - Rx Rate (L1) (Bit/s) 504,658 - Rx Rate (L1) (Bit/s) 506,954 - Rx Rate (L1) (Bit/s)		5/
- Tx Rate (L1) (Bit/s)		075 000
- Tx Rate (Fps)		
- Rx (Frames) 505,528 - Rx Rate (L1) (Bit/s) 207.33 M - Rx Rate (Fps) 16,851 - Flood Count (Frames) 57 - P-0-4-0 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 53,2510 - Rx (Frames) 504,964 - Rx Rate (Fps) 504,984 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 504,984 - Rx Rate (Fps) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 505,171 - Rx Ra	- Ix Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps)		
- Flood Count (Frames) 57 P-0-4-0 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510		
P-0-4-0 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		· · · · · · · · · · · · · · · · · · ·
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,842 - Flood Count (Frames) 53 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 50 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 16,839		57
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,842 - Flood Count (Frames) 53 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510		
- Tx Rate (Fps) 32,510 - Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510	- Tx (Frames)	
- Rx (Frames) 507,311 - Rx Rate (L1) (Bit/s) 208.07 M - Rx Rate (Fps) 16,910 - Flood Count (Frames) 52 - P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,255 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 504,658 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps)	- Rx (Frames)	507,311
- Flood Count (Frames) 52 P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.4 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,832 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 53 - Flood Count (Frames) 53 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510		208.07 M
P-0-4-1 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Flood Count (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Flo-4-4 - Tx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,711 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839	- Rx Rate (Fps)	16,910
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 975,290 - Tx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839	- Flood Count (Frames)	52
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 56 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Flo-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,711 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839	P-0-4-1	·
- Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 P-0-4-5 - Tx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 16,839	- Tx (Frames)	975,290
- Tx Rate (Fps) 32,510 - Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 P-0-4-5 - Tx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 16,839		400 M
- Rx (Frames) 505,250 - Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 - Ry Rate (L1) (Bit/s) 975,290 - Tx (Frames) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - Rx Rate (L1) (Bit/s) 400 M - Rx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		32,510
- Rx Rate (L1) (Bit/s) 207.22 M - Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,857 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 50 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 50 - Rx Rate (Fps) 16,857 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
- Rx Rate (Fps) 16,842 - Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 206.98 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
- Flood Count (Frames) 53 P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
P-0-4-2 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 975,290 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,822 - Flood Count (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx (Frames) 975,290 - Tx (Frames) 504,658 - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx (Frames) 504,984 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 - P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Flood Count (Frames) 53 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 53 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 505,171 - Rx Rate (Fps) 16,839	-	975.290
- Tx Rate (Fps) 32,510 - Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839	- Tx Rate (I 1) (Bit/s)	
- Rx (Frames) 505,695 - Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (Fps) 16,839		
- Rx Rate (L1) (Bit/s) 207.4 M - Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 P-0-4-5 - Tx (Frames) 53 P-0-4-5 - Tx (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (Fps) 16,857 - Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Flood Count (Frames) 56 P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
P-0-4-3 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Flood Count (Frames) 53 - Tx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 553 - Tx (Frames) 555 - Tx (Frames) 555,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 32,510 - Rx (Frames) 53 - Tx (Frames) 555,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		30
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Flood Count (Frames) 53 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 - Tx (Frames) 53 - Tx (Frames) 53 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		075 200
- Tx Rate (Fps) 32,510 - Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx (Frames) 504,658 - Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 - Ry-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (L1) (Bit/s) 206.98 M - Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (Fps) 16,822 - Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Flood Count (Frames) 53 P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839	- RX Rate (LT) (BIUS)	
P-0-4-4 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		·
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		53
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		075 000
- Tx Rate (Fps) 32,510 - Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx (Frames) 504,984 - Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (L1) (Bit/s) 207.11 M - Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (Fps) 16,833 - Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Flood Count (Frames) 53 P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
P-0-4-5 - Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Tx (Frames) 975,290 - Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		53
- Tx Rate (L1) (Bit/s) 400 M - Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Tx Rate (Fps) 32,510 - Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx (Frames) 505,171 - Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (L1) (Bit/s) 207.19 M - Rx Rate (Fps) 16,839		
- Rx Rate (Fps) 16,839		
- Flood Count (Frames) 53		16,839
	- Flood Count (Frames)	53



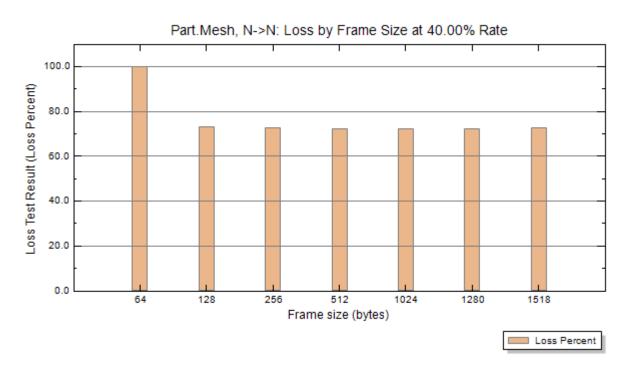

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,855	7,601,346	4,076,083	2,114,654	1,077,579	865,378
Rx Rate (Percent)	0.01 %	0.02 %	24.76 %	24.57 %	25.23 %	25.73 %
Rx Rate (L1) (Bit/s)	1.79 M	4.41 M	4.46 G	4.42 G	4.54 G	4.63 G
Rx Rate (Fps)	2.66 K	3.72 K	2.02 M	1.04 M	543.8 K	445.29 K
Loss Rate (Percent)	99.98 %	99.95 %	50.49 %	50.86 %	49.53 %	48.54 %
Loss (Frames)	401,705,854	227,928,764	61,735,238	32,266,711	16,013,292	12,602,552
P-0-0-0						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,337	6,533	3,330,032	1,734,790	906,344	741,698
- Rx Rate (L1) (Bit/s)	97.15 K	257.84 K	245.09 M	246.11 M	252.33 M	257.12 M
- Rx Rate (Fps)	145	218	111,001	57,826	30,211	24,723
- Flood Count (Frames)	26	32	21	23	27	22
P-0-0-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,530	4,617	3,392,962	1,734,282	907,592	742,186
- Rx Rate (L1) (Bit/s)	101.47 K	182.22 K	249.72 M	246.04 M	252.67 M	257.29 M
- Rx Rate (Fps)	151	154	113,099	57,809	30,253	24,740
- Flood Count (Frames)	59	59	56	59	57	55
P-0-0-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,725	6,738	3,232,124	1,733,803	907,605	741,537
- Rx Rate (L1) (Bit/s)	105.84 K	265.93 K	237.88 M	245.97 M	252.68 M	257.07 M
- Rx Rate (Fps)	158	225	107,737	57,793	30,254	24,718
- Flood Count (Frames)	58	59	52	53	56	59
P-0-0-3						<u> </u>
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,723	6,876	3,391,736	1,689,536	907,917	738,928



- Rx Rate (L1) (Bit/s)	105.8 K	271.37 K	249.63 M	239.69 M	252.76 M	256.16 M
- Rx Rate (Fps)	157	229	113,058	56,318	30,264	24,631
- Flood Count (Frames)	59	59	54	54	56	58
P-0-0-4	00 004 405	40,000,040	0.700.470	0.504.400	4 705 005	4 440 00
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 N
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,693	6,827	3,391,548	1,732,265	907,810	741,906
- Rx Rate (L1) (Bit/s)	105.12 K	269.44 K	249.62 M	245.75 M	252.73 M	257.19 M
- Rx Rate (Fps)	156	228	113,052	57,742	30,260	24,730
- Flood Count (Frames)	57	58	54	56	61	57
P-0-0-5	00.004.405	10.000.010	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,691	6,889	3,388,274	1,733,532	908,462	742,885
- Rx Rate (L1) (Bit/s)	105.08 K	271.89 K	249.38 M	245.93 M	252.92 M	257.53 M
- Rx Rate (Fps)	156	230	112,942	57,784	30,282	24,763
- Flood Count (Frames)	59	59	55	55	57	58
P-0-2-0	00 004 405	40,000,040	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,794	4,621	3,388,446	1,733,915	908,600	742,661
- Rx Rate (L1) (Bit/s)	107.39 K	182.38 K	249.39 M	245.98 M	252.95 M	257.46 M
- Rx Rate (Fps)	160	154	112,948	57,797	30,287	24,755
- Flood Count (Frames)	59	59	56	54	54	59
P-0-2-1	00 004 405	40,000,040	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,746	4,619	3,392,262	1,733,258	908,252	742,698
- Rx Rate (L1) (Bit/s)	106.31 K	182.3 K	249.67 M	245.89 M	252.86 M	257.47 M
- Rx Rate (Fps)	158	154	113,075	57,775	30,275	24,757
- Flood Count (Frames)	56	56	52	55	59	56
P-0-2-2	00 004 405	40.000.040	0.700.470	0.504.400	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,763	6,803 268.49 K	3,115,793	1,733,659	908,747	742,346 257.35 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	106.69 K 159	200.49 K	229.32 M 103,860	245.95 M 57,789	253 M 30,292	237.33 W
- Flood Count (Frames)	61	61	55	57,769	50,292	24,745 54
P-0-2-3	01	01	33	33	39	54
- Tx (Frames)	22,321,425	12 669 010	6.793.472	2 524 422	1 70E 06E	1 442 207
,		12,668,910	-,,	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048		226,449	117,481	59,866	48,077
- Rx (Frames)	3,000	6,639	3,389,020	1,733,114	908,558 252.94 M	742,312
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	67.2 K 100	262.02 K	249.43 M 112,967	245.87 M 57,770	30,285	257.33 M 24,744
- Flood Count (Frames)	56	221				
	30	61	56	55	58	57
P-0-2-4	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1,442,297
- Tx (Frames)	22,321,425 500 M	12,668,910	6,793,472	3,524,423	1,795,965	
- Tx Rate (L1) (Bit/s)		500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps) - Rx (Frames)	744,048	422,297	226,449	117,481	59,866	48,077
, ,	4,736	6,592	3,345,392	1,734,141 246.02 M	908,814	742,307
- Rx Rate (L1) (Bit/s)	106.09 K	260.16 K	246.22 M		253.01 M	257.33 M
- Rx Rate (Fps) - Flood Count (Frames)	158 56	220 59	111,513 53	57,805	30,294	24,744
	30	39	33	56	55	56
P-0-2-5	20 224 425	10.000.010	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,739	6,526	3,388,399	1,734,751	878,795	742,533
- Rx Rate (L1) (Bit/s)	106.15 K	257.56 K	249.39 M	246.1 M	244.66 M	257.41 M
- Rx Rate (Fps)	158	218	112,947	57,825	29,293	24,751
- Flood Count (Frames)	59	60	54	56	55	59
P-0-4-0	00 004 405	40.000.010	0.700.470	0.504.400	4 705 005	4 440 00-
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077



- Rx (Frames)	4,732	6,438	3,406,607	1,735,084	908,941	742,859
- Rx Rate (L1) (Bit/s)	106 K	254.09 K	250.73 M	246.15 M	253.05 M	257.52 M
- Rx Rate (Fps)	158	215	113,554	57,836	30,298	24,762
- Flood Count (Frames)	58	58	52	52	58	56
P-0-4-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,436	6,337	3,403,803	1,735,945	907,725	742,722
- Rx Rate (L1) (Bit/s)	99.37 K	250.1 K	250.52 M	246.27 M	252.71 M	257.48 M
- Rx Rate (Fps)	148	211	113,460	57,865	30,258	24,757
- Flood Count (Frames)	53	57	53	52	54	56
P-0-4-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,273	6,266	3,387,777	1,736,237	908,092	742,109
- Rx Rate (L1) (Bit/s)	95.72 K	247.3 K	249.34 M	246.31 M	252.81 M	257.26 M
- Rx Rate (Fps)	142	209	112,926	57,875	30,270	24,737
- Flood Count (Frames)	57	57	56	54	57	54
P-0-4-3						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	4,078	6,206	3,400,938	1,734,775	907,587	742,895
- Rx Rate (L1) (Bit/s)	91.35 K	244.93 K	250.31 M	246.11 M	252.67 M	257.54 M
- Rx Rate (Fps)	136	207	113,365	57,826	30,253	24,763
- Flood Count (Frames)	57	55	53	57	55	51
P-0-4-4						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	3,955	6,082	3,400,603	1,734,409	907,090	741,997
- Rx Rate (L1) (Bit/s)	88.59 K	240.04 K	250.28 M	246.05 M	252.53 M	257.23 M
- Rx Rate (Fps)	132	203	113,353	57,814	30,236	24,733
- Flood Count (Frames)	58	56	56	54	57	53
P-0-4-5						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	3,845	6,007	3,401,542	1,735,407	907,147	742,215
- Rx Rate (L1) (Bit/s)	86.13 K	237.08 K	250.35 M	246.2 M	252.55 M	257.3 M
- Rx Rate (Fps)	128	200	113,385	57,847	30,238	24,741
- Flood Count (Frames)	56	58	54	54	58	55

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,462
Rx Rate (Percent)	25.27 %
Rx Rate (L1) (Bit/s)	4.55 G
Rx Rate (Fps)	369.71 K
Loss Rate (Percent)	49.46 %
Loss (Frames)	10,852,581
P-0-0-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	614,152
- Rx Rate (L1) (Bit/s)	251.88 M
- Rx Rate (Fps)	20,472
- Flood Count (Frames)	23
P-0-0-1	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	607,497
- Rx Rate (L1) (Bit/s)	249.15 M




- Rx Rate (Fps)	20,250
- Flood Count (Frames)	58
P-0-0-2 - Tx (Frames)	1,219,104
- Tx (Hames)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	616,860
- Rx Rate (L1) (Bit/s)	252.99 M
- Rx Rate (Fps)	20,562
- Flood Count (Frames)	55
P-0-0-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	595,185
- Rx Rate (L1) (Bit/s)	244.11 M
- Rx Rate (Fps)	19,840
- Flood Count (Frames)	53
P-0-0-4	4 040 404
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames) - Rx Rate (L1) (Bit/s)	618,722 253.76 M
- Rx Rate (Fps) - Flood Count (Frames)	20,624
P-0-0-5	54
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	619,415
- Rx Rate (L1) (Bit/s)	254.04 M
- Rx Rate (Fps)	20,647
- Flood Count (Frames)	56
P-0-2-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	620,234
- Rx Rate (L1) (Bit/s)	254.38 M
- Rx Rate (Fps)	20,674
- Flood Count (Frames)	55
P-0-2-1	1 010 101
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	620,513
- Rx Rate (L1) (Bit/s)	254.49 M 20,684
- Rx Rate (Fps) - Flood Count (Frames)	20,004
P-0-2-2	55
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	618,989
- Rx Rate (L1) (Bit/s)	253.87 M
- Rx Rate (Fps)	20,633
- Flood Count (Frames)	58
P-0-2-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	620,342
- Rx Rate (L1) (Bit/s)	254.42 M
- Rx Rate (Fps)	20,678
- Flood Count (Frames)	54
P-0-2-4	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	619,579



D. D. t. (1.4) (D:t/s)	0544414
- Rx Rate (L1) (Bit/s)	254.11 M
- Rx Rate (Fps)	20,653
- Flood Count (Frames)	55
P-0-2-5	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	619,287
- Rx Rate (L1) (Bit/s)	253.99 M
- Rx Rate (Fps)	20,643
- Flood Count (Frames)	54
P-0-4-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	617,925
- Rx Rate (L1) (Bit/s)	253.43 M
- Rx Rate (Fps)	20,598
- Flood Count (Frames)	55
P-0-4-1	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	617,910
- Rx Rate (L1) (Bit/s)	253.43 M
- Rx Rate (Fps)	20,597
- Flood Count (Frames)	55
P-0-4-2	1.010.101
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	616,752
- Rx Rate (L1) (Bit/s)	252.95 M
- Rx Rate (Fps)	20,558
- Flood Count (Frames)	55
P-0-4-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	616,719
- Rx Rate (L1) (Bit/s)	252.94 M
- Rx Rate (Fps)	20,557
- Flood Count (Frames)	54
P-0-4-4	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	616,133
- Rx (Frames)	252.7 M
	202.7 1
- Rx Rate (Fps)	20,538
- Flood Count (Frames)	52
P-0-4-5	4 040 404
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	615,077
- Rx (Frames) - Rx Rate (L1) (Bit/s)	252.26 M
- Rx (Frames)	



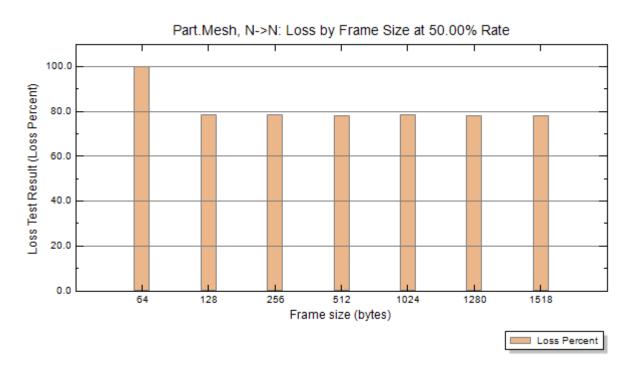

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G
Tx Rate (Fps)	16,071,426	9,121,615	4,891,298	2,537,587	1,293,095	1,038,452
Rx Rate (Percent)	0.01 %	0.02 %	0.5 %	28.89 %	29.8 %	29.87 %
Rx Rate (L1) (Bit/s)	1.67 M	3.62 M	90.34 M	5.2 G	5.36 G	5.38 G
Rx Rate (Fps)	2.49 K	3.05 K	40.92 K	1.22 M	642.26 K	517.01 K
Loss Rate (Percent)	99.98 %	99.97 %	99.16 %	51.85 %	50.33 %	50.21 %
Loss (Frames)	482,068,072	273,556,809	145,511,425	39,475,445	19,525,065	15,643,321
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,205	5,229	70,426	2,042,442	1,070,608	862,841
- Rx Rate (L1) (Bit/s)	94.19 K	206.37 K	5.18 M	289.75 M	298.06 M	299.12 M
- Rx Rate (Fps)	140	174	2,348	68,081	35,687	28,761
- Flood Count (Frames)	29	28	28	21	24	23
P-0-0-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,409	5,315	70,203	2,042,238	1,070,555	862,520
- Rx Rate (L1) (Bit/s)	98.76 K	209.77 K	5.17 M	289.73 M	298.04 M	299.01 M
- Rx Rate (Fps)	147	177	2,340	68,075	35,685	28,751
- Flood Count (Frames)	61	59	61	55	54	54
P-0-0-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	2,651	5,417	70,288	2,020,983	1,071,081	862,650
- Rx Rate (L1) (Bit/s)	59.38 K	213.79 K	5.17 M	286.71 M	298.19 M	299.05 M
- Rx Rate (Fps)	88	181	2,343	67,366	35,703	28,755
- Flood Count (Frames)	59	59	61	54	55	55
P-0-0-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,659	5,348	70,881	2,039,320	1,070,605	862,607



- Rx Rate (L1) (Bit/s)	104.36 K	211.07 K	5.22 M	289.31 M	298.06 M	299.04 M
- Rx Rate (Fps)	155	178	2,363	67,977	35,687	28,754
- Flood Count (Frames)	58	59	61	53	55	60
P-0-0-4						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,667	5,397	7,853	2,039,541	1,071,387	862,266
- Rx Rate (L1) (Bit/s)	104.54 K	213 K	577.98 K	289.34 M	298.27 M	298.92 M
- Rx Rate (Fps)	156	180	262	67,985	35,713	28,742
- Flood Count (Frames)	59	58	60	54	58	55
P-0-0-5	00 705 740	45 202 602	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M 892.857	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps) - Rx (Frames)	4,660	506,756 5,411	271,739 72,420	140,977 2,038,140	71,839 1,071,489	57,692 862,575
, ,		213.55 K				
- Rx Rate (L1) (Bit/s)	104.38 K		5.33 M	289.14 M	298.3 M	299.03 M
- Rx Rate (Fps)	155 59	180	2,414	67,938	35,716	28,753
- Flood Count (Frames) P-0-2-0	59	59	01	54	56	54
	26,785,710	15 202 602	0 150 160	4 220 211	2 155 150	1 720 752
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,710 600 M	15,202,692 600 M	8,152,163 600 M	4,229,311 600 M	2,155,158 600 M	1,730,753 599.99 M
- Tx Rate (LT) (Bit/s)	892,857	506,756	271,739	140,977	71,839	599.99 M 57,692
- Rx (Frames)	2,670	5,357	73,017	2,036,777	1,070,891	862,935
- Rx (Frames) - Rx Rate (L1) (Bit/s)	2,670 59.81 K	5,357 211.42 K	5.37 M	2,036,777 288.95 M	298.14 M	299.15 M
. , , , , ,	39.61 K	179	2,434	67,893	35,696	299.15 W
- Rx Rate (Fps) - Flood Count (Frames)	58	59	62	54	55,090	20,765
P-0-2-1	36	39	02	34	30	
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Er) (Blus)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,765	5,427	73,978	2,010,016	1,070,939	862,422
- Rx Rate (L1) (Bit/s)	106.74 K	214.19 K	5.44 M	285.15 M	298.15 M	298.97 M
- Rx Rate (Fps)	159	181	2,466	67,001	35,698	28,747
- Flood Count (Frames)	61	58	59	54	55	57
P-0-2-2	01		- 00	04		01
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,619	5,422	74,734	2,034,923	1,071,156	843,167
- Rx Rate (L1) (Bit/s)	103.47 K	213.99 K	5.5 M	288.69 M	298.21 M	292.3 M
- Rx Rate (Fps)	154	181	2,491	67,831	35,705	28,106
- Flood Count (Frames)	60	58	61	54	58	57
P-0-2-3						
- Tx (Frames)	26,785,710	15,202,692	8.152.163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,689	5,413	75,074	2,037,165	1,057,720	862,312
- Rx Rate (L1) (Bit/s)	105.03 K	213.63 K	5.53 M	289.01 M	294.47 M	298.93 M
- Rx Rate (Fps)	156	180	2,502	67,906	35,257	28,744
- Flood Count (Frames)	61	57	61	54	55	54
P-0-2-4						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	2,665	5,316	74,280	2,036,935	1,071,962	862,985
- Rx Rate (L1) (Bit/s)	59.7 K	209.8 K	5.47 M	288.97 M	298.43 M	299.17 M
- Rx Rate (Fps)	89	177	2,476	67,898	35,732	28,766
- Flood Count (Frames)	58	59	61	56	56	55
P-0-2-5						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,703	3,740	74,016	2,036,561	1,071,431	862,680
- Rx Rate (L1) (Bit/s)	105.35 K	147.61 K	5.45 M	288.92 M	298.29 M	299.06 M
- Rx Rate (Fps)	157	125	2,467	67,885	35,714	28,756
- Flood Count (Frames)	61	57	61	54	57	56
P-0-4-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (L1) (Bit/s)	OUO IVI	000 101	000 111		000 IVI	000.00 IVI



- Rx (Frames)	4,652	5,070	72,113	2,037,159	1,071,649	863,163
- Rx Rate (L1) (Bit/s)	104.2 K	200.1 K	5.31 M	289 M	298.35 M	299.23 M
- Rx Rate (Fps)	155	169	2,404	67,905	35,722	28,772
- Flood Count (Frames)	59	55	58	55	56	56
P-0-4-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,559	4,931	70,435	2,037,358	1,072,083	863,133
- Rx Rate (L1) (Bit/s)	102.12 K	194.61 K	5.18 M	289.03 M	298.47 M	299.22 M
- Rx Rate (Fps)	152	164	2,348	67,912	35,736	28,771
- Flood Count (Frames)	55	55	61	55	55	55
P-0-4-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,204	4,854	70,032	2,040,387	1,071,499	863,458
- Rx Rate (L1) (Bit/s)	94.17 K	191.57 K	5.15 M	289.46 M	298.31 M	299.33 M
- Rx Rate (Fps)	140	162	2,334	68,013	35,717	28,782
- Flood Count (Frames)	57	56	58	53	56	56
P-0-4-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,221	4,807	69,445	2,041,251	1,070,743	863,001
- Rx Rate (L1) (Bit/s)	94.55 K	189.72 K	5.11 M	289.59 M	298.09 M	299.17 M
- Rx Rate (Fps)	141	160	2,315	68,042	35,691	28,767
- Flood Count (Frames)	60	55	58	56	53	56
P-0-4-4						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	3,968	4,660	69,519	2,039,203	1,070,873	862,977
- Rx Rate (L1) (Bit/s)	88.88 K	183.91 K	5.12 M	289.29 M	298.13 M	299.17 M
- Rx Rate (Fps)	132	155	2,317	67,973	35,696	28,766
- Flood Count (Frames)	58	54	58	54	51	53
P-0-4-5						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	3,742	4,533	68,795	2,041,754	1,071,108	862,541
- Rx Rate (L1) (Bit/s)	83.82 K	178.9 K	5.06 M	289.66 M	298.2 M	299.01 M
- Rx Rate (Fps)	125	151	2,293	68,058	35,704	28,751
- Flood Count (Frames)	55	58	59	54	55	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10.8 G
Tx Rate (Fps)	877,761
Rx Rate (Percent)	29.92 %
Rx Rate (L1) (Bit/s)	5.39 G
Rx Rate (Fps)	437.78 K
Loss Rate (Percent)	50.13 %
Loss (Frames)	13,199,567
P-0-0-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,924
- Rx Rate (L1) (Bit/s)	298.96 M
- Rx Rate (Fps)	24,297
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,743
- Rx Rate (L1) (Bit/s)	298.88 M




- Rx Rate (Fps)	24,291
- Flood Count (Frames)	53
P-0-0-2	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	729,219
- Rx Rate (L1) (Bit/s)	299.08 N
- Rx Rate (Fps)	24,307
- Flood Count (Frames)	55
P-0-0-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,590
- Rx Rate (L1) (Bit/s)	299.64 N
- Rx Rate (Fps)	24,353
- Flood Count (Frames)	54
P-0-0-4	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,761
- Rx Rate (L1) (Bit/s)	299.71 N
- Rx Rate (Fps)	24,359
- Flood Count (Frames)	53
P-0-0-5	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,667
- Rx Rate (L1) (Bit/s)	299.67 N
- Rx Rate (Fps)	24,356
- Flood Count (Frames)	24,330
P-0-2-0	
	1 462 025
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	729,986
- Rx Rate (L1) (Bit/s)	299.39 M
- Rx Rate (Fps)	24,333
- Flood Count (Frames)	55
P-0-2-1	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	/30,481
- Rx Rate (L1) (Bit/s)	299.59 N
- Rx Rate (Fps)	24,349
- Flood Count (Frames)	56
P-0-2-2	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 N
- Tx Rate (Fps)	48,765
- Rx (Frames)	728,681
- Rx Rate (L1) (Bit/s)	298.86 N
- Rx Rate (Fps)	24,289
- Flood Count (Frames)	57
P-0-2-3	
T (F)	1,462,935
- Tx (Frames)	
	000 IV
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	600 M 48,765
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	48,765
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	48,765 729,061
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	48,765 729,061 299.01 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	48,765 729,061 299.01 M 24,302
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	48,765 729,061 299.01 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	48,765 729,061 299.01 M 24,302 56
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames)	48,765 729,061 299.01 M 24,302 56 1,462,935
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	48,765 729,061 299.01 M 24,302 56



- Rx Rate (L1) (Bit/s)	299.66 M
- Rx Rate (Fps)	24,355
- Flood Count (Frames)	56
P-0-2-5	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,461
- Rx Rate (L1) (Bit/s)	299.59 M
- Rx Rate (Fps)	24,349
- Flood Count (Frames)	55
P-0-4-0	4 400 005
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,462,935
	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	729,756
- Rx Rate (L1) (Bit/s)	299.3 M
- Rx Rate (Fps)	24,325
- Flood Count (Frames)	56
P-0-4-1	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	730,558
- Rx Rate (L1) (Bit/s)	299.63 M
- Rx Rate (Fps)	24,352
- Flood Count (Frames)	56
P-0-4-2	1 460 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	600 M
- Rx (Frames)	48,765 727,006
- Rx (Frames) - Rx Rate (L1) (Bit/s)	298.17 M
- Rx Rate (ET) (Blus)	24,234
- Flood Count (Frames)	53
P-0-4-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (ET) (Bl/s)	48,765
- Rx (Frames)	729,978
- Rx Rate (L1) (Bit/s)	299.39 M
- Rx Rate (Fps)	24,333
- Flood Count (Frames)	53
P-0-4-4	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (E1) (Bl/s)	48,765
- Rx (Frames)	730,305
- Rx Rate (L1) (Bit/s)	299.52 M
- Rx Rate (Fps)	24,344
- Flood Count (Frames)	52
P-0-4-5	32
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	727,451
- Rx Rate (L1) (Bit/s)	298.35 M
- Rx Rate (Fps)	24,248
- Flood Count (Frames)	54
	J.



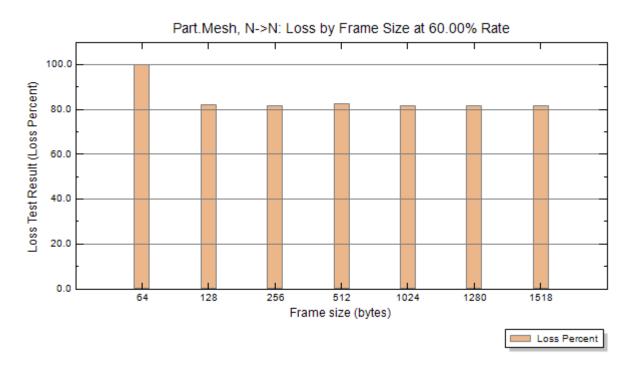

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G
Tx Rate (Fps)	18,749,997	10,641,884	5,706,512	2,960,519	1,508,611	1,211,536
Rx Rate (Percent)	0.01 %	0.02 %	0.06 %	33.21 %	34.25 %	32.77 %
Rx Rate (L1) (Bit/s)	1.2 M	3.25 M	10.02 M	5.98 G	6.16 G	5.9 G
Rx Rate (Fps)	1.78 K	2.74 K	4.54 K	1.4 M	738.07 K	567.12 K
Loss Rate (Percent)	99.99 %	99.97 %	99.92 %	52.56 %	51.08 %	53.19 %
Loss (Frames)	562,446,550	319,174,297	171,059,268	46,678,092	23,116,246	19,332,570
P-0-0-0						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,001	3,373	6,759	2,258,411	1,233,949	949,806
- Rx Rate (L1) (Bit/s)	67.22 K	133.12 K	497.46 K	320.39 M	343.53 M	329.27 M
- Rx Rate (Fps)	100	112	225	75,280	41,132	31,660
- Flood Count (Frames)	27	21	34	25	25	24
P-0-0-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,229	4,991	8,037	2,352,091	1,234,428	949,449
- Rx Rate (L1) (Bit/s)	72.33 K	196.98 K	591.52 K	333.68 M	343.66 M	329.14 M
- Rx Rate (Fps)	108	166	268	78,403	41,148	31,648
- Flood Count (Frames)	60	58	60	55	55	56
P-0-0-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,287	3,391	7,929	2,352,588	1,231,408	950,097
- Rx Rate (L1) (Bit/s)	73.63 K	133.83 K	583.57 K	333.75 M	342.82 M	329.37 M
- Rx Rate (Fps)	110	113	264	78,420	41,047	31,670
- Flood Count (Frames)	60	58	58	57	55	52
P-0-0-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,266	5,260	8,162	2,352,945	1,234,177	948,352



- Rx Rate (L1) (Bit/s)	73.16 K	207.59 K	600.72 K	333.8 M	343.59 M	328.76 M
- Rx Rate (Fps)	109	175	272	78,432	41,139	31,612
- Flood Count (Frames)	61	59	60	52	55	56
P-0-0-4	24 240 005	47 700 474	0.540.054	4 004 400	0.544.054	2 040 220
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M 1,041,667	700 M	700 M	700 M 164,473	700 M	700 M
- Tx Rate (Fps)		591,216	317,028		83,812	67,308
- Rx (Frames)	3,294	5,300	8,054	2,286,927	1,220,400	887,824
- Rx Rate (L1) (Bit/s)	73.79 K	209.17 K	592.77 K	324.44 M	339.76 M	307.78 M
- Rx Rate (Fps)	110	177	268	76,231	40,680	29,594
- Flood Count (Frames)	57	60	61	54	56	57
P-0-0-5 - Tx (Frames)	24 240 005	47 700 474	0.540.054	4 004 400	0.544.054	0.040.000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
, , , ,	700 M 1.041.667	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps) - Rx (Frames)	3,305	591,216 5,288	317,028 8,060	164,473 2,352,281	83,812 1,234,305	67,308 949,137
, ,	74.03 K		593.22 K			329.03 M
- Rx Rate (L1) (Bit/s)		208.7 K		333.71 M	343.63 M	
- Rx Rate (Fps)	110	176	269	78,409	41,144	31,638
- Flood Count (Frames) P-0-2-0	57	61	60	55	55	54
	24 240 005	17 726 474	9.510.854	4 024 100	0.514.051	2.040.226
- Tx (Frames)	31,249,995	17,736,474	- , ,	4,934,199	2,514,351 700 M	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M 83,812	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473 2,352,925		67,308 944,279
- Rx (Frames)	3,284	3,394	6,566		1,234,386	
- Rx Rate (L1) (Bit/s)	73.56 K	133.95 K	483.26 K	333.8 M	343.65 M	327.35 M
- Rx Rate (Fps)	109	113	219	78,431	41,146	31,476
- Flood Count (Frames)	58	59	62	55	54	52
P-0-2-1 - Tx (Frames)	24 240 005	17 726 474	0.510.054	4 024 100	0.514.051	2.040.226
,	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,274	5,326	7,800	2,353,792	1,234,256	939,014
- Rx Rate (L1) (Bit/s)	73.34 K	210.2 K	574.08 K	333.92 M	343.62 M	325.52 M
- Rx Rate (Fps)	109 59	178 59	260 58	78,460	41,142	31,300 54
- Flood Count (Frames) P-0-2-2	59	59	36	54	53	34
	24 240 005	17 726 474	0.510.054	4 024 100	0 514 051	2.040.226
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,148	5,300	7,554	2,301,417	1,230,980	949,617
- Rx (Flames)	48.12 K	209.17 K	555.97 K	326.49 M	342.7 M	329.2 M
- Rx Rate (Fps)	72	177	252	76,714	41,033	31,654
- Flood Count (Frames)	59	59	58	54	54	51,054
P-0-2-3	39	39	30	34	34	30
- Tx (Frames)	31.249.995	17,736,474	9.510.854	4.934.199	2,514,351	2,019,226
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,148	3,394	7,707	2,353,193	1,218,593	949,559
- Rx Rate (L1) (Bit/s)	48.12 K	133.95 K	567.24 K	333.84 M	339.26 M	329.18 M
- Rx Rate (Fps)	72	113	257	78,440	40,620	31,652
- Flood Count (Frames)	59	58	60	55	56	51,052
P-0-2-4	39	30	00	33	30	J -1
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4.934.199	2,514,351	2,019,226
- Tx (Frames)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,146	5,299	7,672	2,352,423	1,234,642	950,719
- Rx Rate (L1) (Bit/s)	48.07 K	209.13 K	564.66 K	333.73 M	343.72 M	329.58 M
- Rx Rate (E1) (Bit/s)	46.07 K	209.13 K	256	78,414	41,155	31,691
- Flood Count (Frames)	57	60	59	58	54	51,091
P-0-2-5	31	00	39	30	34	- 33
	21 240 005	17 726 474	0.510.954	4 024 100	2 514 251	2 010 226
- Tx (Frames)	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M
- Tx Rate (L1) (Bit/s)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Tx Rate (Fps)						
- Rx (Frames)	3,328	3,273	7,652	2,352,364	1,193,452	948,904
- Rx Rate (L1) (Bit/s)	74.55 K	129.17 K	563.19 K	333.72 M	332.26 M	328.95 M
- Rx Rate (Fps)	111	109	255 57	78,412	39,782	31,630
- Flood Count (Frames)	61	58	57	54	52	57
P-0-4-0	21 240 005	17 706 474	0 E40 0E4	4 024 400	0 E44 0E4	2.040.000
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308



- Rx (Frames)	3,290	5,078	7,563	2,352,804	1,234,656	949,088
- Rx Rate (L1) (Bit/s)	73.7 K	200.41 K	556.64 K	333.78 M	343.73 M	329.02 M
- Rx Rate (Fps)	110	169	252	78,427	41,155	31,636
- Flood Count (Frames)	56	58	57	56	55	56
P-0-4-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,305	4,943	7,284	2,352,497	1,234,798	949,469
- Rx Rate (L1) (Bit/s)	74.03 K	195.08 K	536.1 K	333.74 M	343.77 M	329.15 M
- Rx Rate (Fps)	110	165	243	78,417	41,160	31,649
- Flood Count (Frames)	58	59	59	53	53	57
P-0-4-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	3,058	4,812	7,441	2,352,221	1,234,376	949,317
- Rx Rate (L1) (Bit/s)	68.5 K	189.91 K	547.66 K	333.7 M	343.65 M	329.1 M
- Rx Rate (Fps)	102	160	248	78,407	41,146	31,644
- Flood Count (Frames)	57	59	59	53	53	55
P-0-4-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,898	4,709	7,259	2,353,110	1,234,767	949,396
- Rx Rate (L1) (Bit/s)	64.92 K	185.85 K	534.26 K	333.83 M	343.76 M	329.12 M
- Rx Rate (Fps)	97	157	242	78,437	41,159	31,647
- Flood Count (Frames)	58	61	58	52	54	55
P-0-4-4						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,664	4,614	7,382	2,352,108	1,234,199	950,025
- Rx Rate (L1) (Bit/s)	59.67 K	182.1 K	543.32 K	333.69 M	343.6 M	329.34 M
- Rx Rate (Fps)	89	154	246	78,404	41,140	31,668
- Flood Count (Frames)	56	60	56	57	55	57
P-0-4-5						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	2,435	4,490	7,223	2,353,393	1,234,300	949,446
- Rx Rate (L1) (Bit/s)	54.54 K	177.21 K	531.61 K	333.87 M	343.63 M	329.14 M
- Rx Rate (Fps)	81	150	241	78,446	41,143	31,648
- Flood Count (Frames)	53	58	58	53	54	52

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12.6 G
Tx Rate (Fps)	1,024,049
Rx Rate (Percent)	33.97 %
Rx Rate (L1) (Bit/s)	6.11 G
Rx Rate (Fps)	496.97 K
Loss Rate (Percent)	51.47 %
Loss (Frames)	15,812,490
P-0-0-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	834,743
- Rx Rate (L1) (Bit/s)	342.36 M
- Rx Rate (Fps)	27,825
- Flood Count (Frames)	20
P-0-0-1	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	835,351
- Rx Rate (L1) (Bit/s)	342.61 M




Du Data (Fina)	07.045
- Rx Rate (Fps) - Flood Count (Frames)	27,845 57
P-0-0-2	31
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	834,301
- Rx Rate (L1) (Bit/s)	342.17 M
- Rx Rate (Fps)	27,810
- Flood Count (Frames)	56
P-0-0-3	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	834,413 342.22 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	27,814
- Flood Count (Frames)	54
P-0-0-4	J4
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	834,944
- Rx Rate (L1) (Bit/s)	342.44 M
- Rx Rate (Fps)	27,831
- Flood Count (Frames)	54
P-0-0-5	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	833,298
- Rx Rate (L1) (Bit/s)	341.76 M
- Rx Rate (Fps)	27,777
- Flood Count (Frames)	56
P-0-2-0	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	699.99 M 56,892
- Rx (Frames)	835,548
- Rx Rate (L1) (Bit/s)	342.69 M
- Rx Rate (Fps)	27,852
- Flood Count (Frames)	54
P-0-2-1	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	823,180
- Rx Rate (L1) (Bit/s)	337.61 M
- Rx Rate (Fps)	27,439
- Flood Count (Frames)	54
P-0-2-2	. =
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	780,332
- Rx Rate (L1) (Bit/s)	320.04 M
- Rx Rate (Fps)	26,011
- Flood Count (Frames) P-0-2-3	55
- Tx (Frames)	1,706,749
- Tx (Frames) - Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	835,193
- Rx Rate (L1) (Bit/s)	342.54 M
- Rx Rate (Fps)	27,840
- Flood Count (Frames)	54
P-0-2-4	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	831,956



- Rx Rate (L1) (Bit/s)	341.21 M
- Rx Rate (Fps)	27,732
- Flood Count (Frames)	55
P-0-2-5	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	785,615
- Rx Rate (L1) (Bit/s)	322.21 M
- Rx Rate (Fps)	26,187
- Flood Count (Frames)	57
P-0-4-0	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	834,374
- Rx Rate (L1) (Bit/s)	342.2 M
- Rx Rate (Fps)	27,812
- Flood Count (Frames)	55
P-0-4-1	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	835,361
- Rx Rate (L1) (Bit/s)	342.61 M
- Rx Rate (Fps)	27,845
- Flood Count (Frames)	56
P-0-4-2	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	832,774
- Rx Rate (L1) (Bit/s)	341.55 M
- Rx Rate (Fps)	27,759
- Flood Count (Frames)	53
P-0-4-3	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	835,975
- Rx Rate (L1) (Bit/s)	342.86 M
- Rx Rate (Fps)	27,866
- Flood Count (Frames)	56
P-0-4-4	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	836,080
- Rx Rate (L1) (Bit/s)	342.9 M
- Rx Rate (Fps)	27,869
- Flood Count (Frames)	52
P-0-4-5	1 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	835,554
- Rx Rate (L1) (Bit/s)	342.69 M
- Rx Rate (Fps)	27,852
- Flood Count (Frames)	54



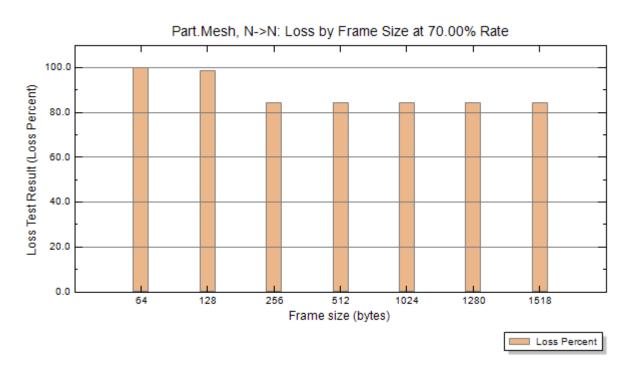

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G
Tx Rate (Fps)	21,428,568	12,162,154	6,521,737	3,383,452	1,724,137	1,384,609
Rx Rate (Percent)	0.01 %	0.02 %	0.05 %	37.66 %	38.91 %	37.43 %
Rx Rate (L1) (Bit/s)	992.72 K	2.94 M	8.76 M	6.78 G	7 G	6.74 G
Rx Rate (Fps)	1.48 K	2.48 K	3.97 K	1.59 M	838.65 K	647.79 K
Loss Rate (Percent)	99.99 %	99.98 %	99.94 %	52.93 %	51.36 %	53.22 %
Loss (Frames)	642,812,722	364,790,094	195,533,155	53,725,977	26,564,726	22,104,690
P-0-0-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	1,473	4,309	6,930	2,658,420	1,382,303	1,076,557
- Rx Rate (L1) (Bit/s)	33 K	170.06 K	510.05 K	377.14 M	384.83 M	373.21 M
- Rx Rate (Fps)	49	144	231	88,614	46,077	35,885
- Flood Count (Frames)	28	28	33	27	24	24
P-0-0-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,335	4,480	6,988	2,633,175	1,398,512	1,081,571
- Rx Rate (L1) (Bit/s)	52.3 K	176.81 K	514.32 K	373.56 M	389.35 M	374.94 M
- Rx Rate (Fps)	78	149	233	87,773	46,617	36,052
- Flood Count (Frames)	58	62	59	52	57	55
P-0-0-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,647	4,483	7,019	2,659,196	1,399,675	1,080,403
- Rx Rate (L1) (Bit/s)	59.29 K	176.93 K	516.6 K	377.25 M	389.67 M	374.54 M
- Rx Rate (Fps)	88	149	234	88,640	46,656	36,013
- Flood Count (Frames)	61	61	58	56	52	57
P-0-0-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,706	4,431	7,044	2,615,533	1,399,324	1,081,178



- Rx Rate (L1) (Bit/s)	60.61 K	174.88 K	518.44 K	371.06 M	389.57 M	374.81 N
- Rx Rate (Fps)	90	148	235	87,184	46,644	36,03
- Flood Count (Frames)	61	59	58	53	54	5
P-0-0-4	05 744 000	00.070.050	40.000.500	5 000 007	0.070.504	0.007.00
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 1
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,688	4,563	6,998	2,658,945	1,380,691	1,080,50
- Rx Rate (L1) (Bit/s)	60.21 K	180.09 K	515.05 K	377.22 M	384.38 M	374.57 N
- Rx Rate (Fps)	90	152	233	88,632	46,023	36,01
- Flood Count (Frames)	62	62	59	56	58	5
P-0-0-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	1 008
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,712	2,903	6,979	2,659,341	1,398,701	1,081,16
- Rx Rate (L1) (Bit/s)	60.75 K	114.57 K	513.65 K	377.27 M	389.4 M	374.8 N
- Rx Rate (Fps)	90	97	233	88,645	46,623	36,03
- Flood Count (Frames)	59	60	59	54	59	5
P-0-2-0	33		33	34		
	25 714 200	20,270,256	10 960 562	E 620 007	2 072 561	2 207 60
- Tx (Frames)	35,714,280		10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 N
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,706	2,903	6,927	2,643,096	1,400,107	1,065,49
- Rx Rate (L1) (Bit/s)	60.61 K	114.57 K	509.83 K	374.97 M	389.79 M	369.37 N
- Rx Rate (Fps)	90	97	231	88,103	46,670	35,51
- Flood Count (Frames)	57	60	58	53	56	5
P-0-2-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	4 008
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,728	4,478	6,854	2,658,910	1,399,610	1,080,57
- Rx Rate (L1) (Bit/s)	61.11 K	176.73 K	504.45 K	377.21 M	389.65 M	374.6 N
- Rx Rate (Fps)	91	149	228	88,630	46,654	36,01
- Flood Count (Frames)	59	61	61	55	58	54
P-0-2-2	33	01	01	33	30	<u> </u>
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx (Frames)	800 M	800 M	800 M	800 M	800 M	2,307,002 800 N
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,705	4,501	6,761	2,659,114	1,400,541	1,080,28
- Rx Rate (L1) (Bit/s)	60.59 K	177.64 K	497.61 K	377.24 M	389.91 M	374.5 N
- Rx Rate (Fps)	90	150	225	88,637	46,685	36,00
- Flood Count (Frames)	59	59	59	56	56	5
P-0-2-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	N 008
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	1,474	4,513	5,452	2,659,760	1,400,247	1,080,570
- Rx Rate (L1) (Bit/s)	33.02 K	178.11 K	401.27 K	377.33 M	389.83 M	374.6 N
- Rx Rate (Fps)	49	150	182	88,659	46,675	36,01
- Flood Count (Frames)	56	60	58	56	55	5
P-0-2-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx (Frames)	800 M	800 M	800 M	800 M	800 M	2,307,00. 800 N
- Tx Rate (E1) (Blus)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,757	4,453	6,640	2,658,292	1,400,571	1,081,74
, ,				377.12 M	389.92 M	
- Rx Rate (L1) (Bit/s)	61.76 K	175.75 K	488.7 K			375 N
- Rx Rate (Fps)	92	148	221	88,610	46,686	36,05
- Flood Count (Frames)	61	59	59	55	57	5
P-0-2-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,68
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	N 008
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,92
- Rx (Frames)	2,725	4,469	6,604	2,660,001	1,401,010	1,077,71
- Rx Rate (L1) (Bit/s)	61.04 K	176.38 K	486.05 K	377.37 M	390.04 M	373.61 N
- Rx Rate (Fps)	91	149	220	88,667	46,700	35,92
- Flood Count (Frames)	59	59	61	52	57	5
` ,						
P-0-4-0						
P-0-4-0 - Tx (Frames)	35 714 280	20 270 256	10 869 562	5 639 087 □	2 873 561	2 307 68
P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s)	35,714,280 800 M	20,270,256 800 M	10,869,562 800 M	5,639,087 800 M	2,873,561 800 M	2,307,682 800 N



- Rx (Frames)	2,740	4,344	6,485	2,658,742	1,399,752	1,080,953
- Rx Rate (L1) (Bit/s)	61.38 K	171.44 K	477.3 K	377.19 M	389.69 M	374.73 M
- Rx Rate (Fps)	91	145	216	88,625	46,658	36,032
- Flood Count (Frames)	56	58	59	52	55	54
P-0-4-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,705	4,265	6,364	2,658,495	1,400,197	1,080,550
- Rx Rate (L1) (Bit/s)	60.59 K	168.33 K	468.39 K	377.15 M	389.81 M	374.59 M
- Rx Rate (Fps)	90	142	212	88,617	46,673	36,018
- Flood Count (Frames)	57	56	56	54	54	57
P-0-4-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,687	4,064	6,361	2,658,830	1,399,933	1,081,554
- Rx Rate (L1) (Bit/s)	60.19 K	160.39 K	468.17 K	377.2 M	389.74 M	374.94 M
- Rx Rate (Fps)	90	135	212	88,628	46,664	36,052
- Flood Count (Frames)	56	57	58	55	55	56
P-0-4-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,443	3,884	6,304	2,659,094	1,399,630	1,081,550
- Rx Rate (L1) (Bit/s)	54.72 K	153.29 K	463.97 K	377.24 M	389.66 M	374.94 M
- Rx Rate (Fps)	81	129	210	88,636	46,654	36,052
- Flood Count (Frames)	56	57	57	52	55	55
P-0-4-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	2,170	3,824	6,180	2,659,492	1,399,869	1,081,261
- Rx Rate (L1) (Bit/s)	48.61 K	150.92 K	454.85 K	377.29 M	389.72 M	374.84 M
- Rx Rate (Fps)	72	127	206	88,650	46,662	36,042
- Flood Count (Frames)	59	55	56	55	55	54
P-0-4-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	1,917	3,647	6,071	2,659,153	1,398,699	1,079,959
- Rx Rate (L1) (Bit/s)	42.94 K	143.93 K	446.83 K	377.25 M	389.4 M	374.39 M
- Rx Rate (Fps)	64	122	202	88,638	46,623	35,999
- Flood Count (Frames)	59	58	58	54	53	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14.4 G
Tx Rate (Fps)	1,170,348
Rx Rate (Percent)	37.32 %
Rx Rate (L1) (Bit/s)	6.72 G
Rx Rate (Fps)	545.94 K
Loss Rate (Percent)	53.35 %
Loss (Frames)	18,732,321
P-0-0-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	909,357
- Rx Rate (L1) (Bit/s)	372.96 M
- Rx Rate (Fps)	30,312
- Flood Count (Frames)	23
P-0-0-1	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,234
- Rx Rate (L1) (Bit/s)	373.73 M




- Rx Rate (Fps)	30,374
- Flood Count (Frames)	54
P-0-0-2	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps) - Rx (Frames)	65,019 911,495
- Rx Rate (L1) (Bit/s)	373.83 M
- Rx Rate (Fps)	30,383
- Flood Count (Frames)	54
P-0-0-3	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,882
- Rx Rate (L1) (Bit/s)	373.99 M
- Rx Rate (Fps)	30,396
- Flood Count (Frames)	55
P-0-0-4	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	896,855
- Rx Rate (L1) (Bit/s)	367.83 M
- Rx Rate (Fps)	29,895
- Flood Count (Frames) P-0-0-5	57
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	1,930,380 800 M
- Tx Rate (Er) (Blus)	65,019
- Rx (Frames)	911,267
- Rx Rate (L1) (Bit/s)	373.74 M
- Rx Rate (Fps)	30,376
- Flood Count (Frames)	54
P-0-2-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	902,030
- Rx Rate (L1) (Bit/s)	369.95 M
- Rx Rate (Fps)	30,068
- Flood Count (Frames)	54
P-0-2-1	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames) - Rx Rate (L1) (Bit/s)	912,446 374.22 M
- Rx Rate (Fps)	30,415
- Flood Count (Frames)	54
P-0-2-2	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	909,165
- Rx Rate (L1) (Bit/s)	372.88 M
- Rx Rate (Fps)	30,306
- Flood Count (Frames)	52
P-0-2-3	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	909,628
- Rx Rate (L1) (Bit/s)	373.07 M
- Rx Rate (Fps)	30,321
- Flood Count (Frames)	55
P-0-2-4	1.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,908



- Rx Rate (L1) (Bit/s)	374 M
- Rx Rate (Fps)	30,397
- Flood Count (Frames)	52
P-0-2-5	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	909,937
- Rx Rate (L1) (Bit/s)	373.2 M
- Rx Rate (Fps)	30,331
- Flood Count (Frames)	54
P-0-4-0	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,861
- Rx Rate (L1) (Bit/s)	373.98 M
- Rx Rate (Fps)	30,395
- Flood Count (Frames)	54
P-0-4-1	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	912,324
- Rx Rate (L1) (Bit/s)	374.17 M
- Rx Rate (Fps)	30,411
- Flood Count (Frames)	52
P-0-4-2	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,924
- Rx Rate (L1) (Bit/s)	374.01 M
- Rx Rate (Fps)	30,397
- Flood Count (Frames)	55
P-0-4-3	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,517
- Rx Rate (L1) (Bit/s)	373.84 M
- Rx Rate (Fps)	30,384
- Flood Count (Frames)	55
P-0-4-4	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	911,746
- Rx Rate (L1) (Bit/s)	373.94 M
- Rx Rate (Fps)	30,392
- Flood Count (Frames)	53
P-0-4-5	10-0-0-
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
	911,543
- Rx (Frames)	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	373.85 M
- Rx (Frames)	



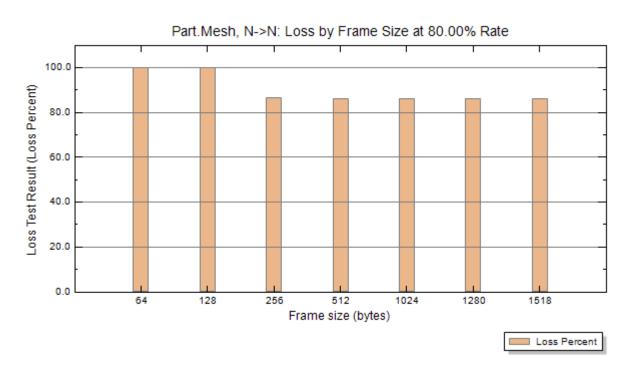

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G
Tx Rate (Fps)	24,107,139	13,682,423	7,336,952	3,806,385	1,939,652	1,557,683
Rx Rate (Percent)	0.01 %	0.01 %	0.04 %	23.09 %	22.59 %	23.17 %
Rx Rate (L1) (Bit/s)	907.72 K	2.35 M	7.75 M	4.16 G	4.07 G	4.17 G
Rx Rate (Fps)	1.35 K	1.98 K	3.51 K	976.66 K	486.93 K	400.97 K
Loss Rate (Percent)	99.99 %	99.99 %	99.95 %	74.34 %	74.9 %	74.26 %
Loss (Frames)	723,173,647	410,413,261	220,003,198	84,891,711	43,581,524	34,701,531
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,544	3,568	6,456	1,738,534	872,463	0
- Rx Rate (L1) (Bit/s)	56.99 K	140.82 K	475.16 K	246.64 M	242.89 M	0
- Rx Rate (Fps)	85	119	215	57,951	29,082	0
- Flood Count (Frames)	27	31	23	19	19	1
P-0-0-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,825	3,714	6,483	0	883,186	720,040
- Rx Rate (L1) (Bit/s)	63.28 K	146.58 K	477.15 K	0	245.88 M	249.61 M
- Rx Rate (Fps)	94	124	216	0	29,440	24,001
- Flood Count (Frames)	58	59	59	1	40	37
P-0-0-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,855	3,728	6,478	1,729,063	889,723	705,886
- Rx Rate (L1) (Bit/s)	63.95 K	147.13 K	476.78 K	245.3 M	247.7 M	244.71 M
- Rx Rate (Fps)	95	124	216	57,635	29,657	23,530
- Flood Count (Frames)	58	61	61	39	31	40
P-0-0-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	0	0	0	1,673,308	901,109	700,199



- Rx Rate (L1) (Bit/s)	0	0	0	237.39 M	250.87 M	242.74 M
- Rx Rate (Fps)	0	0	0	55,777	30,037	23,340
- Flood Count (Frames)	1	1	1	35	35	29
P-0-0-4	10 1-0 -0-		10.000.0=0			
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps) - Rx (Frames)	1,339,286 2,814	760,135 3,736	407,608 6,437	211,466 1,675,071	107,758 911,125	86,538 703,635
- Rx Rate (L1) (Bit/s)	63.03 K	147.45 K	473.76 K	237.64 M	253.66 M	243.93 M
- Rx Rate (Fps)	94	125	215	55,836	30,371	23,455
- Flood Count (Frames)	59	59	60	42	40	34
P-0-0-5						<u> </u>
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	0	3,720	6,473	1,674,556	911,373	696,960
- Rx Rate (L1) (Bit/s)	0	146.82 K	476.41 K	237.56 M	253.73 M	241.61 M
- Rx Rate (Fps)	0	124	216	55,819	30,379	23,232
- Flood Count (Frames)	0	59	59	43	33	38
P-0-2-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,833	3,723	6,454	1,698,302	920,162	704,616
- Rx Rate (L1) (Bit/s)	63.46 K 94	146.93 K	475.01 K	240.93 M	256.17 M	244.27 M
- Rx Rate (Fps) - Flood Count (Frames)	59	124 58	215 61	56,610 46	30,672 39	23,487 34
P-0-2-1	39	36	01	40	39	34
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,837	2,396	6,430	1,707,215	894,307	700,016
- Rx Rate (L1) (Bit/s)	63.55 K	94.56 K	473.25 K	242.2 M	248.98 M	242.67 M
- Rx Rate (Fps)	95	80	214	56,907	29,810	23,334
- Flood Count (Frames)	59	57	61	39	41	34
P-0-2-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,841	3,753	6,345	1,717,962	879,579	711,087
- Rx Rate (L1) (Bit/s)	63.64 K	148.12 K	466.99 K	243.72 M	244.87 M	246.51 M
- Rx Rate (Fps)	95	125	212	57,265	29,319	23,703
- Flood Count (Frames) P-0-2-3	58	60	61	40	41	33
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	0	3,705	6,282	1,717,112	0	712,476
- Rx Rate (L1) (Bit/s)	0	146.22 K	462.36 K	243.6 M	0	246.99 M
- Rx Rate (Fps)	0	124	209	57,237	0	23,749
- Flood Count (Frames)	1	61	60	32	1	38
P-0-2-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,826	3,693	6,204	1,736,241	818,045	700,885
- Rx Rate (L1) (Bit/s)	63.3 K	145.75 K	456.61 K	246.31 M	227.74 M	242.97 M
- Rx Rate (Fps)	94	123	207	57,875	27,268	23,363
- Flood Count (Frames)	59	61	61	35	40	39
P-0-2-5	40 470 707	00 004 000	40.000.070	0.040.6==	0.000 == :	0.500.155
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538 705,056
- Rx (Frames)	2,833	3,699	6,173	1,727,358	780,118	705,056
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	63.46 K 94	145.99 K 123	454.33 K 206	245.05 M 57,579	217.18 M 26,004	244.42 M 23,502
- Flood Count (Frames)	58	59	59	34	39	23,502
P-0-4-0	50	59	38	J 4	39	
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
				900 M	900 M	
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	9000	900 1/1	899.99 M



- Rx (Frames)	2,824	3,738	6,083	1,734,707	784,702	702,059
- Rx Rate (L1) (Bit/s)	63.26 K	147.53 K	447.71 K	246.1 M	218.46 M	243.38 M
- Rx Rate (Fps)	94	125	203	57,824	26,157	23,402
- Flood Count (Frames)	58	59	57	42	35	34
P-0-4-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,847	3,592	5,976	1,748,667	790,192	717,151
- Rx Rate (L1) (Bit/s)	63.77 K	141.76 K	439.83 K	248.08 M	219.99 M	248.61 M
- Rx Rate (Fps)	95	120	199	58,289	26,340	23,905
- Flood Count (Frames)	57	58	57	42	30	39
P-0-4-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,809	3,407	5,853	1,759,459	812,442	712,360
- Rx Rate (L1) (Bit/s)	62.92 K	134.46 K	430.78 K	249.61 M	226.18 M	246.95 M
- Rx Rate (Fps)	94	114	195	58,649	27,081	23,745
- Flood Count (Frames)	56	55	57	40	39	42
P-0-4-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,578	3,271	5,844	1,767,947	830,442	712,041
- Rx Rate (L1) (Bit/s)	57.75 K	129.1 K	430.12 K	250.81 M	231.2 M	246.84 M
- Rx Rate (Fps)	86	109	195	58,932	27,681	23,735
- Flood Count (Frames)	56	56	57	35	38	33
P-0-4-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	2,259	3,062	5,735	1,752,049	856,104	706,720
- Rx Rate (L1) (Bit/s)	50.6 K	120.85 K	422.1 K	248.56 M	238.34 M	245 M
- Rx Rate (Fps)	75	102	191	58,402	28,537	23,557
- Flood Count (Frames)	55	58	60	36	30	37
P-0-4-5						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	1,998	2,918	5,650	1,742,288	872,976	717,766
- Rx Rate (L1) (Bit/s)	44.76 K	115.16 K	415.84 K	247.17 M	243.04 M	248.83 M
- Rx Rate (Fps)	67	97	188	58,076	29,099	23,926
- Flood Count (Frames)	55	56	61	40	25	36

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16.2 G
Tx Rate (Fps)	1,316,636
Rx Rate (Percent)	7.53 %
Rx Rate (L1) (Bit/s)	1.35 G
Rx Rate (Fps)	110.09 K
Loss Rate (Percent)	91.64 %
Loss (Frames)	36,196,521
P-0-0-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	255,645
- Rx Rate (L1) (Bit/s)	104.85 M
- Rx Rate (Fps)	8,522
- Flood Count (Frames)	14
P-0-0-1	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-2	0
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	253,157
- Rx Rate (L1) (Bit/s)	103.83 M
- Rx Rate (Fps)	8,439
- Flood Count (Frames)	24
P-0-0-3	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	252,983
- Rx Rate (L1) (Bit/s)	103.76 M
- Rx Rate (Fps)	8,433
- Flood Count (Frames)	29
P-0-0-4	2 104 204
- Tx (Frames)	2,194,394 899.99 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	73,146
- Rx (Frames)	253,607
- Rx (Frames) - Rx Rate (L1) (Bit/s)	104.01 M
- Rx Rate (E1) (Bibs)	8,454
- Flood Count (Frames)	31
P-0-0-5	31
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	252,961
- Rx Rate (L1) (Bit/s)	103.75 M
- Rx Rate (Fps)	8,432
- Flood Count (Frames)	28
P-0-2-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-1	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M 73,146
- Tx Rate (Fps)	256,776
- Rx (Frames) - Rx Rate (L1) (Bit/s)	105.31 M
- Rx Rate (Fps)	8,559
- Flood Count (Frames)	26
P-0-2-2	20
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-3	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-4	0.404.001
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps) - Rx (Frames)	73,146
- rx (riames)	0



- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-5	2 404 204
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	255,099
- Rx Rate (L1) (Bit/s)	104.62 M
- Rx Rate (Fps)	8,503
- Flood Count (Frames)	23
P-0-4-0	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	251,285
- Rx Rate (L1) (Bit/s)	103.06 M
- Rx Rate (Fps)	8,376
- Flood Count (Frames)	26
P-0-4-1	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	254,825
- Rx Rate (L1) (Bit/s)	104.51 M
- Rx Rate (Fps)	8,494
- Flood Count (Frames)	26
P-0-4-2	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	253,426
- Rx Rate (L1) (Bit/s)	103.94 M
- Rx Rate (Fps)	8,448
- Flood Count (Frames)	25
P-0-4-3	2 104 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,394
- IX Rate (LT) (BIVS)	899.99 M
- Tx Rate (Fps)	73,146 252,753
- Rx (Frames)	103.66 M
- Rx Rate (L1) (Bit/s)	8,425
- Rx Rate (Fps)	24
- Flood Count (Frames) P-0-4-4	24
- Tx (Frames)	2 104 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,394 899.99 M
- Tx Rate (Fps) - Rx (Frames)	73,146 253,742
- Rx (Frames) - Rx Rate (L1) (Bit/s)	
- Rx Rate (E1) (Blus)	104.07 M 8,458
- Flood Count (Frames)	23
P-0-4-5	23
- Tx (Frames)	2,194,394
	899.99 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	73,146
- Rx (Frames)	256,312
- Rx (Frames) - Rx Rate (L1) (Bit/s)	105.12 M
- Rx Rate (E1) (Blus)	8,544
- Flood Count (Frames)	19
- 1 1000 Count (Flames)	19



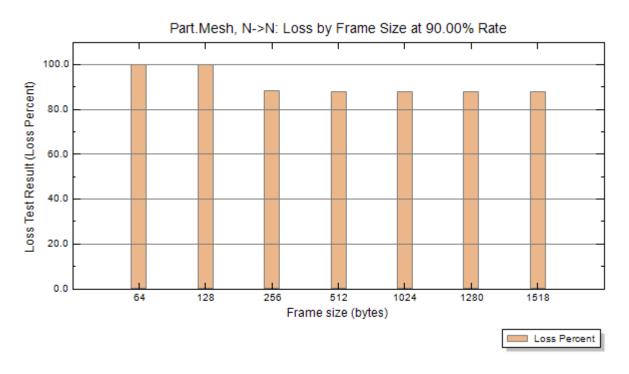

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26,785,710	15,202,702	8,152,166	4,229,318	2,155,168	1,730,767
Rx Rate (Percent)	0.01 %	0.01 %	0.04 %	7.65 %	45.46 %	22.82 %
Rx Rate (L1) (Bit/s)	952.74 K	2.31 M	7.98 M	1.38 G	8.18 G	4.11 G
Rx Rate (Fps)	1.42 K	1.95 K	3.61 K	323.63 K	979.79 K	394.92 K
Loss Rate (Percent)	99.99 %	99.99 %	99.96 %	92.35 %	54.54 %	77.18 %
Loss (Frames)	803,528,767	456,022,616	244,456,620	117,170,539	35,261,333	40,075,299
P-0-0-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,466	3,221	6,390	0	1,635,175	584,922
- Rx Rate (L1) (Bit/s)	55.24 K	127.12 K	470.3 K	0	455.23 M	202.77 M
- Rx Rate (Fps)	82	107	213	0	54,506	19,497
- Flood Count (Frames)	30	25	29	1	25	24
P-0-0-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,813	3,404	6,776	746,351	1,634,706	703,631
- Rx Rate (L1) (Bit/s)	63.01 K	134.34 K	498.71 K	105.88 M	455.1 M	243.93 M
- Rx Rate (Fps)	94	113	226	24,878	54,490	23,454
- Flood Count (Frames)	60	59	59	23	55	34
P-0-0-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	3,373	6,644	745,664	1,633,782	0
- Rx Rate (L1) (Bit/s)	0	133.12 K	489 K	105.78 M	454.84 M	0
- Rx Rate (Fps)	0	112	221	24,855	54,459	0
- Flood Count (Frames)	0	59	59	28	54	2
P-0-0-3	-			-		
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,816	3,434	6,713	743,795	1,634,323	723,890



- Rx Rate (L1) (Bit/s)	63.08 K	135.53 K	494.08 K	105.52 M	455 M	250.95 M
- Rx Rate (Fps)	94	114	224	24,793	54,477	24,130
- Flood Count (Frames)	79	80	79	24	56	35
P-0-0-4						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	1,216	3,371	6,751	0	1,633,427	681,724
- Rx Rate (L1) (Bit/s)	27.24 K	133.04 K	496.87 K	0	454.75 M	236.33 M
- Rx Rate (Fps)	41	112	225	0	54,448	22,724
- Flood Count (Frames)	61	59	61	1	52	29
P-0-0-5	44.040.050	05 007 007	40 500 044	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,844	3,389	6,759	742,595	1,632,179	692,896
- Rx Rate (L1) (Bit/s)	63.71 K	133.75 K	497.46 K	105.35 M	454.4 M	240.2 M
- Rx Rate (Fps)	95	113	225	24,753	54,406	23,097
- Flood Count (Frames)	81	61	56	21	54	41
P-0-2-0	44.040.050	05 007 007	10 500 044	7.040.000	2 504 047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,824	3,395	6,759	743,193	1,634,433	695,571
- Rx Rate (L1) (Bit/s)	63.26 K	133.99 K	497.46 K	105.43 M	455.03 M	241.13 M
- Rx Rate (Fps)	94	113	225	24,773	54,481	23,186
- Flood Count (Frames)	61	57	59	24	54	39
P-0-2-1	44.040.050	05 007 007	40 500 044	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,813	3,391	0	752,202	1,634,122	700,147
- Rx Rate (L1) (Bit/s)	63.01 K	133.83 K	0	106.71 M	454.94 M	242.72 M
- Rx Rate (Fps)	94	113	0	25,073	54,471	23,338
- Flood Count (Frames)	62	59	1	26	52	30
P-0-2-2	44.040.050	05 007 007	10 500 044	7.040.000	2 504 047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863 1000 M	3,591,947 1000 M	2,884,611 1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	1000 M 844,595	1000 M 452,898	234,962	119,732	96,154
- Rx (Frames)	2,822	3,422	6,604	234,902	1,632,591	695,259
- Rx (Frames)	63.21 K	135.05 K	486.05 K	0	454.51 M	241.02 M
- Rx Rate (Fps)	94	133.03 K	220	0	54,420	23,175
- Flood Count (Frames)	62	57	61	1	55	38
P-0-2-3	02	31	01	I	33	30
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx (Frames)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	1,219	3,415	6,383	234,902	1,629,947	715,482
- Rx Rate (L1) (Bit/s)	27.31 K	134.78 K	469.79 K	0	453.78 M	248.03 M
- Rx Rate (Fps)	41	114	213	0	54,332	23,849
- Flood Count (Frames)	77	59	61	1	54	32
P-0-2-4	11	33	01	I	34	32
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,807	3,407	6,344	234,902	1,631,439	705,232
- Rx Rate (L1) (Bit/s)	62.88 K	134.46 K	466.92 K	0	454.19 M	244.48 M
- Rx Rate (E1) (Bibs)	94	134.46 K	211	0	54,381	23,508
- Flood Count (Frames)	61	59	61	1	56	23,300
P-0-2-5	01	33	01	I	30	34
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	2,884,611 1000 M
- Tx Rate (ET) (Bivs)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,792	3,400	6,269	760,375	1,631,627	721,970
- Rx (Frames)	62.54 K	134.19 K	6,∠69 461.4 K	107.87 M	454.24 M	250.28 M
- Rx Rate (ET) (Bibs)	93	134.19 K	209	25,346	54,388	24,066
- Flood Count (Frames)	62	59	61	25,346	54,366	24,000
P-0-4-0	UZ	38	U I	20	32	34
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
	44,642,850 1000 M	25,337,837 1000 M	13,586,944 1000 M	7,048,863 1000 M	3,591,947 1000 M	2,884,611 1000 M
- Tx Rate (L1) (Bit/s)						
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154



- Rx (Frames)	2,822	3,424	6,170	747,451	1,632,600	695,763
- Rx Rate (L1) (Bit/s)	63.21 K	135.13 K	454.11 K	106.04 M	454.52 M	241.2 M
- Rx Rate (Fps)	94	114	206	24,915	54,420	23,192
- Flood Count (Frames)	57	55	57	29	55	37
P-0-4-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,833	3,215	6,175	744,820	1,632,772	714,551
- Rx Rate (L1) (Bit/s)	63.46 K	126.89 K	454.48 K	105.67 M	454.56 M	247.71 M
- Rx Rate (Fps)	94	107	206	24,827	54,426	23,818
- Flood Count (Frames)	58	56	56	26	57	41
P-0-4-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,783	3,057	6,067	752,181	1,632,532	703,734
- Rx Rate (L1) (Bit/s)	62.34 K	120.65 K	446.53 K	106.71 M	454.5 M	243.96 M
- Rx Rate (Fps)	93	102	202	25,073	54,418	23,458
- Flood Count (Frames)	58	57	56	24	57	36
P-0-4-3						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,557	2,881	5,980	745,153	1,632,570	697,860
- Rx Rate (L1) (Bit/s)	57.28 K	113.7 K	440.13 K	105.71 M	454.51 M	241.92 M
- Rx Rate (Fps)	85	96	199	24,838	54,419	23,262
- Flood Count (Frames)	58	58	55	25	56	39
P-0-4-4						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,210	2,711	5,865	744,999	1,631,480	703,875
- Rx Rate (L1) (Bit/s)	49.5 K	106.99 K	431.66 K	105.69 M	454.2 M	244.01 M
- Rx Rate (Fps)	74	90	196	24,833	54,383	23,463
- Flood Count (Frames)	58	58	55	24	54	38
P-0-4-5						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	1,896	2,540	5,723	740,216	1,634,008	711,192
- Rx Rate (L1) (Bit/s)	42.47 K	100.25 K	421.21 K	105.01 M	454.91 M	246.55 M
- Rx Rate (Fps)	63	85	191	24,674	54,467	23,706
- Flood Count (Frames)	58	58	55	29	52	34

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1,462,935
Rx Rate (Percent)	9.31 %
Rx Rate (L1) (Bit/s)	1.68 G
Rx Rate (Fps)	136.24 K
Loss Rate (Percent)	90.69 %
Loss (Frames)	39,800,724
P-0-0-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	291,827
- Rx Rate (L1) (Bit/s)	119.69 M
- Rx Rate (Fps)	9,728
- Flood Count (Frames)	12
P-0-0-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




D D (()	
- Rx Rate (Fps)	0 1
- Flood Count (Frames) P-0-0-2	I
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	293,036
- Rx Rate (L1) (Bit/s)	120.18 M
- Rx Rate (Fps)	9,768
- Flood Count (Frames)	22
P-0-0-3	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	292,464
- Rx Rate (L1) (Bit/s)	119.95 M
- Rx Rate (Fps)	9,749
- Flood Count (Frames) P-0-0-4	25
- Tx (Frames)	2 429 225
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,438,225 1000 M
- Tx Rate (E1) (Blus)	81,274
- Rx (Frames)	293,167
- Rx Rate (L1) (Bit/s)	120.24 M
- Rx Rate (E1) (Bibs)	9,772
- Flood Count (Frames)	23
P-0-0-5	20
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	291,272
- Rx Rate (L1) (Bit/s)	119.46 M
- Rx Rate (Fps)	9,709
- Flood Count (Frames)	28
P-0-2-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	292,405
- Rx Rate (L1) (Bit/s)	119.93 M
- Rx Rate (Fps)	9,747
- Flood Count (Frames)	28
P-0-2-1	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M 81,274
- Tx Rate (Fps)	
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-2	<u>'</u>
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	01,274
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-3	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	291,371
- Rx Rate (L1) (Bit/s)	119.5 M
- Rx Rate (Fps)	9,712
- Flood Count (Frames)	25
P-0-2-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	290,254



- Rx Rate (L1) (Bit/s) 119.04 M - Rx Rate (Fps) 9,675 - Flood Count (Frames) 25 P-0-2-5 - Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Rx Rate (Fps) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Rx Rate
- Flood Count (Frames) P-0-2-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (L1) (Bit/s) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s)
P-0-2-5 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) (- Rx Rate (L1) (Bit/s) (- Rx Rate (Fps) (- Flood Count (Frames) (- Tx (Frames) 2,438,229 - Tx (Frames) 1000 M - Tx (Frames) 293,814 - Rx (Frames) 293,814 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 2943,8229 - Flood Count (Frames) 2943,8229 - Tx (Frames) 2943,8229 - Tx (Frames) 2,438,229 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
- Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 2943,8229 - Flood Count (Frames) 2943,8229 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Flood Count (Frames) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s) (C) - Tx Rate (Fps) (C) - Tx Rate (Fps) (C) - Rx (Frames) (C) - Rx (Frames) (C) - Rx (Frames) (C) - Rx Rate (L1) (Bit/s) (C) - Rx Rate (Fps) (C) - Tx Rate (Fps) (C) - Tx (Frames) (C) - Tx (Frames) (C) - Tx Rate (L1) (Bit/s)
- Tx Rate (Fps) 81,274 - Rx (Frames) (Compared of the compared
- Rx (Frames) (0 - Rx Rate (L1) (Bit/s) (1 - Rx Rate (Fps) (1 - Flood Count (Frames) (1 - Tx (Frames) (1 - Tx Rate (L1) (Bit/s) (1 - Tx Rate (L1) (Bit/s) (1 - Tx Rate (Fps) (1 - Tx (Frames) (1 - Tx (Frames) (1 - Tx (Frames) (1 - Tx Rate (L1) (Bit/s) (1 - Tx Rate (L1) (B
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx Rate (Fps) - Flood Count (Frames) P-0-4-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s)
- Rx Rate (Fps) - Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) -
- Flood Count (Frames) P-0-4-0 - Tx (Frames) 2,438,228 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 28 P-0-4-1 - Tx (Frames) 2,438,228 - Tx Rate (L1) (Bit/s) 1000 M
P-0-4-0 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 297,94 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
- Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 N - Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 N - Rx Rate (Fps) 9,794 - Flood Count (Frames) 29 - Flood Count (Frames) 2,438,229 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M
- Tx Rate (Fps) 81,274 - Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M
- Rx (Frames) 293,814 - Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 29 P-0-4-1 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
- Rx Rate (L1) (Bit/s) 120.5 M - Rx Rate (Fps) 9,794 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M
- Rx Rate (Fps) 9,794 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M
- Flood Count (Frames) 29 P-0-4-1 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
P-0-4-1 - Tx (Frames) 2,438,229 - Tx Rate (L1) (Bit/s) 1000 M
- Tx (Frames) 2,438,225 - Tx Rate (L1) (Bit/s) 1000 M
- Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (Fps) 81,274
- Rx (Frames) 292,968
- Rx Rate (L1) (Bit/s) 120.16 N
- Rx Rate (Fps) 9,766
- Flood Count (Frames) 26
P-0-4-2
- Tx (Frames) 2,438,225
- Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (Fps) 81,274
- Rx (Frames) 292,131
- Rx Rate (L1) (Bit/s) 119.81 N
- Rx Rate (Fps) 9,738
- Flood Count (Frames) 24
P-0-4-3
- Tx (Frames) 2,438,225
- Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (Fps) 81,274
- Rx (Frames) 291,464
- Rx Rate (L1) (Bit/s) 119.54 N
- Rx Rate (Fps) 9,715
- Flood Count (Frames) 25
P-0-4-4
- Tx (Frames) 2,438,225
- Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (Fps) 81,274
- Rx (Frames) 290,134
- Rx Rate (L1) (Bit/s) 118.99 N
- Rx Rate (Fps) 9,67
- Flood Count (Frames) 26
P-0-4-5
- Tx (Frames) 2,438,225
- Tx Rate (L1) (Bit/s) 1000 N
- Tx Rate (Fps) 81,274
- Tx Rate (Fps) 81,274 - Rx (Frames) 291,019
- Tx Rate (Fps) 81,274 - Rx (Frames) 291,019 - Rx Rate (L1) (Bit/s) 119.36 M
- Tx Rate (Fps) 81,274 - Rx (Frames) 291,019



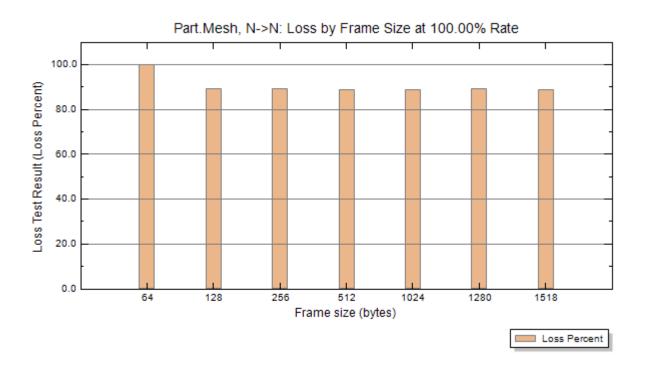



Rate Test: Part.Mesh, 1:N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: Bidirectional

Throughput Options

Initial Rate: 1.00%
Maximum Rate: 100.00%
Minimum Rate: 0.01%
Resolution: 0.01%

Used Ports

Port ID	Port Role
P-0-0-0	East
P-0-0-1	West
P-0-0-2	West
P-0-0-3	West
P-0-0-4	West
P-0-0-5	West
P-0-2-0	West
P-0-2-1	West
P-0-2-2	West
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	PASS	PASS	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0.018 %	0.018 %	0.505 %	0.258 %	0.018 %	0.018 %
Tx Rate (L1) (Bit/s)	3.19 M	3.19 M	90.9 M	46.36 M	3.19 M	3.19 M
Tx Rate (Fps)	4,750	2,696	41,168	10,892	382	307
Rx Rate (Percent)	0.02 %	0.02 %	0.51 %	0.26 %	0.02 %	0.02 %
Rx Rate (L1) (Bit/s)	3.09 M	3.15 M	90.9 M	46.36 M	3.16 M	3.16 M
Rx Rate (Fps)	4.6 K	2.66 K	41.17 K	10.89 K	378.73	303.9
Loss Rate (Percent)	3.24 %	1.28 %	0 %	0 %	0.84 %	0.87 %
Loss (Frames)	4,620	1,036	0	0	96	80
P-0-0-0						
- Tx (Frames)	7,905	4,488	68,612	18,139	629	510
- Tx Rate (L1) (Bit/s)	177.07 K	177.13 K	5.05 M	2.57 M	175.11 K	176.8 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	130,160	75,402	1,166,438	308,635	10,738	8,612
- Rx Rate (L1) (Bit/s)	2.92 M	2.98 M	85.85 M	43.79 M	2.99 M	2.99 M
- Rx Rate (Fps)	4,339	2,513	38,881	10,288	358	287
- Flood Count (Frames)	30	29	27	28	23	30
P-0-0-1						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	458	264	4,036	1,067	35	30
- Rx Rate (L1) (Bit/s)	10.26 K	10.42 K	297.05 K	151.37 K	9.74 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1



- Flood Count (Frames)	59	59	61	59	58	60
P-0-0-2	7.047	4.400	00.044	40.455	007	F44
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	458	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.26 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	58	61	56	57	57	57
P-0-0-3						
- Tx (Frames)	7,917	4.493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	177.1010
- Rx (Frames)	459	245	4,036	1,067	37	28
,	10.28 K	9.67 K	297.05 K			9.71 K
- Rx Rate (L1) (Bit/s)				151.37 K	10.3 K	
- Rx Rate (Fps)	15	8	135	36	1	1
- Flood Count (Frames)	57	60	58	59	56	58
P-0-0-4						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	372	264	4,036	1,067	37	28
	8.33 K	10.42 K	297.05 K	151.37 K	10.3 K	9.71 K
- Rx Rate (L1) (Bit/s)						
- Rx Rate (Fps)	12	9	135	36	1	1
- Flood Count (Frames)	57	61	57	59	58	58
P-0-0-5						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	58	62	59	59	57	55
P-0-2-0						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	254	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.02 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	8	135	36	10.0 K	1
	59			58		
- Flood Count (Frames)	59	57	59	30	59	59
P-0-2-1						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	264	4,036	1,067	37	29
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.05 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	57	59	58	59	60	59
P-0-2-2	01			- 00		- 00
	7.017	4.493	60.614	10 155	627	E11
- Tx (Frames)	7,917	,	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	236	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	9.31 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	8	135	36	1	1
- Flood Count (Frames)	60	58	58	61	59	58
P-0-2-3						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	57	59	59	57	58	60
P-0-2-4						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (LT) (Bil/S)						
	264	150	2,287	605	21	17
		201	4 000	4 00-	^-	~ ~
- Rx (Frames) - Rx Rate (L1) (Bit/s)	459 10.28 K	264 10.42 K	4,036 297.05 K	1,067 151.37 K	37 10.3 K	30 10.4 K



- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	61	59	59	60	61	58
P-0-2-5						
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	177.10 10
- Rx (Frames)	459	264	4,036	1,067	34	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	9.47 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	10.4 K
- Flood Count (Frames)	57	61	58	59	57	57
P-0-4-0	- 07	01			- 07	- 01
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	177.1010
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	10.0 K	10.4 10
- Flood Count (Frames)	56	56	55	60	57	59
P-0-4-1	30	30		00	37	- 33
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (ET) (Bl03)	264	150	2,287	605	21	177.13 K
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Er) (Blus)	15	9	135	36	10.5 K	10.4 K
- Flood Count (Frames)	55	56	56	56	59	56
P-0-4-2	55	30	30	30	39	50
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (ET) (Bl03)	264	150	2,287	605	21	177.13 K
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Er) (Blus)	15	9	135	36	10.5 K	10.4 K
- Flood Count (Frames)	55	56	57	56	57	57
P-0-4-3	55	30	31	30	31	51
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx (Frames)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (ET) (Blus)	264	177.32 K	2,287	605	21	177.13 K
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx (Frames)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (LT) (Bivs)	15	10.42 K	135	36	10.5 K	10.4 K
- Flood Count (Frames)	56	55	55	55	57	55
P-0-4-4	30	55	33	33	37	33
-	7.017	4.402	60 614	10 155	627	E11
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511 177.15 K
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	
- Tx Rate (Fps)	264 459	150 264	2,287	605	21 37	17 30
- Rx (Frames)			4,036	1,067		
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	59	58	55	56	56	56
P-0-4-5	7.047	4 400	60.044	10 155	007	F44
- Tx (Frames)	7,917	4,493	68,614	18,155	637	511
- Tx Rate (L1) (Bit/s)	177.34 K	177.32 K	5.05 M	2.58 M	177.34 K	177.15 K
- Tx Rate (Fps)	264	150	2,287	605	21	17
- Rx (Frames)	459	264	4,036	1,067	37	30
- Rx Rate (L1) (Bit/s)	10.28 K	10.42 K	297.05 K	151.37 K	10.3 K	10.4 K
- Rx Rate (Fps)	15	9	135	36	1	1
- Flood Count (Frames)	55	57	55	56	56	56

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0.018 %
Tx Rate (L1) (Bit/s)	3.19 M
Tx Rate (Fps)	259
Rx Rate (Percent)	0.02 %
Rx Rate (L1) (Bit/s)	3.16 M
Rx Rate (Fps)	256.6
Loss Rate (Percent)	0.91 %
Loss (Frames)	71



P-0-0-0	405
- Tx (Frames)	425
Tx Rate (L1) (Bit/s)Tx Rate (Fps)	174.31 K
- Rx (Frames)	7,277
- Rx Rate (L1) (Bit/s)	2.98 M
- Rx Rate (Fps)	243
- Flood Count (Frames)	26
P-0-0-1	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	23
- Rx Rate (L1) (Bit/s)	9.43 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	55
P-0-0-2	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25 10.25 K
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)- Flood Count (Frames)	
P-0-0-3	57
- Tx (Frames)	432
- Tx (Frames)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	57
P-0-0-4	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	24
- Rx Rate (L1) (Bit/s)	9.84 K
- Rx Rate (Fps)	1
- Flood Count (Frames) P-0-0-5	56
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	24
- Rx Rate (L1) (Bit/s)	9.84 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	55
P-0-2-0	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	58
P-0-2-1	420
- Tx (Frames) - Tx Rate (L1) (Bit/s)	432 177.18 K
- Tx Rate (ET) (Blus)	177.10 K
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	10.23 1
- Flood Count (Frames)	58
P-0-2-2	30
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1




- Flood Count (Frames)	57
P-0-2-3	31
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	10.20 1
- Flood Count (Frames)	58
P-0-2-4	- 00
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (ET) (Bibs)	177.10 K
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	10.23 K
Flood Count (Framos)	•
- Flood Count (Frames)	59
P-0-2-5	400
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	56
P-0-4-0	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	58
P-0-4-1	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	56
P-0-4-2	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (ET) (Blus)	177.10 K
	25
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	55
P-0-4-3	400
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	56
P-0-4-4	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
- Rx Rate (Fps)	1
- Flood Count (Frames)	56
P-0-4-5	-
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	25
- Rx Rate (L1) (Bit/s)	10.25 K
(= 1) (5100)	10.2010



- Rx Rate (Fp	s)	1
- Flood Coun	t (Frames)	55

Note: One or more of the rate tests did not pass the test criteria!

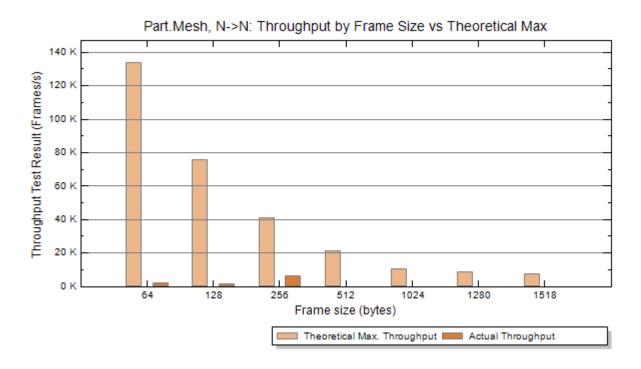

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,270	815,217	422,932	215,517	173,076
Rx Rate (Percent)	4.87 %	5.85 %	5.91 %	5.94 %	4.92 %	6.02 %
Rx Rate (L1) (Bit/s)	877.46 M	1.05 G	1.06 G	1.07 G	886.06 M	1.08 G
Rx Rate (Fps)	1.31 M	888.7 K	482.06 K	251.42 K	106.09 K	104.12 K
Loss Rate (Percent)	51.25 %	41.54 %	40.87 %	40.55 %	50.77 %	39.84 %
Loss (Frames)	41,184,901	18,947,086	9,994,686	5,145,267	3,282,830	2,068,777
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	36,166,312	24,677,557	13,399,899	6,991,829	2,948,795	2,876,570
- Rx Rate (L1) (Bit/s)	810.13 M	973.94 M	986.23 M	991.91 M	820.94 M	997.21 M
- Rx Rate (Fps)	1,205,544	822,585	446,663	233,061	98,293	95,886
- Flood Count (Frames)	21	20	16	21	17	28
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	177,956	117,045	62,959	33,779	13,784	14,714
- Rx Rate (L1) (Bit/s)	3.99 M	4.62 M	4.63 M	4.79 M	3.84 M	5.1 M
- Rx Rate (Fps)	5,932	3,902	2,099	1,126	459	490
- Flood Count (Frames)	58	58	58	58	60	76
P-0-0-2						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,730	115,971	63,391	32,984	13,946	14,632
- Rx Rate (L1) (Bit/s)	4 M	4.58 M	4.67 M	4.68 M	3.88 M	5.07 M
- Rx Rate (Fps)	5,958	3,866	2,113	1,099	465	488
- Flood Count (Frames) P-0-0-3	55	68	59	57	57	60
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames) - Tx Rate (L1) (Bit/s)	4,404,285 100 M	2,555,765 100 M	1,356,095 100 M	100 M	100 M	200,40 I
- Tx Rate (ET) (Blus)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	179,800	119,283	59.904	32,396	13,804	12,331
- Rx Rate (L1) (Bit/s)	4.03 M	4.71 M	4.41 M	4.6 M	3.84 M	4.27 M
- Rx Rate (Er) (Blus)	5,993	3,976	1,997	1,080	460	411
- Flood Count (Frames)	56	57	54	58	58	56
P-0-0-4		- 01	J-1	30	30	- 30
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	175,724	119,119	64,240	33,263	14,218	14,505
- Rx Rate (L1) (Bit/s)	3.94 M	4.7 M	4.73 M	4.72 M	3.96 M	5.03 M
- Rx Rate (Fps)	5,857	3,971	2,141	1,109	474	484
- Flood Count (Frames)	56	54	60	60	69	76
P-0-0-5						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,183	119,585	54,443	33,675	14,028	14,870
- Rx Rate (L1) (Bit/s)	3.99 M	4.72 M	4.01 M	4.78 M	3.91 M	5.15 M
- Rx Rate (Fps)	5,939	3,986	1,815	1,123	468	496
- Flood Count (Frames)	58	56	56	58	54	57
P-0-2-0						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	177,838	115,632	62,945	29,991	13,364	14,680
- Rx Rate (L1) (Bit/s)	3.98 M	4.56 M	4.63 M	4.25 M	3.72 M	5.09 M
- Rx Rate (Fps)	5,928	3,854	2,098	1,000	445	489
- Flood Count (Frames)	55	66	60	59	59	58
P-0-2-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	177,286	108,156	62,617	33,364	14,004	14,767
- Rx Rate (L1) (Bit/s)	3.97 M	4.27 M	4.61 M	4.73 M	3.9 M	5.12 M
- Rx Rate (Fps)	5,910	3,605	2,087	1,112	467	492
- Flood Count (Frames)	58	56	58	56	61	58
P-0-2-2						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	177,360	117,523	63,053	32,595	13,663	13,724
- Rx Rate (L1) (Bit/s)	3.97 M	4.64 M	4.64 M	4.62 M	3.8 M	4.76 M
- Rx Rate (Fps)	5,912	3,917	2,102	1,087	455	457
- Flood Count (Frames)	56	57	58	55	58	75
P-0-2-3			4 0 - 0 0 - 0			
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	177,179	115,098	63,012	33,269	13,902	14,458
- Rx Rate (L1) (Bit/s)	3.97 M	4.54 M	4.64 M	4.72 M	3.87 M	5.01 M
- Rx Rate (Fps)	5,906	3,837	2,100	1,109	463	482
- Flood Count (Frames)	59	55	56	56	66	59
P-0-2-4	4 404 005	0.500.700	4 050 005	704 007	250 405	000 404
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,138	115,239	63,602	33,305	12,953	14,401
- Rx Rate (L1) (Bit/s)	3.99 M	4.55 M	4.68 M	4.72 M	3.61 M	4.99 M
- Rx Rate (Fps)	5,938	3,841	2,120	1,110	432	480
- Flood Count (Frames)	59	58	58	58	56	61
P-0-2-5	4 404 607	0.500.500	4.050.005	704.00=	050.465	000 101
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	160,487	115,682	62,924	22,363	13,729	14,811
- Rx Rate (L1) (Bit/s)	3.59 M	4.57 M	4.63 M	3.17 M	3.82 M	5.13 M
- Rx Rate (Fps)	5,350	3,856	2,097	745	458	494
- Flood Count (Frames)	57	58	55	56	59	60
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,050	116,425	62,735	33,622	13,526	14,892
- Rx Rate (L1) (Bit/s)	3.99 M	4.59 M	4.62 M	4.77 M	3.77 M	5.16 M
- Rx Rate (Fps)	5,935	3,881	2,091	1,121	451	496
- Flood Count (Frames)	56	57	56	56	56	60
P-0-4-1						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,841	117,062	64,028	32,974	13,670	14,882
- Rx Rate (L1) (Bit/s)	4.01 M	4.62 M	4.71 M	4.68 M	3.81 M	5.16 M
- Rx Rate (Fps)	5,961	3,902	2,134	1,099	456	496
- Flood Count (Frames)	53	56	59	56	53	56
P-0-4-2						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9.615
- Rx (Frames)	176,277	116,906	62,269	33,728	13,524	14,822
- Rx Rate (L1) (Bit/s)	3.95 M	4.61 M	4.58 M	4.78 M	3.77 M	5.14 M
- Rx Rate (Fps)	5,876	3,897	2,076	1,124	451	494
- Flood Count (Frames)	55	55	53	58	56	55
P-0-4-3						
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9.615
- Rx (Frames)	179,013	116,701	63,884	33,016	13,985	14,847
- Rx Rate (L1) (Bit/s)	4.01 M	4.61 M	4.7 M	4.68 M	3.89 M	5.15 M
- Rx Rate (Fps)	5,967	3,890	2,129	1,101	466	495
- Flood Count (Frames)	55	57	56	56	58	56
P-0-4-4		0.				
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	178,339	119,190	62,165	33,419	13,769	14,704
- Rx Rate (L1) (Bit/s)	3.99 M	4.7 M	4.58 M	4.74 M	3.83 M	5.1 M
- Rx Rate (Fps)	5,945	3,973	2,072	1,114	459	490
- Flood Count (Frames)	55	56	58	55	59	54
P-0-4-5	33	30	30		- 55	- 54
- Tx (Frames)	4,464,285	2,533,783	1,358,695	704,887	359,195	288,461
- Tx (Frames)	4,404,285 100 M	2,555,765 100 M	1,356,695 100 M	100 M	100 M	200,401 100 M
- Tx Rate (ET) (Blus)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	176,716	118,833	63.750	33,111	14,014	14,906
- Rx Rate (L1) (Bit/s)	3.96 M	4.69 M	4.69 M	4.7 M	3.9 M	5.17 M
- Rx Rate (LT) (BIDS)	5,891	3,961	2.125	1,104	3.9 W	3.17 W
- INA MAILE (IFUS)	3,091	3,901	∠, ۱∠၁	1,104	407	497

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,294
Rx Rate (Percent)	5.7 %
Rx Rate (L1) (Bit/s)	1.03 G
Rx Rate (Fps)	83.39 K
Loss Rate (Percent)	43 %
Loss (Frames)	1,887,136
P-0-0-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	2,330,614
- Rx Rate (L1) (Bit/s)	955.86 M
- Rx Rate (Fps) - Flood Count (Frames)	77,687 14
P-0-0-1	14
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	6,906
- Rx Rate (L1) (Bit/s)	2.83 M
- Rx Rate (Fps)	230
- Flood Count (Frames)	48
P-0-0-2	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,349
- Rx Rate (L1) (Bit/s)	4.24 M
- Rx Rate (Fps)	345
- Flood Count (Frames)	52
P-0-0-3	0.40.000
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,259
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	4.21 M 342
- Flood Count (Frames)	42
P-0-0-4	42
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (ET) (Blus)	8,127
- Rx (Frames)	10,336
- Rx Rate (L1) (Bit/s)	4.24 M
- Rx Rate (Fps)	345
- Flood Count (Frames)	55
P-0-0-5	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,140
- Rx Rate (L1) (Bit/s)	4.16 M
- Rx Rate (Fps)	338
- Flood Count (Frames)	50
P-0-2-0	040.000
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M
- Rx (Frames)	8,127 9,814
- Rx Rate (L1) (Bit/s)	4.03 M
- Rx Rate (E1) (Bibs)	327
- Flood Count (Frames)	46
P-0-2-1	70
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,338
- Rx Rate (L1) (Bit/s)	4.24 M
- Rx Rate (Fps)	345
- Flood Count (Frames)	46
P-0-2-2	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,330
- Rx Rate (L1) (Bit/s)	4.24 M
- Rx Rate (Fps)	344
- Flood Count (Frames)	44
P-0-2-3	0.40.000
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M



- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	
- Rx Rate (L1) (Bit/s)	8,127
	10,319
- Rx Rate (Fps)	4.23 M
	344
- Flood Count (Frames)	44
P-0-2-4	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,307
- Rx Rate (L1) (Bit/s)	4.23 M
- Rx Rate (Fps)	344
- Flood Count (Frames)	44
P-0-2-5	
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,181
- Rx Rate (L1) (Bit/s)	4.18 M
- Rx Rate (Fps)	339
- Flood Count (Frames)	41
P-0-4-0	242.000
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	10,305
- Rx Rate (L1) (Bit/s)	4.23 M
- Rx Rate (Fps)	344
- Flood Count (Frames)	40
P-0-4-1	242 022
- Tx (Frames)	243,823
- Tx Rate (L1) (Bit/s)	100 M 8,127
- Tx Rate (Fps) - Rx (Frames)	10,359
- Rx (Harries) - Rx Rate (L1) (Bit/s)	4.25 M
- Rx Rate (ET) (Blus)	345
- Flood Count (Frames)	38
- 1 1000 Count (1 Tames)	30
D_0_1_2	
P-0-4-2 - Tx (Frames)	243 823
- Tx (Frames)	243,823 100 M
- Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 10,297
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 10,297
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	100 M 8,127 10,297 4.22 M 343
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3	100 M 8,127 10,297 4.22 M 343 44
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.2 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Tx (Frames) - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.2 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.2 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.2 M
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.22 M 343 47 243,823
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.22 M 343 47 243,823
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.22 M 343 47 243,823 100 M 8,127 10,279 4.22 M 343 47
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Tx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.22 M 343 47 243,823 100 M 8,127 10,279 4.22 M 343 47
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (Fps) - Rx (Frames)	100 M 8,127 10,297 4.22 M 343 44 243,823 100 M 8,127 10,245 4.2 M 342 45 243,823 100 M 8,127 10,279 4.22 M 343 47 243,823 100 M 8,127 10,279 4.22 M 343 47



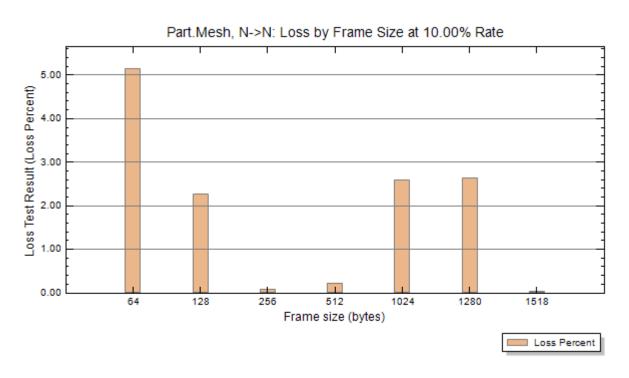

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,143	3,040,540	1,630,434	845,864	431,034	346,153
Rx Rate (Percent)	0.02 %	6.06 %	6.14 %	6.19 %	6.2 %	6.22 %
Rx Rate (L1) (Bit/s)	2.87 M	1.09 G	1.11 G	1.12 G	1.12 G	1.12 G
Rx Rate (Fps)	4.28 K	921.26 K	500.71 K	261.99 K	133.71 K	107.7 K
Loss Rate (Percent)	99.92 %	69.7 %	69.29 %	69.03 %	68.98 %	68.89 %
Loss (Frames)	160,586,020	63,578,531	33,891,688	17,516,131	8,919,616	7,153,671
P-0-0-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	119,429	24,629,881	13,410,010	7,005,204	3,582,347	2,878,056
- Rx Rate (L1) (Bit/s)	2.68 M	972.06 M	986.98 M	993.8 M	997.33 M	997.73 M
- Rx Rate (Fps)	3,981	820,996	447,000	233,507	119,412	95,935
- Flood Count (Frames)	33	17	12	14	17	14
P-0-0-1						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	604	166,754	94,938	49,674	25,113	18,270
- Rx Rate (L1) (Bit/s)	13.53 K	6.58 M	6.99 M	7.05 M	6.99 M	6.33 M
- Rx Rate (Fps)	20	5,558	3,165	1,656	837	609
- Flood Count (Frames)	59	56	55	54	56	56
P-0-0-2						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	632	178,080	94,341	49,634	25,117	21,142
- Rx Rate (L1) (Bit/s)	14.16 K	7.03 M	6.94 M	7.04 M	6.99 M	7.33 M
- Rx Rate (Fps)	21	5,936	3,145	1,654	837	705
- Flood Count (Frames)	57	53	53	54	56	59
P-0-0-3						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	596	178,881	95,878	50,326	25,080	21,085



- Rx Rate (L1) (Bit/s)	13.35 K	7.06 M	7.06 M	7.14 M	6.98 M	7.31 M
- Rx Rate (Fps)	20	5,963	3,196	1,678	836	703
- Flood Count (Frames)	59	55	55	56	55	57
P-0-0-4	0.000.574	E 007 E07	0.747.004	4 400 774	740.000	F70 000
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	589	178,144	95,871	49,746	25,486	21,111 7.32 M
- Rx Rate (L1) (Bit/s)	13.19 K	7.03 M	7.06 M	7.06 M	7.1 M	
- Rx Rate (Fps)	20	5,938	3,196	1,658	850	704
- Flood Count (Frames)	59	54	52	58	56	53
P-0-0-5 - Tx (Frames)	0 000 E71	E 067 E67	2 717 201	1 400 774	710 200	E76 000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,571 200 M	5,067,567 200 M	2,717,391 200 M	1,409,774 200 M	718,390 200 M	576,923 200 M
- Tx Rate (Fps)	297.619	168,919	90,580	46.992	23,946	19,231
- Rx (Frames)	600	179,810	94,997	51,004	24,275	19,685
- Rx Rate (L1) (Bit/s)	13.44 K	7.1 M	6.99 M	7.24 M	6.76 M	6.82 M
- Rx Rate (LT) (Bivs)	13.44 K	5,994	3,167	1,700	809	656
` ' '	59		56			
- Flood Count (Frames) P-0-2-0	59	53	30	55	55	54
	0 000 E71	5,067,567	2 717 201	1 400 774	710 200	E76 000
- Tx (Frames)	8,928,571 200 M		2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)		200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	599	179,519	93,670	50,187	25,198	20,269
- Rx Rate (L1) (Bit/s)	13.42 K	7.09 M	6.89 M	7.12 M	7.02 M	7.03 M
- Rx Rate (Fps)	20	5,984	3,122	1,673	840	676
- Flood Count (Frames)	59	52	54	56	55	56
P-0-2-1	0 000 E71	E 067 E67	2 717 201	1 400 774	710 200	E76 000
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390 200 M	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M		200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	574	169,480 6.69 M	94,467	49,599	25,371	21,138 7.33 M
- Rx Rate (L1) (Bit/s)	12.86 K		6.95 M	7.04 M	7.06 M	
- Rx Rate (Fps)	19 58	5,649	3,149 53	1,653 58	846	705 56
- Flood Count (Frames)	36	55	33	36	57	50
P-0-2-2	8,928,571	E 067 E67	2 717 201	1 400 774	710 200	E76 000
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M	5,067,567 200 M	2,717,391 200 M	1,409,774 200 M	718,390 200 M	576,923 200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	566	179,357	93,687	51,639	25,781	20,423
- Rx (Frames)	12.68 K	7.08 M	6.9 M	7.33 M	7.18 M	7.08 M
- Rx Rate (Fps)	12.00 K	5,979	3,123	1,721	859	681
- Flood Count (Frames)	59	52	53	57	55	56
P-0-2-3	39	52	33	31	33	30
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
	297,619	168,919	90,580	46,992	23,946	19,231
- Tx Rate (Fps) - Rx (Frames)	297,019	172,170	91,415	48,068	25,011	21,127
- Rx Rate (L1) (Bit/s)	0	6.79 M	6.73 M	6.82 M	6.96 M	7.32 M
- Rx Rate (Fps)	0	5,739	3,047	1,602	834	7.32 101
- Flood Count (Frames)	57	54	52	54	55	55
P-0-2-4	31	34	32	34	33	- 33
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Er) (Bibs)	297,619	168,919	90,580	46.992	23.946	19,231
- Rx (Frames)	549	175,228	93,665	50,047	25,710	20,094
- Rx Rate (L1) (Bit/s)	12.3 K	6.92 M	6.89 M	7.1 M	7.16 M	6.97 M
- Rx Rate (ET) (Blus)	12.3 K	5,841	3,122	1,668	7.10 W	670
- Flood Count (Frames)	61	5,041	55	57	57	57
P-0-2-5	01	33	55	31	31	31
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	178,051	92,922	50,387	25,488	21,087
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	7.03 M	6.84 M	7.15 M	7.1 M	7.31 M
- Flood Count (Frames)	58	5,935	3,097	1,680 59	850 56	703
	38	55	56	59	90	60
P-0-4-0	0.000.574	E 067 E07	2 747 204	1 400 774	710 200	E76 000
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231



- Rx (Frames)	588	177,595	94,464	51,203	24,949	21,127
- Rx Rate (L1) (Bit/s)	13.17 K	7.01 M	6.95 M	7.26 M	6.95 M	7.32 M
- Rx Rate (Fps)	20	5,920	3,149	1,707	832	704
- Flood Count (Frames)	56	55	56	55	59	58
P-0-4-1						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	584	178,480	97,058	52,019	25,244	21,482
- Rx Rate (L1) (Bit/s)	13.08 K	7.04 M	7.14 M	7.38 M	7.03 M	7.45 M
- Rx Rate (Fps)	19	5,949	3,235	1,734	841	716
- Flood Count (Frames)	55	52	53	54	54	56
P-0-4-2						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	592	178,511	94,566	50,014	24,941	21,053
- Rx Rate (L1) (Bit/s)	13.26 K	7.05 M	6.96 M	7.1 M	6.94 M	7.3 M
- Rx Rate (Fps)	20	5,950	3,152	1,667	831	702
- Flood Count (Frames)	55	55	51	55	55	53
P-0-4-3						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1.409.774	718.390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	577	179,510	95,357	49,621	25,180	21,149
- Rx Rate (L1) (Bit/s)	12.92 K	7.08 M	7.02 M	7.04 M	7.01 M	7.33 M
- Rx Rate (Fps)	19	5,984	3,179	1,654	839	705
- Flood Count (Frames)	59	54	51	52	53	55
P-0-4-4						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	589	178,994	96,557	51,193	25,520	21,471
- Rx Rate (L1) (Bit/s)	13.19 K	7.06 M	7.11 M	7.26 M	7.1 M	7.44 M
- Rx Rate (Fps)	20	5,966	3,219	1,706	851	716
- Flood Count (Frames)	56	52	52	53	57	53
P-0-4-5						
- Tx (Frames)	8,928,571	5,067,567	2,717,391	1,409,774	718,390	576,923
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	589	179,227	97,478	50,221	25,589	21,163
- Rx Rate (L1) (Bit/s)	13.19 K	7.07 M	7.17 M	7.12 M	7.12 M	7.34 M
- Rx Rate (Fps)	20	5,974	3,249	1,674	853	705
- Flood Count (Frames)	58	53	56	53	54	56

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,588
Rx Rate (Percent)	5.4 %
Rx Rate (L1) (Bit/s)	972.88 M
Rx Rate (Fps)	79.07 K
Loss Rate (Percent)	72.98 %
Loss (Frames)	6,405,513
P-0-0-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	2,246,529
- Rx Rate (L1) (Bit/s)	921.38 M
- Rx Rate (Fps)	74,884
- Flood Count (Frames)	10
P-0-0-1	
- Tx (Frames)	487,646
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	7,453
- Rx Rate (L1) (Bit/s)	3.06 M




- Rx Rate (Fps) - Flood Count (Frames)	
- Flood Count (Frames)	248
	25
P-0-0-2	
- Tx (Frames) 487,	
	0 M
	255 393
	3 M
	246
- Flood Count (Frames)	28
P-0-0-3	
- Tx (Frames) 487,	646
- Tx Rate (L1) (Bit/s) 20	0 M
- Tx Rate (Fps) 16,	255
- Rx (Frames) 7,	445
	5 M
	248
- Flood Count (Frames)	25
P-0-0-4	
- Tx (Frames) 487,	
` ' ' ' '	0 M
	255
	296
() ()	9 M
	243
- Flood Count (Frames)	29
P-0-0-5	040
- Tx (Frames) 487,	
` , ` ,	0 M
	255
	359 2 M
	245
- Flood Count (Frames)	28
P-0-2-0	
- Tx (Frames) 487,	646
	0 M
	255
	280
	9 M
	243
- Flood Count (Frames)	27
P-0-2-1	
- Tx (Frames) 487,	646
	0 M
- Tx Rate (Fps) 16,	255
- Rx (Frames) 7,	396
	3 M
	247
- Flood Count (Frames)	33
P-0-2-2	040
- Tx (Frames) 487,	
. , , ,	0 M
	255
	952 5 M
, , , ,	5 M 232
- Rx Rate (Fps) - Flood Count (Frames)	31
P-0-2-3	υı
- Tx (Frames) 487,	646
	0 M
	255
- Rx (Frames) 7,	391
	3 M
- Rx Rate (L1) (Bit/s) 3.0	246
	24
- Rx Rate (Fps)	
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) 487,	24
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) 487, - Tx Rate (L1) (Bit/s) 20	24 646 0 M
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames) 487, - Tx Rate (L1) (Bit/s) 20 - Tx Rate (Fps) 16,	24 646



- Rx Rate (Fps) 246 - Flood Count (Frames) 28 P-0-2-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,441 - Rx Rate (L1) (Bit/s) 3.05 M - Rx Rate (Fps) 248 - Flood Count (Frames) 24 - Flood Count (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 - R-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 30 - P-0-4-3 - Tx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 - Flood Count (Frames) 30 - Flood Count (Frames) 30 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps)		
Flood Count (Frames) 28 P-0-2-5 487,646 Tx Rate (L1) (Bit/s) 200 M Tx Rate (Fps) 16,255 Rx (Frames) 7,441 Rx Rate (L1) (Bit/s) 3.05 M Rx Rate (Fps) 248 Flood Count (Frames) 24 P-0-4-0 487,646 -Tx (Frames) 487,646 -Tx (Frames) 487,646 -Tx Rate (L1) (Bit/s) 200 M -Tx Rate (Fps) 16,255 -Rx (Frames) 7,415 -Rx Rate (Fps) 23 P-0-4-1 200 M -Tx (Frames) 487,646 -Tx (Frames) 487,646 -Tx (Frames) 23 P-0-4-1 200 M -Tx (Frames) 487,646 -Tx (Frames) 487,646 -Tx (Frames) 7,488 -Rx (Frames) 7,488 -Rx (Frames) 26 P-0-4-2 -Tx (Frames) 26 -Flood Count (Frames) 26 -Rx (Frames)	- Rx Rate (L1) (Bit/s)	3.02 M
P-0-2-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,441 - Rx Rate (L1) (Bit/s) 3.05 M - Rx Rate (Fps) 248 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 247 - Flood Count (Frames) 23 - Flood Count (Frames) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 249 - Flood Count (Frames) 33 - Flood Count (Frames) 250 - Flood Count (Frames) 250 - Flood Count (Frames) 30 - Flood Count (Frames) 30 - Flood Count (Frames) 30 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 3.07 M - Rx	- Rx Rate (Fps)	
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,441 - Rx Rate (L1) (Bit/s) 3.05 M - Rx Rate (Fps) 248 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 - Rx (Frames) 487,646 - Tx Rate (Fps) 247 - Flood Count (Frames) 23 - Rx Rate (L1) (Bit/s) 200 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 - Rx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 30 - P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 30 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 30 - Rx	 Flood Count (Frames) 	28
- Tx Rate (L1) (Bit/s)	P-0-2-5	
- Tx Rate (L1) (Bit/s)	- Tx (Frames)	487,646
- Tx Rate (Fps)	- Tx Rate (L1) (Bit/s)	200 M
- Rx (Frames) 7,441 - Rx Rate (L1) (Bit/s) 3.05 M - Rx Rate (Fps) 248 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 3.00 M - Tx Rate (Fps)	- Tx Rate (Fps)	
- Rx Rate (L1) (Bit/s) 248 - Flood Count (Frames) 248 - Flood Count (Frames) 249 P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 3.07 M - Rx		
- Rx Rate (Fps) 248 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.0		
- Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 250 - Flood Count (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rat		
P-0-4-0 - Tx (Frames)		
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (Fps) 250 - Flood Count (Frames) 26 - P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.07 M - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.		
- Tx Rate (L1) (Bit/s)		487 646
- Tx Rate (Fps)		
- Rx (Frames) 7,415 - Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (F		
- Rx Rate (L1) (Bit/s) 3.04 M - Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx R		7 /15
- Rx Rate (Fps) 247 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (Fps) 200 M - Tx Rate (Fps) 30.77 M - Rx Rate (Fps) 30.77 M - Tx Rate (Fps) 30.77 M - Rx Rate (Fps) 30.77 M - Tx Rate (Fps) 30.77 M		
- Flood Count (Frames) P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 250 - Flood Count (Frames) 27 P-0-4-5 - Tx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.07		
P-0-4-1 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 7,490 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 307 M - Rx		
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Tx Rate (Fps) 16,255 - Rx (Frames) 200 M - Tx Rate (Fps) 250 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 7,491 - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 7,491 - Rx Rate (Fps) 30 - Flood Count (Frames) 30 - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M		23
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M		
- Tx Rate (Fps) 16,255 - Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 200 M - Tx Rate (Fps) 250 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.00 M		
- Rx (Frames) 7,488 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.06 M	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 250 - Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Rx Rate (L1) (Bit/s) 300 M - Rx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 300 M		16,255
- Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.00 M	- Rx (Frames)	7,488
- Rx Rate (Fps) 250 - Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.00 M	- Rx Rate (L1) (Bit/s)	3.07 M
- Flood Count (Frames) 26 P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M		250
P-0-4-2 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Fo-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (Fps) 250 - Flood Count (Frames) 250 - Flood Count (Frames) 27 - O-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - O-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M		26
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 250 - Flood Count (Frames) 3.07 M - Rx Rate (Fps) 3.07 M - Tx (Frames) 3.07 M - Tx (Frames) 3.07 M - Tx (Frames) 3.07 M - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M		
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Tx Rate (Fps) 300 M		487 646
- Tx Rate (Fps) 16,255 - Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 30 M - Tx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M - Tx (Frames) 487,646 - Tx Rate (Fps) 300 M - Rx Rate (Fps) 300 M		
- Rx (Frames) 7,478 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 - Flood Count (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 7,490 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.06 M		
- Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Rx Rate (
- Rx Rate (Fps) 249 - Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 248		
- Flood Count (Frames) 33 P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 3.07 M - Tx (Frames) 487,646 - Tx (Frames) 487,646 - Tx Rate (Fps) 3.06 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
P-0-4-3 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 250 - Flood Count (Frames) 3.07 M - Rx Rate (Fps) 3.07 M - Tx Rate (L1) (Bit/s) 3.06 M - Tx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M		
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (Fps) 250 - Flood Count (Frames) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Rx Rate (Fps) 3.07 M - Tx (Frames) 487,646 - Tx (Frames) 30 - P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 248		33
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 - P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 3.07 M - Rx Rate (L1) (Bit/s) 3.06 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 3.06 M - Rx Rate (Fps) 248		407.040
- Tx Rate (Fps) 16,255 - Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 - P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 250 - Flood Count (Frames) 30 - Tx Rate (Fps) 30 - Tx Rate (Fps) 30 - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 348		
- Rx (Frames) 7,490 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 - P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 300 M - Tx Rate (Fps) 16,255 - Rx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx Rate (Fps) 250 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
P-0-4-4 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		250
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248	- Flood Count (Frames)	27
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248	P-0-4-4	
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248	- Tx (Frames)	487,646
- Tx Rate (Fps) 16,255 - Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx (Frames) 7,491 - Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		16,255
- Rx Rate (L1) (Bit/s) 3.07 M - Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx Rate (Fps) 250 - Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Flood Count (Frames) 30 P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
P-0-4-5 - Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Tx (Frames) 487,646 - Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		30
- Tx Rate (L1) (Bit/s) 200 M - Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		197 616
- Tx Rate (Fps) 16,255 - Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx (Frames) 7,450 - Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx Rate (L1) (Bit/s) 3.06 M - Rx Rate (Fps) 248		
- Rx Rate (Fps) 248		
Flood Count (Framos) 25		
- 1 1000 Count (1 fames)	- Flood Count (Frames)	25



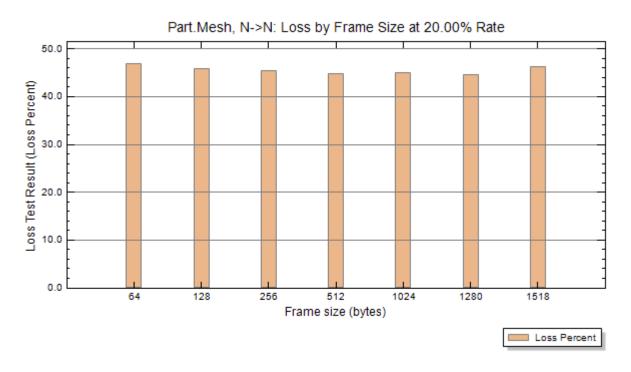

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,714	4,560,810	2,445,651	1,268,796	646,551	519,230
Rx Rate (Percent)	0.01 %	6.1 %	6.41 %	6.46 %	6.45 %	6.21 %
Rx Rate (L1) (Bit/s)	2.13 M	1.1 G	1.15 G	1.16 G	1.16 G	1.12 G
Rx Rate (Fps)	3.17 K	927.62 K	522.64 K	273.14 K	138.92 K	107.56 K
Loss Rate (Percent)	99.96 %	79.66 %	78.63 %	78.47 %	78.51 %	79.28 %
Loss (Frames)	240,976,366	108,995,771	57,690,448	29,869,674	15,229,063	12,350,060
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	86,233	23,910,153	13,413,905	7,005,838	3,583,387	2,740,584
- Rx Rate (L1) (Bit/s)	1.93 M	943.65 M	987.26 M	993.89 M	997.61 M	950.07 M
- Rx Rate (Fps)	2,874	797,005	447,130	233,528	119,446	91,353
- Flood Count (Frames)	30	12	14	11	14	10
P-0-0-1						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	662	233,186	133,825	70,850	34,027	28,675
- Rx Rate (L1) (Bit/s)	14.83 K	9.2 M	9.85 M	10.05 M	9.47 M	9.94 M
- Rx Rate (Fps)	22	7,773	4,461	2,362	1,134	956
- Flood Count (Frames)	61	44	54	54	53	58
P-0-0-2						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	639	230,081	133,517	70,439	35,306	28,792
- Rx Rate (L1) (Bit/s)	14.31 K	9.08 M	9.83 M	9.99 M	9.83 M	9.98 M
- Rx Rate (Fps)	21	7,669	4,451	2,348	1,177	960
- Flood Count (Frames)	61	50	56	52	56	57
P-0-0-3						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	698	231,934	133,870	66,496	33,552	28,796



- Rx Rate (L1) (Bit/s)	15.64 K	9.15 M	9.85 M	9.43 M	9.34 M	9.98 M
- Rx Rate (Fps)	23	7,731	4,462	2,217	1,118	960
- Flood Count (Frames)	60	53	57	54	53	54
P-0-0-4 - Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx (Frames) - Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	2,114,001 300 M	300 M	300 M
- Tx Rate (LT) (Blus)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	710	232,032	131,853	69,390	33,729	28,340
- Rx (Haines) - Rx Rate (L1) (Bit/s)	15.9 K	9.16 M	9.7 M	9.84 M	9.39 M	9.82 M
- Rx Rate (Er) (Blus)	24	7,734	4,395	2,313	1,124	9.02 10
- Flood Count (Frames)	61	53	57	56	54	55
P-0-0-5	01	55	31	50	34	
- Tx (Frames)	13,392,857	7,601,351	4.076.086	2,114,661	1,077,586	865,384
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (ET) (Bit/3)	446.429	253,378	135.870	70,489	35,920	28,846
- Rx (Frames)	0	235,550	134,500	70,714	33,389	28,677
- Rx Rate (L1) (Bit/s)	0	9.3 M	9.9 M	10.03 M	9.3 M	9.94 M
- Rx Rate (Fps)	0	7,852	4,483	2,357	1,113	956
- Flood Count (Frames)	60	49	55	56	55	60
P-0-2-0		-10				
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (ET) (Bit/3)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	636	231,362	129,954	69,653	34,832	28,417
- Rx (Frames) - Rx Rate (L1) (Bit/s)	14.25 K	9.13 M	9.56 M	9.88 M	9.7 M	9.85 M
- Rx Rate (Fps)	21	7,712	4,332	2,322	1,161	947
- Flood Count (Frames)	58	58	56	56	53	55
P-0-2-1	30	30	30	30	33	- 33
- Tx (Frames)	13,392,857	7,601,351	4.076.086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (ET) (Blus)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	0	233,062	133,409	65,335	33,856	27,774
- Rx Rate (L1) (Bit/s)	0	9.2 M	9.82 M	9.27 M	9.43 M	9.63 M
- Rx Rate (Fps)	0	7,769	4,447	2,178	1,129	926
- Flood Count (Frames)	59	49	56	58	56	53
P-0-2-2	- 33	70	30	30	30	- 33
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	607	228,326	134,564	71,331	33,397	28,612
- Rx Rate (L1) (Bit/s)	13.6 K	9.01 M	9.9 M	10.12 M	9.3 M	9.92 M
- Rx Rate (Fps)	20	7,611	4,485	2,378	1,113	954
- Flood Count (Frames)	61	49	58	60	56	56
P-0-2-3	01					
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1.077.586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	612	223,676	132,647	70,721	34,771	28,368
- Rx Rate (L1) (Bit/s)	13.71 K	8.83 M	9.76 M	10.03 M	9.68 M	9.83 M
- Rx Rate (Fps)	20	7,456	4,422	2,357	1,159	946
- Flood Count (Frames)	59	51	55	55	56	54
P-0-2-4		31		- 55	50	
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (ET) (Blus)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	624	230,826	127,131	68,671	34,719	28,833
- Rx (Frames) - Rx Rate (L1) (Bit/s)	13.98 K	9.11 M	9.36 M	9.74 M	9.67 M	20,033 10 M
- Rx Rate (LT) (Blus)	13.96 K	7,694	4,238	2,289	1,157	961
- Flood Count (Frames)	61	46	4,236 58	53	55	56
P-0-2-5	01	40	30	33	33	30
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx (Frames) - Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	2,114,001 300 M	300 M	300 M
- Tx Rate (ET) (Bibs)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	440,429	228,741	133,716	70,469	34,716	28,668
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	9.03 M	9.84 M	9.99 M	9.66 M	9.94 M
- Rx Rate (E1) (Bibs)	0	7,625	9.64 M 4,457	2,348	9.00 M	9.94 M
- Flood Count (Frames)	60	7,625	4,457 58	2,346	55	57
P-0-4-0	OU	30	30	30	ວວ	57
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	300 M 446,429	300 M 253,378	300 M 135,870	300 M 70,489	300 M 35,920	300 M 28,846
	44n 479	/5.1.1/X	135 870	/U 489	35 970	/X X46



- Rx (Frames)	626	228,629	133,927	70,945	33,680	28,569
- Rx Rate (L1) (Bit/s)	14.02 K	9.02 M	9.86 M	10.06 M	9.38 M	9.9 M
- Rx Rate (Fps)	21	7,621	4,464	2,365	1,123	952
- Flood Count (Frames)	57	46	56	57	53	52
P-0-4-1						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	611	227,559	134,766	70,174	34,085	28,792
- Rx Rate (L1) (Bit/s)	13.69 K	8.98 M	9.92 M	9.96 M	9.49 M	9.98 M
- Rx Rate (Fps)	20	7,585	4,492	2,339	1,136	960
- Flood Count (Frames)	56	47	54	51	53	53
P-0-4-2						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	610	229,149	134,392	70,060	34,294	28,842
- Rx Rate (L1) (Bit/s)	13.66 K	9.04 M	9.89 M	9.94 M	9.55 M	10 M
- Rx Rate (Fps)	20	7,638	4,480	2,335	1,143	961
- Flood Count (Frames)	61	51	55	56	52	54
P-0-4-3						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	572	228,545	134,576	71,152	35,693	28,676
- Rx Rate (L1) (Bit/s)	12.81 K	9.02 M	9.9 M	10.09 M	9.94 M	9.94 M
- Rx Rate (Fps)	19	7,618	4,486	2,372	1,190	956
- Flood Count (Frames)	55	48	54	53	56	52
P-0-4-4						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	603	231,378	134,446	70,829	34,414	28,700
- Rx Rate (L1) (Bit/s)	13.51 K	9.13 M	9.9 M	10.05 M	9.58 M	9.95 M
- Rx Rate (Fps)	20	7,713	4,482	2,361	1,147	957
- Flood Count (Frames)	55	49	52	56	55	57
P-0-4-5						
- Tx (Frames)	13,392,857	7,601,351	4,076,086	2,114,661	1,077,586	865,384
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,870	70,489	35,920	28,846
- Rx (Frames)	615	234,353	134,089	71,166	35,631	28,721
- Rx Rate (L1) (Bit/s)	13.78 K	9.25 M	9.87 M	10.1 M	9.92 M	9.96 M
- Rx Rate (Fps)	21	7,812	4,470	2,372	1,188	957
- Flood Count (Frames)	57	49	55	53	56	54

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,881
Rx Rate (Percent)	5.56 %
Rx Rate (L1) (Bit/s)	1 G
Rx Rate (Fps)	81.35 K
Loss Rate (Percent)	81.46 %
Loss (Frames)	10,725,930
P-0-0-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	2,315,315
- Rx Rate (L1) (Bit/s)	949.59 M
- Rx Rate (Fps)	77,177
- Flood Count (Frames)	8
P-0-0-1	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,310
- Rx Rate (L1) (Bit/s)	3 M




- Rx Rate (Fps)	244
- Flood Count (Frames)	26
P-0-0-2	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps) - Rx (Frames)	24,382 7,243
- Rx Rate (L1) (Bit/s)	2.97 M
- Rx Rate (Fps)	241
- Flood Count (Frames)	23
P-0-0-3	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,465
- Rx Rate (L1) (Bit/s)	3.06 M
- Rx Rate (Fps)	249
- Flood Count (Frames)	24
P-0-0-4	704 400
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M 24,382
- Tx Rate (Fps) - Rx (Frames)	7,452
- Rx (Frames) - Rx Rate (L1) (Bit/s)	3.06 M
- Rx Rate (E1) (Bibs)	248
- Flood Count (Frames)	32
P-0-0-5	32
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,239
- Rx Rate (L1) (Bit/s)	2.97 M
- Rx Rate (Fps)	241
- Flood Count (Frames)	31
P-0-2-0	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,597 3.12 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	253
- Flood Count (Frames)	26
P-0-2-1	20
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,399
- Rx Rate (L1) (Bit/s)	3.03 M
- Rx Rate (Fps)	247
- Flood Count (Frames)	24
P-0-2-2	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,296
- Rx Rate (L1) (Bit/s)	2.99 M 243
- Rx Rate (Fps) - Flood Count (Frames)	243
P-0-2-3	20
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,463
- Rx Rate (L1) (Bit/s)	3.06 M
- Rx Rate (Fps)	249
- Flood Count (Frames)	24
P-0-2-4	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,398



- Rx Rate (L1) (Bit/s)	3.03 M
- Rx Rate (Fps)	247
- Flood Count (Frames)	25
P-0-2-5	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,289
- Rx Rate (L1) (Bit/s)	2.99 M
- Rx Rate (Fps)	243
- Flood Count (Frames)	30
P-0-4-0	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,268
- Rx Rate (L1) (Bit/s)	2.98 M
- Rx Rate (Fps)	242
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,347
- Rx Rate (L1) (Bit/s)	3.01 M
- Rx Rate (Fps)	245
- Flood Count (Frames)	25
P-0-4-2	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	
- Tx Rate (E1) (Bibs)	300 M
	24,382
- Rx (Frames)	7,408
- Rx Rate (L1) (Bit/s)	3.04 M 247
- Rx Rate (Fps)	
- Flood Count (Frames) P-0-4-3	28
	721 460
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,253
- Rx Rate (L1) (Bit/s)	2.97 M
- Rx Rate (Fps)	242
- Flood Count (Frames)	31
P-0-4-4	704 400
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,389
- Rx Rate (L1) (Bit/s)	3.03 M
- Rx Rate (Fps)	246
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	731,469
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	7,371
- Rx Rate (L1) (Bit/s)	3.02 M
- Rx Rate (Fps)	246
- Flood Count (Frames)	25



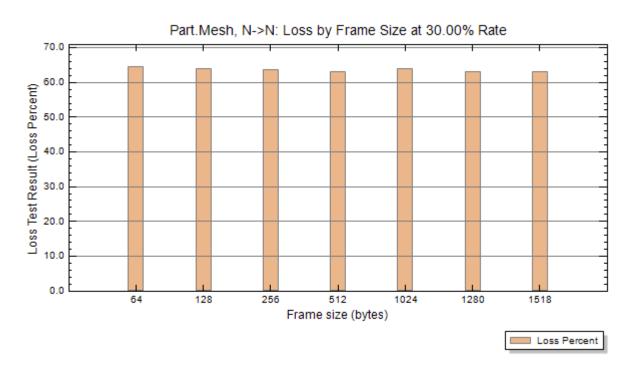

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,285	6,081,081	3,260,869	1,691,728	862,068	692,307
Rx Rate (Percent)	0 %	0.02 %	6.47 %	6.51 %	6.76 %	6.03 %
Rx Rate (L1) (Bit/s)	619.29 K	2.81 M	1.16 G	1.17 G	1.22 G	1.09 G
Rx Rate (Fps)	921.57	2.38 K	527.44 K	275.49 K	145.61 K	104.45 K
Loss Rate (Percent)	99.99 %	99.96 %	83.83 %	83.72 %	83.11 %	84.91 %
Loss (Frames)	321,400,907	182,361,099	82,002,844	42,487,066	21,493,674	17,635,745
P-0-0-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	27,646	64,653	13,415,167	6,789,286	3,582,512	2,541,961
- Rx Rate (L1) (Bit/s)	619.27 K	2.55 M	987.36 M	963.17 M	997.37 M	881.21 M
- Rx Rate (Fps)	922	2,155	447,172	226,310	119,417	84,732
- Flood Count (Frames)	27	27	12	9	12	9
P-0-0-1						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	515	141,349	81,948	45,874	35,045
- Rx Rate (L1) (Bit/s)	0	20.33 K	10.4 M	11.63 M	12.77 M	12.15 M
- Rx Rate (Fps)	0	17	4,712	2,732	1,529	1,168
- Flood Count (Frames)	58	59	51	54	56	57
P-0-0-2						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	531	136,578	87,125	45,886	34,573
- Rx Rate (L1) (Bit/s)	0	20.96 K	10.05 M	12.36 M	12.77 M	11.99 M
- Rx Rate (Fps)	0	18	4,553	2,904	1,530	1,152
- Flood Count (Frames)	60	56	46	53	56	54
P-0-0-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	143,634	87,271	44,821	34,919



- Rx Rate (L1) (Bit/s)	0	0	10.57 M	12.38 M	12.48 M	12.11 M
- Rx Rate (Fps)	0	0	4,788	2,909	1,494	1,164
- Flood Count (Frames)	60	59	50	55	54	54
P-0-0-4	17 057 140	10 125 125	E 424 702	2 040 540	1 426 701	1 152 046
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,142 400 M	10,135,135 400 M	5,434,782 400 M	2,819,548 400 M	1,436,781 400 M	1,153,846 400 M
- Tx Rate (LT) (Bl/s)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	095,236	440	142,711	87,221	46,286	34,752
- Rx Rate (L1) (Bit/s)	0	17.37 K	10.5 M	12.37 M	12.89 M	12.05 M
- Rx Rate (Fps)	0	17.57 K	4,757	2,907	1,543	1,158
- Flood Count (Frames)	56	61	44	56	56	55
P-0-0-5	30	01	77	30	30	
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93.985	47,893	38,462
- Rx (Frames)	0	450	136,147	87,029	46,672	35,230
- Rx Rate (L1) (Bit/s)	0	17.76 K	10.02 M	12.35 M	12.99 M	12.21 M
- Rx Rate (Fps)	0	15	4,538	2,901	1,556	1,174
- Flood Count (Frames)	56	61	50	61	55	58
P-0-2-0		<u> </u>		0.		
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	445	143,030	86,820	46,633	34,913
- Rx Rate (L1) (Bit/s)	0	17.56 K	10.53 M	12.32 M	12.98 M	12.1 M
- Rx Rate (Fps)	0	15	4,768	2,894	1,554	1,164
- Flood Count (Frames)	58	56	47	54	57	54
P-0-2-1						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	441	142,263	87,519	45,014	35,066
- Rx Rate (L1) (Bit/s)	0	17.4 K	10.47 M	12.42 M	12.53 M	12.16 M
- Rx Rate (Fps)	0	15	4,742	2,917	1,500	1,169
- Flood Count (Frames)	58	58	51	54	55	56
P-0-2-2						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	440	143,582	86,747	47,588	32,298
- Rx Rate (L1) (Bit/s)	0	17.37 K	10.57 M	12.31 M	13.25 M	11.2 M
- Rx Rate (Fps)	0	15	4,786	2,892	1,586	1,077
- Flood Count (Frames)	58	58	53	52	55	58
P-0-2-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	408	138,896	86,612	44,674	35,072
- Rx Rate (L1) (Bit/s)	0	16.1 K	10.22 M	12.29 M	12.44 M	12.16 M
- Rx Rate (Fps)	0	14	4,630	2,887	1,489	1,169
- Flood Count (Frames)	58	58	54	56	52	54
P-0-2-4	47.057.440	40 405 405	F 404 700	0.040.540	4 400 704	4 450 040
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	433	143,350	87,367	47,804	35,200
- Rx Rate (L1) (Bit/s)	0	17.09 K	10.55 M	12.39 M	13.31 M	12.2 M
- Rx Rate (Fps)	58	14 59	4,778	2,912	1,593	1,173
- Flood Count (Frames)	30	39	53	54	52	55
P-0-2-5	17.057.140	10 125 125	E 424 702	2 040 540	1 426 701	1 152 046
- Tx (Frames)	17,857,142 400 M	10,135,135 400 M	5,434,782 400 M	2,819,548 400 M	1,436,781 400 M	1,153,846 400 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	095,236	0	140,390	86,872	45,012	34,715
- Rx Rate (L1) (Bit/s)	0	0	140,390 10.33 M	12.32 M	12.53 M	12.03 M
- Rx Rate (Fps)	0	0	4,680	2,896	1,500	1,157
- Flood Count (Frames)	58	58	4,080	54	56	57
P-0-4-0	30	30	70	J-1	30	31
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	2,619,546 400 M	400 M	1, 155,640 400 M
- Tx Rate (ET) (Blus)	595,238	337,838	181,159	93,985	47,893	38,462
- 17 Mare (1 h2)	393,230	331,030	101,109	33,303	41,093	30,402



- Rx (Frames)	0	436	142,926	86,949	45,896	35,091
- Rx Rate (L1) (Bit/s)	0	17.21 K	10.52 M	12.34 M	12.78 M	12.16 M
- Rx Rate (Fps)	0	15	4,764	2,898	1,530	1,170
- Flood Count (Frames)	60	55	48	54	55	55
P-0-4-1						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	423	141,901	86,964	47,687	34,778
- Rx Rate (L1) (Bit/s)	0	16.69 K	10.44 M	12.34 M	13.28 M	12.06 M
- Rx Rate (Fps)	0	14	4,730	2,899	1,590	1,159
- Flood Count (Frames)	55	54	53	55	55	52
P-0-4-2						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	427	143,000	87,317	47,194	35,189
- Rx Rate (L1) (Bit/s)	0	16.85 K	10.52 M	12.39 M	13.14 M	12.2 M
- Rx Rate (Fps)	0	14	4,767	2,911	1,573	1,173
- Flood Count (Frames)	57	55	53	53	53	57
P-0-4-3						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	433	141,947	87,385	46,074	34,614
- Rx Rate (L1) (Bit/s)	0	17.09 K	10.45 M	12.4 M	12.83 M	12 M
- Rx Rate (Fps)	0	14	4,732	2,913	1,536	1,154
- Flood Count (Frames)	55	57	46	54	56	53
P-0-4-4						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	423	142,575	87,247	47,462	35,180
- Rx Rate (L1) (Bit/s)	0	16.69 K	10.49 M	12.38 M	13.21 M	12.2 M
- Rx Rate (Fps)	0	14	4,753	2,908	1,582	1,173
- Flood Count (Frames)	56	57	48	56	55	55
P-0-4-5						
- Tx (Frames)	17,857,142	10,135,135	5,434,782	2,819,548	1,436,781	1,153,846
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	1	426	143,785	87,106	45,286	34,882
- Rx Rate (L1) (Bit/s)	22.4	16.81 K	10.58 M	12.36 M	12.61 M	12.09 M
- Rx Rate (Fps)	0	14	4,793	2,904	1,510	1,163
- Flood Count (Frames)	59	56	51	55	55	51

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,175
Rx Rate (Percent)	5.92 %
Rx Rate (L1) (Bit/s)	1.07 G
Rx Rate (Fps)	86.64 K
Loss Rate (Percent)	85.19 %
Loss (Frames)	14,955,921
P-0-0-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	2,414,266
- Rx Rate (L1) (Bit/s)	990.17 M
- Rx Rate (Fps)	80,476
- Flood Count (Frames)	16
P-0-0-1	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,905
- Rx Rate (L1) (Bit/s)	4.47 M




- Rx Rate (Fps)	364
- Flood Count (Frames)	24
P-0-0-2	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,987
- Rx Rate (L1) (Bit/s)	4.51 M
- Rx Rate (Fps)	366
- Flood Count (Frames)	25
P-0-0-3	075 202
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M 32,510
- Rx (Frames)	10,917
- Rx Rate (L1) (Bit/s)	4.48 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	24
P-0-0-4	2-1
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,922
- Rx Rate (L1) (Bit/s)	4.48 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	23
P-0-0-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,890
- Rx Rate (L1) (Bit/s)	4.47 M
- Rx Rate (Fps)	363
- Flood Count (Frames)	26
P-0-2-0	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,146
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	4.16 M 338
- Flood Count (Frames)	24
P-0-2-1	24
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	11,013
- Rx Rate (L1) (Bit/s)	4.52 M
- Rx Rate (Fps)	367
- Flood Count (Frames)	22
P-0-2-2	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,907
- Rx Rate (L1) (Bit/s)	4.47 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	25
P-0-2-3	0== 00=
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,906
- Rx Rate (L1) (Bit/s)	4.47 M 364
- Rx Rate (Fps) - Flood Count (Frames)	24
P-0-2-4	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Er) (Biss)	32,510
- Tx Rate (Fps) - Rx (Frames)	32,510 10,818



- Rx Rate (L1) (Bit/s)	4.44 M
- Rx Rate (Fps)	361
- Flood Count (Frames)	26
P-0-2-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,940
- Rx Rate (L1) (Bit/s)	4.49 M
- Rx Rate (Fps)	365
- Flood Count (Frames) P-0-4-0	29
	075 202
- Tx (Frames) - Tx Rate (L1) (Bit/s)	975,292 400 M
- Tx Rate (E1) (Blus)	32,510
- Rx (Frames)	10,909
- Rx Rate (L1) (Bit/s)	4.47 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	26
P-0-4-1	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,893
- Rx Rate (L1) (Bit/s)	4.47 M
- Rx Rate (Fps)	363
- Flood Count (Frames)	21
P-0-4-2	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,998
- Rx Rate (L1) (Bit/s)	4.51 M
- Rx Rate (Fps)	367
- Flood Count (Frames)	25
P-0-4-3	075 000
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames) - Rx Rate (L1) (Bit/s)	11,031 4.52 M
- Rx Rate (E1) (Blus)	368
- Flood Count (Frames)	26
P-0-4-4	20
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,934
- Rx Rate (L1) (Bit/s)	4.48 M
- Rx Rate (Fps)	364
- Flood Count (Frames)	20
P-0-4-5	
- Tx (Frames)	975,292
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	10,951
- Rx Rate (L1) (Bit/s)	4.49 M
- Rx Rate (Fps)	365
- Flood Count (Frames)	29



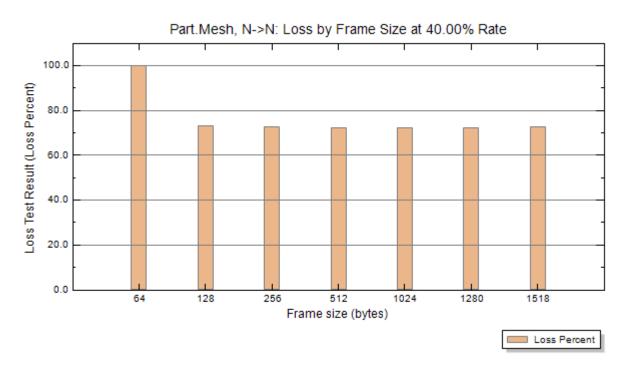

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,857	7,601,351	4,076,087	2,114,661	1,077,586	865,384
Rx Rate (Percent)	0.01 %	0.01 %	6.48 %	6.74 %	6.87 %	6.92 %
Rx Rate (L1) (Bit/s)	1.3 M	1.04 M	1.17 G	1.21 G	1.24 G	1.25 G
Rx Rate (Fps)	1.93 K	877.6	528.33 K	285.02 K	148.16 K	119.73 K
Loss Rate (Percent)	99.99 %	99.99 %	87.04 %	86.52 %	86.25 %	86.16 %
Loss (Frames)	401,727,837	228,014,188	106,432,711	54,889,137	27,882,736	22,369,576
P-0-0-0						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	48,897	26,327	13,416,595	7,006,650	3,583,358	2,880,182
- Rx Rate (L1) (Bit/s)	1.1 M	1.04 M	987.46 M	994.01 M	997.61 M	998.46 M
- Rx Rate (Fps)	1,630	878	447,220	233,555	119,445	96,006
- Flood Count (Frames)	26	30	10	11	11	10
P-0-0-1						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	698	0	145,518	86,974	49,650	42,100
- Rx Rate (L1) (Bit/s)	15.64 K	0	10.71 M	12.34 M	13.82 M	14.59 M
- Rx Rate (Fps)	23	0	4,851	2,899	1,655	1,403
- Flood Count (Frames)	61	59	47	45	47	52
P-0-0-2						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	729	0	143,116	92,168	51,710	41,814
- Rx Rate (L1) (Bit/s)	16.33 K	0	10.53 M	13.08 M	14.4 M	14.5 M
- Rx Rate (Fps)	24	0	4,771	3,072	1,724	1,394
- Flood Count (Frames)	61	58	42	45	51	49
P-0-0-3						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	688	0	144,648	91,026	47,946	42,085



- Rx Rate (L1) (Bit/s)	15.41 K	0	10.65 M	12.91 M	13.35 M	14.59 M
- Rx Rate (Fps)	23	0	4,822	3,034	1,598	1,403
- Flood Count (Frames)	59	61	37	47	53	47
P-0-0-4	00 004 400	40,000,040	0.700.470	0.504.400	4 705 077	4 440 00
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	667	0	145,550	91,888	51,509	41,825
- Rx Rate (L1) (Bit/s)	14.94 K	0	10.71 M	13.04 M	14.34 M	14.5 M
- Rx Rate (Fps)	22	0	4,852	3,063	1,717	1,394
- Flood Count (Frames)	61	61	45	53	51	52
P-0-0-5	00 004 400	10.000.010	0.700.470	0.504.400	4 705 077	4 440 00-
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 N
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	633	0	142,103	92,358	51,273	41,917
- Rx Rate (L1) (Bit/s)	14.18 K	0	10.46 M	13.1 M	14.27 M	14.53 M
- Rx Rate (Fps)	21	0	4,737	3,079	1,709	1,397
- Flood Count (Frames)	59	59	36	43	51	55
P-0-2-0	20 204 400	40,000,040	0.700.470	2 524 420	4 705 077	4 440 00
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	142,824	92,654	50,603	41,778
- Rx Rate (L1) (Bit/s)	0	0	10.51 M	13.14 M	14.09 M	14.48 M
- Rx Rate (Fps)	0	0	4,761	3,088	1,687	1,393
- Flood Count (Frames)	57	61	48	55	50	52
P-0-2-1	00 004 400	40,000,040	0.700.470	0.504.400	4 705 077	4 440 00
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	143,552	85,728	51,130	41,731
- Rx Rate (L1) (Bit/s)	0	0	10.57 M	12.16 M	14.23 M	14.47 M
- Rx Rate (Fps)	0	0	4,785	2,858	1,704	1,391
- Flood Count (Frames)	59	58	38	48	52	51
P-0-2-2	00.004.400	10.000.010	0.700.470	0.504.400	4 705 077	4 440 00
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	625	0	143,412	87,286	49,810	40,893
- Rx Rate (L1) (Bit/s)	14 K	0	10.56 M	12.38 M	13.87 M	14.18 M
- Rx Rate (Fps)	21	0	4,780	2,910	1,660	1,363
- Flood Count (Frames)	61	58	39	49	46	49
P-0-2-3	22 224 420	40,000,040	0.700.470	2 524 420	4 705 077	4 440 007
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	607	0	144,379	89,647	49,626	41,896
- Rx Rate (L1) (Bit/s)	13.6 K	0	10.63 M	12.72 M	13.82 M	14.52 M
- Rx Rate (Fps)	20	0	4,813	2,988	1,654	1,397
- Flood Count (Frames)	61	58	47	44	49	46
P-0-2-4	00 004 400	10.000.010	0.700.470	0.504.400	4 705 077	4 440 00
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 N
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	129,951	92,152	51,381	41,783
- Rx Rate (L1) (Bit/s)	0	0	9.56 M	13.07 M	14.3 M	14.48 M
- Rx Rate (Fps)	0	0	4,332	3,072	1,713	1,393
- Flood Count (Frames)	57	58	41	41	57	53
P-0-2-5						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	618	0	144,366	92,090	49,663	42,025
- Rx Rate (L1) (Bit/s)	13.84 K	0	10.63 M	13.06 M	13.83 M	14.57 N
- Rx Rate (Fps)	21	0	4,812	3,070	1,655	1,401
- Flood Count (Frames)	60	61	35	44	48	50
P-0-4-0						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 N
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077



- Rx (Frames)	623	0	144,132	91,822	51,003	41,732
- Rx Rate (L1) (Bit/s)	13.96 K	0	10.61 M	13.03 M	14.2 M	14.47 M
- Rx Rate (Fps)	21	0	4,804	3,061	1,700	1,391
- Flood Count (Frames)	57	60	44	48	47	55
P-0-4-1						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	611	0	144,527	91,406	51,274	42,147
- Rx Rate (L1) (Bit/s)	13.69 K	0	10.64 M	12.97 M	14.27 M	14.61 M
- Rx Rate (Fps)	20	0	4,818	3,047	1,709	1,405
- Flood Count (Frames)	56	58	32	40	52	50
P-0-4-2						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	604	0	144,499	91,927	51,385	42,037
- Rx Rate (L1) (Bit/s)	13.53 K	0	10.64 M	13.04 M	14.31 M	14.57 M
- Rx Rate (Fps)	20	0	4,817	3,064	1,713	1,401
- Flood Count (Frames)	60	59	38	44	44	56
P-0-4-3						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	631	0	143,753	91,772	51,488	42,042
- Rx Rate (L1) (Bit/s)	14.13 K	0	10.58 M	13.02 M	14.33 M	14.57 M
- Rx Rate (Fps)	21	0	4,792	3,059	1,716	1,401
- Flood Count (Frames)	57	56	40	53	48	53
P-0-4-4						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	618	0	143,462	91,886	51,246	41,983
- Rx Rate (L1) (Bit/s)	13.84 K	0	10.56 M	13.04 M	14.27 M	14.55 M
- Rx Rate (Fps)	21	0	4,782	3,063	1,708	1,399
- Flood Count (Frames)	54	59	35	44	51	53
P-0-4-5						
- Tx (Frames)	22,321,428	12,668,918	6,793,478	3,524,436	1,795,977	1,442,307
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	615	1	143,500	91,264	50,783	41,970
- Rx Rate (L1) (Bit/s)	13.78 K	39.47	10.56 M	12.95 M	14.14 M	14.55 M
- Rx Rate (Fps)	21	0	4,783	3,042	1,693	1,399
- Flood Count (Frames)	56	56	45	45	50	50

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,469
Rx Rate (Percent)	5.31 %
Rx Rate (L1) (Bit/s)	956.65 M
Rx Rate (Fps)	77.75 K
Loss Rate (Percent)	89.37 %
Loss (Frames)	19,611,523
P-0-0-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	2,143,573
- Rx Rate (L1) (Bit/s)	879.15 M
- Rx Rate (Fps)	71,452
- Flood Count (Frames)	11
P-0-0-1	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,196
- Rx Rate (L1) (Bit/s)	4.59 M




- Rx Rate (Fps)	373
- Flood Count (Frames)	23
P-0-0-2	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,110
- Rx Rate (L1) (Bit/s)	4.56 M
- Rx Rate (Fps)	370
- Flood Count (Frames)	25
P-0-0-3	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,185
- Rx Rate (L1) (Bit/s)	4.59 M
- Rx Rate (Fps)	373
- Flood Count (Frames)	22
P-0-0-4	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,140
- Rx Rate (L1) (Bit/s)	4.57 M
- Rx Rate (Fps)	371
- Flood Count (Frames)	31
P-0-0-5	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,159
- Rx Rate (L1) (Bit/s)	4.58 M
- Rx Rate (Fps)	372
- Flood Count (Frames)	25
P-0-2-0	4 040 445
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,135 4.57 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	371
- Flood Count (Frames)	24
P-0-2-1	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,058
- Rx Rate (L1) (Bit/s)	4.54 M
- Rx Rate (Fps)	369
- Flood Count (Frames)	25
P-0-2-2	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,106
- Rx Rate (L1) (Bit/s)	4.55 M
- Rx Rate (Fps)	370
- Flood Count (Frames)	24
P-0-2-3	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	11,098
- Rx Rate (L1) (Bit/s)	4.55 M
- Rx Rate (Fps)	370
- Flood Count (Frames)	29
P-0-2-4	
- Tx (Frames)	1,219,115
- Tx Rate (L1) (Bit/s)	500 M
TX Trate (ET) (Divo)	
- Tx Rate (Fps) - Rx (Frames)	40,637 11,108



- Rx Rate (L1) (Bit/s)		
- Flood Count (Frames) 25 P-0-2-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 370 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 370 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Flood Count (Frames) 373 - Rx (Frame	- Rx Rate (L1) (Bit/s)	
P-0-2-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Rx (Frames) 11,038 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 11,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Flood Co		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 368 - Flood Count (Frames) 27 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Fl		25
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369 - Flood Count (Frames) 24 - P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 370 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Rx (Frames) 11,038 - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 369 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 369 - Rx Rate (Fps) 369		4 040 445
- Tx Rate (Fps)		
- Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 11,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Rx (Frames) 11,038 - Rx (Frames) 11,038 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 27 R-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - Rx (Frames) 11,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 369		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) - 369 - Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 11,015 - Tx Rate (Fps) 367 - Rx (Frames) 11,016 - Rx Rate (Fps) 367 - Rx (Frames) 11,016 - Rx Rate (Fps) 369 - Rx Rate (Fps) 369 - Rx Rate (Fps) 369		
- Flood Count (Frames) 24 P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
P-0-4-0 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 369		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 368 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.53 M - Tx Rate (Fps) 369 - Rx Rate (Fps) 369		24
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 368 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 369 - Rx Rate (Fps) 369		4 040 445
- Tx Rate (Fps)	- IX (Frames)	
- Rx (Frames) 11,108 - Rx Rate (L1) (Bit/s) 4.56 M - Rx Rate (Fps) 370 - Flood Count (Frames) 25 - P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 369 - Rx Rate (Fps) 369		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) 370 - Flood Count (Frames) 25 P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 363 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 369 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (Fps) 369		
- Flood Count (Frames) P-0-4-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Tx (Frames) - Tx (Frames) - Tx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Rx Rate (Fps) - Flood Count (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Tx Rate (Fps) - Rx Rat		
P-0-4-1 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369	- Rx Rate (Fps)	
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Rx (Frames) 12,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Tx Rate (Fps) 367 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		25
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Flood Count (Frames) 25 - Flood Count (Frames) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx Rate (Fps) 40,637 - Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx (Frames) 11,038 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 - P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 500 M - Tx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 374 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.58 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,012 - Rx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (Fps) 368 - Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Flood Count (Frames) 27 P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Flood Count (Frames) 372 - Flood Count (Frames) 372 - Flood Count (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
P-0-4-2 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 - P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (Fps) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Flood Count (Frames) 27 - Flood Count (Frames) 372 - Flood Count (Frames) 27 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 - Rx Rate (Fps) 367 - Flood Count (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		27
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx Rate (Fps) 40,637 - Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369	- Tx (Frames)	
- Rx (Frames) 11,231 - Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 4.61 M - Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (Fps) 374 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Rx (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Rx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
P-0-4-3 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (L1) (Bit/s) 372 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Tx (Frames) 15,012 - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.50 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		22
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 4.50 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx Rate (Fps) 40,637 - Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx (Frames) 11,167 - Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 1,219,115 - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s) 4.58 M - Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		· · · · · · · · · · · · · · · · · · ·
- Rx Rate (Fps) 372 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
P-0-4-4 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		27
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx Rate (Fps) 40,637 - Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx (Frames) 11,012 - Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (L1) (Bit/s) 4.52 M - Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (Fps) 367 - Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Flood Count (Frames) 25 P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
P-0-4-5 - Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx (Frames) 1,219,115 - Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		25
- Tx Rate (L1) (Bit/s) 500 M - Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Tx Rate (Fps) 40,637 - Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx (Frames) 11,056 - Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (L1) (Bit/s) 4.53 M - Rx Rate (Fps) 369		
- Rx Rate (Fps) 369		
- Rx Rate (Fps) 369 - Flood Count (Frames) 26		
- Flood Count (Frames) 26	- Rx Rate (Fps)	
	- Flood Count (Frames)	26



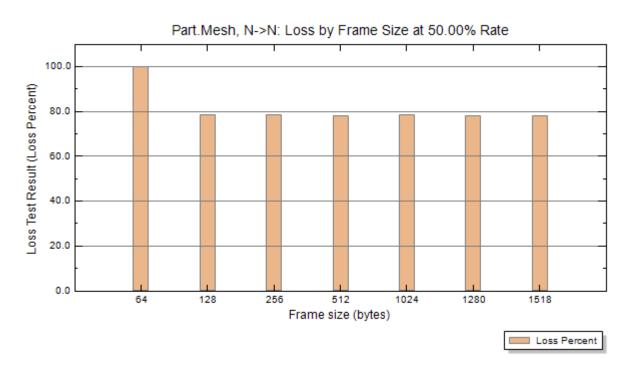

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G
Tx Rate (Fps)	16,071,428	9,121,621	4,891,303	2,537,593	1,293,103	1,038,461
Rx Rate (Percent)	0.01 %	0.01 %	0.88 %	6.92 %	6.58 %	7.01 %
Rx Rate (L1) (Bit/s)	1.05 M	1.91 M	158.7 M	1.25 G	1.18 G	1.26 G
Rx Rate (Fps)	1.56 K	1.61 K	71.87 K	292.57 K	141.75 K	121.28 K
Loss Rate (Percent)	99.99 %	99.98 %	98.53 %	88.47 %	89.04 %	88.32 %
Loss (Frames)	482,096,079	273,600,226	144,582,898	67,350,852	34,540,434	27,515,393
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	33,128	41,342	2,046,001	7,007,839	3,584,033	2,880,247
- Rx Rate (L1) (Bit/s)	742.07 K	1.63 M	150.59 M	994.18 M	997.79 M	998.49 M
- Rx Rate (Fps)	1,104	1,378	68,200	233,595	119,468	96,008
- Flood Count (Frames)	29	24	27	10	12	8
P-0-0-1						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	7,664	103,987	39,896	44,626
- Rx Rate (L1) (Bit/s)	0	0	564.07 K	14.75 M	11.11 M	15.47 M
- Rx Rate (Fps)	0	0	255	3,466	1,330	1,488
- Flood Count (Frames)	59	57	59	49	45	45
P-0-0-2						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	550	7,291	104,114	38,311	44,789
- Rx Rate (L1) (Bit/s)	0	21.71 K	536.62 K	14.77 M	10.67 M	15.53 M
- Rx Rate (Fps)	0	18	243	3,470	1,277	1,493
- Flood Count (Frames)	59	59	60	42	36	42
P-0-0-3						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	986	551	7,187	104,619	40,084	44,796



- Rx Rate (L1) (Bit/s)	22.09 K	21.75 K	528.96 K	14.84 M	11.16 M	15.53 M
- Rx Rate (Fps)	33	18	240	3,487	1,336	1,493
- Flood Count (Frames)	57	59	60	35	38	43
P-0-0-4	00 705 744	45 000 700	0.450.470	4 000 000	0.455.470	4 700 700
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M 506,757	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857		271,739	140,977	71,839	57,692
- Rx (Frames)	965	480	7,552	103,952	39,901	44,404
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	21.62 K 32	18.94 K	555.83 K 252	14.75 M 3,465	11.11 M 1,330	15.39 M 1,480
- Flood Count (Frames)	59	61	58	3,405	40	45
P-0-0-5	59	01	36	40	40	40
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	947	472	0	103,708	39,984	44,661
- Rx Rate (L1) (Bit/s)	21.21 K	18.63 K	0	14.71 M	11.13 M	15.48 M
- Rx Rate (Fps)	32	16.03 K	0	3,457	1,333	1,489
- Flood Count (Frames)	59	60	59	3,437	42	41
P-0-2-0	39	00	39	30	42	41
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	6,152,173 600 M	4,229,323 600 M	600 M	1,730,769 600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	925	470	7,203	104.250	38,867	44,583
- Rx Rate (L1) (Bit/s)	20.72 K	18.55 K	530.14 K	14.79 M	10.82 M	15.46 M
- Rx Rate (Fps)	31	16.55 K	240	3,475	1,296	1,486
- Flood Count (Frames)	59	58	60	44	30	44
P-0-2-1	33	30	00	77	30	
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	883	466	7,319	103,797	38,930	44,259
- Rx Rate (L1) (Bit/s)	19.78 K	18.39 K	538.68 K	14.73 M	10.84 M	15.34 M
- Rx Rate (Fps)	29	16	244	3,460	1,298	1,475
- Flood Count (Frames)	60	57	58	39	37	50
P-0-2-2		01			0.	
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	898	440	7,405	104,129	39,377	44,547
- Rx Rate (L1) (Bit/s)	20.12 K	17.37 K	545.01 K	14.77 M	10.96 M	15.44 M
- Rx Rate (Fps)	30	15	247	3,471	1,313	1,485
- Flood Count (Frames)	58	59	62	40	37	45
P-0-2-3						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	908	445	2,131	103,405	38,597	44,757
- Rx Rate (L1) (Bit/s)	20.34 K	17.56 K	156.84 K	14.67 M	10.75 M	15.52 M
- Rx Rate (Fps)	30	15	71	3,447	1,287	1,492
- Flood Count (Frames)	63	58	56	46	33	43
P-0-2-4						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	896	444	7,582	104,044	38,503	44,706
- Rx Rate (L1) (Bit/s)	20.07 K	17.52 K	558.04 K	14.76 M	10.72 M	15.5 M
- Rx Rate (Fps)	30	15	253	3,468	1,283	1,490
- Flood Count (Frames)	59	57	60	35	31	43
P-0-2-5						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	882	0	4,685	103,832	38,847	43,705
- Rx Rate (L1) (Bit/s)	19.76 K	0	344.82 K	14.73 M	10.82 M	15.15 M
- Rx Rate (Fps)	29	0	156	3,461	1,295	1,457
- Flood Count (Frames)	59	55	56	44	36	42
P-0-4-0						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (L1) (Bit/s)	OOO IVI	OOO IVI				000 111



- Rx (Frames)	892	450	7,603	104,350	39,611	44,752
- Rx Rate (L1) (Bit/s)	19.98 K	17.76 K	559.58 K	14.8 M	11.03 M	15.51 M
- Rx Rate (Fps)	30	15	253	3,478	1,320	1,492
- Flood Count (Frames)	57	56	55	47	31	50
P-0-4-1						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	892	454	7,341	104,395	39,691	44,609
- Rx Rate (L1) (Bit/s)	19.98 K	17.92 K	540.3 K	14.81 M	11.05 M	15.46 M
- Rx Rate (Fps)	30	15	245	3,480	1,323	1,487
- Flood Count (Frames)	57	56	55	36	38	44
P-0-4-2						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	888	452	7,240	103,929	39,616	44,646
- Rx Rate (L1) (Bit/s)	19.89 K	17.84 K	532.86 K	14.74 M	11.03 M	15.48 M
- Rx Rate (Fps)	30	15	241	3,464	1,321	1,488
- Flood Count (Frames)	55	57	55	38	37	54
P-0-4-3						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	893	463	7,316	104,331	38,582	44,970
- Rx Rate (L1) (Bit/s)	20 K	18.27 K	538.46 K	14.8 M	10.74 M	15.59 M
- Rx Rate (Fps)	30	15	244	3,478	1,286	1,499
- Flood Count (Frames)	55	56	55	47	35	43
P-0-4-4						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	886	472	7,386	103,980	39,918	44,701
- Rx Rate (L1) (Bit/s)	19.85 K	18.63 K	543.61 K	14.75 M	11.11 M	15.5 M
- Rx Rate (Fps)	30	16	246	3,466	1,331	1,490
- Flood Count (Frames)	53	56	58	36	34	46
P-0-4-5						
- Tx (Frames)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	900	449	7,300	104,289	39,900	44,675
- Rx Rate (L1) (Bit/s)	20.16 K	17.72 K	537.28 K	14.8 M	11.11 M	15.49 M
- Rx Rate (Fps)	30	15	243	3,476	1,330	1,489
- Flood Count (Frames)	55	56	57	38	37	45

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10.8 G
Tx Rate (Fps)	877,763
Rx Rate (Percent)	6.03 %
Rx Rate (L1) (Bit/s)	1.08 G
Rx Rate (Fps)	88.16 K
Loss Rate (Percent)	89.96 %
Loss (Frames)	23,688,075
P-0-0-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	2,431,134
- Rx Rate (L1) (Bit/s)	997.09 M
- Rx Rate (Fps)	81,038
- Flood Count (Frames)	6
P-0-0-1	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	11,358
- Rx Rate (L1) (Bit/s)	4.66 M




D D + (F)	070
- Rx Rate (Fps)	379
- Flood Count (Frames) P-0-0-2	23
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,437
- Rx Rate (L1) (Bit/s)	5.1 M
- Rx Rate (Fps)	415
- Flood Count (Frames)	28
P-0-0-3	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,797
- Rx Rate (L1) (Bit/s)	5.25 M
- Rx Rate (Fps)	427
- Flood Count (Frames) P-0-0-4	24
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Eps)	48,765
- Rx (Frames)	12,777
- Rx Rate (L1) (Bit/s)	5.24 M
- Rx Rate (Fps)	426
- Flood Count (Frames)	20
P-0-0-5	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,177
- Rx Rate (L1) (Bit/s)	4.99 M
- Rx Rate (Fps)	406
- Flood Count (Frames)	20
P-0-2-0	4 400 000
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames) - Rx Rate (L1) (Bit/s)	12,815 5.26 M
- Rx Rate (Fps)	427
- Flood Count (Frames)	26
P-0-2-1	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,640
- Rx Rate (L1) (Bit/s)	5.18 M
- Rx Rate (Fps)	421
- Flood Count (Frames)	23
P-0-2-2	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,744
- Rx Rate (L1) (Bit/s)	5.23 M
- Rx Rate (Fps)	425
- Flood Count (Frames)	21
P-0-2-3 - Tx (Frames)	1,462,938
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,462,936 600 M
- Tx Rate (ET) (Blus)	48,765
- Rx (Frames)	12,659
- Rx Rate (L1) (Bit/s)	5.19 M
- Rx Rate (Fps)	422
- Flood Count (Frames)	23
P-0-2-4	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	11,879



D D ((14) (D)(()	4.07.14
- Rx Rate (L1) (Bit/s)	4.87 M
- Rx Rate (Fps)	396
- Flood Count (Frames)	23
P-0-2-5	4 400 000
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,670
- Rx Rate (L1) (Bit/s)	5.2 M
- Rx Rate (Fps)	422
- Flood Count (Frames)	27
P-0-4-0	4 400 000
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,833
- Rx Rate (L1) (Bit/s)	5.26 M
- Rx Rate (Fps)	428
- Flood Count (Frames)	24
P-0-4-1	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,752
- Rx Rate (L1) (Bit/s)	5.23 M
- Rx Rate (Fps)	425
- Flood Count (Frames)	27
P-0-4-2	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,680
- Rx Rate (L1) (Bit/s)	5.2 M
- Rx Rate (Fps)	423
- Flood Count (Frames)	26
P-0-4-3	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,800
- Rx Rate (L1) (Bit/s)	5.25 M
- Rx Rate (Fps)	427
- Flood Count (Frames)	21
P-0-4-4	
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (ET) (Blus)	48,765
- Rx (Frames)	12,890
- Rx (Halles)	5.29 M
- Rx Rate (E1) (Bibs)	430
- Flood Count (Frames)	25
P-0-4-5	25
	1 /62 020
- Tx (Frames)	1,462,938
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	12,764
- Rx Rate (L1) (Bit/s)	5.23 M
- Rx Rate (Fps)	425
- Flood Count (Frames)	25



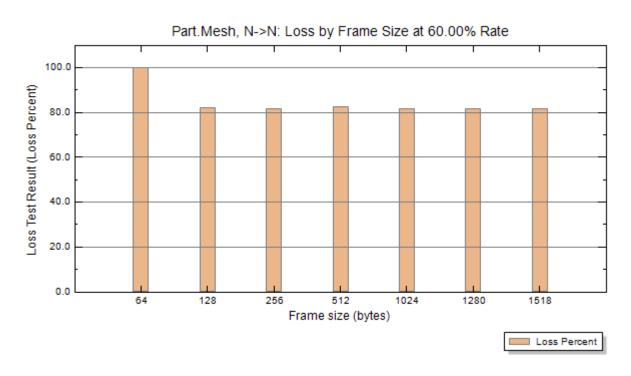

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G
Tx Rate (Fps)	18,750,000	10,641,891	5,706,521	2,960,526	1,508,620	1,211,538
Rx Rate (Percent)	0.01 %	0 %	0.02 %	7.06 %	6.95 %	7.12 %
Rx Rate (L1) (Bit/s)	969.65 K	678.79 K	3.36 M	1.27 G	1.25 G	1.28 G
Rx Rate (Fps)	1.44 K	573.3	1.52 K	298.55 K	149.75 K	123.16 K
Loss Rate (Percent)	99.99 %	99.99 %	99.97 %	89.92 %	90.07 %	89.83 %
Loss (Frames)	562,456,707	319,239,537	171,150,017	79,859,178	40,766,108	32,651,202
P-0-0-0						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	34,420	17,198	39,577	7,007,007	3,410,144	2,880,051
- Rx Rate (L1) (Bit/s)	771.01 K	678.75 K	2.91 M	994.06 M	949.38 M	998.42 M
- Rx Rate (Fps)	1,147	573	1,319	233,567	113,671	96,002
- Flood Count (Frames)	31	27	30	11	11	8
P-0-0-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	744	0	0	105,568	63,879	47,683
- Rx Rate (L1) (Bit/s)	16.67 K	0	0	14.98 M	17.78 M	16.53 M
- Rx Rate (Fps)	25	0	0	3,519	2,129	1,589
- Flood Count (Frames)	58	58	58	42	41	41
P-0-0-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	685	0	463	114,371	63,588	47,670
- Rx Rate (L1) (Bit/s)	15.34 K	0	34.08 K	16.23 M	17.7 M	16.53 M
- Rx Rate (Fps)	23	0	15	3,812	2,120	1,589
- Flood Count (Frames)	59	58	59	40	43	37
P-0-0-3						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	628	0	0	115,535	63,894	47,858



- Rx Rate (L1) (Bit/s)	14.07 K	0	0	16.39 M	17.79 M	16.59 M
- Rx Rate (Fps)	21 58	0	0	3,851	2,130	1,595
- Flood Count (Frames) P-0-0-4	58	61	55	36	47	37
- Tx (Frames)	31.250.000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591,216	317.029	164,474	83,812	67,308
- Rx (Frames)	0	0	0	115,577	63,597	47,941
- Rx Rate (L1) (Bit/s)	0	0	0	16.4 M	17.71 M	16.62 M
- Rx Rate (Fps)	0	0	0	3,853	2,120	1,598
- Flood Count (Frames)	58	60	57	32	38	35
P-0-0-5						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	561	0	482	115,284	63,572	47,943
- Rx Rate (L1) (Bit/s)	12.57 K	0	35.48 K	16.35 M	17.7 M	16.62 M
- Rx Rate (Fps) - Flood Count (Frames)	19 56	0 59	16 59	3,843	2,119 35	1,598
P-0-2-0	30	59	59	35	35	37
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Er) (Blus)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	556	0	448	115,686	62,441	48,028
- Rx Rate (L1) (Bit/s)	12.45 K	0	32.97 K	16.41 M	17.38 M	16.65 M
- Rx Rate (Fps)	19	0	15	3,856	2,081	1,601
- Flood Count (Frames)	59	58	59	33	41	36
P-0-2-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	559	0	429	114,465	63,691	47,547
- Rx Rate (L1) (Bit/s)	12.52 K	0	31.57 K	16.24 M	17.73 M	16.48 M
- Rx Rate (Fps)	19	0	14	3,816	2,123	1,585
- Flood Count (Frames)	56	59	61	34	41	45
P-0-2-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	563	0	433	115,794	63,659	47,961
- Rx Rate (L1) (Bit/s)	12.61 K	0	31.87 K	16.43 M	17.72 M	16.63 M
- Rx Rate (Fps) - Flood Count (Frames)	19 57	0 59	14 58	3,860	2,122 47	1,599 43
P-0-2-3	31	39	36	33	47	43
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	587	0	428	115,526	64,175	47,961
- Rx Rate (L1) (Bit/s)	13.15 K	0	31.5 K	16.39 M	17.87 M	16.63 M
- Rx Rate (Fps)	20	0	14	3,851	2,139	1,599
- Flood Count (Frames)	58	59	59	37	43	36
P-0-2-4						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	561	0	426	115,821	63,457	48,128
- Rx Rate (L1) (Bit/s)	12.57 K	0	31.35 K	16.43 M	17.67 M	16.68 M
- Rx Rate (Fps)	19	0	14	3,861	2,115	1,604
- Flood Count (Frames)	59	55	58	31	41	39
P-0-2-5	04.050.000	47 700 400	0.540.000	4.004.040	0.544.007	0.040.000
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps) - Rx (Frames)	1,041,667	591,216	317,029 431	164,474 115,792	83,812 63,806	67,308 47,814
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	31.72 K	16.43 M	17.76 M	47,814 16.58 M
- Rx Rate (LT) (Bil/S)	0	0	31.72 K	3,860	2,127	1,594
- Flood Count (Frames)	58	58	59	41	35	37
P-0-4-0	30	30	33	71	33	31
	31 250 000	17 736 486	9 510 860	4 934 210	2 514 367	2 N10 23N
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,250,000 700 M	17,736,486 700 M	9,510,869 700 M	4,934,210 700 M	2,514,367 700 M	2,019,230 700 M



- Rx (Frames)	562	0	405	116,101	63,828	47,902
- Rx Rate (L1) (Bit/s)	12.59 K	0	29.81 K	16.47 M	17.77 M	16.61 M
- Rx Rate (Fps)	19	0	14	3,870	2,128	1,597
- Flood Count (Frames)	56	59	57	42	39	31
P-0-4-1						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	573	0	435	116,422	63,857	48,030
- Rx Rate (L1) (Bit/s)	12.84 K	0	32.02 K	16.52 M	17.78 M	16.65 M
- Rx Rate (Fps)	19	0	15	3,881	2,129	1,601
- Flood Count (Frames)	56	58	56	37	43	36
P-0-4-2						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	577	0	411	115,223	63,507	48,137
- Rx Rate (L1) (Bit/s)	12.92 K	0	30.25 K	16.35 M	17.68 M	16.69 M
- Rx Rate (Fps)	19	0	14	3,841	2,117	1,605
- Flood Count (Frames)	56	56	57	31	39	43
P-0-4-3						
- Tx (Frames)	31,250,000	17.736.486	9.510.869	4.934.210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1.041.667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	568	0	397	114,189	63,663	48,155
- Rx Rate (L1) (Bit/s)	12.72 K	0	29.22 K	16.2 M	17.72 M	16.69 M
- Rx Rate (Fps)	19	0	13	3,806	2,122	1,605
- Flood Count (Frames)	56	56	58	38	35	39
P-0-4-4						
- Tx (Frames)	31.250.000	17,736,486	9.510.869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	576	0	436	114,053	63,775	47,873
- Rx Rate (L1) (Bit/s)	12.9 K	0	32.09 K	16.18 M	17.75 M	16.6 M
- Rx Rate (Fps)	19	0	15	3,802	2,126	1,596
- Flood Count (Frames)	55	59	56	38	41	39
P-0-4-5						
- Tx (Frames)	31,250,000	17,736,486	9,510,869	4,934,210	2,514,367	2,019,230
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,308
- Rx (Frames)	568	1	409	114,177	63,949	48,252
- Rx Rate (L1) (Bit/s)	12.72 K	39.47	30.1 K	16.2 M	17.8 M	16.73 M
- Rx Rate (Fps)	19	0	14	3,806	2,132	1,608

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12.6 G
Tx Rate (Fps)	1,024,057
Rx Rate (Percent)	5.88 %
Rx Rate (L1) (Bit/s)	1.06 G
Rx Rate (Fps)	85.97 K
Loss Rate (Percent)	91.61 %
Loss (Frames)	28,142,747
P-0-0-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	2,344,004
- Rx Rate (L1) (Bit/s)	961.35 M
- Rx Rate (Fps)	78,133
- Flood Count (Frames)	12
P-0-0-1	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,908
- Rx Rate (L1) (Bit/s)	5.7 M




- Rx Rate (Fps)	464
- Flood Count (Frames)	26
P-0-0-2	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,920
- Rx Rate (L1) (Bit/s)	5.71 N
- Rx Rate (Fps)	464
- Flood Count (Frames)	27
P-0-0-3	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,807
- Rx Rate (L1) (Bit/s)	5.66 N
- Rx Rate (Fps)	460
- Flood Count (Frames)	24
P-0-0-4	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,728
- Rx Rate (L1) (Bit/s)	5.63 M
- Rx Rate (Fps)	458
- Flood Count (Frames)	23
P-0-0-5	
- Tx (Frames)	1,706,762
- Tx (Frames)	700 N
	56,892
- Tx Rate (Fps)	
- Rx (Frames)	13,784
- Rx Rate (L1) (Bit/s)	5.65 N
- Rx Rate (Fps)	459
- Flood Count (Frames)	26
P-0-2-0	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,834
- Rx Rate (L1) (Bit/s)	5.67 N
- Rx Rate (Fps)	461
- Flood Count (Frames)	23
P-0-2-1	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,787
- Rx Rate (L1) (Bit/s)	5.65 N
- Rx Rate (Fps)	460
- Flood Count (Frames)	24
P-0-2-2	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,946
- Rx Rate (L1) (Bit/s)	5.72 N
- Rx Rate (Fps)	465
- Flood Count (Frames)	28
P-0-2-3	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 N
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,667
- Rx Rate (L1) (Bit/s)	5.61 M
	456
	430
- Rx Rate (Fps)	
- Rx Rate (Fps) - Flood Count (Frames)	23
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	23
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4 - Tx (Frames)	1,706,762
- Rx Rate (Fps) - Flood Count (Frames) P-0-2-4	23



Dy Doto (L1) (Dit/o)	E 26 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	5.36 M 436
- Flood Count (Frames)	24
P-0-2-5	27
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,844
- Rx Rate (L1) (Bit/s)	5.68 M
- Rx Rate (Fps)	461
- Flood Count (Frames)	27
P-0-4-0	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,052
- Rx Rate (L1) (Bit/s)	5.76 M
- Rx Rate (Fps)	468
- Flood Count (Frames)	25
P-0-4-1	20
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	14,152
	5.8 M
- Rx Rate (L1) (Bit/s)	472
- Rx Rate (Fps)	
- Flood Count (Frames) P-0-4-2	25
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	13,871
- Rx Rate (L1) (Bit/s)	5.69 M 462
- Rx Rate (Fps)	
- Flood Count (Frames) P-0-4-3	26
	4 700 700
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,805
- Rx Rate (L1) (Bit/s)	5.66 M
- Rx Rate (Fps)	460
- Flood Count (Frames)	22
P-0-4-4	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,845
- Rx Rate (L1) (Bit/s)	5.68 M
- Rx Rate (Fps)	462
- Flood Count (Frames)	27
P-0-4-5	
- Tx (Frames)	1,706,762
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	13,937
- Rx Rate (L1) (Bit/s)	5.72 M
	465
- Rx Rate (Fps)	403



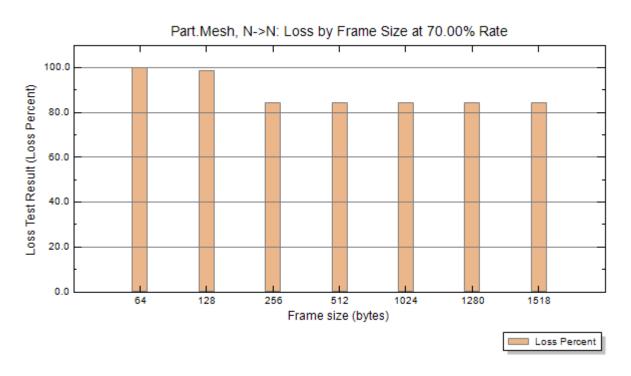

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G
Tx Rate (Fps)	21,428,571	12,162,162	6,521,739	3,383,458	1,724,138	1,384,615
Rx Rate (Percent)	0 %	0 %	0.01 %	6.26 %	6.94 %	7.11 %
Rx Rate (L1) (Bit/s)	281.97 K	591.37 K	1.21 M	1.13 G	1.25 G	1.28 G
Rx Rate (Fps)	419.6	499.47	550.17	264.91 K	149.52 K	122.99 K
Loss Rate (Percent)	100 %	100 %	99.99 %	92.17 %	91.33 %	91.12 %
Loss (Frames)	642,844,537	364,849,862	195,635,662	93,556,325	47,238,446	37,848,696
P-0-0-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	12,587	14,983	16,504	6,560,699	3,529,034	2,878,045
- Rx Rate (L1) (Bit/s)	281.95 K	591.33 K	1.21 M	930.74 M	982.48 M	997.72 M
- Rx Rate (Fps)	420	499	550	218,690	117,634	95,935
- Flood Count (Frames)	23	27	23	9	8	12
P-0-0-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,379	55,815	47,647
- Rx Rate (L1) (Bit/s)	0	0	0	11.54 M	15.54 M	16.52 M
- Rx Rate (Fps)	0	0	0	2,713	1,861	1,588
- Flood Count (Frames)	58	58	59	28	36	31
P-0-0-2						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,568	56,213	47,723
- Rx Rate (L1) (Bit/s)	0	0	0	11.57 M	15.65 M	16.54 M
- Rx Rate (Fps)	0	0	0	2,719	1,874	1,591
- Flood Count (Frames)	58	59	60	32	34	38
P-0-0-3						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,714	56,882	47,751



- Rx Rate (L1) (Bit/s)	0	0	0	11.59 M	15.84 M	16.55 M
- Rx Rate (Fps)	0	0	0	2,724	1,896	1,592
- Flood Count (Frames)	59	57	55	39	29	37
P-0-0-4	05 744 005	00 070 070	40,000,505	5 000 007	0.070.500	0.007.000
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 1,190,476	800 M 675,676	800 M 362,319	800 M 187,970	800 M 95,785	800 M 76,923
- Rx (Frames)	1,190,470	0/3,0/0	0	81,353	56,649	47,900
- Rx Rate (L1) (Bit/s)	0	0	0	11.54 M	15.77 M	16.61 M
- Rx Rate (Fps)	0	0	0	2,712	1,888	1,597
- Flood Count (Frames)	57	56	56	38	36	39
P-0-0-5	01					
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 N
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	80,259	56,186	47,797
- Rx Rate (L1) (Bit/s)	0	0	0	11.39 M	15.64 M	16.57 N
- Rx Rate (Fps)	0	0	0	2,675	1,873	1,593
- Flood Count (Frames)	55	58	55	34	37	33
P-0-2-0						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	82,371	56,983	47,642
- Rx Rate (L1) (Bit/s)	0	0	0	11.69 M	15.86 M	16.52 N
- Rx Rate (Fps)	0	0	0	2,746	1,899	1,588
- Flood Count (Frames)	56	61	58	38	40	39
P-0-2-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,763	56,453	47,724
- Rx Rate (L1) (Bit/s)	0	0	0	11.6 M	15.72 M	16.54 M
- Rx Rate (Fps)	0	0	0	2,725	1,882	1,591
- Flood Count (Frames)	58	59	59	37	40	37
P-0-2-2	25 744 205	20 270 270	40.000.505	F 000 007	0.070.500	0.007.000
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692 800 M
- Tx Rate (L1) (Bit/s)	800 M 1,190,476	800 M 675,676	800 M 362,319	800 M 187,970	800 M 95,785	76,923
- Tx Rate (Fps) - Rx (Frames)	1, 190,470	0/5,6/6	302,319	78,029	56,433	47,910
- Rx Rate (L1) (Bit/s)	0	0	0	11.07 M	15.71 M	16.61 M
- Rx Rate (Fps)	0	0	0	2,601	1,881	1,597
- Flood Count (Frames)	58	59	58	39	34	37
P-0-2-3					0-1	01
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,856	56,795	47,759
- Rx Rate (L1) (Bit/s)	0	0	0	11.61 M	15.81 M	16.56 M
- Rx Rate (Fps)	0	0	0	2,729	1,893	1,592
- Flood Count (Frames)	61	58	57	28	37	34
P-0-2-4						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 N
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	80,970	56,478	47,923
- Rx Rate (L1) (Bit/s)	0	0	0	11.49 M	15.72 M	16.61 N
- Rx Rate (Fps)	0	0	0	2,699	1,883	1,597
- Flood Count (Frames)	58	59	56	37	34	33
P-0-2-5						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 N
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	81,846	54,374	47,861
- Rx Rate (L1) (Bit/s)	0	0	0	11.61 M	15.14 M	16.59 N
- Rx Rate (Fps)	0	0	0	2,728	1,812	1,595
- Flood Count (Frames)	58	58	56	34	35	32
P-0-4-0						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
		000 14	800 M	800 M	800 M	800 N
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 1,190,476	800 M 675,676	362,319	187,970	95,785	76,923



- Rx (Frames)	0	0	0	81,962	56,766	47,967
- Rx Rate (L1) (Bit/s)	0	0	0	11.63 M	15.8 M	16.63 M
- Rx Rate (Fps)	0	0	0	2,732	1,892	1,599
- Flood Count (Frames)	55	57	59	34	34	38
P-0-4-1						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	82,311	56,251	47,864
- Rx Rate (L1) (Bit/s)	0	0	0	11.68 M	15.66 M	16.59 M
- Rx Rate (Fps)	0	0	0	2,744	1,875	1,595
- Flood Count (Frames)	56	56	55	38	34	34
P-0-4-2						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	82,241	56,142	47,641
- Rx Rate (L1) (Bit/s)	0	0	0	11.67 M	15.63 M	16.52 M
- Rx Rate (Fps)	0	0	0	2,741	1,871	1,588
- Flood Count (Frames)	53	56	55	34	37	31
P-0-4-3						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	82,632	56,279	47,318
- Rx Rate (L1) (Bit/s)	0	0	0	11.72 M	15.67 M	16.4 M
- Rx Rate (Fps)	0	0	0	2,754	1,876	1,577
- Flood Count (Frames)	58	55	58	36	32	36
P-0-4-4						
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	82,094	55,972	47,376
- Rx Rate (L1) (Bit/s)	0	0	0	11.65 M	15.58 M	16.42 M
- Rx Rate (Fps)	0	0	0	2,736	1,866	1,579
- Flood Count (Frames)	58	56	56	28	37	30
P-0-4-5					-	
- Tx (Frames)	35,714,285	20,270,270	10,869,565	5,639,097	2,873,563	2,307,692
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	1,130,470					
	1, 190,470	1	1	82,364	55,981	47,902
- Rx Rate (L1) (Bit/s)				82,364 11.68 M	55,981 15.59 M	47,902 16.61 M
	1	1	73.6 0			

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14.4 G
Tx Rate (Fps)	1,170,351
Rx Rate (Percent)	6.1 %
Rx Rate (L1) (Bit/s)	1.1 G
Rx Rate (Fps)	89.31 K
Loss Rate (Percent)	92.37 %
Loss (Frames)	32,431,236
P-0-0-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	2,421,472
- Rx Rate (L1) (Bit/s)	993.13 M
- Rx Rate (Fps)	80,716
- Flood Count (Frames)	12
P-0-0-1	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,087
- Rx Rate (L1) (Bit/s)	6.19 M




- Rx Rate (Fps)	503
- Flood Count (Frames)	25
P-0-0-2	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	14,989
- Rx Rate (L1) (Bit/s)	6.15 M
- Rx Rate (Fps)	500
- Flood Count (Frames)	24
P-0-0-3	1 050 505
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,950,585 800 M
- Tx Rate (ET) (Blus)	65,020
- Rx (Frames)	14,767
- Rx Rate (L1) (Bit/s)	6.06 M
- Rx Rate (Fps)	492
- Flood Count (Frames)	22
P-0-0-4	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (ET) (Bl/3)	65,020
- Rx (Frames)	15,332
- Rx Rate (L1) (Bit/s)	6.29 M
- Rx Rate (Fps)	511
- Flood Count (Frames)	21
P-0-0-5	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,002
- Rx Rate (L1) (Bit/s)	6.15 M
- Rx Rate (Fps)	500
- Flood Count (Frames)	23
P-0-2-0	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,107
- Rx Rate (L1) (Bit/s)	6.2 M
- Rx Rate (Fps)	504
- Flood Count (Frames)	27
P-0-2-1	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,319
- Rx Rate (L1) (Bit/s)	6.28 M
- Rx Rate (Fps)	511
- Flood Count (Frames)	27
P-0-2-2	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,107
- Rx Rate (L1) (Bit/s)	6.2 M
- Rx Rate (Fps)	504
- Flood Count (Frames)	23
P-0-2-3	4.050.505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,258
- Rx Rate (L1) (Bit/s)	6.26 M
- Rx Rate (Fps)	509
- Flood Count (Frames) P-0-2-4	26
	1 050 505
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,950,585
- Tx Rate (LT) (Blus)	800 M 65,020
- TX Rate (Fps) - Rx (Frames)	15,246
	10,240



- Rx Rate (L1) (Bit/s)	6.25 M
- Rx Rate (Fps)	508
- Flood Count (Frames)	22
P-0-2-5	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,111
- Rx Rate (L1) (Bit/s)	6.2 M
- Rx Rate (Fps)	504
- Flood Count (Frames)	20
P-0-4-0	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,162
- Rx Rate (L1) (Bit/s)	6.22 M
- Rx Rate (Fps)	505
- Flood Count (Frames)	
P-0-4-1	22
	4.050.505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,276
- Rx Rate (L1) (Bit/s)	6.27 M
- Rx Rate (Fps)	509
- Flood Count (Frames)	28
P-0-4-2	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,264
- Rx Rate (L1) (Bit/s)	6.26 M
- Rx Rate (Fps)	509
- Flood Count (Frames)	20
P-0-4-3	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,284
- Rx Rate (L1) (Bit/s)	6.27 M
- Rx Rate (Fps)	509
- Flood Count (Frames)	24
P-0-4-4	24
-	1 050 505
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,260
- Rx Rate (L1) (Bit/s)	6.26 M
- Rx Rate (Fps)	509
- Flood Count (Frames)	22
P-0-4-5	
- Tx (Frames)	1,950,585
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,020
- Rx (Frames)	15,246
- Rx Rate (L1) (Bit/s)	6.25 M
- Rx Rate (Fps)	508
- Flood Count (Frames)	24
- (- 2-)	



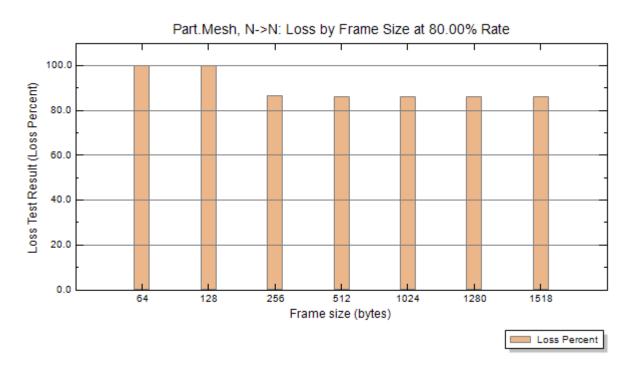

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G
Tx Rate (Fps)	24,107,142	13,682,432	7,336,956	3,806,390	1,939,655	1,557,691
Rx Rate (Percent)	0 %	0.01 %	0.02 %	0 %	6.48 %	6.72 %
Rx Rate (L1) (Bit/s)	659.72 K	1.31 M	3.56 M	0	1.17 G	1.21 G
Rx Rate (Fps)	981.73	1.11 K	1.61 K	0	139.65 K	116.24 K
Loss Rate (Percent)	100 %	99.99 %	99.98 %	100 %	92.8 %	92.54 %
Loss (Frames)	723,184,820	410,439,663	220,060,243	114,191,703	54,000,175	43,243,636
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	21,722	27,359	43,701	0	3,343,424	2,779,302
- Rx Rate (L1) (Bit/s)	486.57 K	1.08 M	3.22 M	0	930.81 M	963.49 M
- Rx Rate (Fps)	724	912	1,457	0	111,447	92,643
- Flood Count (Frames)	35	25	23	1	10	11
P-0-0-1						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	626	459	419	0	49,970	50,601
- Rx Rate (L1) (Bit/s)	14.02 K	18.12 K	30.84 K	0	13.91 M	17.54 M
- Rx Rate (Fps)	21	15	14	0	1,666	1,687
- Flood Count (Frames)	58	59	59	21	36	36
P-0-0-2						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	520	422	0	0	49,612	0
- Rx Rate (L1) (Bit/s)	11.65 K	16.65 K	0	0	13.81 M	0
- Rx Rate (Fps)	17	14	0	0	1,654	0
- Flood Count (Frames)	57	58	1	21	37	2
P-0-0-3						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	451	389	473	0	49,515	50,672



- Rx Rate (L1) (Bit/s)	10.1 K	15.35 K	34.81 K	0	13.78 M	17.57 M
- Rx Rate (Fps)	15	13	16	0	1,651	1,689
- Flood Count (Frames)	59	61	59	23	33	36
P-0-0-4	40 470 574	00 004 054	40.000.000	0.040.004	0.000.750	0.500.450
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	456	393	429	0	49,915	51,460
- Rx Rate (L1) (Bit/s)	10.21 K	15.51 K	31.57 K	0	13.9 M	17.84 M
- Rx Rate (Fps)	15	13	14	0	1,664	1,715
- Flood Count (Frames)	62	57	59	23	33	39
P-0-0-5	40 470 574	00 004 054	10.000.000	0.040.004	0.000.750	0.500.450
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	495	388	0	0	49,491	49,853
- Rx Rate (L1) (Bit/s)	11.09 K	15.31 K	0	0	13.78 M	17.28 M
- Rx Rate (Fps)	17	13	0	0	1,650	1,662
- Flood Count (Frames)	62	61	1	22	33	38
P-0-2-0	40 470 574	22 204 254	40 000 000	0.040.004	2 222 750	0.500.450
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	469	346	0	0	50,103	50,782
- Rx Rate (L1) (Bit/s)	10.51 K	13.66 K	0	0	13.95 M	17.6 M
- Rx Rate (Fps)	16	12	0	0	1,670	1,693
- Flood Count (Frames)	61	61	1	21	42	33
P-0-2-1	40 470 574	00 004 054	40.000.000	0.040.004	0.000.750	0.500.450
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	465	333	0	0	49,720	50,716
- Rx Rate (L1) (Bit/s)	10.42 K	13.14 K	0	0	13.84 M	17.58 M
- Rx Rate (Fps)	16	11	0	0	1,657	1,691
- Flood Count (Frames)	61	59	0	1	39	40
P-0-2-2	10.1-01	20.001.071	10.000.000	0.010.001		
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	481	363	375	0	49,570	50,649
- Rx Rate (L1) (Bit/s)	10.77 K	14.33 K	27.6 K	0	13.8 M	17.56 M
- Rx Rate (Fps)	16	12	13	0	1,652	1,688
- Flood Count (Frames)	61	60	59	21	34	45
P-0-2-3						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	472	0	0	0	49,883	50,613
- Rx Rate (L1) (Bit/s)	10.57 K	0	0	0	13.89 M	17.55 M
- Rx Rate (Fps)	16	0	0	0	1,663	1,687
- Flood Count (Frames)	61	59	1	20	35	40
P-0-2-4			10.555.5			
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	358	406	0	49,722	0
- Rx Rate (L1) (Bit/s)	0	14.13 K	29.88 K	0	13.84 M	0
- Rx Rate (Fps)	0	12	14	0	1,657	0
- Flood Count (Frames)	59	56	59	21	31	2
P-0-2-5						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	457	346	377	0	49,516	C
- Rx Rate (L1) (Bit/s)	10.24 K	13.66 K	27.75 K	0	13.79 M	C
- Rx Rate (Fps)	15	12	13	0	1,651	0
- Flood Count (Frames)	61	59	59	21	39	1
P-0-4-0						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- IX (I lallics)						
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M



- Rx (Frames)	474	360	384	0	49,822	51,339
- Rx Rate (L1) (Bit/s)	10.62 K	14.21 K	28.26 K	0	13.87 M	17.8 M
- Rx Rate (Fps)	16	12	13	0	1,661	1,711
- Flood Count (Frames)	58	57	56	21	37	34
P-0-4-1						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	456	378	373	0	49,728	50,322
- Rx Rate (L1) (Bit/s)	10.21 K	14.92 K	27.45 K	0	13.84 M	17.44 M
- Rx Rate (Fps)	15	13	12	0	1,658	1,677
- Flood Count (Frames)	58	55	59	18	35	41
P-0-4-2						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	474	348	374	0	49,536	49,543
- Rx Rate (L1) (Bit/s)	10.62 K	13.73 K	27.53 K	0	13.79 M	17.17 M
- Rx Rate (Fps)	16	12	12	0	1,651	1,651
- Flood Count (Frames)	56	58	58	19	41	43
P-0-4-3						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	484	367	377	0	50,275	50,617
- Rx Rate (L1) (Bit/s)	10.84 K	14.48 K	27.75 K	0	14 M	17.55 M
- Rx Rate (Fps)	16	12	13	0	1,676	1,687
- Flood Count (Frames)	58	55	59	19	32	31
P-0-4-4						
- Tx (Frames)	40,178,571	22.804.054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	472	338	364	0	49,740	50,156
- Rx Rate (L1) (Bit/s)	10.57 K	13.34 K	26.79 K	0	13.85 M	17.39 M
- Rx Rate (Fps)	16	11	12	0	1,658	1,672
- Flood Count (Frames)	60	56	57	19	34	43
P-0-4-5						
- Tx (Frames)	40,178,571	22,804,054	12,228,260	6,343,984	3,232,758	2,596,153
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	478	346	378	0	49,923	50,478
- Rx Rate (L1) (Bit/s)	10.71 K	13.66 K	27.82 K	0	13.9 M	17.5 M
- Rx Rate (Fps)	16	12	13	0	1,664	1,683
- Flood Count (Frames)	57	57	57	21	35	39

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16.2 G
Tx Rate (Fps)	1,316,644
Rx Rate (Percent)	6.05 %
Rx Rate (L1) (Bit/s)	1.09 G
Rx Rate (Fps)	88.46 K
Loss Rate (Percent)	93.28 %
Loss (Frames)	36,845,665
P-0-0-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	2,423,451
- Rx Rate (L1) (Bit/s)	993.94 M
- Rx Rate (Fps)	80,782
- Flood Count (Frames)	10
P-0-0-1	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,737
- Rx Rate (L1) (Bit/s)	7.27 M




D D + (E)	F0.4
- Rx Rate (Fps)	591
- Flood Count (Frames)	25
P-0-0-2 - Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-0-3	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-0-4	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,622
- Rx Rate (L1) (Bit/s)	7.23 M
- Rx Rate (Fps)	587
- Flood Count (Frames)	29
P-0-0-5	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0 1
- Flood Count (Frames) P-0-2-0	I I
	2 104 409
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,408 900 M
- Tx Rate (ET) (Blus)	73,147
- Rx (Frames)	17,736
- Rx Rate (L1) (Bit/s)	7.27 M
- Rx Rate (Fps)	591
- Flood Count (Frames)	25
P-0-2-1	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,587
- Rx Rate (L1) (Bit/s)	7.21 M
- Rx Rate (Fps)	586
- Flood Count (Frames)	20
P-0-2-2	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,682
- Rx Rate (L1) (Bit/s)	7.25 M
- Rx Rate (Fps)	589
- Flood Count (Frames)	25
P-0-2-3	0.407
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,726
- Rx Rate (L1) (Bit/s)	7.27 M
- Rx Rate (Fps)	591
- Flood Count (Frames)	23
P-0-2-4	2 104 400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M 73,147
- Tx Rate (Fps) - Rx (Frames)	17,540
1 th (1 1011103)	17,540



D D ((14) (D;(/)	7.40.14
- Rx Rate (L1) (Bit/s)	7.19 M
- Rx Rate (Fps)	585
- Flood Count (Frames)	24
P-0-2-5	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-4-0	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,696
- Rx Rate (L1) (Bit/s)	7.26 M
- Rx Rate (Fps)	590
- Flood Count (Frames)	22
P-0-4-1	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,784
- Rx Rate (L1) (Bit/s)	7.29 M
- Rx Rate (Fps)	593
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (ET) (Blus)	73,147
- Rx (Frames)	
	17,850
- Rx Rate (L1) (Bit/s)	7.32 M 595
- Rx Rate (Fps)	28
- Flood Count (Frames) P-0-4-3	20
	0.404.400
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,764
- Rx Rate (L1) (Bit/s)	7.29 M
- Rx Rate (Fps)	592
- Flood Count (Frames)	19_
P-0-4-4	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,667
- Rx Rate (L1) (Bit/s)	7.25 M
- Rx Rate (Fps)	589
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	2,194,408
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	17,823
- Rx Rate (L1) (Bit/s)	7.31 M
- Rx Rate (Fps)	594
- Flood Count (Frames)	23



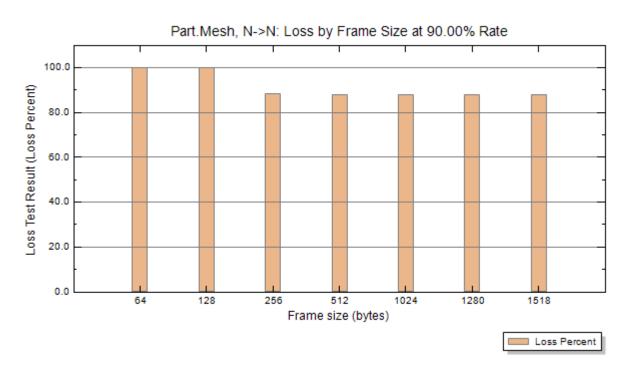

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26,785,714	15,202,702	8,152,173	4,229,323	2,155,172	1,730,769
Rx Rate (Percent)	0 %	0.01 %	0.01 %	7.23 %	0 %	6.86 %
Rx Rate (L1) (Bit/s)	791.48 K	1.12 M	2.37 M	1.3 G	0	1.23 G
Rx Rate (Fps)	1.18 K	945.77	1.07 K	305.96 K	0	118.68 K
Loss Rate (Percent)	100 %	99.99 %	99.99 %	92.77 %	100 %	93.14 %
Loss (Frames)	803,536,085	456,052,693	244,532,984	117,700,948	64,655,165	48,362,713
P-0-0-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	24,017	23,052	27,864	7,008,369	0	2,880,386
- Rx Rate (L1) (Bit/s)	537.98 K	909.79 K	2.05 M	994.25 M	0	998.53 M
- Rx Rate (Fps)	801	768	929	233,612	0	96,013
- Flood Count (Frames)	30	28	29	14	1	11
P-0-0-1						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	1,031	459	336	155,884	0	42,420
- Rx Rate (L1) (Bit/s)	23.09 K	18.12 K	24.73 K	22.11 M	0	14.71 M
- Rx Rate (Fps)	34	15	11	5,196	0	1,414
- Flood Count (Frames)	59	56	61	37	1	38
P-0-0-2						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	0	356	281	152,845	0	42,621
- Rx Rate (L1) (Bit/s)	0	14.05 K	20.68 K	21.68 M	0	14.78 M
- Rx Rate (Fps)	0	12	9	5,095	0	1,421
- Flood Count (Frames)	1	59	80	36	23	34
P-0-0-3						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	869	289	291	155,515	0	42,319



- Rx Rate (L1) (Bit/s)	19.47 K	11.41 K	21.42 K	22.06 M	0	14.67 M
- Rx Rate (Fps)	29	10	10	5,184	0	1,411
- Flood Count (Frames)	59	59	59	36	23	38
P-0-0-4	44 642 057	25 227 027	12 506 056	7.040.070	2 504 054	2 004 645
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872 1000 M	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	1000 M 844,595	1000 M 452.899	234,962	1000 M 119,732	1000 M 96,154
- Rx (Frames)	778	304	452,699	234,902	0	90,134
- Rx Rate (L1) (Bit/s)	17.43 K	12 K	0	0	0	0
- Rx Rate (Fps)	26	10	0	0	0	0
- Flood Count (Frames)	58	57	59	1	0	0
P-0-0-5	30	31	39		0	!
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452.899	234,962	119,732	96,154
- Rx (Frames)	788	300	272	154,273	0	42,574
- Rx Rate (L1) (Bit/s)	17.65 K	11.84 K	20.02 K	21.89 M	0	14.76 M
- Rx Rate (Fps)	26	10	9	5,142	0	1,419
- Flood Count (Frames)	59	56	76	37	26	33
P-0-2-0						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	0	295	262	156,521	0	42,496
- Rx Rate (L1) (Bit/s)	0	11.64 K	19.28 K	22.21 M	0	14.73 M
- Rx Rate (Fps)	0	10	9	5,217	0	1,417
- Flood Count (Frames)	2	59	80	39	23	38
P-0-2-1						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	793	293	273	0	0	42,656
- Rx Rate (L1) (Bit/s)	17.76 K	11.56 K	20.09 K	0	0	14.79 M
- Rx Rate (Fps)	26	10	9	0	0	1,422
- Flood Count (Frames)	59	59	78	1	23	33
P-0-2-2						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	0	297	273	159,208	0	42,245
- Rx Rate (L1) (Bit/s)	0	11.72 K	20.09 K	22.59 M	0	14.64 M
- Rx Rate (Fps)	0 61	10	9	5,307	0	1,408
- Flood Count (Frames) P-0-2-3	01	57	61	39	I	39
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	2,004,013
- Tx Rate (E1) (Blus)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	781	297	270	234,902	0	42,653
- Rx Rate (L1) (Bit/s)	17.49 K	11.72 K	19.87 K	0	0	14.79 M
- Rx Rate (Fps)	26	10	9	0	0	1,422
- Flood Count (Frames)	59	59	79	1	21	38
P-0-2-4						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	776	304	263	152,019	0	42,557
- Rx Rate (L1) (Bit/s)	17.38 K	12 K	19.36 K	21.57 M	0	14.75 M
- Rx Rate (Fps)	26	10	9	5,067	0	1,419
- Flood Count (Frames)	58	56	59	33	25	36
P-0-2-5						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	769	290	254	159,738	0	42,617
- Rx Rate (L1) (Bit/s)	17.23 K	11.45 K	18.69 K	22.66 M	0	14.77 N
- Rx Rate (Fps)	26	10	8	5,325	0	1,421
- Flood Count (Frames)	57	57	59	36	21	42
P-0-4-0						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
			1000 14	1000 M	1000 M	1000 M
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	TOOU IVI	1000 101	1000 101



- Rx (Frames)	780	292	260	148,368	0	42,416
- Rx Rate (L1) (Bit/s)	17.47 K	11.52 K	19.14 K	21.05 M	0	14.7 M
- Rx Rate (Fps)	26	10	9	4,946	0	1,414
- Flood Count (Frames)	55	55	57	30	18	38
P-0-4-1						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	773	309	270	161,119	0	42,598
- Rx Rate (L1) (Bit/s)	17.32 K	12.2 K	19.87 K	22.86 M	0	14.77 M
- Rx Rate (Fps)	26	10	9	5,371	0	1,420
- Flood Count (Frames)	54	58	57	30	21	25
P-0-4-2						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	789	313	261	152,837	0	42,219
- Rx Rate (L1) (Bit/s)	17.67 K	12.35 K	19.21 K	21.68 M	0	14.64 M
- Rx Rate (Fps)	26	10	9	5,095	0	1,407
- Flood Count (Frames)	56	58	60	29	22	26
P-0-4-3						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	808	304	268	153,831	0	42,590
- Rx Rate (L1) (Bit/s)	18.1 K	12 K	19.72 K	21.82 M	0	14.76 M
- Rx Rate (Fps)	27	10	9	5,128	0	1,420
- Flood Count (Frames)	58	57	58	27	20	36
P-0-4-4						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	780	307	255	154,836	0	42,530
- Rx Rate (L1) (Bit/s)	17.47 K	12.12 K	18.77 K	21.97 M	0	14.74 M
- Rx Rate (Fps)	26	10	9	5,161	0	1,418
- Flood Count (Frames)	56	54	58	37	23	32
P-0-4-5						
- Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
- Rx (Frames)	802	312	259	153,376	0	42,456
- Rx Rate (L1) (Bit/s)	17.96 K	12.31 K	19.06 K	21.76 M	0	14.72 M
- Rx Rate (Fps)	27	10	9	5,113	0	1,415
- Flood Count (Frames)	56	55	57	29	22	38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1,462,938
Rx Rate (Percent)	6.15 %
Rx Rate (L1) (Bit/s)	1.11 G
Rx Rate (Fps)	89.97 K
Loss Rate (Percent)	93.85 %
Loss (Frames)	41,188,969
P-0-0-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	2,416,079
- Rx Rate (L1) (Bit/s)	990.91 M
- Rx Rate (Fps)	80,536
- Flood Count (Frames)	16
P-0-0-1	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	20,213
- Rx Rate (L1) (Bit/s)	8.29 M




- Rx Rate (Fps)	674
- Flood Count (Frames) P-0-0-2	28
- Tx (Frames)	2,438,231
- Tx (Hames)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	20,196
- Rx Rate (L1) (Bit/s)	8.28 M
- Rx Rate (Fps)	673
- Flood Count (Frames)	27
P-0-0-3	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	2
P-0-0-4	0.400.004
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 81,274
- TX Rate (Fps) - Rx (Frames)	81,274
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (LT) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-0-5	I
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0.,
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	1
P-0-2-0	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	20,120
- Rx Rate (L1) (Bit/s)	8.25 M
- Rx Rate (Fps)	671
- Flood Count (Frames)	26
P-0-2-1	2 420 224
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,438,231 1000 M
- Tx Rate (ET) (Blus)	81,274
- Rx (Frames)	20,104
- Rx Rate (L1) (Bit/s)	8.25 M
- Rx Rate (Fps)	670
- Flood Count (Frames)	23
P-0-2-2	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	20,373
- Rx Rate (L1) (Bit/s)	8.36 M
- Rx Rate (Fps)	679
- Flood Count (Frames)	24
P-0-2-3	
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	20,251
- Rx Rate (L1) (Bit/s)	8.31 M
- Rx Rate (Fps)	675
- Flood Count (Frames)	25
P-0-2-4	2 420 224
- Tx (Frames)	2,438,231
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 81,274
- Rx (Frames)	20,061
ita (i idilica)	20,001



- Rx Rate (Fps) 669 - Flood Count (Frames) 25 P-0-2-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 672 - Flood Count (Frames) 20 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 676 - Flood Count (Frames) 717	D D ((14) (D''/)	0.00.14
- Flood Count (Frames) 25 P-0-2-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,109 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 670 - Flood Count (Frames) 24,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,274 - Rx Rate (Fps) 676	- Rx Rate (L1) (Bit/s)	8.23 M
P-0-2-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.37 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.37 M - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 676	- RX Rate (Fps)	
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 - P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 678 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 83,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 23 - Flood Count (Frames) 20,173 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20,109 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 677 - Flood Count (Frames) 23 - P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 676		25
- Tx Rate (L1) (Bit/s)		0.400.004
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20,100 - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 676		
- Rx (Frames) 20,170 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 2438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 676		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) 672 - Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Tx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 32,274 - Rx (Frames) 676		
- Flood Count (Frames) 26 P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20,109 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx (Frames) 23 - Tx (Frames) 24,38,231 - Tx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (Fps) 676		
P-0-4-0 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - Flood Count (Frames) 21 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 676 - Rx Rate (L1) (Bit/s) 83.24 - Rx Rate (Fps) 676		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx (Frames) 20,173 - Rx (Frames) 20,173 - Tx (Frames) 20,173 - Tx (Frames) 20,173 - Tx (Frames) 20,173 - Tx (Frames) 20,100 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 676		26
- Tx Rate (L1) (Bit/s)		
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Fram	- Tx (Frames)	
- Rx (Frames) 20,343 - Rx Rate (L1) (Bit/s) 8.34 M - Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Tx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 91,274 - Rx (Frames)	- Tx Rate (L1) (Bit/s)	
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps) 678 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (Fps) 676	- Rx (Frames)	20,343
- Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 320,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,2774 - Rx Rate (Fps) 81,274 - Rx Rate		8.34 M
P-0-4-1 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 - Flood Count (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 -	- Rx Rate (Fps)	678
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 80,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274	- Flood Count (Frames)	24
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 80,274 - Rx (Frames) 80,274 - Rx (Frames) 80,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676	P-0-4-1	
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,27	- Tx (Frames)	2,438,231
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,27	- Tx Rate (L1) (Bit/s)	1000 M
- Rx (Frames) 20,410 - Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 672 - Flood Count (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames)		81,274
- Rx Rate (L1) (Bit/s) 8.37 M - Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274		
- Rx Rate (Fps) 680 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 820,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 83,2 M - Rx Rate (Fps) 83,2 M - Rx Rate (Fps) 83,2 M - Rx Rate (Fps) 676		
- Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 676		
P-0-4-2 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (Fps) 670 - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 21 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 2,438,231 - Tx (Frames) 2,438,231 - Tx (Frames) 2,438,231 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.32 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 9,000 M - Tx Rate (Fps) 81,274 - Rx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 676		
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 676		2.438.231
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (Fps) 81,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx (Frames) 20,173 - Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 31,274 - Rx Rate (Fps) 2,438,231 - Tx Rate (Fps) 31,274 - Rx Rate (Fps) 31,274 - Rx Rate (Fps) 81,274 - Rx Rate (Fps) 83,20 M - Rx Rate (Fps) 676		
- Rx Rate (L1) (Bit/s) 8.27 M - Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 83,2 M - Rx Rate (L1) (Bit/s) 8,32 M - Rx Rate (Fps) 676		
- Rx Rate (Fps) 672 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.32 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 83.2 M - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
P-0-4-3 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 - Tx (Frames) 20,274 - Rx (Frames) 20,274 - Rx (Frames) 81,274 - Rx (Frames) 81,274 - Rx (Frames) 82,274 - Rx (Frames) 83,2 M - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		20
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		2 // 138 231
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 8.32 M - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx (Frames) 20,109 - Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676	Ty Data (Eng)	
- Rx Rate (L1) (Bit/s) 8.25 M - Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx Rate (Fps) 670 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
P-0-4-4 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		21
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		0.400.004
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx (Frames) 20,307 - Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx Rate (L1) (Bit/s) 8.33 M - Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx Rate (Fps) 677 - Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Flood Count (Frames) 23 P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
P-0-4-5 - Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Tx (Frames) 2,438,231 - Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		23
- Tx Rate (L1) (Bit/s) 1000 M - Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Tx Rate (Fps) 81,274 - Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx (Frames) 20,274 - Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx Rate (L1) (Bit/s) 8.32 M - Rx Rate (Fps) 676		
- Rx Rate (Fps) 676		
		8.32 M
- Flood Count (Frames) 17		676
. ,	 Flood Count (Frames) 	17



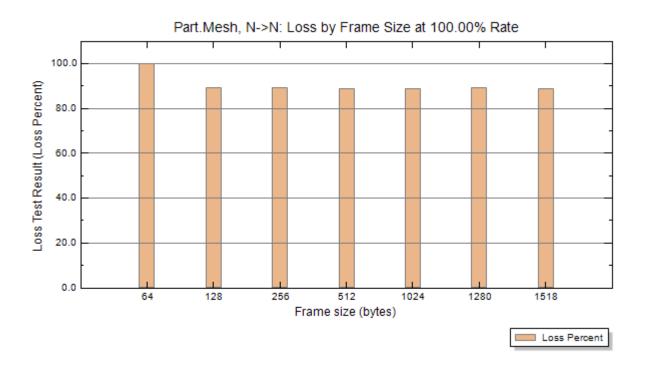



Rate Test: Part.Mesh, N->N Results

Test Setup

Duration: 30 seconds

Iteration:

Topology: Blocks
Direction: East-to-West

Throughput Options

Initial Rate: 1.00%
Maximum Rate: 100.00%
Minimum Rate: 0.01%
Resolution: 0.01%

Used Ports

Port ID	Port Role
P-0-0-0	East
P-0-0-1	East
P-0-0-2	East
P-0-0-3	East
P-0-0-4	East
P-0-0-5	East
P-0-2-0	East
P-0-2-1	East
P-0-2-2	East
P-0-2-3	West
P-0-2-4	West
P-0-2-5	West
P-0-4-0	West
P-0-4-1	West
P-0-4-2	West
P-0-4-3	West
P-0-4-4	West
P-0-4-5	West

Throughput Test Results

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	PASS	FAIL	FAIL	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0.018 %	0.018 %	0.149 %	0.018 %	0.018 %	0.018 %
Tx Rate (L1) (Bit/s)	1.59 M	1.6 M	13.43 M	1.59 M	1.58 M	1.57 M
Tx Rate (Fps)	2,373	1,347	6,080	373	189	151
Rx Rate (Percent)	0.02 %	0.02 %	0.15 %	0.02 %	0.02 %	0.02 %
Rx Rate (L1) (Bit/s)	1.56 M	1.5 M	13.43 M	1.55 M	1.54 M	1.57 M
Rx Rate (Fps)	2.33 K	1.26 K	6.08 K	364.1	184.8	151.2
Loss Rate (Percent)	1.97 %	6.14 %	0 %	2.28 %	2.22 %	0 %
Loss (Frames)	1,404	2,482	0	255	126	0
P-0-0-0						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0



- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2	7.044	4.404	20.200	4.040	000	504
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	U	0	0	0	0	0
	7.044	4.404	20.200	4.040	000	504
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	174.7210
(1 /	0	0	0/0	0	0	0
- Rx (Frames)	-					
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1		•				
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx (Frames)			1.49 M			174.72 K
	177.21 K	177.24 K		176.2 K	175.39 K	
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	7,911	4,491	20,268	1,242	630	504
- Tx Rate (L1) (Bit/s)	177.21 K	177.24 K	1.49 M	176.2 K	175.39 K	174.72 K
- Tx Rate (Fps)	264	150	676	41	21	17
- Rx (Frames)	0	0	0	0	0	0
	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	-				-	
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,754	4,217	20,268	1,212	630	504
- Rx Rate (L1) (Bit/s)	173.69 K	166.43 K	1.49 M	171.94 K	175.39 K	174.72 K
- Rx Rate (Fps)	258	141	676	40	21	174.7210
- Flood Count (Frames)	59	58	57	57	58	58
P-0-2-4	33	30	Ji	31	30	30
-		2			2	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
	7 7 7 1	4 0 4 7	20,268	1,213	630	504
- Rx (Frames) - Rx Rate (L1) (Bit/s)	7,754 173.69 K	4,217 166.43 K	1.49 M	172.08 K	175.39 K	174.72 K



- Rx Rate (Fps)	258	141	676	40	21	17
- Flood Count (Frames)	59	56	59	59	60	59
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.755	4,189	20,268	1,214	504	504
- Rx Rate (L1) (Bit/s)	173.71 K	165.33 K	1.49 M	172.23 K	140.31 K	174.72 K
- Rx Rate (Fps)	259	140	676	40	17	17
- Flood Count (Frames)	58	58	57	61	58	59
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7.755	4,218	20,268	1,214	630	504
- Rx Rate (L1) (Bit/s)	173.71 K	166.47 K	1.49 M	172.23 K	175.39 K	174.72 K
- Rx Rate (Fps)	259	141	676	40	21	17
- Flood Count (Frames)	58	56	58	56	58	56
P-0-4-1	30	30		30	30	- 30
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,755	4,218	20,268	1,214	630	504
- Rx Rate (L1) (Bit/s)	173.71 K	166.47 K	1.49 M	172.23 K	175.39 K	174.72 K
- Rx Rate (Fps)	259	141	676	40	21	174.7210
- Flood Count (Frames)	55	52	56	59	56	58
P-0-4-2	55	32	30	39	30	50
- Tx (Frames)	0	0	0	0	0	0
- Tx (Hames)	0	0	0	0	0	0
- Tx Rate (Er) (Blus)	0	0	0	0	0	0
- Rx (Frames)	7,755	4,218	20,268	1,214	630	504
- Rx (Frames)	173.71 K	166.47 K	1.49 M	172.23 K	175.39 K	174.72 K
- Rx Rate (LT) (BIUS)	259	141	676	172.23 K	175.39 K	174.72 K
- Flood Count (Frames)	55	54	55	57	55	57
P-0-4-3	33	34	33	37	33	37
1 1	0	0	0	0	0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	7.755	0	0	0	0	0
- Rx (Frames)	7,755 173.71 K	4,219 166.51 K	20,268 1.49 M	1,214 172.23 K	630 175.39 K	504 174.72 K
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)						
` ' '	259 57	141 56	676 55	40 58	21 56	17 55
- Flood Count (Frames)	57	30	55	36	30	55
P-0-4-4					•	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	7.750	0	0	0	0	0
- Rx (Frames)	7,756	4,220	20,268	1,214	630	504
- Rx Rate (L1) (Bit/s)	173.73 K	166.55 K	1.49 M	172.23 K	175.39 K	174.72 K
- Rx Rate (Fps)	259	141	676	40	21	17
- Flood Count (Frames)	59	55	55	59	59	56
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,756	4,221	20,268	1,214	630	504
- Rx Rate (L1) (Bit/s)	173.73 K	166.59 K	1.49 M	172.23 K	175.39 K	174.72 K
- Rx Rate (Fps)	259	141	676	40	21	17
- Flood Count (Frames)	58	55	56	56	56	56

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0.018 %
Tx Rate (L1) (Bit/s)	1.59 M
Tx Rate (Fps)	130
Rx Rate (Percent)	0.02 %
Rx Rate (L1) (Bit/s)	1.55 M
Rx Rate (Fps)	126.2
Loss Rate (Percent)	2.62 %
Loss (Frames)	102



P-0-0-0	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps) - Rx (Frames)	14
- Rx (Frames)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-3	U
- Tx (Frames)	432
- Tx (Frames)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-5	0
- Tx (Frames)	432
- Tx (Frames)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1 - Tx (Frames)	432
- Tx (Frames) - Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (ET) (Blus)	177.10 K
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	432
- Tx Rate (L1) (Bit/s)	177.18 K
- Tx Rate (Fps)	14
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0




- Flood Count (Frames)	0
P-0-2-3	U
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-2-4	_
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps) - Flood Count (Frames)	54
P-0-2-5	54
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	57
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	420
- Rx Rate (L1) (Bit/s)	172.26 K
- Rx Rate (Fps)	14
- Flood Count (Frames) P-0-4-2	55
	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Bl/s)	0
- Rx (Frames)	421
- Rx Rate (L1) (Bit/s)	172.67 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	421
- Rx Rate (L1) (Bit/s)	172.67 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	59
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	422 173.08 K
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	173.06 K
- Flood Count (Frames)	58
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	422
- Rx Rate (L1) (Bit/s)	173.08 K



- Rx Rate (Fps)	14
- Flood Count (Frames)	61

Note: One or more of the rate tests did not pass the test criteria!

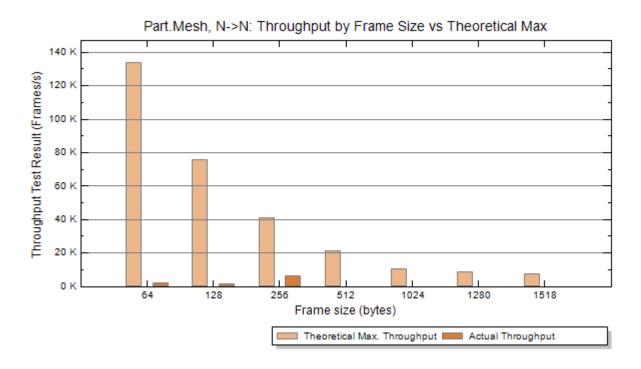

Forwarding Test Results

Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	899.99 M	899.99 M	899.99 M
Tx Rate (Fps)	1,339,284	760,134	407,608	211,464	107,757	86,538
Rx Rate (Percent)	9.48 %	9.77 %	9.99 %	9.98 %	9.74 %	9.74 %
Rx Rate (L1) (Bit/s)	853.64 M	879.67 M	899.31 M	898.02 M	876.71 M	876.33 M
Rx Rate (Fps)	1.27 M	742.97 K	407.3 K	211 K	104.97 K	84.26 K
Loss Rate (Percent)	5.15 %	2.26 %	0.08 %	0.22 %	2.59 %	2.63 %
Loss (Frames)	2,069,512	514,991	9,379	13,916	83,612	68,254
P-0-0-0						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	4,464,279	2,533,779	1,358,694	704,880	359,190	288,459
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,809	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,492,974	1,358,694	703,333	334,334	284,914
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	93.08 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,144	9,497
- Flood Count (Frames)	60	60	59	59	56	58
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,525,399	2,492,974	1,358,694	703,333	353,462	248,764
- Rx Rate (L1) (Bit/s)	78.97 M	98.39 M	100 M	99.78 M	98.4 M	86.24 M
- Rx Rate (Fps)	117,513	83,099	45,290	23,444	11,782	8,292
- Flood Count (Frames)	56	57	59	57	61	58
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0



- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,345,221	1,349,315	703,333	340,524	284,704
- Rx Rate (L1) (Bit/s)	96.83 M	92.56 M	99.31 M	99.78 M	94.8 M	98.7 M
- Rx Rate (Fps)	144,098	78,174	44,977	23,444	11,351	9,490
- Flood Count (Frames)	58	60	61	59	56	58
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,492,975	1,358,694	703,334	353,463	284,915
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,782	9,497
- Flood Count (Frames)	57	56	58	57	56	56
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,492,975	1,358,694	703,334	353,463	284,915
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,782	9,497
- Flood Count (Frames)	58	59	55	58	58	56
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,949	2,492,975	1,358,694	703,334	353,463	284,915
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,782	9,497
- Flood Count (Frames)	56	56	56	59	57	55
P-0-4-3					-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,492,975	1,358,694	703,334	353,463	284,916
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,782	9,497
- Flood Count (Frames)	55	61	58	59	55	56
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,322,950	2,492,975	1,358,694	703.334	353,463	284,917
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144,098	83,099	45,290	23,444	11,782	9,497
- Flood Count (Frames)	57	59	57	56	58	58
P-0-4-5		33	31	30	30	30
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Er) (Blus)	0	0	0	0	0	0
- Rx (Frames)	4,322,951	2.492.976	1,358,694	703,335	353,463	284.917
- Rx Rate (L1) (Bit/s)	96.83 M	98.39 M	1,356,094 100 M	99.78 M	98.4 M	98.77 M
- Rx Rate (Fps)	144.098	83,099	45,290	23,445	11,782	96.77 101
- Flood Count (Frames)	144,098	57	45,290	23,445	58	9,497

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	899.98 M
Tx Rate (Fps)	73,146
Rx Rate (Percent)	10 %
Rx Rate (L1) (Bit/s)	899.75 M
Rx Rate (Fps)	73.13 K
Loss Rate (Percent)	0.03 %
Loss (Frames)	576
P-0-0-0	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-1	U
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0,127
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-3	0
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Er) (Bibs)	8,127
- Rx (Frames)	0,127
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-5	0
- Tx (Frames)	243,819
- Tx (Harries)	100 M
- Tx Rate (Er) (Bibs)	8,127
- Rx (Frames)	0,:_:
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-2-1	0
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0,121
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	243,819
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3 - Tx (Frames)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- IX Rate (I I / Rive)	U



- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	_
- Rx Rate (L1) (Bit/s)	0
	243,243
- Rx Rate (Fps)	99.76 M
	8,108
- Flood Count (Frames)	61
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	243,819
- Rx Rate (L1) (Bit/s)	100 M
- Rx Rate (Fps)	8,127
- Flood Count (Frames)	61
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	243,819
- Rx Rate (L1) (Bit/s)	100 M
- Rx Rate (Fps)	8,127
- Flood Count (Frames)	61
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	243,819
- Rx Rate (L1) (Bit/s)	100 M
- Rx Rate (Fps)	8,127
- Flood Count (Frames)	56
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Bl/s)	0
	243,819
- Rx (Frames)	
- Rx Rate (L1) (Bit/s)	100 M
- Rx Rate (Fps)	8,127
- Flood Count (Frames)	55
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	243,819
- Rx Rate (L1) (Bit/s)	100 M
- Ry Rate (Ens)	8,127
- Rx Rate (Fps)	
- Flood Count (Frames)	57
- Flood Count (Frames) P-0-4-3	
P-0-4-3 - Tx (Frames)	0
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0 0
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 0 0 243,819
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	0 0 0 243,819 100 M
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s)	0 0 0 243,819 100 M 8,127
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	0 0 0 243,819 100 M
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4	0 0 0 243,819 100 M 8,127
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames)	0 0 0 243,819 100 M 8,127
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames)	0 0 0 243,819 100 M 8,127 59
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4	0 0 0 243,819 100 M 8,127 59
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0 0 0 243,819 100 M 8,127 59
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 243,819 100 M 8,127 59 0 0
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	0 0 243,819 100 M 8,127 59 0 0 0
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 243,819 100 M 8,127 59 0 0 243,819
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5	0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames)	0 0 0 243,819 100 M 8,127 59 0 0 0 243,819 100 M 8,127 58
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127 58
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0 0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127 58
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127 58
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127 58
- Flood Count (Frames) P-0-4-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Flood Count (Frames) P-0-4-4 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	0 0 0 243,819 100 M 8,127 59 0 0 243,819 100 M 8,127 58



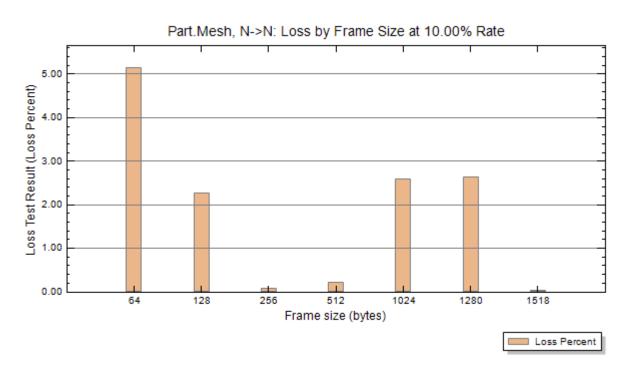

Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,570	1,520,270	815,216	422,931	215,517	173,075
Rx Rate (Percent)	10.62 %	10.83 %	10.91 %	11.03 %	11.02 %	11.08 %
Rx Rate (L1) (Bit/s)	955.42 M	974.43 M	981.68 M	992.93 M	991.35 M	997.16 M
Rx Rate (Fps)	1.42 M	823 K	444.6 K	233.3 K	118.7 K	95.88 K
Loss Rate (Percent)	46.92 %	45.86 %	45.46 %	44.84 %	44.92 %	44.6 %
Loss (Frames)	37,704,427	20,918,117	11,118,492	5,688,919	2,904,624	2,315,827
P-0-0-0						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4			2 - 1 - 222	=	-10.000	
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	0.000.507	E 007 E07	0.747.000	4 400 700	740.200	F70 040
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769 200 M	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M		200 M	200 M
- Tx Rate (Fps) - Rx (Frames)	297,619	168,919	90,580	46,992	23,946	19,231 0
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (LT) (BIDS)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	U
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0,920,567 200 M	200 M	2,717,300 200 M	1,409,769 200 M	200 M	200 M
- Tx Rate (ET) (Blus)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	297,019	0	90,360	40,992	23,940	19,231
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (E1) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	U	U	U	U	U	U
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx (Hames)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (ET) (Blus)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	297,019	0	90,360	40,992	23,940	19,231
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	0	U	0	0	0	0
- Tx (Frames)	8,928,567	5,067,567	2,717,388	1,409,769	718,389	576,918
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,580	46,992	23,946	19,231
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,734,648	2,740,313	1,484,668	778,146	381,503	319,395
- Rx Rate (L1) (Bit/s)	106.06 M	108.15 M	109.27 M	110.39 M	106.21 M	110.72 M
- Rx Rate (Fps)	157,822	91,344	49,489	25,938	12,717	10,647
- Flood Count (Frames)	36	29	32	35	47	34
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,735,343	2,742,045	1,424,111	778,513	397,793	319,544
- Rx Rate (L1) (Bit/s)	106.07 M	108.22 M	104.81 M	110.45 M	110.75 M	110.78 M
- Rx Rate (Fps)	157,845	91,402	47,470	25,950	13,260	10,651
- Flood Count (Frames)	33	38	32	33	42	41
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,751,419	2,746,043	1,487,353	778,787	397,461	319,820
- Rx Rate (L1) (Bit/s)	106.43 M	108.38 M	109.47 M	110.48 M	110.65 M	110.87 M
	158,381	91,535	49,578	25,960	13,249	10,661
		01,000				
- Rx Rate (Fps)		33	33	32	40	.34
- Rx Rate (Fps) - Flood Count (Frames)	37	33	33	32	40	39
- Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	37				-	
- Rx Rate (Fps) - Flood Count (Frames)		0 0	0 0	0 0	0 0	0 0



- Rx (Frames)	4,751,884	2,744,665	1,489,361	778,446	397,295	319,998
- Rx Rate (L1) (Bit/s)	106.44 M	108.32 M	109.62 M	110.44 M	110.61 M	110.93 M
- Rx Rate (Fps)	158,396	91,489	49,645	25,948	13,243	10,667
- Flood Count (Frames)	32	43	29	35	31	40
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,724,393	2,745,155	1,489,103	777,131	397,412	319,682
- Rx Rate (L1) (Bit/s)	105.83 M	108.34 M	109.6 M	110.25 M	110.64 M	110.82 M
- Rx Rate (Fps)	157,480	91,505	49,637	25,904	13,247	10,656
- Flood Count (Frames)	34	36	33	30	38	33
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,726,122	2,745,139	1,489,690	777,522	397,169	319,780
- Rx Rate (L1) (Bit/s)	105.87 M	108.34 M	109.64 M	110.3 M	110.57 M	110.86 M
- Rx Rate (Fps)	157,537	91,505	49,656	25,917	13,239	10,659
- Flood Count (Frames)	38	35	34	40	31	33
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,728,908	2,746,400	1,491,458	776,180	397,236	319,161
- Rx Rate (L1) (Bit/s)	105.93 M	108.39 M	109.77 M	110.11 M	110.59 M	110.64 M
- Rx Rate (Fps)	157,630	91,547	49,715	25,873	13,241	10,639
- Flood Count (Frames)	29	35	35	36	36	39
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,754,321	2,742,863	1,492,574	776,738	397,125	319,614
- Rx Rate (L1) (Bit/s)	106.5 M	108.25 M	109.85 M	110.19 M	110.56 M	110.8 M
- Rx Rate (Fps)	158,477	91,429	49,752	25,891	13,238	10,654
- Flood Count (Frames)	36	29	31	35	40	38
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,745,638	2,737,363	1,489,682	777,539	397,883	319,441
- Rx Rate (L1) (Bit/s)	106.3 M	108.03 M	109.64 M	110.31 M	110.77 M	110.74 M
- Rx Rate (Fps)	158,188	91,245	49,656	25,918	13,263	10,648
- Flood Count (Frames)	37	38	35	39	44	38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,291
Rx Rate (Percent)	10.76 %
Rx Rate (L1) (Bit/s)	968.09 M
Rx Rate (Fps)	78.68 K
Loss Rate (Percent)	46.22 %
Loss (Frames)	2,028,308
P-0-0-0	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-2	0
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	407.000
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-0	0
	197 639
- Tx (Frames) - Tx Rate (L1) (Bit/s)	487,638 200 M
- Tx Rate (ET) (Blus)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	487,638
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,287
- Rx Rate (L1) (Bit/s)	110.85 M
- Rx Rate (Fps)	9,010
- Flood Count (Frames)	40
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	107 165
- Rx (Frames)	197,165



- Rx Rate (L1) (Bit/s)	80.86 M
- Rx Rate (Fps)	6,572
- Flood Count (Frames)	38
P-0-2-5	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,318 110.87 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (Fps)	9,011
- Flood Count (Frames) P-0-4-0	42
- Tx (Frames)	0
- Tx (Hames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (E1) (Blus)	0
- Rx (Frames)	270,302
- Rx Rate (L1) (Bit/s)	110.86 M
- Rx Rate (Fps)	9,010
- Flood Count (Frames) P-0-4-1	38
	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	
- Rx (Frames)	270,774
- Rx Rate (L1) (Bit/s)	111.05 M
- Rx Rate (Fps)	9,026
- Flood Count (Frames)	38
P-0-4-2	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,363
- Rx Rate (L1) (Bit/s)	110.88 M
- Rx Rate (Fps)	9,012
- Flood Count (Frames)	43
P-0-4-3	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
	0
- Tx Rate (Fps)	270 445
- Rx (Frames)	270,445
- Rx Rate (L1) (Bit/s)	110.92 M
- Rx Rate (Fps)	9,015
- Flood Count (Frames)	33
P-0-4-4	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,429
- Rx Rate (L1) (Bit/s)	110.91 M
- Rx Rate (Fps)	9,014
- Flood Count (Frames)	40
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,351
- Rx Rate (L1) (Bit/s)	110.88 M
- Rx Rate (Fps)	9,012
- Flood Count (Frames)	42



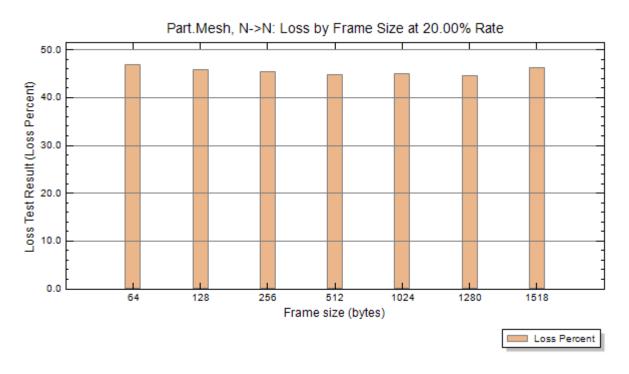

Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	2.7 G	2.7 G	2.7 G	2.7 G	2.7 G	2.7 G
Tx Rate (Fps)	4,017,857	2,280,404	1,222,825	634,397	323,274	259,613
Rx Rate (Percent)	10.62 %	10.83 %	10.91 %	11.03 %	10.85 %	11.08 %
Rx Rate (L1) (Bit/s)	956 M	974.28 M	981.77 M	993.09 M	976.14 M	997.56 M
Rx Rate (Fps)	1.42 M	822.87 K	444.64 K	233.34 K	116.88 K	95.92 K
Loss Rate (Percent)	64.59 %	63.92 %	63.64 %	63.22 %	63.85 %	63.05 %
Loss (Frames)	77,857,270	43,725,902	23,345,440	12,031,791	6,191,949	4,910,824
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	10 000 0==			0.111.0-0		
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	40 000 055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	40 000 055	7 004 040	4.070.000	0.444.050	4 077 570	005 077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	40 000 055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	40,000,055	7 004 040	4.070.000	0.444.050	4 077 570	005.077
- Tx (Frames)	13,392,855	7,601,346	4,076,082	2,114,658	1,077,579	865,377
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	300 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,489	35,919	28,846
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps) - Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	U	U	U	0
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)						
- Rx (Frames)	4,744,266	2,745,518	1,486,670	778,589	397,880	319,257
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	106.27 M	108.36 M	109.42 M	110.46 M	110.77 M	110.68 M
- Flood Count (Frames)	158,142 29	91,517	49,556	25,953	13,263	10,642
P-0-2-4	29	32	27	32	28	29
	0	0	0	0	0	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)		-		0	-	
- Tx Rate (Fps)	0	0 742 045	0	-	0	0
- Rx (Frames)	4,748,838	2,743,615	1,489,576	778,876	371,275	319,222
- Rx Rate (L1) (Bit/s)	106.37 M	108.28 M	109.63 M	110.5 M	103.36 M	110.66 M
- Rx Rate (Fps)	158,295	91,454	49,653	25,963	12,376	10,641
- Flood Count (Frames)	31	33	35	36	33	28
P-0-2-5	0	0	0	0	0	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,741,831	2,729,920	1,430,161	776,945	349,984	318,515
- Rx Rate (L1) (Bit/s)	106.22 M	107.74 M	105.26 M	110.22 M	97.44 M	110.42 M
- Rx Rate (Fps)	158,061	90,997	47,672	25,898	11,666	10,617
- Flood Count (Frames)	27	31	32	31	29	31
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)		0	0	0	0	0



- Rx (Frames)	4,746,034	2,732,844	1,487,061	777,011	397,454	319,465
- Rx Rate (L1) (Bit/s)	106.31 M	107.86 M	109.45 M	110.23 M	110.65 M	110.75 M
- Rx Rate (Fps)	158,201	91,095	49,569	25,900	13,248	10,649
- Flood Count (Frames)	29	33	35	26	29	28
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,740,980	2,732,240	1,486,459	774,998	397,448	320,803
- Rx Rate (L1) (Bit/s)	106.2 M	107.83 M	109.4 M	109.95 M	110.65 M	111.21 M
- Rx Rate (Fps)	158,033	91,075	49,549	25,833	13,248	10,693
- Flood Count (Frames)	35	26	27	28	27	27
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,735,634	2,748,877	1,485,880	779,283	398,574	319,259
- Rx Rate (L1) (Bit/s)	106.08 M	108.49 M	109.36 M	110.55 M	110.96 M	110.68 M
- Rx Rate (Fps)	157,854	91,629	49,529	25,976	13,286	10,642
- Flood Count (Frames)	34	31	28	32	23	32
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,735,921	2,751,835	1,489,406	777,510	397,911	319,604
- Rx Rate (L1) (Bit/s)	106.08 M	108.61 M	109.62 M	110.3 M	110.78 M	110.8 M
- Rx Rate (Fps)	157,864	91,728	49,647	25,917	13,264	10,653
- Flood Count (Frames)	26	26	30	28	24	29
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,737,285	2,751,655	1,491,206	777,769	397,153	321,594
- Rx Rate (L1) (Bit/s)	106.12 M	108.6 M	109.75 M	110.34 M	110.57 M	111.49 M
- Rx Rate (Fps)	157,910	91,722	49,707	25,926	13,238	10,720
- Flood Count (Frames)	31	24	27	31	24	33
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,747,636	2,749,708	1,492,879	779,150	398,583	319,850
- Rx Rate (L1) (Bit/s)	106.35 M	108.52 M	109.88 M	110.54 M	110.97 M	110.88 M
- Rx Rate (Fps)	158,255	91,657	49,763	25,972	13,286	10,662
- Flood Count (Frames)	25	30	24	31	32	27

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	2.7 G
Tx Rate (Fps)	219,440
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.02 M
Rx Rate (Fps)	81.11 K
Loss Rate (Percent)	63.04 %
Loss (Frames)	4,149,784
P-0-0-0	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	721 466
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731,466 300 M
- Tx Rate (E1) (Bl/s)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	721 466
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M 24,382
- Tx Rate (Fps) - Rx (Frames)	24,362
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0
- Rx Rate (ET) (Bit/s)	0
- Flood Count (Frames)	0
P-0-0-5	0
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	0
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	731,466
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	269,773
- Rx (Frames) - Rx Rate (L1) (Bit/s)	110.64 M
- Rx Rate (E1) (Bit/s)	8,992
- Flood Count (Frames)	33
P-0-2-4	33
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,184
. ,	.,



- Rx Rate (L1) (Bit/s)	110.81 M
- Rx Rate (Fps)	9,006
- Flood Count (Frames)	29
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,365
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	110.89 M 9,012
- Flood Count (Frames)	29
P-0-4-0	25
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,512
- Rx Rate (L1) (Bit/s)	110.95 M
- Rx Rate (Fps)	9,017
- Flood Count (Frames)	35
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0
- Rx (Frames)	270,743
- Rx Rate (L1) (Bit/s)	111.04 M
- Rx Rate (Fps)	9,025
- Flood Count (Frames)	29
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,925
- Rx Rate (L1) (Bit/s)	110.71 M
- Rx Rate (Fps)	8,998
- Flood Count (Frames) P-0-4-3	28
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,563
- Rx Rate (L1) (Bit/s)	110.97 M
- Rx Rate (Fps)	9,019
- Flood Count (Frames)	36
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	270,811
- Rx (Frames) - Rx Rate (L1) (Bit/s)	111.07 M
- Rx Rate (Fps)	9,027
- Flood Count (Frames)	28
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,534
- Rx Rate (L1) (Bit/s)	110.96 M
- Rx Rate (Fps)	9,018
- Flood Count (Frames)	28



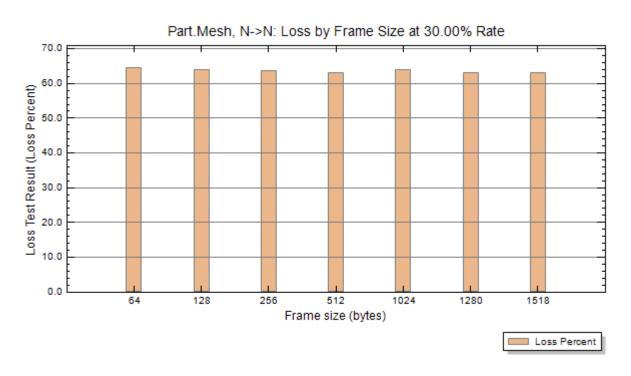

Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,140	3,040,540	1,630,433	845,864	431,033	346,154
Rx Rate (Percent)	0.02 %	10.83 %	10.96 %	11.04 %	11.08 %	11.07 %
Rx Rate (L1) (Bit/s)	1.44 M	974.65 M	986.43 M	993.34 M	996.9 M	996.17 M
Rx Rate (Fps)	2.14 K	823.18 K	446.75 K	233.4 K	119.36 K	95.79 K
Loss Rate (Percent)	99.96 %	72.93 %	72.6 %	72.41 %	72.31 %	72.33 %
Loss (Frames)	160,649,913	66,520,793	35,510,444	18,374,028	9,350,175	7,511,042
P-0-0-0						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	47.057.404	40 405 404	F 40 4 770	0.040.547	4 400 770	4 450 045
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,134 400 M	10,135,134 400 M	5,434,776 400 M	2,819,547 400 M	1,436,778 400 M	1,153,845 400 M
- Tx Rate (ET) (Bil/S)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0 0	0	93,963	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	17 057 104	10 125 124	E 424 776	2 040 547	1 426 770	1 152 045
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,134 400 M	10,135,134 400 M	5,434,776 400 M	2,819,547 400 M	1,436,778 400 M	1,153,845 400 M
- Tx Rate (LT) (Bil/s)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	095,236	0	0	93,963	47,693	30,402
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	17,857,134	10,135,134	5,434,776	2,819,547	1,436,778	1,153,845
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	47.057.404	40 405 404	E 404 770	0.040.547	4 400 770	4 450 045
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,134 400 M	10,135,134 400 M	5,434,776 400 M	2,819,547 400 M	1,436,778 400 M	1,153,845 400 M
- Tx Rate (ET) (Bivs)	595,238	337,838	181,159	93,985	47,893	38,462
- Rx (Frames)	0	0 0	0	93,963	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,512	2,744,564	1,487,723	776,006	399,307	313,758
- Rx Rate (L1) (Bit/s)	168.27 K	108.32 M	109.5 M	110.09 M	111.17 M	108.77 M
- Rx Rate (Fps)	250	91,485	49,591	25,867	13,310	10,459
- Flood Count (Frames)	61	29	24	28	27	28
P-0-2-4	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (ET) (Bivs)	0	0	0	0	0	0
- Rx (Frames)	7,732	2,744,094	1,491,295	776,084	398,668	319,532
- Rx Rate (L1) (Bit/s)	173.2 K	108.3 M	109.76 M	110.1 M	110.99 M	110.77 M
- Rx Rate (Fps)	258	91,470	49,710	25,869	13,289	10,651
- Flood Count (Frames)	59	25	25	28	30	32
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,247	2,750,363	1,494,107	777,695	396,941	318,976
- Rx Rate (L1) (Bit/s)	72.73 K	108.55 M	109.97 M	110.33 M	110.51 M	110.58 M
- Rx Rate (Fps)	108	91,679	49,804	25,923	13,231	10,633
- Flood Count (Frames)	58	28	25	28	23	26
P-0-4-0						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	7,907	2,743,173	1,495,952	779,764	396,461	320,329
- Rx Rate (L1) (Bit/s)	177.12 K	108.26 M	110.1 M	110.62 M	110.37 M	111.05 M
- Rx Rate (Fps)	264	91,439	49,865	25,992	13,215	10,678
- Flood Count (Frames)	58	27	29	26	23	25
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,707	2,745,708	1,495,328	779,874	395,993	320,473
- Rx Rate (L1) (Bit/s)	172.64 K	108.36 M	110.06 M	110.64 M	110.24 M	111.1 M
- Rx Rate (Fps)	257	91,524	49,844	25,996	13,200	10,682
- Flood Count (Frames)	56	28	30	23	25	26
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,630	2,735,238	1,489,308	779,078	396,245	319,689
- Rx Rate (L1) (Bit/s)	170.91 K	107.95 M	109.61 M	110.53 M	110.31 M	110.83 M
- Rx Rate (Fps)	254	91,175	49,644	25,969	13,208	10,656
- Flood Count (Frames)	56	22	27	20	30	24
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,527	2,745,403	1,484,265	777,682	397,731	320,773
- Rx Rate (L1) (Bit/s)	168.6 K	108.35 M	109.24 M	110.33 M	110.73 M	111.2 M
- Rx Rate (Fps)	251	91,513	49,476	25,923	13,258	10,692
- Flood Count (Frames)	62	26	26	26	26	23
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,496	2.740.923	1,481,117	778,607	399,084	319,961
- Rx Rate (L1) (Bit/s)	167.91 K	108.18 M	109.01 M	110.46 M	111.1 M	110.92 M
- Rx Rate (Fps)	250	91,364	49,371	25,954	13,303	10,665
- Flood Count (Frames)	59	23	23	25	26	24
P-0-4-5					-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	7,535	2,745,947	1,483,445	777,105	400,397	320,072
- Rx Rate (L1) (Bit/s)	168.78 K	108.37 M	109.18 M	110.25 M	111.47 M	110.96 M
- Rx Rate (Fps)	251	91,532	49,448	25,904	13,347	10,669
- Flood Count (Frames)	56	26	26	25	26	29

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,586
Rx Rate (Percent)	10.89 %
Rx Rate (L1) (Bit/s)	979.67 M
Rx Rate (Fps)	79.62 K
Loss Rate (Percent)	72.79 %
Loss (Frames)	6,388,902
P-0-0-0	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	075.005
- Tx (Frames)	975,285 400 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	075.005
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	0
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	975,285
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268,585
- Rx Rate (L1) (Bit/s)	110.16 M
- Rx Rate (Fps)	8,953
- Flood Count (Frames)	25
P-0-2-4	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	226,011



- Rx Rate (L1) (Bit/s)	92.69 M
- Rx Rate (Fps)	7,534
- Flood Count (Frames)	30
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,589
- Rx Rate (L1) (Bit/s)	110.98 M
- Rx Rate (Fps)	9,020
- Flood Count (Frames)	27
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268,338
- Rx Rate (L1) (Bit/s)	110.05 M
- Rx Rate (Fps)	8,945
- Flood Count (Frames)	28
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	267,300
- Rx Rate (L1) (Bit/s)	109.63 M
- Rx Rate (Fps)	8,910
- Flood Count (Frames)	26
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,076
- Rx Rate (L1) (Bit/s)	110.36 M
- Rx Rate (Fps)	8,969
- Flood Count (Frames)	26
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	268,740
	110.22 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (Fps)	8,958
- Flood Count (Frames)	23
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	274,883
- Rx Rate (L1) (Bit/s)	112.74 M
- Rx Rate (Fps)	9,163
- Flood Count (Frames)	31
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	275,141
- Rx Rate (L1) (Bit/s)	112.84 M
- Rx Rate (Fps)	9,171
- Flood Count (Frames)	28
. 1004 Count (1 funics)	20



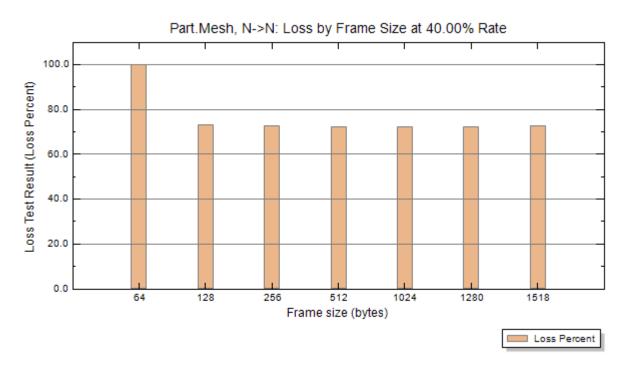

Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	4.5 G	4.5 G	4.5 G	4.5 G	4.5 G	4.5 G
Tx Rate (Fps)	6,696,427	3,800,674	2,038,041	1,057,331	538,793	432,691
Rx Rate (Percent)	0.01 %	10.82 %	10.88 %	11.03 %	10.79 %	11 %
Rx Rate (L1) (Bit/s)	1.26 M	974.13 M	978.94 M	992.98 M	971.11 M	989.58 M
Rx Rate (Fps)	1.88 K	822.75 K	443.36 K	233.31 K	116.27 K	95.15 K
Loss Rate (Percent)	99.97 %	78.35 %	78.25 %	77.93 %	78.42 %	78.01 %
Loss (Frames)	200,836,475	89,337,808	47,840,412	24,720,564	12,675,619	10,126,166
P-0-0-0						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	20.004.400	10.000.010		2 - 2 / 12 2		
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	00 004 400	40,000,040	0.700.470	2 524 420	4 705 077	4 440 004
- Tx (Frames)	22,321,422	12,668,913	6,793,470 500 M	3,524,436 500 M	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297			500 M	500 M
- Tx Rate (Fps) - Rx (Frames)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (LT) (Bil/S)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	U
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx (Frames)	500 M	12,000,913 500 M	5,793,470 500 M	5,524,436 500 M	1,795,977 500 M	1,442,304 500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	U	0	U	U	U	0
P-0-2-1	22 224 422	12 669 012	6 702 470	2 524 426	1 705 077	1 442 204
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047		226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	U	U	U	U	0
- Tx (Frames)	22,321,422	12,668,913	6,793,470	3,524,436	1,795,977	1,442,304
- Tx (Frames)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,047	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3			<u> </u>	-		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,242	2,739,306	1,497,994	777,800	333,184	298,526
- Rx Rate (L1) (Bit/s)	139.82 K	108.11 M	110.25 M	110.34 M	92.76 M	103.49 M
- Rx Rate (Fps)	208	91,310	49,933	25,927	11,106	9,951
- Flood Count (Frames)	59	22	28	25	26	28
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,261	2,754,237	1,388,447	778,095	398,077	322,239
- Rx Rate (L1) (Bit/s)	140.25 K	108.7 M	102.19 M	110.39 M	110.82 M	111.71 M
- Rx Rate (Fps)	209	91,808	46,282	25,937	13,269	10,741
- Flood Count (Frames)	59	25	22	22	27	24
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,146	2,736,106	1,486,563	779,246	369,790	322,680
- Rx Rate (L1) (Bit/s)	137.67 K	107.98 M	109.41 M	110.55 M	102.95 M	111.86 M
- Rx Rate (Fps)	205	91,204	49,552	25,975	12,326	10,756
- Flood Count (Frames)	59	21	24	23,973	24	31
P-0-4-0	33	21	27	20	27	31
- Tx (Frames)	0	0	0	0	0	0
				-	-	0
						0
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	



- Rx (Frames)	6,302	2,746,882	1,485,008	778,604	398,100	318,772
- Rx Rate (L1) (Bit/s)	141.16 K	108.41 M	109.3 M	110.46 M	110.83 M	110.51 M
- Rx Rate (Fps)	210	91,563	49,500	25,953	13,270	10,626
- Flood Count (Frames)	55	25	26	23	21	29
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,268	2,734,830	1,482,616	777,411	397,858	319,419
- Rx Rate (L1) (Bit/s)	140.4 K	107.93 M	109.12 M	110.29 M	110.76 M	110.73 M
- Rx Rate (Fps)	209	91,161	49,421	25,914	13,262	10,647
- Flood Count (Frames)	55	20	22	27	25	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,308	2,739,927	1,485,486	777,028	397,658	317,115
- Rx Rate (L1) (Bit/s)	141.3 K	108.14 M	109.33 M	110.23 M	110.71 M	109.93 M
- Rx Rate (Fps)	210	91,331	49,516	25,901	13,255	10,571
- Flood Count (Frames)	56	26	24	23	23	24
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,130	2,742,662	1,489,297	776,609	397,580	317,631
- Rx Rate (L1) (Bit/s)	137.31 K	108.24 M	109.61 M	110.17 M	110.69 M	110.11 M
- Rx Rate (Fps)	204	91,422	49,643	25,887	13,253	10,588
- Flood Count (Frames)	54	20	27	25	21	28
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,273	2,738,048	1,490,082	777,297	397,988	318,093
- Rx Rate (L1) (Bit/s)	140.52 K	108.06 M	109.67 M	110.27 M	110.8 M	110.27 M
- Rx Rate (Fps)	209	91,268	49,669	25,910	13,266	10,603
- Flood Count (Frames)	58	25	25	19	26	29
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	6,393	2,750,411	1,495,325	777,270	397,939	320,095
- Rx Rate (L1) (Bit/s)	143.2 K	108.55 M	110.06 M	110.27 M	110.79 M	110.97 M
- Rx Rate (Fps)	213	91,680	49,844	25,909	13,265	10,670
- Flood Count (Frames)	57	22	29	24	23	29

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	4.5 G
Tx Rate (Fps)	365,734
Rx Rate (Percent)	11.03 %
Rx Rate (L1) (Bit/s)	993.14 M
Rx Rate (Fps)	80.72 K
Loss Rate (Percent)	77.93 %
Loss (Frames)	8,550,514
P-0-0-0	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3 - Tx (Frames)	1 210 112
- Tx (Frames)	1,219,113 500 M
- Tx Rate (E1) (Blus)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5 - Tx (Frames)	1,219,113
- Tx (Frames) - Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (E1) (Blus)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	U
- Tx (Frames)	1,219,113
- Tx (Frances)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,219,113
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-3	U
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	262,240
- Rx Rate (L1) (Bit/s)	107.55 M
- Rx Rate (Fps)	8,741
- Flood Count (Frames)	31
P-0-2-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	0
	264,933



- Rx Rate (L1) (Bit/s)	108.66 M
- Rx Rate (Fps)	8,831
- Flood Count (Frames)	24
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,964
- Rx Rate (L1) (Bit/s)	110.72 M
- Rx Rate (Fps)	8,999
- Flood Count (Frames)	30
P-0-4-0	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	262,879
- Rx Rate (L1) (Bit/s)	107.82 M
- Rx Rate (Fps)	8,763
- Flood Count (Frames)	28
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	266,030
- Rx Rate (L1) (Bit/s)	109.11 M
- Rx Rate (Fps)	8,868
- Flood Count (Frames)	25
P-0-4-2	_
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	283,630
- Rx Rate (L1) (Bit/s)	116.33 M
- Rx Rate (Fps)	9,454
- Flood Count (Frames)	27
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	263,470
- Rx Rate (L1) (Bit/s)	108.06 M
- Rx Rate (Fps)	8,782
- Flood Count (Frames)	29
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	265,448
- Rx Rate (L1) (Bit/s)	108.87 M
- Rx Rate (Fps)	8,848
- Flood Count (Frames)	28
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	282,909
- Rx Rate (L1) (Bit/s)	116.03 M
- Rx Rate (Fps)	9,430
- Flood Count (Frames)	26
. ,	



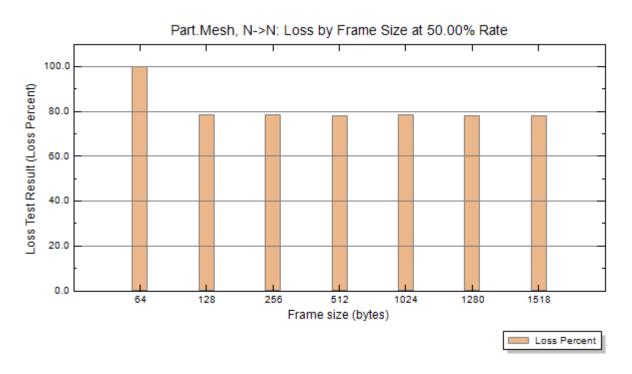

Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,713	4,560,810	2,445,652	1,268,795	646,550	519,229
Rx Rate (Percent)	0.01 %	10.83 %	10.96 %	10.39 %	10.96 %	11.08 %
Rx Rate (L1) (Bit/s)	957.2 K	974.32 M	986.64 M	935.22 M	986.12 M	997.61 M
Rx Rate (Fps)	1.42 K	822.91 K	446.85 K	219.74 K	118.07 K	95.92 K
Loss Rate (Percent)	99.98 %	81.96 %	81.73 %	82.68 %	81.74 %	81.53 %
Loss (Frames)	241,028,658	112,137,104	59,964,169	31,471,612	15,854,396	12,699,148
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	00 -010	1= 000 =01	0.150.150		0.1==.10=	
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	00 705 740	45 202 704	0.450.470	4 000 040	0.455.407	4 700 700
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M 892.857	600 M 506.757	600 M	600 M	600 M	600 M 57,692
- Tx Rate (Fps) - Rx (Frames)	092,657	0	271,739 0	140,977	71,839 0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (LT) (Bivs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	U
	26 705 710	15,202,701	0 150 170	4 220 216	2 155 167	1 720 762
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,710 600 M	15,202,701 600 M	8,152,173 600 M	4,229,316 600 M	2,155,167 600 M	1,730,763 600 M
- Tx Rate (LT) (Bit/s)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	092,007	0	2/1,/39	140,977	71,039	07,092
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	U	U	U	U	U	U
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	092,037	0	0	0	71,039	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	0	0	0	0	0	
- Tx (Frames)	26,785,710	15,202,701	8,152,173	4,229,316	2,155,167	1,730,763
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	600 M
- Tx Rate (Fps)	892,857	506,757	271,739	140,977	71,839	57,692
- Rx (Frames)	0	0	0	0	0	07,002
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,039	2,755,492	1,485,802	633,779	397,513	318,895
- Rx Rate (L1) (Bit/s)	112.87 K	108.75 M	109.36 M	89.91 M	110.67 M	110.55 M
- Rx Rate (Fps)	168	91,850	49,527	21,126	13,250	10,630
- Flood Count (Frames)	59	24	22	30	25	19
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	2,432	2,740,098	1,487,884	753,092	364,333	318,452
- Rx Rate (L1) (Bit/s)	54.48 K	108.14 M	109.51 M	106.84 M	101.43 M	110.4 M
- Rx Rate (Fps)	81	91,337	49,596	25,103	12,144	10,615
- Flood Count (Frames)	60	26	24	26	22	24
P-0-2-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,023	2,743,060	1,491,628	543,906	394,918	319,196
- Rx Rate (L1) (Bit/s)	112.52 K	108.26 M	109.78 M	77.16 M	109.95 M	110.65 M
- Rx Rate (Fps)	167	91,435	49,721	18,130	13,164	10,640
- Flood Count (Frames)	61	23	25	24	26	25
P-0-4-0	-	-	-			
1 -0-4-0						
	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0



- Rx (Frames)	5,075	2,738,768	1,493,719	778,738	398,492	321,180
- Rx Rate (L1) (Bit/s)	113.68 K	108.09 M	109.94 M	110.48 M	110.94 M	111.34 M
- Rx Rate (Fps)	169	91,292	49,791	25,958	13,283	10,706
- Flood Count (Frames)	55	25	25	23	21	27
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,981	2,755,274	1,489,905	777,165	398,245	320,335
- Rx Rate (L1) (Bit/s)	111.57 K	108.74 M	109.66 M	110.25 M	110.87 M	111.05 M
- Rx Rate (Fps)	166	91,842	49,664	25,906	13,275	10,678
- Flood Count (Frames)	57	24	22	18	25	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,964	2,733,298	1,489,058	774,025	397,493	320,931
- Rx Rate (L1) (Bit/s)	111.19 K	107.87 M	109.59 M	109.81 M	110.66 M	111.26 M
- Rx Rate (Fps)	165	91,110	49,635	25,801	13,250	10,698
- Flood Count (Frames)	56	22	23	22	23	24
P-0-4-3			-		-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,015	2,736,190	1,489,351	774,481	397,843	320,091
- Rx Rate (L1) (Bit/s)	112.34 K	107.99 M	109.62 M	109.87 M	110.76 M	110.96 M
- Rx Rate (Fps)	167	91,206	49,645	25,816	13,261	10,670
- Flood Count (Frames)	57	27	24	23	21	28
P-0-4-4				-		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,082	2,731,421	1,489,626	776,797	397,942	319,110
- Rx Rate (L1) (Bit/s)	113.84 K	107.8 M	109.64 M	110.2 M	110.79 M	110.62 M
- Rx Rate (Fps)	169	91,047	49,654	25,893	13,265	10,637
- Flood Count (Frames)	60	27	24	26	24	24
P-0-4-5				-		
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	5,121	2,753,604	1,488,415	780,249	395,328	319,529
- Rx Rate (L1) (Bit/s)	114.71 K	108.68 M	109.55 M	110.69 M	110.06 M	110.77 M
- Rx Rate (Fps)	171	91,787	49,614	26,008	13,178	10,651
- Flood Count (Frames)	56	25	23	26	24	24

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,880
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.02 M
Rx Rate (Fps)	81.11 K
Loss Rate (Percent)	81.52 %
Loss (Frames)	10,732,976
P-0-0-0	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-3	U
	4 400 000
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1,462,932
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,462,932
- Tx (Frames)	1,402,932 600 M
- Tx Rate (Fps)	48,764
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,505
- Rx Rate (L1) (Bit/s)	110.94 M
- Rx Rate (Fps)	9,017
- Flood Count (Frames)	21
P-0-2-4	
- Tx (Frames)	0
- Tx (Flames)	0
- Tx Rate (ET) (Blus)	0
- IV Date (LD2)	U
- Rx (Frames)	269,579



- Rx Rate (L1) (Bit/s)		
- Flood Count (Frames) 26 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 268,992 - Rx Rate (L1) (Bit/s) 110.32 M - Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,188 - Tx (Frames) 270,188 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,188 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,008 - Flood Count (Frames) 270,188 - Flood Count (Frames) 270,188 - Flood Count (Frames) 270,596 - Rx (Frames) 270,596 - Rx (Frames) 270,596 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx (Frames) 31 - P-0-4-5 - Tx (Frames) 31 - Tx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Rx Rate (L1) (Bit/s)	110.56 M
P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 268,992 - Rx Rate (L1) (Bit/s) 110.32 M - Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 270,188 - Flood Count (Frames) 270,188 - Flood Count (Frames) 30 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,008 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,008 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,008 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,008 - Flood Count (Frames) 31		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 268,992 - Rx Rate (L1) (Bit/s) 110.32 M - Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Rx (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 9,03		26
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 268,992 - Rx Rate (L1) (Bit/s) 110.32 M - Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 27 - 7-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 9,038 - Flood Count	P-0-2-5	
- Tx Rate (Fps)	- Tx (Frames)	0
- Tx Rate (Fps)	- Tx Rate (L1) (Bit/s)	0
- Rx (Frames) 268,992 - Rx Rate (L1) (Bit/s) 110.32 M - Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Eps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 26 - P-0-4-3 - Tx (Frames) 271,147 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 270,696 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 270,060 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		0
- Rx Rate (L1) (Bit/s)		268.992
- Rx Rate (Fps) 8,966 - Flood Count (Frames) 22 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,366 - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 9,046 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 271,147 - Rx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 30 - Tx Rate (Fps) 30 - Rx (Frames) 27 - Rx Rate (Fps) 30 - Rx (Frames) 27 - Rx Rate (Fps) 30 - Rx (Frames) 30 - Tx Rate (Fps) 30 - Rx (Frames) 30 - Tx Rate (Fps) 30 - Rx (Frames) 31 - Tx		
- Flood Count (Frames) 22 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 1111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-3 - Tx (Frames) 0 - Rx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 2771,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 277,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 270,596 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,020 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 277 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 9,038 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Tx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 27 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Can Parallel (Fps) 9,038 - Flood Count (Frames) 27 - Can Parallel (Fps) 9,038 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Tx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 30 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		0
- Tx Rate (Fps)	Ty Pote (L1) (Pit/e)	
- Rx (Frames) 271,366 - Rx Rate (L1) (Bit/s) 111.3 M - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Rx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 - Tx (Frames) 27 - Tx (Frames) 27 - Tx (Frames) 27 - Tx Rate (Fps) 30 - Rx (Frames) 27 - Tx Rate (Fps) 30 - Rx (Frames) 27 - Tx Rate (Fps) 30 - Rx (Frames) 27 - Rx Rate (Fps) 30 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 30 - Rx (Frames) 27 - O-4-4 - Tx (Frames) 37 - Tx Rate (Fps) 30 - Rx (Frames) 31 - Tx Rate (Fps) 30 - Rx Rate (Fps)	- TX Rate (LT) (BIVS)	
- Rx Rate (L1) (Bit/s) 9,046 - Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,979 - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 270,060 - Tx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Rx Rate (Fps) 9,020 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (Fps) 9,046 - Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,979 - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx Rate (Fps) 9,020 - Rx (Frames) 0 - Tx Rate (Fps) 9,020 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Flood Count (Frames) 24 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,006 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-5 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (F		
P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,006 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 27 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 270,060 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 110.76 M - Rx Rate (Fps) 9,002		·
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 9,006 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,020 - Rx (Frames) 270,060 - Rx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (Fps) 9,002	- Flood Count (Frames)	24
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 277,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - R		
- Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Tx (Frames)	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Tx Rate (L1) (Bit/s)	0
- Rx (Frames) 270,979 - Rx Rate (L1) (Bit/s) 111.14 M - Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,006 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Tx (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Tx Rate (Fps)	0
- Rx Rate (L1) (Bit/s) 9,033 - Rlood Count (Frames) 9,033 - Flood Count (Frames) 22 - D-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,008 - Rx (Frames) 270,188 - Rx Rate (Fps) 9,006 - Rx (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - O-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - O-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - O-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 -	- Rx (Frames)	270,979
- Rx Rate (Fps) 9,033 - Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Tx Rate (Fps) 0 - Rx (Frames) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		111.14 M
- Flood Count (Frames) 22 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-5 - Tx (Frames) 0 - Rx (Frames) 10 - Rx Rate (Fps) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 - Tx (Frames) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,020 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (Fps) 9,002		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 110.76 M - Rx Rate (Fps) 9,002		0
- Tx Rate (Fps) 0 - Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 110.98 M - Rx Rate (Fps) 110.98 M		
- Rx (Frames) 270,188 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 271,147 - Rx Rate (Fps) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (Fps) 9,002		
- Rx Rate (L1) (Bit/s) 9,006 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,038 - Rx (Frames) 2771,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 27 Rx (Frames) 10 - Tx Rate (Fps) 10 - Rx (Frames) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Flood Count (Frames) 26 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Tx Rate (Fps) 110.98 M - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 100.90 M - Rx Rate (Fps) 100.90 M - Rx Rate (Fps) 110.76 M - Rx Rate (Fps) 9,002		
P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 -0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 110.98 M - Rx Rate (Fps) 110.98 M - Tx Rate (Fps) 110.98 M - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 -0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		20
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 -0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 - O-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		•
- Tx Rate (Fps) 0 - Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx (Frames) 271,147 - Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,596 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (L1) (Bit/s) 111.21 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,596 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx (Frames) 10 - Rx (Frames) 110.76 M - Rx Rate (Fps) 110.76 M - Rx Rate (Fps) 19,002		
- Rx Rate (Fps) 9,038 - Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,596 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Flood Count (Frames) 27 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Rx Rate (L1) (Bit/s)	111.21 M
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		9,038
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Flood Count (Frames)	27
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	- Tx (Frames)	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx (Frames) 270,596 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,060 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (Fps) 9,020 - Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Flood Count (Frames) 31 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		31
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		^
- Tx Rate (Fps) 0 - Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx (Frames) 270,060 - Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002		
- Rx Rate (L1) (Bit/s) 110.76 M - Rx Rate (Fps) 9,002	```	
- Rx Rate (Fps) 9,002		
- Flood Count (Frames) 27		
	- Flood Count (Frames)	27



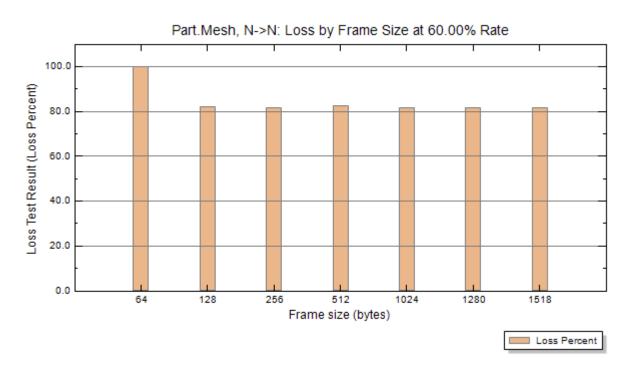

Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	6.3 G	6.3 G	6.3 G	6.3 G	6.3 G	6.3 G
Tx Rate (Fps)	9,374,999	5,320,944	2,853,260	1,480,262	754,310	605,767
Rx Rate (Percent)	0.01 %	0.97 %	10.96 %	11.04 %	11.08 %	11.04 %
Rx Rate (L1) (Bit/s)	694.36 K	87.44 M	986.65 M	993.3 M	996.99 M	993.73 M
Rx Rate (Fps)	1.03 K	73.85 K	446.85 K	233.39 K	119.37 K	95.55 K
Loss Rate (Percent)	99.99 %	98.61 %	84.34 %	84.23 %	84.17 %	84.23 %
Loss (Frames)	281,218,984	157,412,793	72,192,218	37,406,224	19,048,148	15,306,474
P-0-0-0						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	0.1.0.10.000	4= === 4==	2 - 12 22-		2 - 1 1 2 2 2	
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	24 240 000	47 700 400	0.540.007	4 004 005	0.544.000	0.040.000
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps) - Rx (Frames)	1,041,667	591,216 0	317,029 0	164,474	83,812	67,307 0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (LT) (Bil/s)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	U	U	U	U	U	U
	21 240 000	17 726 490	0.510.967	4 024 205	2,514,366	2 040 222
- Tx (Frames) - Tx Rate (L1) (Bit/s)	31,249,998 700 M	17,736,480 700 M	9,510,867 700 M	4,934,205 700 M	2,514,366 700 M	2,019,222 700 M
- Tx Rate (LT) (Bit/s)	1,041,667	591,216	317,029	164,474	83,812	67,307
\ 1 /			317,029	104,474		
- Rx (Frames)	0	0	-	-	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	U	0	U	U	U	0
P-0-2-1	24 240 000	17 726 400	0.540.067	4 024 205	2 514 266	2.040.222
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M 1,041,667	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)		591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	U	U	U	U	U	0
- Tx (Frames)	31,249,998	17,736,480	9,510,867	4,934,205	2,514,366	2,019,222
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,029	164,474	83,812	67,307
- Rx (Frames)	0	0	0	0	03,012	07,307
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	0	-				
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	1,930	245,775	1,487,874	778,804	397,961	307,969
- Rx Rate (L1) (Bit/s)	43.23 K	9.7 M	109.51 M	110.49 M	110.79 M	106.76 M
- Rx Rate (Fps)	64	8,193	49,596	25,960	13,265	10,266
- Flood Count (Frames)	56	56	22	25,900	23	10,200
P-0-2-4	30	30	22	24	23	27
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	1,883	244,222	1,493,720	778,891	397,909	319,433
- Rx Rate (L1) (Bit/s)	42.18 K	9.64 M	109.94 M	110.5 M	110.78 M	110.74 M
- Rx Rate (ET) (Bit/s)	63	8,141	49,791	25,963	13,264	10,74 10
- Flood Count (Frames)	57	57	23	23,903	25	23
P-0-2-5	31	31	23	23	23	23
- Tx (Frames)	0	0	0	0	0	0
		-	-		-	
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)		-	-	-	-	
- Rx (Frames)	3,842	247,955	1,493,458	777,859	398,479	319,714
- Rx Rate (L1) (Bit/s)	86.06 K	9.79 M	109.92 M	110.35 M	110.94 M	110.83 M
- Rx Rate (Fps) - Flood Count (Frames)	128	8,265	49,782	25,929	13,283	10,657
	60	57	23	22	24	25
P-0-4-0	0	^	0	0	0	
- Tx (Frames)	0	0	0	0	0	0
Ty Data /I 4\ /D:±/=\				(1)		
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	3,892	247,273	1,492,367	777,434	398,351	320,772
- Rx Rate (L1) (Bit/s)	87.18 K	9.76 M	109.84 M	110.29 M	110.9 M	111.2 M
- Rx Rate (Fps)	130	8,242	49,746	25,914	13,278	10,692
- Flood Count (Frames)	56	60	23	21	23	23
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,910	247,106	1,485,721	777,542	398,526	319,713
- Rx Rate (L1) (Bit/s)	87.58 K	9.75 M	109.35 M	110.31 M	110.95 M	110.83 M
- Rx Rate (Fps)	130	8,237	49,524	25,918	13,284	10,657
- Flood Count (Frames)	54	58	21	18	26	21
P-0-4-2	-			-	-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,894	245,504	1,487,945	778,593	397,734	319,634
- Rx Rate (L1) (Bit/s)	87.23 K	9.69 M	109.51 M	110.46 M	110.73 M	110.81 M
- Rx Rate (Fps)	130	8,183	49,598	25,953	13,258	10,654
- Flood Count (Frames)	53	56	24	22	23	22
P-0-4-3					-	
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,865	244,992	1,488,704	777,995	397,278	320,133
- Rx Rate (L1) (Bit/s)	86.58 K	9.67 M	109.57 M	110.37 M	110.6 M	110.98 M
- Rx Rate (Fps)	129	8,166	49,623	25,933	13,243	10,671
- Flood Count (Frames)	55	56	25	27	24	26
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,903	246,518	1,488,722	777,207	397,494	319,395
- Rx Rate (L1) (Bit/s)	87.43 K	9.73 M	109.57 M	110.26 M	110.66 M	110.72 M
- Rx Rate (Fps)	130	8,217	49,624	25,907	13,250	10,647
- Flood Count (Frames)	54	56	24	19	19	24
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,879	246,182	1,487,074	777,296	397,414	319,761
- Rx Rate (L1) (Bit/s)	86.89 K	9.72 M	109.45 M	110.27 M	110.64 M	110.85 M
- Rx Rate (Fps)	129	8,206	49,569	25,910	13,247	10,659
- Flood Count (Frames)	53	58	26	25	18	25

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	6.3 G
Tx Rate (Fps)	512,028
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.27 M
Rx Rate (Fps)	81.13 K
Loss Rate (Percent)	84.15 %
Loss (Frames)	12,926,819
P-0-0-0	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




D D ((E)	
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	U
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	4 700 700
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-0-5	0
	1 706 760
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	700 M
- Rx (Frames)	56,892 0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	1,706,760
- Tx Rate (L1) (Bit/s)	700 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,281
- Rx Rate (L1) (Bit/s)	110.44 M
- Rx Rate (Fps)	8,976
- Flood Count (Frames)	24
P-0-2-4	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	
- DX (FIGURES)	270,417



- Rx Rate (L1) (Bit/s) 9,014 - Rx Rate (Fps) 9,014 - Flood Count (Frames) 23 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110,61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111,2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110,96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110,96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110,98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110,98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 270,600 - Rx (Frames) 270,		
- Flood Count (Frames) 23 P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110.61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040 - Fx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,040	- Rx Rate (L1) (Bit/s)	110.91 M
P-0-2-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110.61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 23 - Flood Count (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Tx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Flood Count (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx (Frames) 270		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110.61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Rx (Frames) 270,600 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,003		23
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110.61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 - Flood Count (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.2 M - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - Flood Count (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10.96 M - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10.98 M - Rx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 20 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,905 - Rx (Frames) 270,9		•
- Tx Rate (Fps)		
- Rx (Frames) 269,699 - Rx Rate (L1) (Bit/s) 110.61 M - Rx Rate (Fps) 8,990 - Flood Count (Frames) 22 - P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Eps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 270,537 - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 271,276 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,905 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (L1) (Bit/s)		
- Rx Rate (Fps)		
- Flood Count (Frames) P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx (Frames) - Rx Rate (Fps) -		
P-0-4-0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (Fps) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 270,600 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Rx (Frames) 270,600 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (Fps) 9,020 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- RX Rate (Fps)	
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,046 - Flood Count (Frames) 26 - Flo-4-4 - Tx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flo-4-5 - Tx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		22
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx (Frames) 20 P-0-4-3 - Tx (Frames) 9,020 - Flood Count (Frames) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,043 - Rx Rate (Fps) 9,044 - Tx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx Rate (Fps)		
- Rx (Frames) 271,137 - Rx Rate (L1) (Bit/s) 111.2 M - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 - P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Flood Count (Frames) 20 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (L1) (Bit/s) 9,038 - Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,537 - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (Fps) 0 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx		
- Rx Rate (Fps) 9,038 - Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,537 - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Flood Count (Frames) 23 P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 270,906 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx		
P-0-4-1 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Tx Rate (L1) (Bit/s) 111.26 M - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,043 - Flood Count (Frames) 0 - Tx Rate (Fps) 9,043 - Flood Count (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (Fps) 9,006 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		23_
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 21 - Tx (Frames) 21 - Tx (Frames) 21 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 22 - Tx (Frames) 21 - Tx (Frames) 22 - Tx (Frames) 26 - Tx Rate (Fps) 30 - Tx		0
- Tx Rate (Fps) 0 - Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 - P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 9,043 - Flood Count (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Flood Count (Frames) 270,905 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx (Frames) 270,537 - Rx Rate (L1) (Bit/s) 110.96 M - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,020 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 271,276 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (Fps) 9,006 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (L1) (Bit/s) 9,018 - Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (Fps) 9,018 - Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 270,600 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Rx (Frames) 26 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Flood Count (Frames) 23 P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 26 - P-0-4-5 - Tx (Frames) 26 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
P-0-4-2 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx Rate (L1) (Bit/s) 111.26 M - Tx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx Rate (L1) (Bit/s) 110.81 M - Tx Rate (Fps) 9,006 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Tx Rate (Fps) 9,006 - Tx Rate (Fps) 9,006 - Tx Rate (Fps) 111.11 M - Rx Rate (Fps) 9,030	- Flood Count (Frames)	
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 - Flood Count (Frames) 0 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 270,906 - Rx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 111.11 M - Rx Rate (Fps) 9,030		20
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	-	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 0 - Tx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- Tx Rate (I 1) (Bit/s)	
- Rx (Frames) 270,600 - Rx Rate (L1) (Bit/s) 110.98 M - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 271,276 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (Fps) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (L1) (Bit/s) 9,020 - Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Rx (Frames) 271,276 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (Fps) 9,020 - Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,906 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Flood Count (Frames) 20 P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 270,906 - Rx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
P-0-4-3 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx (Frames) 270,169 - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Tx Rate (L1) (Bit/s) 3 - Tx Rate (Fps) 3 - Rx (Frames) 3 - Rx (Frames) 4 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 26 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 20 - Tx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Rx (Frames) 270,906 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - Flood Count (Frames) 26 - Tx (Frames) 270,906 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		0
- Tx Rate (Fps) 0 - Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 - P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 - P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 126 - Rx Rate (L1) (Bit/s) 127 - Tx (Frames) 26 - Tx Rate (L1) (Bit/s) 127 - Tx Rate (Fps) 127 - Tx Rate (Fps) 127 - Rx Rate (Fps) 137 - Rx	- Tx Rate (L1) (Bit/s)	
- Rx (Frames) 271,276 - Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,169 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Tx Rate (Fps) 10 - Rx (Frames) 10 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 10	- Tx Rate (Fps)	
- Rx Rate (L1) (Bit/s) 111.26 M - Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 270,169 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (L1) (Bit/s) 10 - Tx Rate (Fps) 10 - Rx (Frames) 111.11 M - Rx Rate (Fps) 10 - Rx Rate (Fps) 1		
- Rx Rate (Fps) 9,043 - Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (L1) (Bit/s) 1 - Rx (Frames) 0 - Rx (Frames) 0 - Rx (Frames) 1 - Rx Rate (Fps) 1 - Rx Rate (Fps) 1 - Rx Rate (Fps) 9,030		
- Flood Count (Frames) 21 P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
P-0-4-4 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- Flood Count (Frames)	
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	P-0-4-4	
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		0
- Tx Rate (Fps) 0 - Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx (Frames) 270,169 - Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (L1) (Bit/s) 110.81 M - Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Rx Rate (Fps) 9,006 - Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Flood Count (Frames) 26 P-0-4-5 - Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx (Frames) 0 - Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030		
- Tx Rate (L1) (Bit/s) 0 - Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	P-0-4-5	
- Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- Tx (Frames)	0
- Tx Rate (Fps) 0 - Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- Tx Rate (L1) (Bit/s)	0
- Rx (Frames) 270,905 - Rx Rate (L1) (Bit/s) 111.11 M - Rx Rate (Fps) 9,030	- Tx Rate (Fps)	0
- Rx Rate (Fps) 9,030		
- Flood Count (Frames) 22		9,030
	- Flood Count (Frames)	22



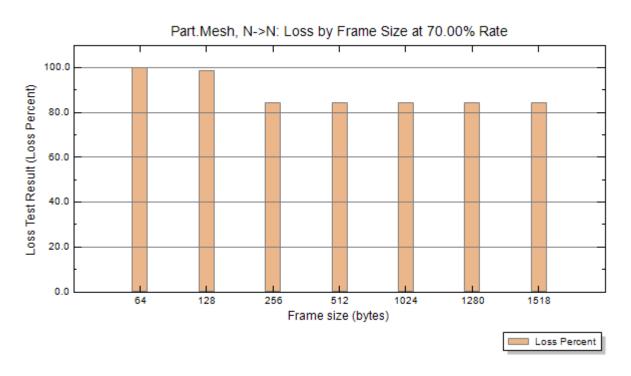

Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,283	6,081,080	3,260,868	1,691,728	862,067	692,307
Rx Rate (Percent)	0.01 %	0.19 %	10.96 %	11.04 %	11.05 %	11.09 %
Rx Rate (L1) (Bit/s)	659.05 K	17.24 M	986.01 M	993.39 M	994.11 M	997.76 M
Rx Rate (Fps)	980.73	14.56 K	446.56 K	233.41 K	119.03 K	95.94 K
Loss Rate (Percent)	99.99 %	99.76 %	86.31 %	86.2 %	86.19 %	86.14 %
Loss (Frames)	321,399,071	181,995,557	84,429,127	43,749,585	22,291,213	17,891,045
P-0-0-0						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5	U	U	U	U	U	U
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675.676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	35,714,277	20,270,268	10,869,561	5,639,094	2,873,556	2,307,690
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	25 714 277	20.270.260	10.000 EG1	E 620 004	2 072 556	2 207 600
- Tx (Frames) - Tx Rate (L1) (Bit/s)	35,714,277 800 M	20,270,268 800 M	10,869,561 800 M	5,639,094 800 M	2,873,556 800 M	2,307,690 800 M
- Tx Rate (Fps)	1,190,476	675,676	362,319	187,970	95,785	76,923
- Rx (Frames)	0	0/3,0/0	0	0	0	0,323
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3		-				
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,434	45,221	1,477,320	780,795	397,873	318,662
- Rx Rate (L1) (Bit/s)	76.92 K	1.78 M	108.73 M	110.77 M	110.77 M	110.47 M
- Rx Rate (Fps)	114	1,507	49,244	26,027	13,262	10,622
- Flood Count (Frames)	57	58	21	24	26	21
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	1,591	1,784	1,494,259	780,254	397,530	320,043
- Rx Rate (L1) (Bit/s)	35.64 K	70.41 K	109.98 M	110.69 M	110.67 M	110.95 M
- Rx Rate (Fps)	53	59	49,809	26,008	13,251	10,668
- Flood Count (Frames)	59	57	23	24	23	27
P-0-2-5	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
		0	0	0	0	0
	()	U	-	781,318	387,142	319,423
- Tx Rate (Fps)	3 512	62 821	1 /188 379			
- Tx Rate (Fps) - Rx (Frames)	3,512	62,821 2.48 M	1,488,372 109 54 M			
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	3,512 78.67 K	2.48 M	109.54 M	110.84 M	107.78 M	110.73 M
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	3,512 78.67 K 117	2.48 M 2,094	109.54 M 49,612	110.84 M 26,044	107.78 M 12,905	110.73 M 10,647
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	3,512 78.67 K	2.48 M	109.54 M	110.84 M	107.78 M	110.73 M
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	3,512 78.67 K 117 59	2.48 M 2,094 61	109.54 M 49,612 23	110.84 M 26,044 23	107.78 M 12,905 21	110.73 M 10,647 29
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	3,512 78.67 K 117	2.48 M 2,094	109.54 M 49,612	110.84 M 26,044	107.78 M 12,905	110.73 M 10,647



- Rx (Frames)	3,528	65,065	1,492,701	773,954	397,059	321,438
- Rx Rate (L1) (Bit/s)	79.03 K	2.57 M	109.86 M	109.8 M	110.54 M	111.43 M
- Rx Rate (Fps)	118	2,169	49,757	25,798	13,235	10,715
- Flood Count (Frames)	57	57	21	20	18	21
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,473	65,164	1,485,335	775,151	398,414	320,407
- Rx Rate (L1) (Bit/s)	77.8 K	2.57 M	109.32 M	109.97 M	110.92 M	111.07 M
- Rx Rate (Fps)	116	2,172	49,511	25,838	13,280	10,680
- Flood Count (Frames)	59	57	26	24	25	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,434	59,101	1,492,576	774,654	398,906	320,443
- Rx Rate (L1) (Bit/s)	76.92 K	2.33 M	109.85 M	109.9 M	111.06 M	111.09 M
- Rx Rate (Fps)	114	1,970	49,753	25,822	13,297	10,681
- Flood Count (Frames)	57	58	24	20	22	25
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,490	50,843	1,487,503	779,295	398,232	319,264
- Rx Rate (L1) (Bit/s)	78.18 K	2.01 M	109.48 M	110.56 M	110.87 M	110.68 M
- Rx Rate (Fps)	116	1,695	49,583	25,977	13,274	10,642
- Flood Count (Frames)	55	58	28	19	24	26
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,488	45,158	1,487,309	778,132	397,768	318,755
- Rx Rate (L1) (Bit/s)	78.13 K	1.78 M	109.47 M	110.39 M	110.74 M	110.5 M
- Rx Rate (Fps)	116	1,505	49,577	25,938	13,259	10,625
- Flood Count (Frames)	56	57	28	23	23	23
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,472	41,698	1,491,547	778,708	397,867	319,730
- Rx Rate (L1) (Bit/s)	77.77 K	1.65 M	109.78 M	110.47 M	110.77 M	110.84 M
- Rx Rate (Fps)	116	1,390	49,718	25,957	13,262	10,658
- Flood Count (Frames)	58	56	23	24	20	24

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,174
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.28 M
Rx Rate (Fps)	81.13 K
Loss Rate (Percent)	86.13 %
Loss (Frames)	15,121,163
P-0-0-0	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-2	4.050.570
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 65,019
- Rx (Frames)	05,019
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-2-1	U
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Er) (Bibs)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	-
- Tx (Frames)	1,950,579
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,506
- Rx Rate (L1) (Bit/s)	111.35 M
- Rx Rate (Fps)	9,050
- Flood Count (Frames)	23
P-0-2-4	-
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	0
	268,917



- Rx Rate (L1) (Bit/s)	110.29 M
- Rx Rate (Fps)	8,964
- Flood Count (Frames)	26
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272,682
- Rx Rate (L1) (Bit/s)	111.84 M
- Rx Rate (Fps)	9,089
- Flood Count (Frames)	26
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,076
- Rx Rate (L1) (Bit/s)	111.18 M
- Rx Rate (Fps)	9,036
- Flood Count (Frames)	27
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	273,018
- Rx Rate (L1) (Bit/s)	111.97 M
- Rx Rate (Fps)	9,101
- Flood Count (Frames)	22
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,176
- Rx Rate (L1) (Bit/s)	110.4 M
- Rx Rate (Fps)	8,973
- Flood Count (Frames)	26
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,922
- Rx Rate (L1) (Bit/s)	110.7 M
- Rx Rate (Fps)	8,997
- Flood Count (Frames)	20
P-0-4-4	20
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Blus)	0
- Rx (Frames)	270,474
- Rx Rate (L1) (Bit/s)	110.93 M
- Rx Rate (Fps)	9,016
- Flood Count (Frames)	25
P-0-4-5	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	267,277
- Rx Rate (L1) (Bit/s)	109.62 M
- Rx Rate (Fps)	8,909
- Flood Count (Frames)	26



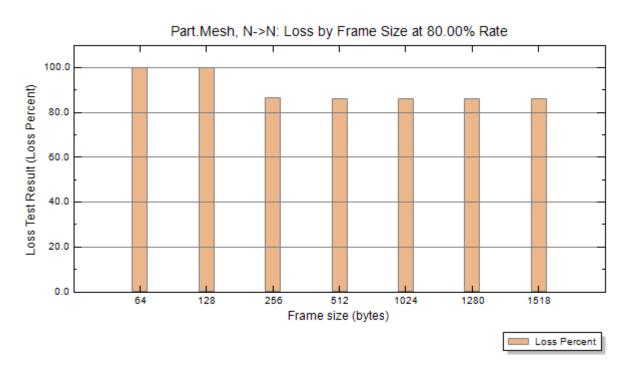

Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	8.1 G	8.1 G	8.1 G	8.1 G	8.1 G	8.1 G
Tx Rate (Fps)	12,053,570	6,841,214	3,668,477	1,903,195	969,827	778,845
Rx Rate (Percent)	0.01 %	0.02 %	10.62 %	11.04 %	11.08 %	11.09 %
Rx Rate (L1) (Bit/s)	742.09 K	1.36 M	955.46 M	993.25 M	997.22 M	997.93 M
Rx Rate (Fps)	1.1 K	1.15 K	432.73 K	233.38 K	119.4 K	95.96 K
Loss Rate (Percent)	99.99 %	99.98 %	88.2 %	87.74 %	87.69 %	87.68 %
Loss (Frames)	361,573,956	205,201,893	97,072,472	50,094,544	25,512,810	20,486,683
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	40 470 505	00 004 047	40.000.055	0.040.000	0.000.755	0.500.440
- Tx (Frames)	40,178,565	22,804,047 900 M	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	900 M 1,339,286	760,135	900 M 407,609	900 M 211,466	900 M 107,759	900 M 86,538
- Rx (Frames)	1,339,200	0	0	0	0	00,550
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	40 170 EGE	22 204 047	12 220 255	6 242 002	2 222 755	2 506 140
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40,178,565 900 M	22,804,047 900 M	12,228,255 900 M	6,343,983 900 M	3,232,755 900 M	2,596,149 900 M
- Tx Rate (LT) (Bil/s)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	1,339,260	700,135	407,609	0	0	00,556
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1						
- Tx (Frames)	40,178,565	22,804,047	12,228,255	6,343,983	3,232,755	2,596,149
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	900 M
- Tx Rate (Fps)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2	40 470 505	00 004 047	40.000.055	0.040.000	0.000.755	0.500.440
- Tx (Frames) - Tx Rate (L1) (Bit/s)	40,178,565 900 M	22,804,047 900 M	12,228,255 900 M	6,343,983 900 M	3,232,755 900 M	2,596,149 900 M
- Tx Rate (ET) (Bibs)	1,339,286	760,135	407,609	211,466	107,759	86,538
- Rx (Frames)	0	0	0	0	0	00,550
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,944	3,810	1,289,341	785,769	399,304	318,029
- Rx Rate (L1) (Bit/s)	88.35 K	150.37 K	94.9 M	111.47 M	111.17 M	110.25 M
- Rx Rate (Fps)	131	127	42,978	26,192	13,310	10,601
- Flood Count (Frames)	59	59	19	24	20	28
P-0-2-4	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (ET) (Bibs)	0	0	0	0	0	0
- Rx (Frames)	1,680	3,886	1,289,685	784,055	398,182	319,533
- Rx Rate (L1) (Bit/s)	37.63 K	153.37 K	94.92 M	111.23 M	110.85 M	110.77 M
- Rx Rate (Fps)	56	130	42,990	26,135	13,273	10,651
- Flood Count (Frames)	56	61	20	28	23	27
P-0-2-5		0.				
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,029	3,843	1,483,841	778,315	398,934	318,872
- Rx Rate (L1) (Bit/s)	90.25 K	151.67 K	109.21 M	110.42 M	111.06 M	110.54 M
- Rx Rate (Fps)	134	128	49,461	25,944	13,298	10,629
- Flood Count (Frames)	58	59	23	20	22	22
P-0-4-0						
	0	0	0	0	0	0
- Tx (Frames)		-				
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	0	0	0	0	0	0



- Rx (Frames)	4,009	3,869	1,471,203	773,984	397,400	320,206
- Rx Rate (L1) (Bit/s)	89.8 K	152.7 K	108.28 M	109.8 M	110.64 M	111 M
- Rx Rate (Fps)	134	129	49,040	25,799	13,247	10,674
- Flood Count (Frames)	57	58	20	21	20	24
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,906	3,829	1,483,965	773,283	397,557	319,241
- Rx Rate (L1) (Bit/s)	87.49 K	151.12 K	109.22 M	109.7 M	110.68 M	110.67 M
- Rx Rate (Fps)	130	128	49,466	25,776	13,252	10,641
- Flood Count (Frames)	55	56	24	21	21	24
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,910	3,872	1,482,726	774,164	397,052	320,684
- Rx Rate (L1) (Bit/s)	87.58 K	152.81 K	109.13 M	109.83 M	110.54 M	111.17 M
- Rx Rate (Fps)	130	129	49,424	25,805	13,235	10,689
- Flood Count (Frames)	55	55	25	22	26	30
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,010	3,801	1,493,406	773,989	397,471	320,275
- Rx Rate (L1) (Bit/s)	89.82 K	150.01 K	109.91 M	109.8 M	110.66 M	111.03 M
- Rx Rate (Fps)	134	127	49,780	25,800	13,249	10,676
- Flood Count (Frames)	56	55	22	21	25	24
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,663	3,801	1,478,788	776,584	398,060	320,676
- Rx Rate (L1) (Bit/s)	82.05 K	150.01 K	108.84 M	110.17 M	110.82 M	111.17 M
- Rx Rate (Fps)	122	127	49,293	25,886	13,269	10,689
- Flood Count (Frames)	53	56	19	23	23	24
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	3,978	3,819	1,508,868	781,160	398,025	321,142
- Rx Rate (L1) (Bit/s)	89.11 K	150.72 K	111.05 M	110.82 M	110.81 M	111.33 M
- Rx Rate (Fps)	133	127	50,296	26,039	13,268	10,705
- Flood Count (Frames)	58	56	22	24	18	22

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	8.1 G
Tx Rate (Fps)	658,322
Rx Rate (Percent)	11.04 %
Rx Rate (L1) (Bit/s)	993.56 M
Rx Rate (Fps)	80.75 K
Loss Rate (Percent)	87.73 %
Loss (Frames)	17,327,129
P-0-0-0	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




By Boto (Eng.)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	0
	2,194,407
- Tx (Frames)	
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	U
P-0-2-0	0.404.407
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-1	
- Tx (Frames)	2,194,407
- Tx Rate (L1) (Bit/s)	900 M
- Tx Rate (Fps)	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2,194,407
	900 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	
	73,147
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	260,170
- Rx Rate (L1) (Bit/s)	106.7 M
- Rx Rate (Fps)	8,672
- Flood Count (Frames)	18
P-0-2-4	
· · - ·	0
- Tx (Frames)	
- Tx (Frames)	
- Tx Rate (L1) (Bit/s)	0



- Rx Rate (L1) (Bit/s)	109.73 M
- Rx Rate (Fps)	8,919
- Flood Count (Frames)	24
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,982
- Rx Rate (L1) (Bit/s)	110.73 M
- Rx Rate (Fps)	8,999
- Flood Count (Frames)	24
P-0-4-0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0
- Tx Rate (ET) (Bl/s)	0
- Rx (Frames)	270,038
- Rx Rate (L1) (Bit/s)	110.75 M
- Rx Rate (Fps)	9,001
- Flood Count (Frames)	23
P-0-4-1	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	272,213
- Rx Rate (L1) (Bit/s)	111.64 M
- Rx Rate (Fps)	9,074
- Flood Count (Frames)	24
P-0-4-2	0
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	271,643
- Rx Rate (L1) (Bit/s)	111.41 M
- Rx Rate (Fps)	9,055
- Flood Count (Frames)	21
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,576
- Rx Rate (L1) (Bit/s)	110.97 M
- Rx Rate (Fps)	9,019
- Flood Count (Frames)	23
P-0-4-4	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps) - Rx (Frames)	270,962
- Rx Rate (L1) (Bit/s)	111.13 M
- Rx Rate (Fps)	9,032
- Flood Count (Frames)	25
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,394
- Rx Rate (L1) (Bit/s)	110.49 M
- Rx Rate (Fps)	8,980
- Flood Count (Frames)	23



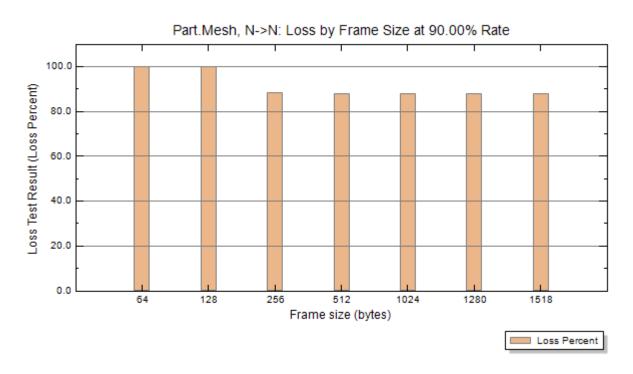

Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,856	7,601,351	4,076,085	2,114,662	1,077,586	865,382
Rx Rate (Percent)	0.01 %	10.8 %	10.96 %	11.05 %	11.07 %	10.99 %
Rx Rate (L1) (Bit/s)	918.6 K	971.56 M	986.55 M	994.1 M	996.63 M	989 M
Rx Rate (Fps)	1.37 K	820.58 K	446.81 K	233.58 K	119.33 K	95.1 K
Loss Rate (Percent)	99.99 %	89.2 %	89.04 %	88.95 %	88.93 %	89.01 %
Loss (Frames)	401,744,668	203,423,237	108,878,307	56,432,553	28,747,737	23,108,589
P-0-0-0						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-1						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-2						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-3						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0



- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-4	44.040.050	05 007 005	10 500 010	7.040.070	0.504.054	0 00 1 000
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1000 M 1,488,095	1000 M 844,595	1000 M 452,898	1000 M 234,962	1000 M 119,732	1000 M 96,154
- Rx (Frames)	1,466,095	044,595	452,696	234,902	0	90,134
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-0-5						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-0	44.040.050	05 007 005	40 500 040	7.040.070	0.504.054	0.004.000
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M 452.898	1000 M	1000 M 119,732	1000 M
- Tx Rate (Fps)	1,488,095	844,595	- ,	234,962	119,732	96,154
- Rx (Frames) - Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (ET) (Bibs)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-1	0	0	0	0	0	0
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-2						
- Tx (Frames)	44,642,853	25,337,835	13,586,949	7,048,872	3,591,954	2,884,608
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	0	0	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0	0	0	0	0	0
- Flood Count (Frames)	0	0	0	0	0	0
P-0-2-3	U	U	0	U	U	0
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,828	2,752,348	1,486,864	776,513	398,583	318,980
- Rx Rate (L1) (Bit/s)	108.15 K	108.63 M	109.43 M	110.16 M	110.97 M	110.58 M
- Rx Rate (Fps)	161	91,745	49,562	25,884	13,286	10,633
- Flood Count (Frames)	59	27	25	24	23	25
P-0-2-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,871	2,636,226	1,488,521	778,308	398,783	293,402
- Rx Rate (L1) (Bit/s)	109.11 K	104.04 M	109.56 M	110.42 M	111.02 M	101.71 M
- Rx Rate (Fps)	162	87,874	49,617	25,944	13,293	9,780
- Flood Count (Frames)	61	24	24	21	22	27
P-0-2-5	0	0	0	0	0	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (LT) (Bit/s)	0	0	0	0	0	0
- Rx (Frames)	2,171	2,729,756	1,485,490	779,126	398,555	318,632
- Rx (Frames)	48.63 K	107.73 M	109.33 M	110.53 M	110.96 M	110.46 M
- Rx Rate (Fps)	46.03 K	90,992	49,516	25,971	13,285	10,621
ionitate (i po)	60	21	21	22	23	25
- Flood Count (Frames)		<u>- ' '</u>	41		20	
- Flood Count (Frames) P-0-4-0						
P-0-4-0		0	0	0	0	0
	0	0	0	0	0	0



- Rx (Frames)	4,900	2,770,557	1,491,749	779,976	397,592	321,067
- Rx Rate (L1) (Bit/s)	109.76 K	109.34 M	109.79 M	110.65 M	110.69 M	111.3 M
- Rx Rate (Fps)	163	92,352	49,725	25,999	13,253	10,702
- Flood Count (Frames)	56	23	23	21	22	26
P-0-4-1						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,904	2,768,415	1,485,716	777,733	397,307	319,120
- Rx Rate (L1) (Bit/s)	109.85 K	109.26 M	109.35 M	110.33 M	110.61 M	110.63 M
- Rx Rate (Fps)	163	92,281	49,524	25,924	13,244	10,637
- Flood Count (Frames)	56	22	23	24	22	21
P-0-4-2						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,822	2,732,749	1,490,379	778,631	396,868	320,897
- Rx Rate (L1) (Bit/s)	108.01 K	107.85 M	109.69 M	110.46 M	110.49 M	111.24 M
- Rx Rate (Fps)	161	91,092	49,679	25,954	13,229	10,697
- Flood Count (Frames)	57	26	24	23	21	26
P-0-4-3						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,808	2,704,550	1,491,332	778,130	397,051	320,285
- Rx Rate (L1) (Bit/s)	107.7 K	106.74 M	109.76 M	110.39 M	110.54 M	111.03 M
- Rx Rate (Fps)	160	90,152	49,711	25,938	13,235	10,676
- Flood Count (Frames)	58	21	20	24	26	21
P-0-4-4						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,766	2,753,886	1,493,443	778,519	397,282	320,360
- Rx Rate (L1) (Bit/s)	106.76 K	108.69 M	109.92 M	110.45 M	110.6 M	111.06 M
- Rx Rate (Fps)	159	91,796	49,781	25,951	13,243	10,679
- Flood Count (Frames)	58	26	24	23	18	24
P-0-4-5						
- Tx (Frames)	0	0	0	0	0	0
- Tx Rate (L1) (Bit/s)	0	0	0	0	0	0
- Tx Rate (Fps)	0	0	0	0	0	0
- Rx (Frames)	4,939	2,768,791	1,490,740	780,359	397,828	320,140
- Rx Rate (L1) (Bit/s)	110.63 K	109.27 M	109.72 M	110.71 M	110.76 M	110.98 M
- Rx Rate (Fps)	165	92,293	49,691	26,012	13,261	10,671
- Flood Count (Frames)	56	26	21	23	25	23

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,468
Rx Rate (Percent)	11.09 %
Rx Rate (L1) (Bit/s)	998.28 M
Rx Rate (Fps)	81.13 K
Loss Rate (Percent)	88.91 %
Loss (Frames)	19,510,003
P-0-0-0	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-1	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0




D. D. t. (F)	0
- Rx Rate (Fps) - Flood Count (Frames)	0
P-0-0-2	0
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-3	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-4	U
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-0-5	-
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-0	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames) P-0-2-1	U
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-2	
- Tx (Frames)	2,438,226
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	0
- Rx Rate (L1) (Bit/s)	0
- Rx Rate (Fps)	0
- Flood Count (Frames)	0
P-0-2-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	260.675
- Rx (Frames)	269,675
- Rx Rate (L1) (Bit/s)	110.6 M
- Rx Rate (Fps) - Flood Count (Frames)	8,989 21
P-0-2-4	۷۱
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,408
()	_, 0, .00



- Rx Rate (L1) (Bit/s)	110.9 M
- Rx Rate (Fps)	9,014
- Flood Count (Frames)	23
P-0-2-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,471
- Rx Rate (L1) (Bit/s)	110.93 M
- Rx Rate (Fps)	9,016
- Flood Count (Frames)	24
P-0-4-0	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,565
- Rx Rate (L1) (Bit/s)	110.56 M
- Rx Rate (Fps)	8,986
	19
- Flood Count (Frames)	19
P-0-4-1	^
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,401
- Rx Rate (L1) (Bit/s)	111.31 M
- Rx Rate (Fps)	9,047
- Flood Count (Frames)	21
P-0-4-2	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	271,671
- Rx Rate (L1) (Bit/s)	111.42 M
- Rx Rate (Fps)	9,056
- Flood Count (Frames)	21
P-0-4-3	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	269,763
- Rx Rate (L1) (Bit/s)	110.64 M
- Rx Rate (Fps)	8,992
- Flood Count (Frames)	23
P-0-4-4	20
- Tx (Frames)	0
- Tx (Frames) - Tx Rate (L1) (Bit/s)	
	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,160
- Rx Rate (L1) (Bit/s)	110.8 M
- Rx Rate (Fps)	9,005
- Flood Count (Frames)	23
P-0-4-5	
- Tx (Frames)	0
- Tx Rate (L1) (Bit/s)	0
- Tx Rate (Fps)	0
- Rx (Frames)	270,917
- Rx Rate (L1) (Bit/s)	111.11 M
- Rx Rate (Fps)	9,031
- Flood Count (Frames)	22
` ,	



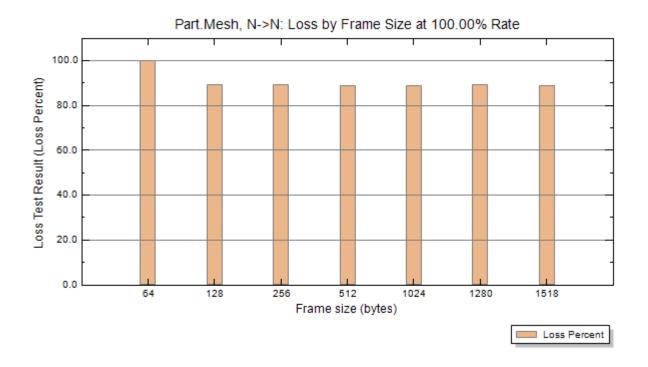



Congestion Control Results

Test Setup

Duration: 30 seconds Iteration: 1

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Source
P-0-4-4	Destination
P-0-4-5	Destination

Test Results

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	89,285,714	50,675,676	27,173,914	14,097,746	7,183,910	5,769,232
Uncongested Port: (P-0-4-4)						
- Tx (Frames)	22,321,429	12,668,919	6,793,479	3,524,437	1,795,978	1,442,308
- Rx (Frames)	22,321,429	12,668,919	6,793,479	3,524,437	1,795,978	1,442,308
- Loss (Frames)	0	0	0	0	0	0
- Loss (Percent)	0.00	0.00	0.00	0.00	0.00	0.00
Congested Port: (P-0-4-5)						
- Tx (Frames)	66,964,285	38,006,757	20,380,435	10,573,309	5,387,932	4,326,924
- Rx (Frames)	42,621,994	24,672,462	13,394,063	6,996,705	3,578,495	2,875,980
- Loss (Frames)	24,342,291	13,334,295	6,986,372	3,576,604	1,809,437	1,450,944
- Loss (Percent)	36.35	35.08	34.28	33.83	33.58	33.53

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	100 %
Tx (Frames)	4,876,464
Uncongested Port: (P-0-4-4)	
- Tx (Frames)	1,219,116
- Rx (Frames)	1,194,263
- Loss (Frames)	24,853
- Loss (Percent)	2.04
Congested Port: (P-0-4-5)	
- Tx (Frames)	3,657,348
- Rx (Frames)	2,432,097
- Loss (Frames)	1,225,251
- Loss (Percent)	33.50



Forward Pressure Results

Test Setup

Duration: 30 seconds

Iteration:

InterFrame Gap Delta: 1 bytes

Port ID	Port Role
P-0-0-0	Source
P-0-4-5	Destination

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx (Frames)	45,180,722	25,510,204	13,636,363	7,062,146	3,595,397	2,886,836
Tx Rate (Fps)	1,506,024	850,340	454,545	235,405	119,847	96,228
Tx IFG (Bytes)	20	20	20	20	20	20
Tx Max. Util. (Percent)	101.205	100.680	100.364	100.188	100.096	100.077
Rx (Frames)	42,613,671	24,671,105	13,392,910	6,996,323	3,578,303	2,875,826
Rx Rate (Fps)	1,420,453	822,368	446,428	233,209	119,275	95,859
Rx Max. Util. (Percent)	95.454	97.368	98.571	99.254	99.618	99.693
Loss (Frames)	2,567,051	839,099	243,453	65,823	17,094	11,010
Loss (Percent)	5.68	3.29	1.79	0.93	0.48	0.38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx (Frames)	2,439,817
Tx Rate (Fps)	81,327
Tx IFG (Bytes)	20
Tx Max. Util. (Percent)	100.065
Rx (Frames)	2,431,964
Rx Rate (Fps)	81,063
Rx Max. Util. (Percent)	99.740
Loss (Frames)	7,853
Loss (Percent)	0.32



Maximum Forwarding Rate Results

Test Setup

Duration: 30 seconds Iteration: 1

Port ID	Port Role
P-0-0-0	Source
P-0-4-5	Destination

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	44,642,857	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
Tx Rate (Fps)	1,488,095	844,595	452,899	234,962	119,732	96,154
Rx (Frames)	42,613,750	24,671,132	13,392,932	6,996,338	3,578,310	2,875,831
Rx Rate (L1) (Bit/s)	954.55 M	973.69 M	985.72 M	992.55 M	996.2 M	996.95 M
Rx Rate (Fps)	1,420,458	822,371	446,431	233,211	119,277	95,861

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx (Frames)	2,438,231
Tx Rate (L1) (Bit/s)	1000 M
Tx Rate (Fps)	81,274
Rx (Frames)	2,431,968
Rx Rate (L1) (Bit/s)	997.43 M
Rx Rate (Fps)	81,066



Address Caching Capacity Results

Test Setup

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC

Address Initial Count: 100 Address Maximum Count: 2,048 100 Address Minimum Count: Address Resolution: 100

Learning Rate: 20 Fps No

Toggle Port Sync State: Sync. State Off Duration: 1 seconds Delay After Sync On: 0 seconds Switch Test Ports: Yes

DUT Aging Time: 350 seconds

Port ID	Port Role
P-0-2-0	Test Port
P-0-2-1	Learning Port
P-0-2-2	Monitoring Port

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Duration (Seconds)	76	76	75	51	63	75
Address Count	1,500	1,500	1,469	982	1,225	1,469
TestPort Tx (Frames)	1,500	1,500	1,469	982	1,225	1,469
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1,500	1,500	1,469	982	1,225	1,469
MonPort Rx (Frames)	0	0	0	0	0	0

Frame Size	1518
Result State	PASS
Iter. #	1
Duration (Seconds)	40
Address Count	769
TestPort Tx (Frames)	769
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	769
MonPort Rx (Frames)	0



Address Learning Rate Results

Test Setup

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC
Only Use Max. Capacity: No
Set End = Max. Capacity: Yes

 Base Learning Rate:
 100 Fps

 Initial Rate:
 20.00%

 Maximum Rate:
 100.00%

 Minimum Rate:
 20.00%

 Resolution:
 20.00%

Toggle Port Sync State: No

Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds
Switch Test Ports: Yes

DUT Aging Time: 330 seconds

Port ID	Port Role	
P-0-2-0	Test Port	
P-0-2-1	Learning Port	
P-0-2-2	Monitorina Port	


Test Results

Results for 100 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	80 %	80 %	80 %	80 %	80 %	40 %
Learning Rate (Fps)	80	80	80	80	80	40
Duration (Seconds)	3	3	3	3	3	4
Address Count	100	100	100	100	100	100
TestPort Tx (Frames)	100	100	100	100	100	100
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	100	100	100	100	100	100
MonPort Rx (Frames)	0	0	0	0	0	0

Frame Size	1518
Result State	PASS
Iter. #	1
Learning Rate (Percent)	80 %
Learning Rate (Fps)	80
Duration (Seconds)	3
Address Count	100
TestPort Tx (Frames)	100
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	100
MonPort Rx (Frames)	0



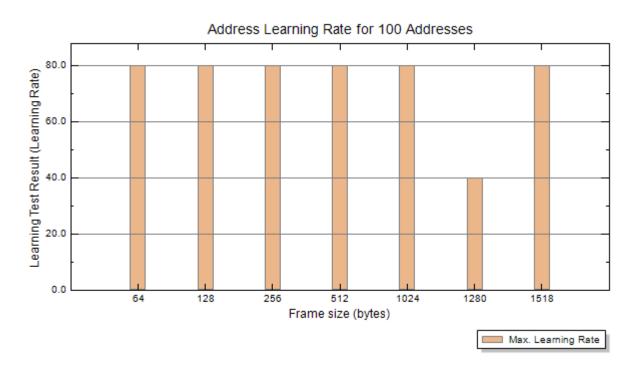


Results for 612 Addresses

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	FAIL	PASS	FAIL
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	80 %	80 %	80 %	40 %	40 %	40 %
Learning Rate (Fps)	80	80	80	40	40	40
Duration (Seconds)	9	9	9	17	17	17
Address Count	612	612	612	612	612	612
TestPort Tx (Frames)	612	612	612	612	612	612
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	612	612	612	611	612	611
MonPort Rx (Frames)	0	0	0	0	0	0

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	40 %
Learning Rate (Fps)	40
Duration (Seconds)	17
Address Count	612
TestPort Tx (Frames)	612
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	611
MonPort Rx (Frames)	0




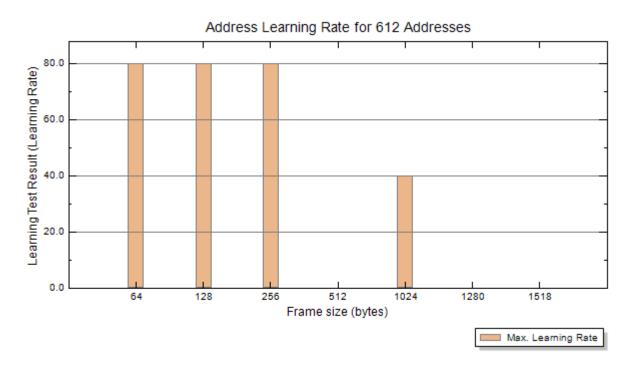

Results for 1,124 Addresses

Frame Size	64	128	256	1024	1280
Result State	PASS	PASS	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1
Learning Rate (Percent)	40 %	80 %	20 %	20 %	20 %
Learning Rate (Fps)	40	80	20	20	20
Duration (Seconds)	30	16	58	58	58
Address Count	1,124	1,124	1,124	1,124	1,124
TestPort Tx (Frames)	1,124	1,124	1,124	1,124	1,124
TestPort Rx (Frames)	0	0	0	0	0
LearnPort Rx (Frames)	1,124	1,124	1,124	1,124	1,124
MonPort Rx (Frames)	0	0	200	376	376




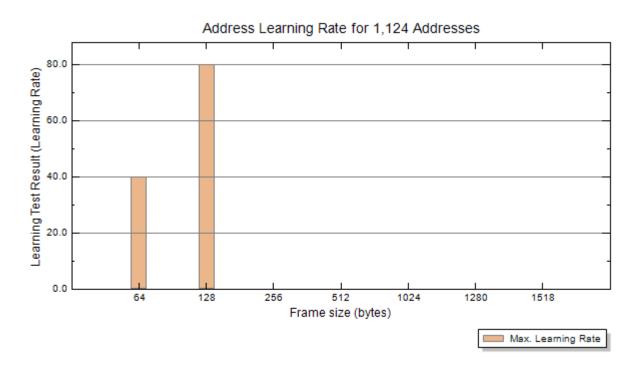

Results for 1,500 Addresses

Frame Size	64	128
Result State	PASS	PASS
Iter. #	1	1
Learning Rate (Percent)	80 %	40 %
Learning Rate (Fps)	80	40
Duration (Seconds)	20	39
Address Count	1,500	1,500
TestPort Tx (Frames)	1,500	1,500
TestPort Rx (Frames)	0	0
LearnPort Rx (Frames)	1,500	1,500
MonPort Rx (Frames)	0	0




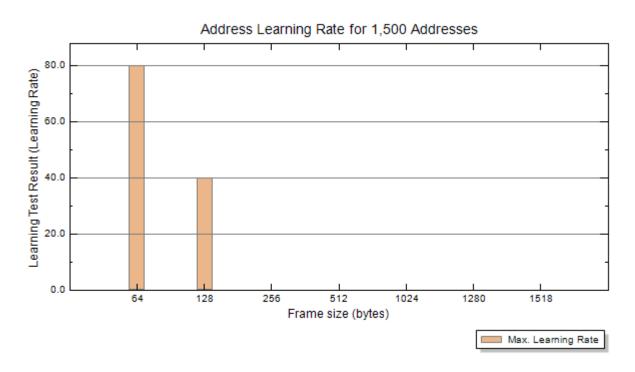

Results for 1,469 Addresses

Frame Size	256	1280
Result State	FAIL	FAIL
Iter. #	1	1
Learning Rate (Percent)	20 %	20 %
Learning Rate (Fps)	20	20
Duration (Seconds)	75	75
Address Count	1,469	1,469
TestPort Tx (Frames)	1,469	1,469
TestPort Rx (Frames)	0	0
LearnPort Rx (Frames)	1,469	1,469
MonPort Rx (Frames)	200	349




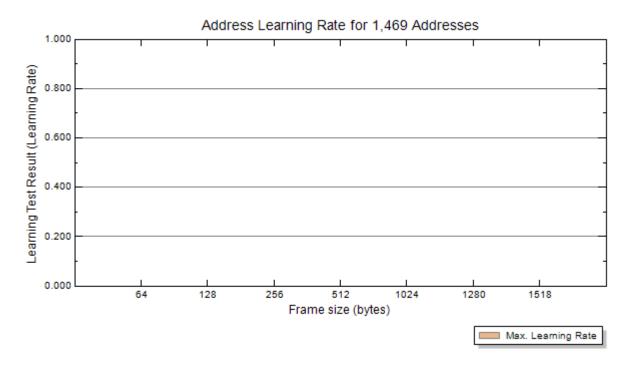

Results for 982 Addresses

Frame Size	512
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	51
Address Count	982
TestPort Tx (Frames)	982
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	982
MonPort Rx (Frames)	335




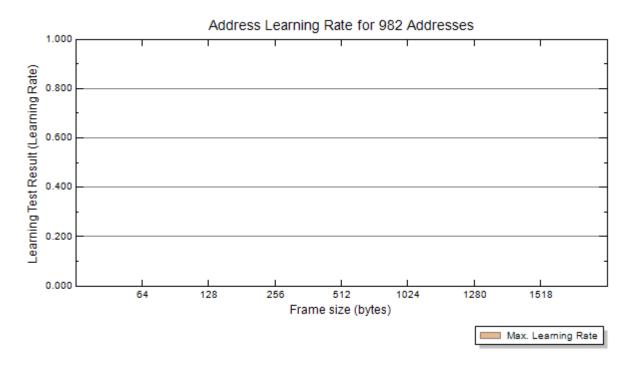

Results for 1,225 Addresses

Frame Size	1024
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	63
Address Count	1,225
TestPort Tx (Frames)	1,225
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1,225
MonPort Rx (Frames)	349




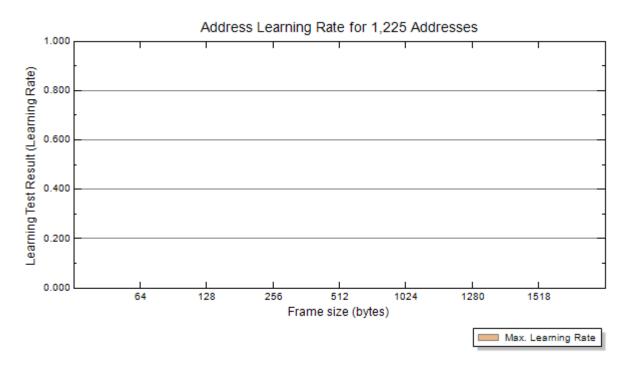

Results for 769 Addresses

Frame Size	1518
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	40
Address Count	769
TestPort Tx (Frames)	769
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	769
MonPort Rx (Frames)	157



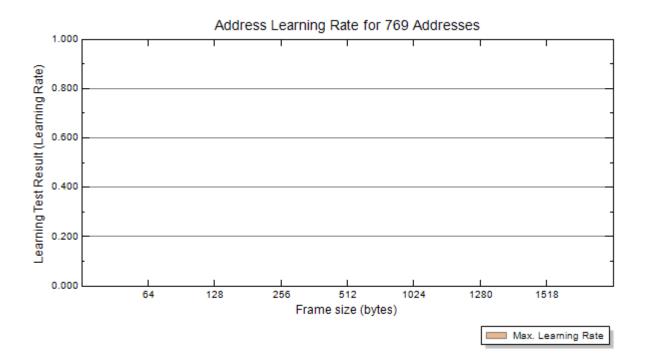



Errored Frames Filtering Results

Test Setup

Duration: 30 seconds

Iteration: 1

Oversize Test Enabled: Yes
Max. Valid Frame Size: 1518 bytes
Min. Valid Frame Size: 64 bytes
Oversize Frame Span: 1 bytes
Undersize Frame Span: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

Test Results

Tx Rate (Percent)	10 %	20 %	30 %	40 %	50 %	60 %
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (L1) (Bit/s)	100 M	200 M	300 M	399.97 M	500 M	600 M
Tx (Frames)	1,741,375	3,482,752	5,224,128	6,965,430	8,706,880	10,448,257
Rx (Frames)	1,741,290	3,482,617	5,223,881	6,965,089	8,706,482	10,447,811
Tx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Rx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Tx Oversize (Frames)	81,221	162,443	243,664	324,812	406,107	487,329
Rx Oversize (Frames)	81,221	162,443	243,664	324,812	406,107	487,329
Tx Undersize (Frames)	1,506,024	3,012,048	4,518,072	6,024,096	7,530,120	9,036,144
Rx Undersize (Frames)	1,505,939	3,011,913	4,517,825	6,023,755	7,529,722	9,035,698
Tx FCS Error (Frames)	58	58	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0	0	0

Tx Rate (Percent)	70 %	80 %	90 %	100 %
Result State	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1
Tx Rate (L1) (Bit/s)	699.97 M	800 M	900 M	1000 M
Tx (Frames)	12,188,912	13,931,001	15,672,386	17,413,762
Rx (Frames)	12,187,983	13,929,961	15,671,187	13,740,596
Tx Valid (Frames)	1,078,864	1,233,045	1,387,176	1,541,307
Rx Valid (Frames)	1,078,864	1,233,045	1,387,176	1,477,904
Tx Oversize (Frames)	568,530	649,764	730,994	812,215
Rx Oversize (Frames)	568,530	649,764	730,994	632,575
Tx Undersize (Frames)	10,541,518	12,048,192	13,554,216	15,060,240
Rx Undersize (Frames)	10,540,589	12,047,152	13,553,017	11,630,117
Tx FCS Error (Frames)	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0



Broadcast Forwarding Results

Test Setup

Duration: 30 seconds

Iteration:

Initial Rate: 10.00%
Maximum Rate: 100.00%
Minimum Rate: 10.00%
Resolution: 10.00%

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Destination
P-0-0-2	Destination
P-0-0-3	Destination
P-0-0-4	Destination
P-0-0-5	Destination
P-0-2-0	Destination
P-0-2-1	Destination
P-0-2-2	Destination
P-0-2-3	Destination
P-0-2-4	Destination
P-0-2-5	Destination
P-0-4-0	Destination
P-0-4-1	Destination
P-0-4-2	Destination
P-0-4-3	Destination
P-0-4-4	Destination
P-0-4-5	Destination

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60.625 %	69.063 %	80.313 %	90.156 %	94.375 %	94.375 %
Tx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
Tx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
Tx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
Loss Rate (Percent)	0 %	0 %	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0	0	0
P-0-0-1						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	2.448	2.906	2.904	2.894	2.912	2.924
- Min Latency (micsec)	2.214	2.703	2.695	2.703	2.719	2.727
- Max Latency (micsec)	4.595	4.724	4.620	4.339	4.644	4.411
- Avg Jitter (micsec)	0.028	0.023	0.013	0.008	0.005	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.212	1.876	1.876	1.539	1.900	1.635
P-0-0-2						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	2.489	2.897	2.919	2.904	2.946	2.955
- Min Latency (micsec)	2.262	2.703	2.719	2.727	2.719	2.727
- Max Latency (micsec)	4.812	4.964	4.499	4.243	4.668	4.940
- Avg Jitter (micsec)	0.033	0.023	0.014	0.007	0.005	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.309	2.188	1.491	1.419	1.587	1.924
P-0-0-3						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	2.469	2.863	2.888	2.897	2.919	2.915



- Min Latency (micsec)	2.238	2.703	2.695	2.703	2.719	2.727
- Max Latency (micsec)	4.836	4.772	4.884	4.844	4.451	4.243
- Avg Jitter (micsec)	0.037	0.018	0.014	0.009	0.005	0.005
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.381	1.996	1.876	2.092	1.587	1.419
P-0-0-4						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	2.432	2.898	2.885	2.918	2.913	2.920
- Min Latency (micsec)	2.214	2.703	2.719	2.727	2.719	2.727
- Max Latency (micsec)	4.644	4.916	4.884	4.579	4.331	4.555
- Avg Jitter (micsec)	0.049	0.021	0.012	0.009	0.005	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.309	2.116	2.044	1.587	1.467	1.659
P-0-0-5	2.000					
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	2.429	2.901	2.892	2.929	2.934	2.907
- Min Latency (micsec)	2.238	2.727	2.719	2.727	2.719	2.727
- Max Latency (micsec)	4.692	4.844	4.427	4.435	4.547	4.700
- Avg Jitter (micsec)	0.038	0.019	0.013	0.010	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.164	1.900	1.539	1.635	1.659	1.780
P-0-2-0						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.819	2.315	2.296	2.326	2.339	2.302
- Min Latency (micsec)	1.669	2.110	2.126	2.134	2.126	2.134
- Max Latency (micsec)	4.267	4.323	4.243	4.154	3.834	3.962
- Avg Jitter (micsec)	0.039	0.013	0.013	0.010	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.525	1.972	1.900	1.948	1.539	1.659
P-0-2-1						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.800	2.328	2.293	2.331	2.336	2.310
- Min Latency (micsec)	1.645	2.134	2.126	2.134	2.126	2.158
- Max Latency (micsec)	4.074	4.154	3.954	3.746	4.122	3.938
- Avg Jitter (micsec)	0.037	0.013	0.012	0.009	0.005	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.381	1.924	1.707	1.515	1.780	1.731
P-0-2-2						-
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.785	2.342	2.327	2.351	2.338	2.334
- Min Latency (micsec)	1.621	2.134	2.126	2.134	2.150	2.158
- Max Latency (micsec)	4.146	4.154	4.315	4.323	3.978	3.890
- Avg Jitter (micsec)	0.030	0.016	0.010	0.009	0.004	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.357	1.755	2.020	1.948	1.611	1.539
P-0-2-3						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 N
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.803	2.317	2.312	2.317	2.320	2.319
- Min Latency (micsec)	1.645	2.110	2.126	2.110	2.126	2.134
- Max Latency (micsec)	3.954	4.203	4.243	4.130	3.762	3.649
- Avg Jitter (micsec)	0.017	0.015	0.011	0.009	0.004	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.009	0.000	0.002
- Max Jitter (micsec)	2.164	1.900	1.900	1.852	1.611	1.419
,	2.104	1.900	1.900	1.002	110.1	1.418
P-0-2-4	07 004 700	47 407 004	40.040.054	0.054.044	0.000.000	0.700.055
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.821	2.348	2.339	2.338	2.333	2.353
- Min Latency (micsec)	1.669	2.134	2.126	2.134	2.126	2.134



- Max Latency (micsec)	4.098	3.986	3.906	4.154	3.882	4.347
- Avg Jitter (micsec)	0.016	0.015	0.010	0.007	0.004	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.237	1.611	1.611	1.780	1.587	1.972
P-0-2-5						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.820	2.360	2.361	2.352	2.344	2.354
- Min Latency (micsec)	1.645	2.134	2.150	2.158	2.150	2.158
- Max Latency (micsec)	4.267	4.010	4.026	3.938	4.146	4.203
- Avg Jitter (micsec)	0.013	0.014	0.008	0.006	0.005	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.429	1.731	1.659	1.707	1.780	1.804
P-0-4-0	2.423	1.731	1.059	1.707	1.700	1.004
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6 254 211	2 200 220	2 722 255
, ,				6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.880	2.395	2.392	2.368	2.382	2.408
- Min Latency (micsec)	1.693	2.182	2.174	2.182	2.174	2.206
- Max Latency (micsec)	4.122	4.154	4.098	4.203	4.339	3.722
- Avg Jitter (micsec)	0.016	0.015	0.009	0.007	0.004	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.237	1.707	1.755	1.780	2.020	1.347
P-0-4-1						
- Rx (Frames)	27,064,732	17,497,204	10.910.851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.882	2.377	2.384	2.340	2.365	2.400
- Min Latency (micsec)		2.377				2.400
, , , , , , , , , , , , , , , , , , ,	1.693		2.174	2.158	2.174	
- Max Latency (micsec)	4.098	4.323	3.954	4.034	4.435	4.179
- Avg Jitter (micsec)	0.016	0.020	0.011	0.008	0.004	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.237	1.852	1.587	1.755	2.116	1.707
P-0-4-2						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.919	2.364	2.392	2.364	2.386	2.427
- Min Latency (micsec)	1.693	2.182	2.198	2.182	2.198	2.206
- Max Latency (micsec)	4.098	4.179	4.026	4.299	3.810	3.746
- Avg Jitter (micsec)	0.019	0.021	0.010	0.008	0.004	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.044	1.731	1.731	2.020	1.467	1.274
P-0-4-3	2.011	1.701	1.701	2.020	1.401	1.217
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
	606.25 M		803.04 M		943.56 M	943.75 M
- Rx Rate (L1) (Bit/s)		690.56 M		901.45 M		
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.933	2.393	2.407	2.385	2.410	2.438
- Min Latency (micsec)	1.717	2.206	2.198	2.206	2.198	2.206
- Max Latency (micsec)	4.267	4.227	4.339	3.962	3.978	3.818
- Avg Jitter (micsec)	0.023	0.023	0.013	0.009	0.004	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.405	1.900	1.804	1.563	1.563	1.371
P-0-4-4						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.920	2.371	2.383	2.354	2.374	2.420
- Min Latency (micsec)	1.693	2.182	2.174	2.182	2.174	2.182
- Max Latency (micsec)	4.243	4.371	4.002	3.866	4.219	4.106
- Avg Jitter (micsec)	0.025	0.018	0.012	0.007	0.004	0.004
					0.004	
- Min Jitter (micsec)	0.000	0.000	0.000	0.000		0.000
- Max Jitter (micsec)	2.405	1.948	1.683	1.587	1.828	1.707
P-0-4-5						
- Rx (Frames)	27,064,732	17,497,204	10,910,851	6,354,211	3,389,229	2,722,355
- Rx Rate (L1) (Bit/s)	606.25 M	690.56 M	803.04 M	901.45 M	943.56 M	943.75 M
- Rx Rate (Fps)	902,158	583,240	363,695	211,807	112,974	90,745
- Avg Latency (micsec)	1.981	2.444	2.466	122.908	2.609	2.474
- Min Latency (micsec)	1.789	2.230	2.246	2.302	2.342	2.254



- Avg Jitter (micsec)	0.022	0.019	0.011	0.006	0.003	0.004
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.549	2.237	2.429	2.357	2.405	2.237

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	94.375 %
Tx (Frames)	2,300,695
Tx Rate (L1) (Bit/s)	943.59 M
Tx Rate (Fps)	76,690
Loss Rate (Percent)	0 %
Loss (Frames)	0
P-0-0-1	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.938
- Min Latency (micsec)	2.711
- Max Latency (micsec)	4.154
- Avg Jitter (micsec)	0.004
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.298
P-0-0-2	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.929
- Min Latency (micsec)	2.735
- Max Latency (micsec)	4.299
	0.003
- Avg Jitter (micsec)	
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.467
P-0-0-3	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.882
- Min Latency (micsec)	2.735
- Max Latency (micsec)	4.082
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.298
	1.290
P-0-0-4	0.000.005
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.888
- Min Latency (micsec)	2.735
- Max Latency (micsec)	4.227
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.419
P-0-0-5	1.110
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.887
- Min Latency (micsec)	2.735
- Max Latency (micsec)	5.093
- Avg Jitter (micsec)	0.003
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.020
P-0-2-0	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.303
- Min Latency (micsec)	2.142
- Max Latency (micsec)	4.138



A 1111 ()	0.000
- Avg Jitter (micsec)	0.003
Min Jitter (micsec)Max Jitter (micsec)	0.000 1.852
P-0-2-1	1.032
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.328
- Min Latency (micsec)	2.166
- Max Latency (micsec)	4.042
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.731
P-0-2-2 - Rx (Frames)	2,300,695
- Rx (Frames)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.335
- Min Latency (micsec)	2.166
- Max Latency (micsec)	3.778
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.395
P-0-2-3	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.316
- Min Latency (micsec)- Max Latency (micsec)	2.142 4.138
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.828
P-0-2-4	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.359
- Min Latency (micsec)	2.142
- Max Latency (micsec)	3.633
- Avg Jitter (micsec)	0.002
Min Jitter (micsec)Max Jitter (micsec)	0.000 1.298
P-0-2-5	1.290
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.374
- Min Latency (micsec)	2.190
- Max Latency (micsec)	3.994
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.683
P-0-4-0	
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
- Avg Latency (micsec)	2.424 2.214
- Min Latency (micsec) - Max Latency (micsec)	3.609
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.226
P-0-4-1	0
- Rx (Frames)	2,300,695
- Rx Rate (L1) (Bit/s)	943.59 M
- Rx Rate (Fps)	76,690
 Avg Latency (micsec) 	2.422
- Min Latency (micsec)	2.214
- Max Latency (micsec)	4.018
 Avg Jitter (micsec) 	0.002



- Min Jitter (micsec)	0.000	
- Max Jitter (micsec)	1.635	
P-0-4-2		
- Rx (Frames)	2,300,695	
- Rx Rate (L1) (Bit/s)	943.59 M	
- Rx Rate (Fps)	76,690	
 Avg Latency (micsec) 	2.451	
- Min Latency (micsec)	2.214	
 Max Latency (micsec) 	3.874	
- Avg Jitter (micsec)	0.002	
- Min Jitter (micsec)	0.000	
- Max Jitter (micsec)	1.395	
P-0-4-3		
- Rx (Frames)	2,300,695	
- Rx Rate (L1) (Bit/s)	943.59 M	
- Rx Rate (Fps)	76,690	
- Avg Latency (micsec)	2.456	
- Min Latency (micsec)	2.214	
- Max Latency (micsec)	3.754	
- Avg Jitter (micsec)	0.003	
- Min Jitter (micsec)	0.000	
- Max Jitter (micsec)	1.395	
P-0-4-4		
- Rx (Frames)	2,300,695	
- Rx Rate (L1) (Bit/s)	943.59 M	
- Rx Rate (Fps)	76,690	
- Avg Latency (micsec)	2.464	
- Min Latency (micsec)	2.214	
- Max Latency (micsec)	3.922	
- Avg Jitter (micsec)	0.003	
- Min Jitter (micsec)	0.000	
- Max Jitter (micsec)	1.659	
P-0-4-5		
- Rx (Frames)	2,300,695	
- Rx Rate (L1) (Bit/s)	943.59 M	
- Rx Rate (Fps)	76,690	
- Avg Latency (micsec)	2.504	
- Min Latency (micsec)	2.262	
- Max Latency (micsec)	4.571	
- Avg Jitter (micsec)	0.003	
- Min Jitter (micsec)	0.000	
- Max Jitter (micsec)	2.092	
- Max Jittel (IIIICSEC)	2.092	



