

# Valkyrie2889 Test Report

## **Test Summary**

Test company: Xena Networks Customer: GSI TOS

Test Date and Time: 2023-11-14, 20:11 Test Duration: 04:40:30 (h:m:s)

Generated By: Valkyrie2889 v1.40, running on 'Microsoft Windows 8.1 Enterprise Evaluation'

Comments: Partial test

host: acopc061 (VB guest Win81)chassis: Xenabay (140.181.139.228)

- configuration: https://github.com/GSI-CS-CO/network\_testing

DUT

- WRS: backplane v3.30, scb v3.4, Creotech

- name: nwt0010/0016/0296/0297

- fw: v6.1

- dot-config: default

### **Test Setup**

### **Test Configuration**

#### **Subtest Selection**

Rate Test: Full Mesh Enabled
- Throughput Enabled
- Forwarding Enabled

Rate Test: Part.Mesh. 1:N Disabled Rate Test: Part.Mesh, N->N Disabled Congestion Control: Enabled Forward Pressure: Enabled Maximum Forwarding Rate: Enabled Address Caching Capacity: Enabled Address Learning Rate: Enabled Errored Frames Filtering: Enabled **Broadcast Forwarding:** Enabled

#### **Test Options**

Packet Sizes Used: 64,128,256,512,1024,1280,1518

Rate Type: Fraction Fraction per Port: 100.00% Latency Measurement Mode: Last-To-Last

Toggle Port Sync States: Yes

### **Traffic Configuration**

#### **Used Chassis**

Chassis ID	Chassis Name	Address
C-0	xenatos	140.181.139.228:22606



## **Used Ports**

Port ID	Interface Type	Speed	IP Address & Gateway	Protocol Segment Profile
P-0-0-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-0-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-2-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-0	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-1	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-2	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-3	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-4	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet
P-0-4-5	SFP-O LR 1310 nm	AUTO	No address specified	1: Ethernet



## **Rate Test: Full Mesh Results**

### **Test Setup**

Duration: 30 seconds

Iteration:

Topology: Mesh Direction: Bidirectional

### **Throughput Options**

Initial Rate: 1.00%
Maximum Rate: 100.00%
Minimum Rate: 0.01%
Resolution: 0.01%

#### **Used Ports**

Port ID
P-0-0-0
P-0-0-1
P-0-0-2
P-0-0-3
P-0-0-4
P-0-0-5
P-0-2-0
P-0-2-1
P-0-2-2
P-0-2-3
P-0-2-4
P-0-2-5
P-0-4-0
P-0-4-1
P-0-4-2
P-0-4-3
P-0-4-4
P-0-4-5

## **Throughput Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	FAIL	PASS	FAIL	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	0.041 %	1 %	0.018 %	0.073 %	0.018 %	0.045 %
Tx Rate (L1) (Bit/s)	7.39 M	180 M	3.18 M	13.11 M	3.15 M	8.06 M
Tx Rate (Fps)	10,996	152,031	1,438	3,080	377	775
Rx Rate (Percent)	0.04 %	1 %	0.02 %	0.07 %	0.02 %	0.04 %
Rx Rate (L1) (Bit/s)	7.39 M	180 M	3.07 M	13.11 M	3.03 M	8.06 M
Rx Rate (Fps)	11 K	152.03 K	1.39 K	3.08 K	363	775.2
Loss Rate (Percent)	0 %	0 %	3.29 %	0 %	3.82 %	0 %
Loss (Frames)	0	0	1,420	0	432	0
P-0-0-0						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,353	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.18 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	60	57	60	59	58	58
P-0-0-1						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,353	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.18 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43



- Flood Count (Frames)	60	60	59	59	61	62
P-0-0-2	40.000	253.385	0.007	F 404	000	4 000
- Tx (Frames)	18,326	,	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,325	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	171.12 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	61	58	58	63	60	59
P-0-0-3						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,353	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.18 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	56	57	60	58	59	57
P-0-0-4	30	31	00	30	39	31
	40.000	252 205	2.207	F 404	000	4 202
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	56	56	56	58	59	57
P-0-0-5						
- Tx (Frames)	18,326	253,385	2.397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (ET) (Bit/3)	611	8,446	80	171	21	43
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	18,326		2,355	5,134	616	1,292
- Rx (Frames)		253,385				
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.33 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	79	171	21	43
- Flood Count (Frames)	57	56	56	57	55	58
P-0-2-0						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,106	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	155 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	70	171	21	43
- Flood Count (Frames)	59	60	58	58	61	57
P-0-2-1					0.1	
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx (Frames)	410.5 K					447.89 K
` , ` ,		10 M	176.42 K	728.34 K	175.11 K	
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	617	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.77 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	60	62	61	58	56	59
P-0-2-2						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,355	5,134	617	1,292
	410.5 K		173.33 K	728.34 K	171.77 K	447.89 K
- Rx Rate (L1) (Bit/s)		10 M				
- Rx Rate (Fps)	611	8,446	79	171	21	43
- Flood Count (Frames)	56	56	56	60	58	60
P-0-2-3						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,355	5,134	617	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.33 K	728.34 K	171.77 K	447.89 K
- Rx Rate (Fps)	611	8,446	79	171	21	43
- Flood Count (Frames)	56	57	57	58	58	56
P-0-2-4	30	37	37	30	30	30
-	10 206	252 205	2 207	E 101	620	4 202
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
			0.055	E 404	004	4 000
- Rx (Frames) - Rx Rate (L1) (Bit/s)	18,326 410.5 K	253,385 10 M	2,355 173.33 K	5,134 728.34 K	604 168.15 K	1,292 447.89 K



- Rx Rate (Fps)	611	8,446	79	171	20	43
- Flood Count (Frames)	58	60	57	56	61	60
P-0-2-5						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	1,995	5,134	486	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	146.83 K	728.34 K	135.3 K	447.89 K
- Rx Rate (Fps)	611	8,446	67	171	16	43
- Flood Count (Frames)	60	56	58	60	59	57
P-0-4-0						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	57	58	58	57	59	56
P-0-4-1						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8.446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	58	55	60	58	59	57
P-0-4-2						
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	60	57	58	62	58	57
P-0-4-3		07		02		01
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (ET) (Bibs)	611	8,446	80	1720.34 K	21	447.09 K
- Rx (Frames)	18,326	253,385	2,354	5,134	616	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	171.49 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	55	58	56	59	56	55
P-0-4-4	55	30	30	39	30	- 55
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
			176.42 K			447.89 K
- Tx Rate (L1) (Bit/s)	410.5 K 611	10 M		728.34 K	175.11 K	
- Tx Rate (Fps)		8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,354	5,134	558	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	173.25 K	728.34 K	155.35 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171 58	19 60	43
- Flood Count (Frames)	55	59	57	36	60	58
P-0-4-5	10 220	252 205	0.007	E 404	000	4 000
- Tx (Frames)	18,326	253,385	2,397	5,134	629	1,292
- Tx Rate (L1) (Bit/s)	410.5 K	10 M	176.42 K	728.34 K	175.11 K	447.89 K
- Tx Rate (Fps)	611	8,446	80	171	21	43
- Rx (Frames)	18,326	253,385	2,343	5,134	615	1,292
- Rx Rate (L1) (Bit/s)	410.5 K	10 M	172.44 K	728.34 K	171.22 K	447.89 K
- Rx Rate (Fps)	611	8,446	78	171	21	43
- Flood Count (Frames)	58	58	61	60	62	60

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	0.018 %
Tx Rate (L1) (Bit/s)	3.14 M
Tx Rate (Fps)	255
Rx Rate (Percent)	0.02 %
Rx Rate (L1) (Bit/s)	3.13 M
Rx Rate (Fps)	254.2
Loss Rate (Percent)	0.31 %
Loss (Frames)	24



P-0-0-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps) - Rx (Frames)	14 425
- Rx (Hames)	174.31 K
- Rx Rate (Fps)	174.5110
- Flood Count (Frames)	59
P-0-0-1	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	425
- Rx Rate (L1) (Bit/s)	174.31 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	60
P-0-0-2	405
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	413 169.39 K
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	169.39 K
- Flood Count (Frames)	58
P-0-0-3	30
- Tx (Frames)	425
- Tx (Frames)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	55
P-0-0-4	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames) P-0-0-5	58
- Tx (Frames)	425
- Tx (Frames)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	56
P-0-2-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps)	14
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	60
P-0-2-1	ADE
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
	174.31 K
- IX Bate (Fig.)	14
- Tx Rate (Fps)	424
- Rx (Frames)	424 173 9 K
- Rx (Frames) - Rx Rate (L1) (Bit/s)	173.9 K
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	173.9 K 14
- Rx (Frames) - Rx Rate (L1) (Bit/s)	173.9 K
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames)	173.9 K 14
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames)	173.9 K 14 60
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2	173.9 K 14 60 425
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	173.9 K 14 60 425 174.31 K
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	173.9 K 14 60 425 174.31 K 14




- Flood Count (Frames)	55
P-0-2-3	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps) - Rx (Frames)	14 424
- Rx (Harries) - Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	57
P-0-2-4	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps) - Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	61
P-0-2-5	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K 14
- Tx Rate (Fps) - Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	59
P-0-4-0	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	174.31 K
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-1	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s)	174.31 K
- Tx Rate (Fps) - Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-2	
- Tx (Frames)	425
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	174.31 K
- Rx (Frames)	424
- Rx Rate (L1) (Bit/s)	173.9 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	58
P-0-4-3	40=
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
- Tx Rate (ET) (Blus)	174.31 K
- Rx (Frames)	425
- Rx Rate (L1) (Bit/s)	174.31 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	59
P-0-4-4	405
- Tx (Frames)	425 174.31 K
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	174.31 K
- Rx (Frames)	425
- Rx Rate (L1) (Bit/s)	174.31 K
- Rx Rate (Fps)	14
- Flood Count (Frames)	59
P-0-4-5	405
- Tx (Frames) - Tx Rate (L1) (Bit/s)	425 174.31 K
17 17 (DINO)	174.5110
- Tx Rate (Fps)	, →
- Tx Rate (Fps) - Rx (Frames)	425



- Rx Rate (Fps)	14
- Flood Count (Frames)	60

Note: One or more of the rate tests did not pass the test criteria!

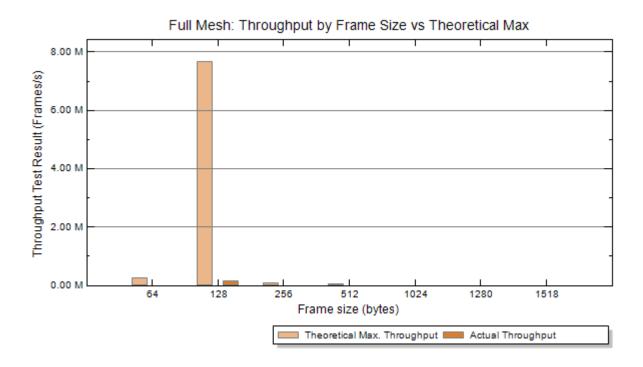

## **Forwarding Test Results**

### Results for 10.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	10 %	10 %	10 %	10 %	10 %	10 %
Tx Rate (L1) (Bit/s)	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G	1.8 G
Tx Rate (Fps)	2,678,571	1,520,269	815,215	422,923	215,516	173,074
Rx Rate (Percent)	9.93 %	9.95 %	9.93 %	9.88 %	9.7 %	9.87 %
Rx Rate (L1) (Bit/s)	1.79 G	1.79 G	1.79 G	1.78 G	1.75 G	1.78 G
Rx Rate (Fps)	2.66 M	1.51 M	809.79 K	417.81 K	209.14 K	170.8 K
Loss Rate (Percent)	0.69 %	0.48 %	0.67 %	1.21 %	2.96 %	1.32 %
Loss (Frames)	552,924	218,591	162,778	153,386	191,232	68,329
P-0-0-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,448,145	2,527,329	1,353,957	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.64 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,272	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	59	58	59	77	58	61
P-0-0-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,448,197	2,527,329	1,353,957	700,365	353,431	284,692
- Rx Rate (L1) (Bit/s)	99.64 M	99.75 M	99.65 M	99.36 M	98.4 M	98.69 M
- Rx Rate (Fps)	148,273	84,244	45,132	23,346	11,781	9,490
- Flood Count (Frames)	60	61	78	60	58	79
P-0-0-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M



- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	4,448,160 99.64 M 148,272 59 4,464,285 100 M	2,424,901 95.7 M 80,830 60	1,353,957 99.65 M 45,132 79	700,365 99.36 M 23,346	337,906 94.07 M 11,264	286,440 99.3 M 9,548
- Rx Rate (Fps) - Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	148,272 59 4,464,285	80,830	45,132	23,346		
- Flood Count (Frames) P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	59 4,464,285				11,264	uhnu
P-0-0-3 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	4,464,285	60	79			
- Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)				60	78	60
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)		2 522 702	1 250 601	704 971	250 102	200 456
- Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	100 M	2,533,782	1,358,691	704,871	359,193	288,456
- Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	1.10.010	100 M	100 M	100 M	100 M	100 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx Rate (Fps)	4,448,254	2,527,328	1,353,957	700,365	353,430	286,441
	99.64 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 N
- Flood Count (Frames)	148,275	84,244	45,132	23,346	11,781	9,548
	57	57	59	59	59	56
P-0-0-4						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,448,004	2,527,328	1,353,958	700,366	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.64 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 N
- Rx Rate (Fps)	148,267	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	55	57	57	56	58	58
P-0-0-5	33	31	31	30	30	
	A AGA 20E	2 522 702	1 350 604	704 074	350 103	200 450
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,832	2,527,328	1,353,958	700,366	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 N
- Rx Rate (Fps)	148,261	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	58	56	59	56	57	58
P-0-2-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,836	2,527,328	1,353,958	700,366	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 N
- Rx Rate (Fps)	148,261	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	59	60	62	77	58	60
P-0-2-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,729	2,527,328	1,353,958	628,084	291,105	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	89.1 M	81.04 M	99.3 N
- Rx Rate (Fps)	148,258	84,244	45,132	20,936	9,704	9,548
- Flood Count (Frames)	61	58	59	61	58	58
P-0-2-2	0.1					
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,448,254	2,527,328	1,353,958	700,365	353,430	286,44
- Rx Rate (L1) (Bit/s)	99.64 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 N
- Rx Rate (Fps)	148,275	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	59	61	62	61	58	57
P-0-2-3						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
· Rx (Frames)	4,448,170	2,527,328	1,353,958	700,365	353,431	286,442
- Rx Rate (L1) (Bit/s)	99.64 M	99.75 M	99.65 M	99.36 M	98.4 M	99.3 N
- Rx Rate (E1) (Bivs)	148,272	84,244	45,132	23,346	11,781	99.5 10
- Flood Count (Frames)	57	57	55	57	61	57
P-0-2-4	4 40 4 00=	0.500.500	4.050.004	704.074	050 100	000 1=
· Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 N
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,61
- Rx (Frames)	4,447,608	2,527,328	1,353,958	700,365	343,779	256,13°
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	95.71 M	88.79 N
- Rx Rate (Fps)	148,254	84,244	45,132	23,346	11,459	8,538
- Flood Count (Frames)	61	81	79	79	61	58
` '	01	01	ופו	13	01	
P-0-2-5	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456



- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,937	2,527,328	1,353,958	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,265	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	61	75	79	59	61	78
P-0-4-0						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,702	2,527,329	1,353,958	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,257	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	57	56	55	59	61	59
P-0-4-1						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148.810	84,459	45,290	23,496	11,973	9.615
- Rx (Frames)	4,447,661	2,527,329	1,353,958	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,255	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	58	60	58	59	60	58
P-0-4-2						
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,447,879	2,527,329	1,353,958	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,263	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	58	60	60	60	58	60
P-0-4-3	30	00	- 00	- 00	30	- 00
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23.496	11,973	9.615
- Rx (Frames)	4,447,825	2,527,329	1,353,958	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,261	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	58	55	58	23,340	57	9,546 58
P-0-4-4	30	55	30	30	31	30
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx (Frames)	4,404,265 100 M	2,555,762 100 M	1,336,691 100 M	100 M	100 M	200,430 100 M
	148,810			23,496		
- Tx Rate (Fps)		84,459	45,290		11,973	9,615
- Rx (Frames)	4,447,985	2,527,329	1,276,379	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	99.63 M	99.75 M	93.94 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	148,266	84,244	42,546	23,346	11,781	9,548
- Flood Count (Frames)	61	57	60	77	62	64
P-0-4-5	4 404 005	0.500.700	4.050.004	704 074	050 100	000 4=0
- Tx (Frames)	4,464,285	2,533,782	1,358,691	704,871	359,193	288,456
- Tx Rate (L1) (Bit/s)	100 M	100 M	100 M	100 M	100 M	100 M
- Tx Rate (Fps)	148,810	84,459	45,290	23,496	11,973	9,615
- Rx (Frames)	4,189,028	2,527,329	1,353,957	700,365	353,430	286,441
- Rx Rate (L1) (Bit/s)	93.83 M	99.75 M	99.65 M	99.36 M	98.39 M	99.3 M
- Rx Rate (Fps)	139,634	84,244	45,132	23,346	11,781	9,548
- Flood Count (Frames)	60	60	60	61	77	62

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	10 %
Tx Rate (L1) (Bit/s)	1.8 G
Tx Rate (Fps)	146,288
Rx Rate (Percent)	9.91 %
Rx Rate (L1) (Bit/s)	1.78 G
Rx Rate (Fps)	145.03 K
Loss Rate (Percent)	0.86 %
Loss (Frames)	37,776
P-0-0-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127




- Rx (Frames)	235,115
- Rx Rate (L1) (Bit/s)	96.43 M
- Rx Rate (Fps)	7,837 59
- Flood Count (Frames) P-0-0-1	39
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	58
P-0-0-2	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M 8,127
- Rx (Frames)	233,106
- Rx Rate (L1) (Bit/s)	95.6 M
- Rx Rate (Fps)	7,770
- Flood Count (Frames)	58
P-0-0-3	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,665
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	60
P-0-0-4 - Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,665
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	61
P-0-0-5	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	100 M
- Rx (Frames)	8,127 242,665
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	57
P-0-2-0	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	
Dy Data (Enc.)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	
- Flood Count (Frames) P-0-2-1	8,089 79
- Flood Count (Frames) P-0-2-1 - Tx (Frames)	8,089 79 243,814
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s)	8,089 79
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	8,089 79 243,814 100 M 8,127 242,666
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	8,089 79 243,814 100 M 8,127 242,666 99.53 M
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rlood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Tx Rate (Fps) - Rx (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127 242,666
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127 242,666 99.53 M
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127 242,666
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127 242,666 99.53 M 8,089
- Flood Count (Frames) P-0-2-1 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Flood Count (Frames) P-0-2-2 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Rx Rate (Fps) - Flood Count (Frames)	8,089 79 243,814 100 M 8,127 242,666 99.53 M 8,089 59 243,814 100 M 8,127 242,666 99.53 M 8,089



T D ( (5 )	0.407
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	60
P-0-2-4	040.044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	61
P-0-2-5 - Tx (Frames)	242 014
- Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M
- Tx Rate (ET) (Blus)	8,127
	242,666
- Rx (Frames) - Rx Rate (L1) (Bit/s)	
	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames) P-0-4-0	64
	243,814
- Tx (Frames)	
- Tx Rate (L1) (Bit/s)	100 M 8,127
- Tx Rate (Fps)	
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	58
P-0-4-1	242 044
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps) - Flood Count (Frames)	8,089 60
P-0-4-2	00
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	59
P-0-4-3	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (E1) (Bibs)	8,127
- Rx (Frames)	242,666
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- Flood Count (Frames)	60
P-0-4-4	
- Tx (Frames)	243,814
- Tx Rate (L1) (Bit/s)	100 M
- Tx Rate (Fps)	8,127
- Rx (Frames)	242,667
- Rx Rate (L1) (Bit/s)	99.53 M
- Rx Rate (Fps)	8,089
- KX Kale (FDS)	
	60
- Flood Count (Frames)	
- Flood Count (Frames) P-0-4-5	60
- Flood Count (Frames) P-0-4-5 - Tx (Frames)	243,814
- Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s)	243,814 100 M
- Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	243,814 100 M 8,127
- Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	243,814 100 M 8,127 242,667
- Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames) - Rx Rate (L1) (Bit/s)	243,814 100 M 8,127 242,667 99.53 M
- Flood Count (Frames) P-0-4-5 - Tx (Frames) - Tx Rate (L1) (Bit/s) - Tx Rate (Fps) - Rx (Frames)	243,814 100 M 8,127 242,667



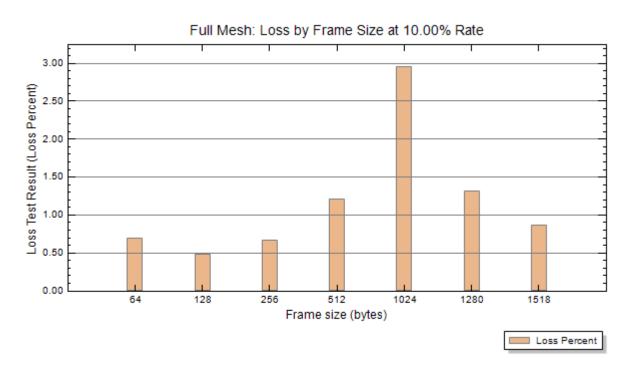

### Results for 20.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	20 %	20 %	20 %	20 %	20 %	20 %
Tx Rate (L1) (Bit/s)	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G	3.6 G
Tx Rate (Fps)	5,357,142	3,040,538	1,630,429	845,855	431,032	346,147
Rx Rate (Percent)	17.59 %	17.83 %	18.08 %	18.03 %	17.42 %	17.54 %
Rx Rate (L1) (Bit/s)	3.17 G	3.21 G	3.25 G	3.24 G	3.14 G	3.16 G
Rx Rate (Fps)	4.71 M	2.71 M	1.47 M	762.44 K	375.37 K	303.5 K
Loss Rate (Percent)	12.03 %	10.87 %	9.62 %	9.86 %	12.91 %	12.32 %
Loss (Frames)	19,334,322	9,918,785	4,707,348	2,502,346	1,669,936	1,279,538
P-0-0-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,732,336	4,480,365	2,321,468	1,267,326	644,469	503,522
- Rx Rate (L1) (Bit/s)	173.2 M	176.83 M	170.86 M	179.79 M	179.42 M	174.55 M
- Rx Rate (Fps)	257,745	149,346	77,382	42,244	21,482	16,784
- Flood Count (Frames)	60	59	59	61	58	61
P-0-0-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,819,460	4,498,743	2,393,221	1,191,691	640,254	477,174
- Rx Rate (L1) (Bit/s)	175.16 M	177.55 M	176.14 M	169.06 M	178.25 M	165.42 M
- Rx Rate (Fps)	260,649	149,958	79,774	39,723	21,342	15,906
- Flood Count (Frames)	61	59	57	58	56	56
P-0-0-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,815,122	4,501,488	2,393,454	1,245,229	556,952	500,463
- Rx Rate (L1) (Bit/s)	175.06 M	177.66 M	176.16 M	176.66 M	155.06 M	173.49 M
- Rx Rate (Fps)	260,504	150,050	79,782	41,508	18,565	16,682
- Flood Count (Frames)	56	57	62	58	58	58
P-0-0-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,879,070	4,572,611	2,427,017	1,230,075	637,317	514,534



- Rx Rate (L1) (Bit/s)	176.49 M	180.47 M	178.63 M	174.51 M	177.43 M	178.37 M
Rx Rate (Fps)	262,636	152,420	80,901	41,003	21,244	17,151
- Flood Count (Frames)	55	58	58	53	60	57
P-0-0-4 - Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M	200 M	2,717,362 200 M	200 M	200 M	200 M
- Tx Rate (E1) (Bibs)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,971,676	4,578,539	2,499,618	1,262,475	643,533	512,743
- Rx Rate (L1) (Bit/s)	178.57 M	180.7 M	183.97 M	179.1 M	179.16 M	177.75 M
- Rx Rate (Fps)	265,723	152,618	83,321	42,083	21,451	17,091
- Flood Count (Frames)	57	55	58	55	53	58
P-0-0-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,966,891	4,551,862	2,513,514	1,287,009	637,597	523,424
- Rx Rate (L1) (Bit/s)	178.46 M	179.65 M	184.99 M	182.58 M	177.51 M	181.45 M
- Rx Rate (Fps)	265,563	151,729	83,784	42,900	21,253	17,447
- Flood Count (Frames) P-0-2-0	59	57	57	56	55	60
	9 029 570	E 067 E64	2 717 202	1,409,759	710 206	576 012
- Tx (Frames) - Tx Rate (L1) (Bit/s)	8,928,570 200 M	5,067,564 200 M	2,717,382 200 M	1,409,759 200 M	718,386 200 M	576,912 200 M
- Tx Rate (LT) (Bl/s)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,343,221	4,612,690	2,539,944	1,317,353	618,427	499,716
- Rx (Frames) - Rx Rate (L1) (Bit/s)	164.49 M	182.05 M	186.94 M	1,317,333 186.89 M	172.17 M	173.23 M
- Rx Rate (Fps)	244,774	153,756	84,665	43,912	20,614	16,657
- Flood Count (Frames)	60	58	63	61	58	57
P-0-2-1				<b>V</b> .		
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,010,224	4,591,613	2,440,028	1,267,376	607,040	493,915
- Rx Rate (L1) (Bit/s)	179.43 M	181.22 M	179.59 M	179.8 M	169 M	171.22 M
- Rx Rate (Fps)	267,007	153,054	81,334	42,246	20,235	16,464
- Flood Count (Frames)	59	59	58	58	58	58
P-0-2-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,870,281 176.29 M	4,556,459	2,405,396 177.04 M	1,275,876	608,973	486,602
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	262,343	179.83 M 151,882	80,180	181 M 42,529	169.54 M 20,299	168.69 M 16,220
- Flood Count (Frames)	60	58	58	58	58	55
P-0-2-3	00	30	30	30	30	- 33
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,840,365	4,561,929	2,435,208	1,281,525	603,636	477,151
- Rx Rate (L1) (Bit/s)	175.62 M	180.04 M	179.23 M	181.81 M	168.05 M	165.41 M
- Rx Rate (Fps)	261,346	152,064	81,174	42,718	20,121	15,905
- Flood Count (Frames)	60	55	57	57	59	58
P-0-2-4						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,043,473	4,580,093	2,552,747	1,290,793	546,106	517,490
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	180.17 M 268,116	180.76 M 152,670	187.88 M 85,092	183.12 M 43,026	152.04 M 18,204	179.4 M 17,250
- Flood Count (Frames)	61	51	58	43,020	57	59
P-0-2-5	01	31	30	00	31	39
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	8,057,367	4,640,935	2,563,257	1,293,810	642,963	502,108
- Rx Rate (L1) (Bit/s)	180.49 M	183.16 M	188.66 M	183.55 M	179 M	174.06 M
- Rx Rate (Fps)	268,579	154,698	85,442	43,127	21,432	16,737
- Flood Count (Frames)	60	51	59	61	58	59
P-0-4-0						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230



- Rx (Frames)	8,007,240	4,645,400	2,544,585	1,301,958	642,332	521,959
- Rx Rate (L1) (Bit/s)	179.36 M	183.34 M	187.28 M	184.7 M	178.83 M	180.95 M
- Rx Rate (Fps)	266,908	154,847	84,820	43,399	21,411	17,399
- Flood Count (Frames)	56	47	56	58	57	62
P-0-4-1						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,950,990	4,593,146	2,492,081	1,277,079	648,548	515,279
- Rx Rate (L1) (Bit/s)	178.1 M	181.28 M	183.42 M	181.17 M	180.56 M	178.63 M
- Rx Rate (Fps)	265,033	153,105	83,069	42,569	21,618	17,176
- Flood Count (Frames)	57	50	62	58	58	56
P-0-4-2						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,863,812	4,497,844	2,440,875	1,260,030	648,294	517,628
- Rx Rate (L1) (Bit/s)	176.15 M	177.51 M	179.65 M	178.76 M	180.49 M	179.44 M
- Rx Rate (Fps)	262,127	149,928	81,363	42,001	21,610	17,254
- Flood Count (Frames)	56	53	60	61	55	58
P-0-4-3						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,807,560	4,452,544	2,401,798	1,275,144	647,736	514,316
- Rx Rate (L1) (Bit/s)	174.89 M	175.73 M	176.77 M	180.9 M	180.33 M	178.3 M
- Rx Rate (Fps)	260,252	148,418	80,060	42,505	21,591	17,144
- Flood Count (Frames)	56	47	56	57	54	59
P-0-4-4						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,725,328	3,953,635	2,403,604	1,280,271	647,070	514,069
- Rx Rate (L1) (Bit/s)	173.05 M	156.04 M	176.91 M	181.63 M	180.14 M	178.21 M
- Rx Rate (Fps)	257,511	131,788	80,120	42,676	21,569	17,136
- Flood Count (Frames)	58	51	62	56	55	58
P-0-4-5						
- Tx (Frames)	8,928,570	5,067,564	2,717,382	1,409,759	718,386	576,912
- Tx Rate (L1) (Bit/s)	200 M	200 M	200 M	200 M	200 M	200 M
- Tx Rate (Fps)	297,619	168,919	90,579	46,992	23,946	19,230
- Rx (Frames)	7,675,522	4,427,471	2,437,713	1,268,296	639,765	512,785
- Rx Rate (L1) (Bit/s)	171.93 M	174.74 M	179.42 M	179.93 M	178.11 M	177.77 M
- Rx Rate (Fps)	255,851	147,582	81,257	42,277	21,326	17,093
- Flood Count (Frames)	56	50	60	59	57	60

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	20 %
Tx Rate (L1) (Bit/s)	3.6 G
Tx Rate (Fps)	292,587
Rx Rate (Percent)	15.39 %
Rx Rate (L1) (Bit/s)	2.77 G
Rx Rate (Fps)	225.15 K
Loss Rate (Percent)	23.05 %
Loss (Frames)	2,023,046
P-0-0-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	356,291
- Rx Rate (L1) (Bit/s)	146.13 M
- Rx Rate (Fps)	11,876
- Flood Count (Frames)	59
P-0-0-1	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	354,386
- Rx Rate (L1) (Bit/s)	145.35 M




- Rx Rate (Fps)	11,813
- Flood Count (Frames)	58
P-0-0-2	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	352,357
- Rx Rate (L1) (Bit/s)	144.51 M
- Rx Rate (Fps)	11,745
- Flood Count (Frames)	57
P-0-0-3	407.645
- Tx (Frames) - Tx Rate (L1) (Bit/s)	487,645 200 M
- Tx Rate (ET) (Blus)	16,255
- Rx (Frames)	376,168
- Rx Rate (L1) (Bit/s)	154.28 M
- Rx Rate (Fps)	12,539
- Flood Count (Frames)	57
P-0-0-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	357,927
- Rx Rate (L1) (Bit/s)	146.8 M
- Rx Rate (Fps)	11,931
- Flood Count (Frames) P-0-0-5	53
- Tx (Frames)	487,645
- Tx (Flames) - Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (ET) (Bl/s)	16,255
- Rx (Frames)	360,767
- Rx Rate (L1) (Bit/s)	147.96 M
- Rx Rate (Fps)	12,026
- Flood Count (Frames)	60
P-0-2-0	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	378,556
- Rx Rate (L1) (Bit/s)	155.26 M
- Rx Rate (Fps)	12,619
- Flood Count (Frames) P-0-2-1	53
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	390,209
- Rx Rate (L1) (Bit/s)	160.04 M
- Rx Rate (Fps)	13,007
- Flood Count (Frames)	55
P-0-2-2	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	392,662
- Rx Rate (L1) (Bit/s)	161.04 M
- Rx Rate (Fps) - Flood Count (Frames)	13,089 51
P-0-2-3	31
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (ET) (Bit/3)	16,255
- Rx (Frames)	390,210
- Rx Rate (L1) (Bit/s)	160.04 M
- Rx Rate (Fps)	13,007
- Flood Count (Frames)	50
P-0-2-4	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	330,645



	40-04-14
- Rx Rate (L1) (Bit/s)	135.61 M
- Rx Rate (Fps)	11,022
- Flood Count (Frames)	56
P-0-2-5	407.045
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	386,319
- Rx Rate (L1) (Bit/s)	158.44 M
- Rx Rate (Fps)	12,877
- Flood Count (Frames) P-0-4-0	58
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (ET) (Bl03)	16,255
- Rx (Frames)	390,910
	160.33 M
- Rx Rate (L1) (Bit/s)	
- Rx Rate (Fps)	13,030
- Flood Count (Frames) P-0-4-1	55
- Tx (Frames)	487,645
- Tx (Frames) - Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (ET) (Blus)	16,255
- Rx (Frames)	395,608
- Rx (Frames) - Rx Rate (L1) (Bit/s)	162.25 M
- Rx Rate (E1) (Bibs)	
	13,187
- Flood Count (Frames) P-0-4-2	56_
- Tx (Frames)	197 615
- Tx Rate (L1) (Bit/s)	487,645 200 M
- Tx Rate (ET) (Blus)	16,255
- Rx (Frames)	401,334
- Rx Rate (L1) (Bit/s)	164.6 M
- Rx Rate (Fps)	13,378
- Flood Count (Frames)	54
P-0-4-3	<u> </u>
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Er) (Bits)	16,255
- Rx (Frames)	405,643
- Rx Rate (L1) (Bit/s)	166.37 M
- Rx Rate (Fps)	13,521
- Flood Count (Frames)	54
P-0-4-4	<u> </u>
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	336,154
- Rx Rate (L1) (Bit/s)	137.87 M
- Rx Rate (Fps)	11,205
- Flood Count (Frames)	53
P-0-4-5	
- Tx (Frames)	487,645
- Tx Rate (L1) (Bit/s)	200 M
- Tx Rate (Fps)	16,255
- Rx (Frames)	398,418
- Rx Rate (L1) (Bit/s)	163.4 M
- Rx Rate (Fps)	13,281
- Flood Count (Frames)	54
- ( - >-)	



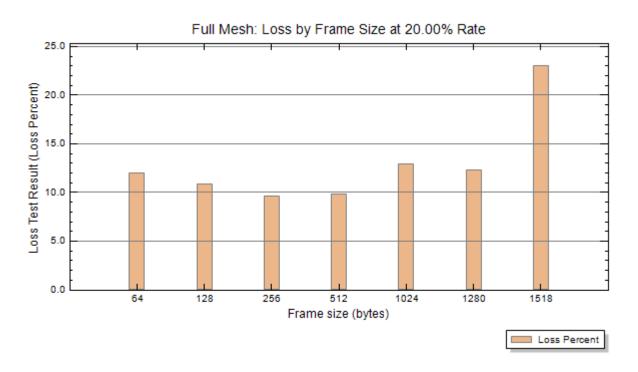

### Results for 30.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	30 %	30 %	30 %	30 %	30 %	30 %
Tx Rate (L1) (Bit/s)	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G	5.4 G
Tx Rate (Fps)	8,035,713	4,560,808	2,445,644	1,268,788	646,547	519,221
Rx Rate (Percent)	16.82 %	20.6 %	21.31 %	20.97 %	20.03 %	19.74 %
Rx Rate (L1) (Bit/s)	3.03 G	3.71 G	3.84 G	3.78 G	3.61 G	3.55 G
Rx Rate (Fps)	4.5 M	3.13 M	1.74 M	886.99 K	431.7 K	341.61 K
Loss Rate (Percent)	43.95 %	31.35 %	28.98 %	30.09 %	33.23 %	34.21 %
Loss (Frames)	105,943,259	42,889,035	21,261,244	11,453,955	6,445,471	5,328,191
P-0-0-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	9,180,665	5,460,484	2,932,651	1,556,161	772,155	584,773
- Rx Rate (L1) (Bit/s)	205.65 M	215.51 M	215.84 M	220.77 M	214.97 M	202.72 M
- Rx Rate (Fps)	306,022	182,016	97,755	51,872	25,739	19,492
- Flood Count (Frames)	59	57	62	59	57	60
P-0-0-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	9,144,628	5,396,400	2,982,219	1,551,042	775,378	590,887
- Rx Rate (L1) (Bit/s)	204.84 M	212.98 M	219.49 M	220.04 M	215.87 M	204.84 M
- Rx Rate (Fps)	304,821	179,880	99,407	51,701	25,846	19,696
- Flood Count (Frames)	60	57	58	60	63	61
P-0-0-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	9,093,778	5,039,278	2,979,040	1,526,426	771,293	594,867
- Rx Rate (L1) (Bit/s)	203.7 M	198.88 M	219.26 M	216.55 M	214.73 M	206.22 M
- Rx Rate (Fps)	303,126	167,976	99,301	50,881	25,710	19,829
- Flood Count (Frames)	60	60	57	58	59	61
P-0-0-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	8,974,043	5,246,318	2,909,763	1,492,903	761,100	612,884



- Rx Rate (L1) (Bit/s)	201.02 M 299,135	207.05 M 174,877	214.16 M 96,992	211.79 M 49,763	211.89 M	212.47 N 20,42
- Rx Rate (Fps)					25,370	
- Flood Count (Frames)	57	56	54	58	59	5
P-0-0-4	12 202 055	7 601 246	4.076.072	2 114 647	1 077 570	005.00
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 [
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	8,888,227	5,204,405	2,746,445	1,434,394	758,609	598,56
- Rx Rate (L1) (Bit/s)	199.1 M	205.4 M	202.14 M	203.49 M	211.2 M	207.5 N
- Rx Rate (Fps)	296,274	173,480	91,548	47,813	25,287	19,95
- Flood Count (Frames)	53	57	57	58	58	5
P-0-0-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 [
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	8,762,613	5,196,984	2,721,784	1,434,454	750,135	583,67
- Rx Rate (L1) (Bit/s)	196.28 M	205.11 M	200.32 M	203.5 M	208.84 M	202.34 [
- Rx Rate (Fps)	292,087	173,233	90,726	47,815	25,005	19,45
- Flood Count (Frames)	56	58	56	56	60	5
P-0-2-0						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 1
- Tx Rate (ET) (Blus)	446,429	253,378	135,869	70,488	35,919	28,84
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \						488.77
- Rx (Frames)	8,206,385	5,164,677	2,875,032	1,388,831	597,091	,
- Rx Rate (L1) (Bit/s)	183.82 M	203.83 M	211.6 M	197.03 M	166.23 M	169.44
- Rx Rate (Fps)	273,546	172,156	95,834	46,294	19,903	16,29
- Flood Count (Frames)	56	51	59	58	50	5
P-0-2-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 I
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	8,272,186	4,914,401	2,798,193	1,449,413	597,298	499,88
- Rx Rate (L1) (Bit/s)	185.3 M	193.96 M	205.95 M	205.62 M	166.29 M	173.29 I
- Rx Rate (Fps)	275,740	163,813	93,273	48,314	19,910	16,66
- Flood Count (Frames)	53	49	61	60	57	5
P-0-2-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	299.99 [
- Tx Rate (ET) (Blus)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	8,153,423	5,119,480	2,792,718	1,459,928	616,972	511,80
- Rx Rate (L1) (Bit/s)	182.64 M	202.05 M	205.54 M	207.12 M	171.77 M	177.43 I
- Rx Rate (Fps)	271,781	170,649	93,091	48,664	20,566	17,06
- Flood Count (Frames)	53	50	62	59	47	5
P-0-2-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 I
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	7,995,325	5,077,706	2,813,089	1,415,044	598,747	492,51
- Rx Rate (L1) (Bit/s)	179.1 M	200.4 M	207.04 M	200.75 M	166.69 M	170.74 I
- Rx Rate (Fps)	266,511	169,257	93,770	47,168	19,958	16,41
- Flood Count (Frames)	55	51	58	58	50	5
P-0-2-4		-				
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx (Frames)	300 M	300 M	300 M	300 M	300 M	299.99
- Tx Rate (ET) (Blus)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)					804,316	560,01
,	5,117,807	4,979,520	3,228,544	1,405,840	,	
- Rx Rate (L1) (Bit/s)	114.64 M	196.53 M	237.62 M	199.44 M	223.92 M	194.14
- Rx Rate (Fps)	170,594	165,984	107,618	46,861	26,811	18,66
- Flood Count (Frames)	55	47	63	57	57	
P-0-2-5	10					
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,36
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,84
- Rx (Frames)	5,204,940	5,490,875	3,189,394	1,585,124	798,999	566,02
- Rx Rate (L1) (Bit/s)	116.59 M	216.71 M	234.74 M	224.88 M	222.44 M	196.22
- Rx Rate (Fps)	173,498	183,029	106,313	52,837	26,633	18,86
- Flood Count (Frames)	52	49	58	57	59	5
` /		10		<u> </u>		
P-()-4-()						
P-0-4-0 - Ty (Frames)	13 302 855	7 601 346	4 076 073	2 11/1 6/17	1 077 570	865.26
P-0-4-0 - Tx (Frames) - Tx Rate (L1) (Bit/s)	13,392,855 300 M	7,601,346 300 M	4,076,073 300 M	2,114,647 300 M	1,077,579 300 M	865,36 299.99 I



- Rx (Frames)	5,034,897	5,298,118	3,093,608	1,546,019	766,136	569,839
- Rx Rate (L1) (Bit/s)	112.78 M	209.1 M	227.69 M	219.33 M	213.29 M	197.54 M
- Rx Rate (Fps)	167,830	176,604	103,120	51,534	25,538	18,995
- Flood Count (Frames)	51	46	59	55	58	49
P-0-4-1						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	4,928,884	5,336,276	3,030,811	1,532,486	737,003	569,285
- Rx Rate (L1) (Bit/s)	110.41 M	210.61 M	223.07 M	217.41 M	205.18 M	197.35 M
- Rx Rate (Fps)	164,296	177,876	101,027	51,083	24,567	18,976
- Flood Count (Frames)	54	47	57	52	54	50
P-0-4-2						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,056,097	5,230,717	2,869,904	1,475,024	752,121	604,511
- Rx Rate (L1) (Bit/s)	158.06 M	206.44 M	211.22 M	209.26 M	209.39 M	209.56 M
- Rx Rate (Fps)	235,203	174,357	95,663	49,167	25,071	20,150
- Flood Count (Frames)	54	53	52	54	49	44
P-0-4-3						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,053,725	5,267,403	2,763,896	1,452,233	720,079	607,748
- Rx Rate (L1) (Bit/s)	158 M	207.89 M	203.42 M	206.02 M	200.47 M	210.69 M
- Rx Rate (Fps)	235,124	175,580	92,130	48,408	24,003	20,258
- Flood Count (Frames)	49	48	53	52	48	47
P-0-4-4						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,022,652	5,261,168	2,656,573	1,469,501	696,144	611,718
- Rx Rate (L1) (Bit/s)	157.31 M	207.64 M	195.52 M	208.47 M	193.81 M	212.06 M
- Rx Rate (Fps)	234,088	175,372	88,552	48,983	23,205	20,391
- Flood Count (Frames)	51	55	58	58	51	48
P-0-4-5						
- Tx (Frames)	13,392,855	7,601,346	4,076,073	2,114,647	1,077,579	865,368
- Tx Rate (L1) (Bit/s)	300 M	300 M	300 M	300 M	300 M	299.99 M
- Tx Rate (Fps)	446,429	253,378	135,869	70,488	35,919	28,846
- Rx (Frames)	7,037,856	5,250,983	2,724,406	1,434,868	677,375	600,647
- Rx Rate (L1) (Bit/s)	157.65 M	207.24 M	200.52 M	203.56 M	188.58 M	208.22 M
. , , ,						
- Rx Rate (Fps)	234,595	175,033	90,814	47,829	22,579	20,022

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	30 %
Tx Rate (L1) (Bit/s)	5.4 G
Tx Rate (Fps)	438,875
Rx Rate (Percent)	13.3 %
Rx Rate (L1) (Bit/s)	2.39 G
Rx Rate (Fps)	194.52 K
Loss Rate (Percent)	55.68 %
Loss (Frames)	7,330,589
P-0-0-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	282,525
- Rx Rate (L1) (Bit/s)	115.87 M
- Rx Rate (Fps)	9,418
- Flood Count (Frames)	39
P-0-0-1	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	287,717
- Rx Rate (L1) (Bit/s)	118 M




- Rx Rate (Fps)	9,591
- Flood Count (Frames)	46
P-0-0-2 - Tx (Frames)	731,459
- Tx (Harries)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	319,494
- Rx Rate (L1) (Bit/s)	131.04 M
- Rx Rate (Fps)	10,650
- Flood Count (Frames)	42
P-0-0-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	294,763
- Rx Rate (L1) (Bit/s)	120.89 M
- Rx Rate (Fps)	9,825
- Flood Count (Frames) P-0-0-4	47
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	313,173
- Rx Rate (L1) (Bit/s)	128.44 M
- Rx Rate (Fps)	10,439
- Flood Count (Frames)	42
P-0-0-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	316,607
- Rx Rate (L1) (Bit/s)	129.85 M
- Rx Rate (Fps)	10,554
- Flood Count (Frames)	45
P-0-2-0	704 450
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731,459
- Tx Rate (ET) (Blus)	300 M 24,382
- Rx (Frames)	352,208
- Rx Rate (L1) (Bit/s)	144.45 M
- Rx Rate (Fps)	11,740
- Flood Count (Frames)	46
P-0-2-1	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	349,459
- Rx Rate (L1) (Bit/s)	143.32 M
- Rx Rate (Fps)	11,649
- Flood Count (Frames) P-0-2-2	45
- Tx (Frames)	731,459
- Tx (Flames) - Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (ET) (Bl/s)	24,382
- Rx (Frames)	345,508
- Rx Rate (L1) (Bit/s)	141.7 M
- Rx Rate (Fps)	11,517
- Flood Count (Frames)	48
P-0-2-3	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	355,269
- Rx Rate (L1) (Bit/s)	145.71 M
- Rx Rate (Fps)	11,842
- Flood Count (Frames)	47
P-0-2-4	724 450
- Tx (Frames)	731,459 300 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	24,382
- Rx (Frames)	318,150
(1.1411100)	010,100



- Rx Rate (L1) (Bit/s)	130.48 M
- Rx Rate (Fps)	10,605
- Flood Count (Frames)	40
P-0-2-5	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	244,342 100.21 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	8,145
- Flood Count (Frames)	36
P-0-4-0	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	319,504
- Rx Rate (L1) (Bit/s)	131.04 M
- Rx Rate (Fps)	10,650
- Flood Count (Frames)	44
P-0-4-1	724 450
- Tx (Frames) - Tx Rate (L1) (Bit/s)	731,459 300 M
- Tx Rate (ET) (Blus)	24,382
- Rx (Frames)	328,481
- Rx Rate (L1) (Bit/s)	134.72 M
- Rx Rate (Fps)	10,949
- Flood Count (Frames)	41
P-0-4-2	
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	344,450
- Rx Rate (L1) (Bit/s)	141.27 M
- Rx Rate (Fps) - Flood Count (Frames)	11,482 59
P-0-4-3	39
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	348,429
- Rx Rate (L1) (Bit/s)	142.9 M
- Rx Rate (Fps)	11,614
- Flood Count (Frames)	57
P-0-4-4	704 450
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M 24,382
- Tx Rate (Fps) - Rx (Frames)	351,919
- Rx Rate (L1) (Bit/s)	144.33 M
- Rx Rate (Fps)	11,731
- Flood Count (Frames)	58
P-0-4-5	,,,
- Tx (Frames)	731,459
- Tx Rate (L1) (Bit/s)	300 M
- Tx Rate (Fps)	24,382
- Rx (Frames)	363,675
- Rx Rate (L1) (Bit/s)	149.16 M
- Rx Rate (Fps)	12,123
- Flood Count (Frames)	56



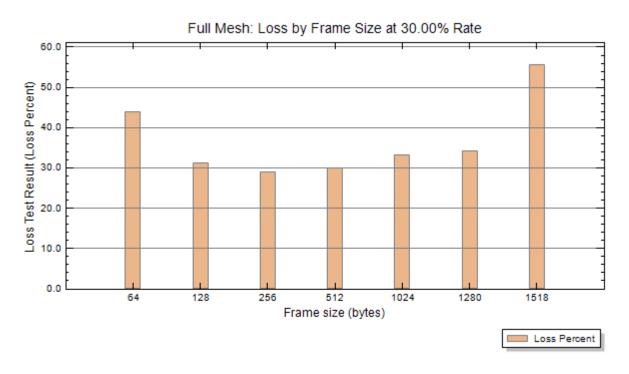

### Results for 40.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	40 %	40 %	40 %	40 %	40 %	40 %
Tx Rate (L1) (Bit/s)	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G	7.2 G
Tx Rate (Fps)	10,714,284	6,081,077	3,260,869	1,691,721	862,063	692,305
Rx Rate (Percent)	13.17 %	22.68 %	23.08 %	23.16 %	21.23 %	20.92 %
Rx Rate (L1) (Bit/s)	2.37 G	4.08 G	4.15 G	4.17 G	3.82 G	3.76 G
Rx Rate (Fps)	3.53 M	3.45 M	1.88 M	979.53 K	457.63 K	361.99 K
Loss Rate (Percent)	67.08 %	43.29 %	42.31 %	42.1 %	46.91 %	47.71 %
Loss (Frames)	215,607,802	78,972,964	41,390,092	21,365,769	12,132,936	9,909,353
P-0-0-0						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	8,412,964	5,499,909	3,022,179	1,616,170	829,138	660,557
- Rx Rate (L1) (Bit/s)	188.45 M	217.06 M	222.43 M	229.28 M	230.83 M	228.99 M
- Rx Rate (Fps)	280,432	183,330	100,739	53,872	27,638	22,019
- Flood Count (Frames)	61	56	60	60	60	59
P-0-0-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	8,180,428	5,697,966	3,059,527	1,600,359	822,630	641,388
- Rx Rate (L1) (Bit/s)	183.24 M	224.88 M	225.18 M	227.04 M	229.02 M	222.35 M
- Rx Rate (Fps)	272,681	189,932	101,984	53,345	27,421	21,380
- Flood Count (Frames)	58	61	57	60	60	58
P-0-0-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,892,637	5,590,311	3,018,223	1,580,766	820,812	643,077
- Rx Rate (L1) (Bit/s)	176.8 M	220.63 M	222.14 M	224.26 M	228.51 M	222.93 M
- Rx Rate (Fps)	263,088	186,344	100,607	52,692	27,360	21,436
- Flood Count (Frames)	58	59	61	58	60	58
P-0-0-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,632,091	5,592,683	3,061,351	1,585,611	817,448	653,646



- Rx Rate (L1) (Bit/s)	170.96 M	220.72 M	225.32 M	224.95 M	227.58 M	226.6 M
- Rx Rate (Fps)	254,403	186,423	102,045	52,854	27,248	21,788
- Flood Count (Frames)	57	58	57	60	56	55
P-0-0-4						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,465,424	5,645,577	3,085,502	1,629,217	815,352	643,897
- Rx Rate (L1) (Bit/s)	167.23 M	222.81 M	227.09 M	231.13 M	226.99 M	223.22 M
- Rx Rate (Fps)	248,847	188,186	102,850	54,307	27,178	21,463
- Flood Count (Frames)	59	57	57	56	55	55
P-0-0-5	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,465,705	5,691,451	3,141,811	1,625,814	805,174	628,764
- Rx Rate (L1) (Bit/s)	167.23 M	224.62 M	231.24 M	230.65 M	224.16 M	217.97 M
- Rx Rate (Fps)	248,857	189,715	104,727	54,194	26,839	20,959
- Flood Count (Frames)	55	59	57	56	58	55
P-0-2-0	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	3,186,462	5,296,350	3,122,732	1,570,112	579,072	484,783
- Rx Rate (L1) (Bit/s)	71.38 M	209.03 M	229.83 M	222.75 M	161.21 M	168.06 M
- Rx Rate (Fps)	106,215	176,545	104,091	52,337	19,302	16,159
- Flood Count (Frames)	61	47	54	53	48	48
P-0-2-1	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4.450.044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	3,190,683	5,575,516	3,092,160	1,517,269	592,157	468,931
- Rx Rate (L1) (Bit/s)	71.47 M	220.05 M	227.58 M	215.25 M	164.86 M	162.56 M
- Rx Rate (Fps)	106,356	185,851	103,072	50,576	19,739	15,631
- Flood Count (Frames)	61	50	58	51	49	45
P-0-2-2	17.057.140	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	3,191,496 71.49 M	5,427,446	3,032,290	1,621,042	603,320	480,346
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	106,383	214.2 M 180,915	223.18 M 101,076	229.97 M 54,035	167.96 M 20,111	166.52 M 16,012
- Flood Count (Frames)	61	51	53	54,035	43	51
P-0-2-3	01	31	33	33	43	31
- Tx (Frames)	17,857,140	10 125 120	5.434.781	2 040 525	1 426 772	1 152 041
` /		10,135,128	-, -, -	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M 337,838	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238		181,159	93,985	47,892	38,461
- Rx (Frames)	3,188,926	5,595,659	3,026,796	1,600,770	605,144	475,682
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	71.43 M 106,298	220.84 M 186,522	222.77 M 100,893	227.1 M 53,359	168.47 M 20,171	164.9 M 15,856
- Flood Count (Frames)				49	49	
P-0-2-4	56	51	52	49	49	41
	17.057.140	10 125 120	E 424 701	2 040 525	1 426 772	1,153,841
- Tx (Frames) - Tx Rate (L1) (Bit/s)	17,857,140 400 M	10,135,128 400 M	5,434,781 400 M	2,819,535 400 M	1,436,772 400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	3,960,964	6,038,314	3,237,974	1,658,357	717,913	580,520
- Rx Rate (L1) (Bit/s)	88.73 M	238.31 M	238.31 M	235.27 M	199.87 M	201.25 M
- Rx Rate (Fps) - Flood Count (Frames)	132,032	201,277 53	107,932	55,279	23,930 49	19,351
	58	33	53	53	49	52
P-0-2-5	47.057.440	40 405 400	E 404 704	0.040.505	4 400 770	4 450 044
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	4,075,407	5,901,516	3,123,944	1,667,130	739,102	579,242
- Rx Rate (L1) (Bit/s)	91.29 M	232.91 M	229.92 M	236.51 M	205.77 M	200.8 M
- Rx Rate (Fps)	135,847	196,717	104,131	55,571	24,637	19,308
- Flood Count (Frames)	58	54	53	52	55	51
P-0-4-0	47.057.110	40 405 400	F 404 704	0.040.505	4 400 770	4.450.041
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461



- Rx (Frames)	3,961,822	6,038,846	3,094,405	1,679,919	743,088	563,317
- Rx Rate (L1) (Bit/s)	88.74 M	238.33 M	227.75 M	238.32 M	206.88 M	195.28 M
- Rx Rate (Fps)	132,061	201,295	103,147	55,997	24,770	18,777
- Flood Count (Frames)	56	52	49	51	50	49
P-0-4-1						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	3,679,787	5,871,078	3,231,665	1,667,202	747,453	580,060
- Rx Rate (L1) (Bit/s)	82.43 M	231.71 M	237.85 M	236.52 M	208.09 M	201.09 M
- Rx Rate (Fps)	122,660	195,703	107,722	55,573	24,915	19,335
- Flood Count (Frames)	58	49	51	50	50	51
P-0-4-2						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,575,367	5,849,479	3,243,117	1,673,635	871,853	689,327
- Rx Rate (L1) (Bit/s)	169.69 M	230.86 M	238.69 M	237.43 M	242.72 M	238.97 M
- Rx Rate (Fps)	252,512	194,983	108,104	55,788	29,062	22,978
- Flood Count (Frames)	57	51	56	53	53	52
P-0-4-3						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,544,540	5,879,413	3,286,679	1,728,865	868,238	688,095
- Rx Rate (L1) (Bit/s)	169 M	232.04 M	241.9 M	245.27 M	241.72 M	238.54 M
- Rx Rate (Fps)	251,485	195,980	109,556	57,629	28,941	22,937
- Flood Count (Frames)	58	51	52	52	51	48
P-0-4-4						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,496,270	6,011,371	3,224,447	1,696,636	871,461	692,329
- Rx Rate (L1) (Bit/s)	167.92 M	237.25 M	237.32 M	240.7 M	242.61 M	240.01 M
- Rx Rate (Fps)	249,876	200,379	107,482	56,555	29,049	23,078
- Flood Count (Frames)	60	53	53	48	52	51
P-0-4-5						
- Tx (Frames)	17,857,140	10,135,128	5,434,781	2,819,535	1,436,772	1,153,841
- Tx Rate (L1) (Bit/s)	400 M	400 M	400 M	400 M	400 M	400 M
- Tx Rate (Fps)	595,238	337,838	181,159	93,985	47,892	38,461
- Rx (Frames)	7,719,745	6,256,455	3,331,164	1,666,987	879,605	705,824
- Rx Rate (L1) (Bit/s)	172.92 M	246.92 M	245.17 M	236.49 M	244.88 M	244.69 M
- Rx Rate (Fps)	257,325	208,549	111,039	55,566	29,320	23,527
- Flood Count (Frames)	59	51	54	50	52	50

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	40 %
Tx Rate (L1) (Bit/s)	7.2 G
Tx Rate (Fps)	585,174
Rx Rate (Percent)	12.74 %
Rx Rate (L1) (Bit/s)	2.29 G
Rx Rate (Fps)	186.4 K
Loss Rate (Percent)	68.15 %
Loss (Frames)	11,963,108
P-0-0-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	267,684
- Rx Rate (L1) (Bit/s)	109.79 M
- Rx Rate (Fps)	8,923
- Flood Count (Frames)	41
P-0-0-1	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	302,949
- Rx Rate (L1) (Bit/s)	124.25 M




	10.000
- Rx Rate (Fps)	10,098
- Flood Count (Frames)	38
P-0-0-2 - Tx (Frames)	975,290
- Tx (Frames)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	311,423
- Rx Rate (L1) (Bit/s)	127.72 M
- Rx Rate (Fps)	10,381
- Flood Count (Frames)	40
P-0-0-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	326,240
- Rx Rate (L1) (Bit/s)	133.8 M
- Rx Rate (Fps)	10,875
- Flood Count (Frames)	44
P-0-0-4	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M
- TX Rate (Fps) - Rx (Frames)	32,510 320,069
- Rx (Frames) - Rx Rate (L1) (Bit/s)	131.27 M
- Rx Rate (Fps) - Flood Count (Frames)	10,669 48
P-0-0-5	40
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	320,944
- Rx Rate (L1) (Bit/s)	131.63 M
- Rx Rate (Fps)	10,698
- Flood Count (Frames)	42
P-0-2-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	366,122
- Rx Rate (L1) (Bit/s)	150.16 M
- Rx Rate (Fps)	12,204
- Flood Count (Frames)	47
P-0-2-1	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	400 M 32,510
	387,307
- Rx (Frames) - Rx Rate (L1) (Bit/s)	158.85 M
- Rx Rate (Fps)	12,910
- Flood Count (Frames)	42
P-0-2-2	-7 <b>Z</b>
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	364,487
- Rx Rate (L1) (Bit/s)	149.49 M
- Rx Rate (Fps)	12,150
- Flood Count (Frames)	44
P-0-2-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	353,770
- Rx Rate (L1) (Bit/s)	145.09 M
- Rx Rate (Fps)	11,792
- Flood Count (Frames)	46
P-0-2-4	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	301,471



D. D. t. (1.4) (Dit/s)	400.04.14
- Rx Rate (L1) (Bit/s)	123.64 M
- Rx Rate (Fps) - Flood Count (Frames)	10,049
P-0-2-5	33
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	313,970
- Rx Rate (L1) (Bit/s)	128.77 M
- Rx Rate (Fps)	10,466
- Flood Count (Frames)	36
P-0-4-0	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	320,720
- Rx Rate (L1) (Bit/s)	131.54 M
- Rx Rate (Fps)	10,691
- Flood Count (Frames)	30
P-0-4-1	075 000
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M 32,510
- Tx Rate (Fps) - Rx (Frames)	
	315,583
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	129.43 M 10,519
- Flood Count (Frames)	35
P-0-4-2	33
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	255,978
- Rx Rate (L1) (Bit/s)	104.99 M
- Rx Rate (Fps)	8,533
- Flood Count (Frames)	44
P-0-4-3	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	257,876
- Rx Rate (L1) (Bit/s)	105.76 M
- Rx Rate (Fps)	8,596
- Flood Count (Frames)	39
P-0-4-4	
- Tx (Frames)	975,290
- Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (Fps)	32,510
- Rx (Frames)	258,775
- Rx Rate (L1) (Bit/s)	106.13 M
- Rx Rate (Fps)	8,626
- Flood Count (Frames) P-0-4-5	44
- Tx (Frames)	975,290
- Tx (Frames) - Tx Rate (L1) (Bit/s)	400 M
- Tx Rate (E1) (Blus)	32,510
- Rx (Frames)	246,744
- Rx Rate (L1) (Bit/s)	101.2 M
- Rx Rate (Fps)	8,225
- Flood Count (Frames)	38
. iood oodiit (i idiiioo)	30



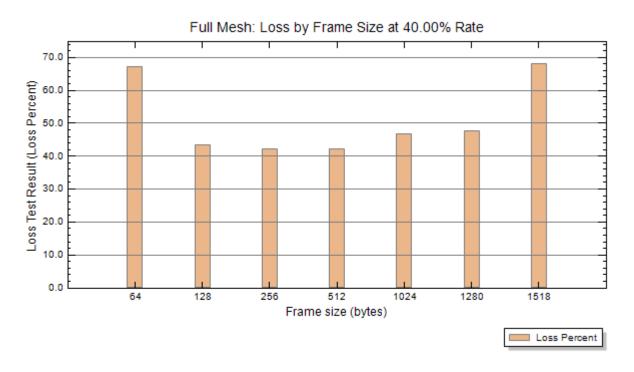

### Results for 50.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	50 %	50 %	50 %	50 %	50 %	50 %
Tx Rate (L1) (Bit/s)	9 G	9 G	9 G	9 G	9 G	9 G
Tx Rate (Fps)	13,392,855	7,601,346	4,076,083	2,114,654	1,077,579	865,378
Rx Rate (Percent)	9.7 %	25.06 %	24.94 %	24.89 %	22.53 %	21.55 %
Rx Rate (L1) (Bit/s)	1.75 G	4.51 G	4.49 G	4.48 G	4.05 G	3.88 G
Rx Rate (Fps)	2.6 M	3.81 M	2.03 M	1.05 M	485.47 K	372.92 K
Loss Rate (Percent)	80.61 %	49.88 %	50.12 %	50.22 %	54.95 %	56.91 %
Loss (Frames)	323,877,912	113,749,215	61,292,073	31,857,839	17,763,385	14,773,709
P-0-0-0						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	390,816	5,863,281	2,649,645	1,675,994	963,303	697,841
- Rx Rate (L1) (Bit/s)	8.75 M	231.4 M	195.01 M	237.77 M	268.18 M	241.92 M
- Rx Rate (Fps)	13,027	195,443	88,322	55,866	32,110	23,261
- Flood Count (Frames)	61	60	59	59	55	57
P-0-0-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	11,597	5,991,649	3,174,040	1,691,223	899,422	684,975
- Rx Rate (L1) (Bit/s)	259.77 K	236.47 M	233.61 M	239.93 M	250.4 M	237.46 M
- Rx Rate (Fps)	387	199,722	105,801	56,374	29,981	22,833
- Flood Count (Frames)	56	56	57	58	59	59
P-0-0-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	390,014	6,137,750	3,256,815	1,473,506	832,607	659,485
- Rx Rate (L1) (Bit/s)	8.74 M	242.24 M	239.7 M	209.04 M	231.8 M	228.62 M
- Rx Rate (Fps)	13,000	204,592	108,561	49,117	27,754	21,983
- Flood Count (Frames)	58	55	56	57	58	56
P-0-0-3						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	389,602	6,157,663	3,359,747	1,724,598	828,922	657,469



- Rx Rate (L1) (Bit/s)	8.73 M	243.02 M	247.28 M	244.66 M	230.77 M	227.92 M
- Rx Rate (Fps)	12,987	205,255	111,992	57,487	27,631	21,916
- Flood Count (Frames)	56	57	55	55	55	53
P-0-0-4	22 224 425	12 669 010	6 702 472	2 524 422	1 705 065	1 442 207
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M 59,866	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481		48,077
- Rx (Frames)	389,647	6,070,889	3,311,842	1,716,943	814,093	677,295
- Rx Rate (L1) (Bit/s)	8.73 M	239.6 M	243.75 M	243.58 M	226.64 M	234.8 M
- Rx Rate (Fps)	12,988	202,363	110,395	57,231	27,136	22,577
- Flood Count (Frames)	57	55	61	58	54	56
P-0-0-5	22,321,425	12.668.910	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)		12,000,910 500 M	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M 744,048		500 M 226.449	500 M 117,481	500 M	500 M 48.077
- Tx Rate (Fps) - Rx (Frames)	389,224	422,297 6,215,050	3,312,625	1,671,681	59,866 833,043	680,890
, ,	8.72 M	245.29 M				
- Rx Rate (L1) (Bit/s)			243.81 M	237.16 M	231.92 M	236.04 M
- Rx Rate (Fps)	12,974	207,168	110,421	55,723	27,768	22,696
- Flood Count (Frames) P-0-2-0	56	56	58	58	58	55
	22 224 425	12 669 010	6 702 472	3,524,423	1,795,965	1 442 207
- Tx (Frames)	22,321,425	12,668,910	6,793,472			1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M 422,297	500 M	500 M	500 M 59.866	500 M
- Tx Rate (Fps)	744,048	6,292,911	226,449	117,481 1,694,117	,	48,077 479.385
- Rx (Frames)	7,649,994		3,333,422		516,714	- ,
- Rx Rate (L1) (Bit/s)	171.36 M	248.36 M	245.34 M	240.34 M	143.85 M	166.19 M
- Rx Rate (Fps)	255,000	209,764	111,114	56,471	17,224	15,980
- Flood Count (Frames) P-0-2-1	63	51	48	52	46	49
	20 204 405	10.000.010	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,529,867	6,244,705	3,456,682	1,730,860	614,488	441,625
- Rx Rate (L1) (Bit/s)	168.67 M	246.46 M	254.41 M	245.55 M	171.07 M	153.1 M
- Rx Rate (Fps)	250,996	208,157	115,223	57,695	20,483	14,721
- Flood Count (Frames)	61	52	50	54	44	40
P-0-2-2	22 224 425	12 669 010	6 702 472	2 524 422	1 70E 06E	1 440 007
- Tx (Frames) - Tx Rate (L1) (Bit/s)	22,321,425 500 M	12,668,910 500 M	6,793,472 500 M	3,524,423 500 M	1,795,965 500 M	1,442,297 500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,324,405	6,087,342	3,290,595	1,716,995	604,536	486,227
- Rx Rate (L1) (Bit/s)	164.07 M	240.25 M	242.19 M	243.58 M	168.3 M	168.56 M
- Rx Rate (Fps)	244,147	202,911	109,687	57,233	20,151	16,208
- Flood Count (Frames)	57	49	48	49	48	50
P-0-2-3	31	43	40	73	40	30
- Tx (Frames)	22,321,425	12,668,910	6.793.472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (ET) (Blus)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,374,976	6,096,615	3,278,469	1,655,495	614,953	451,639
- Rx Rate (L1) (Bit/s)	165.2 M	240.61 M	241.3 M	234.86 M	171.2 M	156.57 M
- Rx Rate (Fps)	245,833	203,221	109,282	55,183	20,498	15,055
- Flood Count (Frames)	243,833	50	48	49	20,498	45
P-0-2-4	01	50	40	49	47	40
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
	500 M					
- Tx Rate (L1) (Bit/s)		500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	3,190,491	6,413,187	3,370,773	1,779,363	769,681	560,835
- Rx Rate (L1) (Bit/s)	71.47 M	253.11 M	248.09 M	252.43 M	214.28 M	194.42 M
- Rx Rate (Fps) - Flood Count (Frames)	106,350	213,773	112,359	59,312	25,656	18,695
	53	54	47	47	55	48
P-0-2-5	20 224 425	10.000.010	0.700.470	2 524 422	4 705 005	4 440 007
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	3,706,927	6,200,288	3,401,232	1,666,430	770,332	571,081
- Rx Rate (L1) (Bit/s)	83.04 M	244.7 M	250.33 M	236.41 M	214.46 M	197.97 M
- Rx Rate (Fps)	123,564	206,676	113,374	55,548	25,678	19,036
- Flood Count (Frames)	54	53	49	47	54	49
P-0-4-0	00 004 405	40.000.010	0.700.470	0.504.400	4 705 005	4 440 00=
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077



- Rx (Frames)	3,692,785	6,394,429	3,416,735	1,805,156	815,652	597,838
- Rx Rate (L1) (Bit/s)	82.72 M	252.37 M	251.47 M	256.09 M	227.08 M	207.25 M
- Rx Rate (Fps)	123,093	213,148	113,891	60,172	27,188	19,928
- Flood Count (Frames)	56	53	47	47	52	49
P-0-4-1						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	3,674,683	6,488,834	3,507,553	1,855,350	830,588	586,973
- Rx Rate (L1) (Bit/s)	82.31 M	256.09 M	258.16 M	263.21 M	231.24 M	203.48 M
- Rx Rate (Fps)	122,489	216,294	116,918	61,845	27,686	19,566
- Flood Count (Frames)	53	54	46	48	50	52
P-0-4-2						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	8,124,545	6,621,036	3,598,966	1,868,174	963,916	768,027
- Rx Rate (L1) (Bit/s)	181.99 M	261.31 M	264.88 M	265.03 M	268.35 M	266.25 M
- Rx Rate (Fps)	270,818	220,701	119,966	62,272	32,131	25,601
- Flood Count (Frames)	55	50	53	54	56	55
P-0-4-3						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,924,359	6,835,607	3,720,463	1,964,066	945,889	742,158
- Rx Rate (L1) (Bit/s)	177.51 M	269.78 M	273.83 M	278.64 M	263.34 M	257.28 M
- Rx Rate (Fps)	264,145	227,854	124,015	65,469	31,530	24,739
- Flood Count (Frames)	53	53	46	52	56	51
P-0-4-4						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,769,658	7,031,863	3,775,183	1,971,085	972,897	726,128
- Rx Rate (L1) (Bit/s)	174.04 M	277.52 M	277.85 M	279.63 M	270.85 M	251.72 M
- Rx Rate (Fps)	258,989	234,395	125,839	65,703	32,430	24,204
- Flood Count (Frames)	56	55	49	54	61	57
P-0-4-5						
- Tx (Frames)	22,321,425	12,668,910	6,793,472	3,524,423	1,795,965	1,442,297
- Tx Rate (L1) (Bit/s)	500 M	500 M	500 M	500 M	500 M	500 M
- Tx Rate (Fps)	744,048	422,297	226,449	117,481	59,866	48,077
- Rx (Frames)	7,984,148	7,148,066	3,775,636	1,920,739	972,949	717,766
- Rx Rate (L1) (Bit/s)	178.84 M	282.11 M	277.89 M	272.49 M	270.87 M	248.83 M
- Rx Rate (Fps)	266,138	238,269	125,855	64,025	32,432	23,926
- Flood Count (Frames)	54	52	51	56	56	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	50 %
Tx Rate (L1) (Bit/s)	9 G
Tx Rate (Fps)	731,462
Rx Rate (Percent)	11.94 %
Rx Rate (L1) (Bit/s)	2.15 G
Rx Rate (Fps)	174.61 K
Loss Rate (Percent)	76.13 %
Loss (Frames)	16,705,471
P-0-0-0	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	230,970
- Rx Rate (L1) (Bit/s)	94.73 M
- Rx Rate (Fps)	7,699
- Flood Count (Frames)	38
P-0-0-1	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	256,924
- Rx Rate (L1) (Bit/s)	105.37 M




D D ( / E )	
- Rx Rate (Fps)	8,564
- Flood Count (Frames)	38
P-0-0-2 - Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (ET) (Blus)	40,637
- Rx (Frames)	294,601
- Rx Rate (L1) (Bit/s)	120.83 M
- Rx Rate (Fps)	9,820
- Flood Count (Frames)	30
P-0-0-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	299,525
- Rx Rate (L1) (Bit/s)	122.85 M
- Rx Rate (Fps)	9,984
- Flood Count (Frames)	38
P-0-0-4	4 040 404
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637 306,719
- Rx (Frames) - Rx Rate (L1) (Bit/s)	125.8 M
- Rx Rate (Fps)	10,224
- Flood Count (Frames) P-0-0-5	35
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	301,143
- Rx Rate (L1) (Bit/s)	123.51 M
- Rx Rate (Fps)	10,038
- Flood Count (Frames)	37
P-0-2-0	-
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	365,462
- Rx Rate (L1) (Bit/s)	149.89 M
- Rx Rate (Fps)	12,182
- Flood Count (Frames)	36
P-0-2-1	1 010 101
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	344,224 141.18 M
- Rx Rate (L1) (Bit/s)	11,474
- Rx Rate (Fps) - Flood Count (Frames)	36
P-0-2-2	30
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	322,808
- Rx Rate (L1) (Bit/s)	132.39 M
- Rx Rate (Fps)	10,760
- Flood Count (Frames)	38
P-0-2-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	302,124
- Rx Rate (L1) (Bit/s)	123.91 M
- Rx Rate (Fps)	10,071
- Flood Count (Frames)	40
P-0-2-4	4 0 4 0 4 0
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	293,237



Dy Data (L1) (Dit(a)	120 27 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	120.27 M 9,775
- Flood Count (Frames)	35
P-0-2-5	00
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	293,054
- Rx Rate (L1) (Bit/s)	120.19 M
- Rx Rate (Fps)	9,768
- Flood Count (Frames)	30
P-0-4-0	1 010 101
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	309,410
- Rx Rate (L1) (Bit/s)	126.9 M
- Rx Rate (Fps)	10,314
- Flood Count (Frames) P-0-4-1	37
- Tx (Frames)	1,219,104
- Tx (Frames)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	302,658
- Rx Rate (L1) (Bit/s)	124.13 M
- Rx Rate (Fps)	10,089
- Flood Count (Frames)	31
P-0-4-2	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	271,794
- Rx Rate (L1) (Bit/s)	111.47 M
- Rx Rate (Fps)	9,060
- Flood Count (Frames)	33
P-0-4-3	
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	251,307
- Rx Rate (L1) (Bit/s)	103.07 M
- Rx Rate (Fps)	8,377
- Flood Count (Frames)	36
P-0-4-4	4 040 404
- Tx (Frames)	1,219,104
- Tx Rate (L1) (Bit/s)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	234,066
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	96 M 7,802
- Flood Count (Frames)	33
P-0-4-5	33
- Tx (Frames)	1,219,104
- Tx (Frames)	500 M
- Tx Rate (Fps)	40,637
- Rx (Frames)	258,375
- Rx Rate (L1) (Bit/s)	105.97 M
- Rx Rate (Fps)	8,613
- Flood Count (Frames)	30
- ( )	



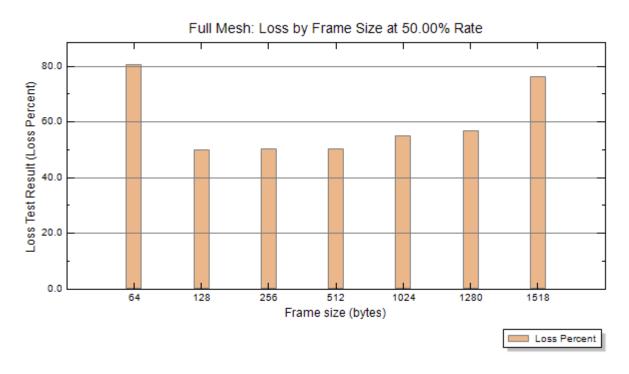

### Results for 60.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	60 %	60 %	60 %	60 %	60 %	60 %
Tx Rate (L1) (Bit/s)	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G	10.8 G
Tx Rate (Fps)	16,071,426	9,121,615	4,891,298	2,537,587	1,293,095	1,038,452
Rx Rate (Percent)	4.72 %	26.66 %	26.73 %	26.17 %	22.91 %	22.22 %
Rx Rate (L1) (Bit/s)	850.31 M	4.8 G	4.81 G	4.71 G	4.12 G	4 G
Rx Rate (Fps)	1.27 M	4.05 M	2.18 M	1.11 M	493.77 K	384.62 K
Loss Rate (Percent)	92.13 %	55.57 %	55.45 %	56.39 %	61.81 %	62.96 %
Loss (Frames)	444,182,434	152,062,213	81,362,646	42,925,829	23,979,719	19,615,078
P-0-0-0						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	12,907	6,365,252	3,220,603	1,780,534	903,374	750,897
- Rx Rate (L1) (Bit/s)	289.12 K	251.22 M	237.04 M	252.6 M	251.5 M	260.31 M
- Rx Rate (Fps)	430	212,175	107,353	59,351	30,112	25,030
- Flood Count (Frames)	59	58	55	55	57	55
P-0-0-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	11,227	6,419,699	3,199,670	1,812,695	907,400	738,163
- Rx Rate (L1) (Bit/s)	251.48 K	253.36 M	235.5 M	257.16 M	252.62 M	255.9 M
- Rx Rate (Fps)	374	213,990	106,656	60,423	30,247	24,605
- Flood Count (Frames)	59	57	59	56	61	58
P-0-0-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	11,032	6,427,551	3,464,155	1,789,123	919,066	694,338
- Rx Rate (L1) (Bit/s)	247.12 K	253.67 M	254.96 M	253.82 M	255.87 M	240.7 M
- Rx Rate (Fps)	368	214,252	115,472	59,637	30,636	23,145
- Flood Count (Frames)	63	57	59	56	58	54
P-0-0-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	11,235	6,433,897	3,524,602	1,760,164	914,709	726,188



- Rx Rate (L1) (Bit/s)	251.66 K	253.92 M	259.41 M	249.71 M	254.65 M	251.75 M
- Rx Rate (Fps)	375	214,463	117,487	58,672	30,490	24,206
- Flood Count (Frames)	59	59	58	56	59	54
P-0-0-4	00-010	1= 000 000	0.150.100			
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	11,524	6,459,870	3,493,455	1,800,249	918,748	715,539
- Rx Rate (L1) (Bit/s)	258.14 K	254.95 M	257.12 M	255.4 M	255.78 M	248.05 M
- Rx Rate (Fps)	384	215,329	116,449	60,008	30,625	23,851
- Flood Count (Frames)	60	54	54	57	56	55
P-0-0-5	00 705 740	45 000 000	0.450.400	1 000 011	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	202,152	6,429,130	3,485,341	1,822,678	902,408	698,220
- Rx Rate (L1) (Bit/s)	4.53 M	253.74 M	256.52 M	258.58 M	251.23 M	242.05 M
- Rx Rate (Fps)	6,738	214,304	116,178	60,756	30,080	23,274
- Flood Count (Frames)	57	53	55	56	58	54
P-0-2-0	00 705 740	45 202 602	0.450.400	4 220 244	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,721,004	6,841,211	3,666,256	1,777,368	468,613	416,894
- Rx Rate (L1) (Bit/s)	105.75 M	270 M	269.84 M	252.15 M	130.46 M	144.52 M
- Rx Rate (Fps)	157,367	228,040	122,209	59,246	15,620	13,896
- Flood Count (Frames)	60	58	53	52	39	39
P-0-2-1	00 705 740	45 000 000	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,676,365	6,655,059	3,546,805	1,533,892	621,012	443,974
- Rx Rate (L1) (Bit/s)	104.75 M	262.65 M	261.04 M	217.61 M	172.89 M	153.91 M
- Rx Rate (Fps)	155,879	221,835	118,227	51,130	20,700	14,799
- Flood Count (Frames)	60	59	55	52	41	41
P-0-2-2	00 705 740	45.000.000	0.450.400	1 000 011	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,720,147 105.73 M	6,480,802	3,543,818	1,867,003 264.87 M	580,281	433,011
- Rx Rate (L1) (Bit/s)		255.78 M	260.83 M		161.55 M	150.11 M
- Rx Rate (Fps) - Flood Count (Frames)	157,338	216,027	118,127	62,233	19,343	14,434
P-0-2-3	58	55	55	49	41	36
	26,785,710	15 202 602	0.150.160	4 220 244	2 155 150	1 720 752
- Tx (Frames)		15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,719,277	6,600,777	3,565,771	1,809,125	555,353	434,767
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	105.71 M 157,309	260.51 M 220,026	262.44 M 118,859	256.65 M 60,304	154.61 M 18,512	150.72 M 14,492
- Flood Count (Frames)					39	
	57	56	51	51	39	37
P-0-2-4	26 705 710	15,202,692	0.150.160	4 220 211	2 155 150	1 720 752
- Tx (Frames) - Tx Rate (L1) (Bit/s)	26,785,710 600 M	600 M	8,152,163 600 M	4,229,311 600 M	2,155,158 600 M	1,730,753 599.99 M
- Tx Rate (Fps) - Rx (Frames)	892,857	506,756	271,739	140,977	71,839	57,692
. ,	4,019	6,679,720	3,617,052	1,583,977	662,882	566,489
- Rx Rate (L1) (Bit/s)	90.03 K	263.63 M	266.22 M	224.71 M	184.55 M	196.38 M
- Rx Rate (Fps)	134	222,657	120,568	52,799	22,096	18,883
- Flood Count (Frames)	59	52	55	57	53	51
P-0-2-5	20. 705 740	45 000 000	0.450.400	4 000 044	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	13,376	6,600,384	3,620,990	1,860,028	727,106	570,572
- Rx Rate (L1) (Bit/s)	299.62 K	260.5 M	266.5 M	263.88 M	202.43 M	197.8 M
- Rx Rate (Fps)	446	220,013	120,700	62,001	24,237	19,019
- Flood Count (Frames)	59	52	55	57	52	49
P-0-4-0	00 705 740	45 000 000	0.450.400	4 000 011	0.455.450	4 700 750
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692



- Rx (Frames)	13,630	7,027,469	3,710,228	1,839,779	770,969	606,153
- Rx Rate (L1) (Bit/s)	305.31 K	277.35 M	273.07 M	261 M	214.64 M	210.13 M
- Rx Rate (Fps)	454	234,249	123,674	61,326	25,699	20,205
- Flood Count (Frames)	57	52	53	59	52	46
P-0-4-1						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	13,364	6,931,415	3,738,157	1,900,562	779,247	582,496
- Rx Rate (L1) (Bit/s)	299.35 K	273.56 M	275.13 M	269.63 M	216.94 M	201.93 M
- Rx Rate (Fps)	445	231,047	124,605	63,352	25,975	19,417
- Flood Count (Frames)	58	50	54	56	49	45
P-0-4-2						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,719,563	7,248,848	3,968,739	2,029,068	1,071,790	863,247
- Rx Rate (L1) (Bit/s)	105.72 M	286.09 M	292.1 M	287.86 M	298.39 M	299.26 M
- Rx Rate (Fps)	157,319	241,628	132,291	67,636	35,726	28,775
- Flood Count (Frames)	56	57	55	56	51	59
P-0-4-3						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,719,505	7,334,388	4,042,194	2,091,296	1,058,375	805,334
- Rx Rate (L1) (Bit/s)	105.72 M	289.46 M	297.51 M	296.69 M	294.65 M	279.18 M
- Rx Rate (Fps)	157,317	244,480	134,740	69,710	35,279	26,844
- Flood Count (Frames)	56	57	56	57	54	58
P-0-4-4						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,715,321	7,347,651	3,964,064	2,105,335	1,026,315	735,667
- Rx Rate (L1) (Bit/s)	105.62 M	289.99 M	291.76 M	298.68 M	285.73 M	255.03 M
- Rx Rate (Fps)	157,177	244,922	132,135	70,178	34,211	24,522
- Flood Count (Frames)	61	54	57	58	55	61
P-0-4-5						
- Tx (Frames)	26,785,710	15,202,692	8,152,163	4,229,311	2,155,158	1,730,753
- Tx Rate (L1) (Bit/s)	600 M	600 M	600 M	600 M	600 M	599.99 M
- Tx Rate (Fps)	892,857	506,756	271,739	140,977	71,839	57,692
- Rx (Frames)	4,664,698	7,303,120	4,004,388	2,038,893	1,025,477	756,527
- Rx Rate (L1) (Bit/s)	104.49 M	288.23 M	294.72 M	289.25 M	285.49 M	262.26 M
- Rx Rate (Fps)	155,490	243,437	133,480	67,963	34,183	25,218
- Flood Count (Frames)	59	56	57	59	55	58

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	60 %
Tx Rate (L1) (Bit/s)	10.8 G
Tx Rate (Fps)	877,761
Rx Rate (Percent)	11.57 %
Rx Rate (L1) (Bit/s)	2.08 G
Rx Rate (Fps)	169.21 K
Loss Rate (Percent)	80.72 %
Loss (Frames)	21,256,633
P-0-0-0	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	261,260
- Rx Rate (L1) (Bit/s)	107.15 M
- Rx Rate (Fps)	8,709
- Flood Count (Frames)	30
P-0-0-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	201,474
- Rx Rate (L1) (Bit/s)	82.63 M




D. D. t. (F )	0.740
- Rx Rate (Fps) - Flood Count (Frames)	6,716 31
P-0-0-2	31
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	264,892
- Rx Rate (L1) (Bit/s)	108.64 M
- Rx Rate (Fps)	8,830
- Flood Count (Frames)	35
P-0-0-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames) - Rx Rate (L1) (Bit/s)	248,883 102.08 M
- Rx Rate (E1) (Bibs)	8,296
- Flood Count (Frames)	37
P-0-0-4	31
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	288,901
- Rx Rate (L1) (Bit/s)	118.49 M
- Rx Rate (Fps)	9,630
- Flood Count (Frames)	29
P-0-0-5	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	269,190
- Rx Rate (L1) (Bit/s)	110.4 M
- Rx Rate (Fps)	8,973
- Flood Count (Frames)	28
P-0-2-0	1 462 025
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,462,935 600 M
- Tx Rate (ET) (Blus)	48,765
- Rx (Frames)	338,464
- Rx Rate (L1) (Bit/s)	138.82 M
- Rx Rate (Fps)	11,282
- Flood Count (Frames)	32
P-0-2-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	328,693
- Rx Rate (L1) (Bit/s)	134.81 M
- Rx Rate (Fps)	10,956
- Flood Count (Frames)	36
P-0-2-2 - Tx (Frames)	1 462 025
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,462,935 600 M
- Tx Rate (ET) (Blus)	48,765
- Rx (Frames)	342,317
- Rx Rate (L1) (Bit/s)	140.4 M
- Rx Rate (Fps)	11,411
- Flood Count (Frames)	34
P-0-2-3	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	355,218
- Rx Rate (L1) (Bit/s)	145.69 M
- Rx Rate (Fps)	11,841
- Flood Count (Frames)	34
P-0-2-4	1 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps) - Rx (Frames)	48,765 274,006
- IVV (I IaIIICS)	214,000



- Rx Rate (L1) (Bit/s)	112.38 M
- Rx Rate (Fps)	9,134
- Flood Count (Frames)	39
P-0-2-5	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	286,474
- Rx Rate (L1) (Bit/s)	117.49 M
- Rx Rate (Fps)	9,549
- Flood Count (Frames)	32
P-0-4-0	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	319,779
- Rx Rate (L1) (Bit/s)	131.15 M
- Rx Rate (Fps)	10,659
- Flood Count (Frames)	32
P-0-4-1	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	295,920
- Rx Rate (L1) (Bit/s)	121.37 M
- Rx Rate (Fps)	9,864
- Flood Count (Frames)	32
P-0-4-2	
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	234,451
- Rx Rate (L1) (Bit/s)	96.16 M
- Rx Rate (Fps)	7,815
- Flood Count (Frames)	38
P-0-4-3	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	266,847
- Rx Rate (L1) (Bit/s)	109.44 M
- Rx Rate (Fps)	8,895
- Flood Count (Frames)	30
P-0-4-4	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	251,150
- Rx Rate (L1) (Bit/s)	103 M
- Rx Rate (Fps)	8,372
- Flood Count (Frames)	35
P-0-4-5	4 400 005
- Tx (Frames)	1,462,935
- Tx Rate (L1) (Bit/s)	600 M
- Tx Rate (Fps)	48,765
- Rx (Frames)	248,278
- Rx Rate (L1) (Bit/s)	101.83 M
- Rx Rate (Fps)	8,276
<ul> <li>Flood Count (Frames)</li> </ul>	26



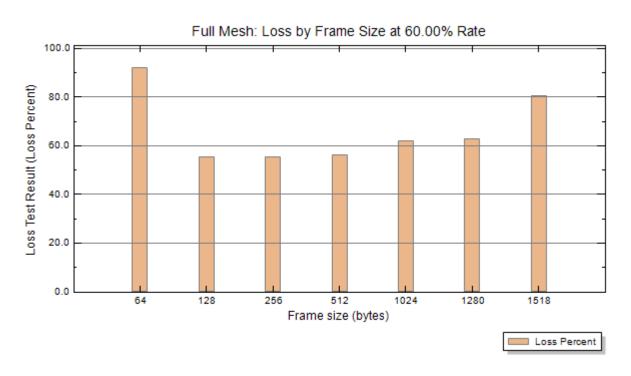

#### Results for 70.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	70 %	70 %	70 %	70 %	70 %	70 %
Tx Rate (L1) (Bit/s)	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G	12.6 G
Tx Rate (Fps)	18,749,997	10,641,884	5,706,512	2,960,519	1,508,611	1,211,536
Rx Rate (Percent)	5.47 %	28.54 %	28.57 %	28.9 %	23.65 %	23.37 %
Rx Rate (L1) (Bit/s)	985.07 M	5.14 G	5.14 G	5.2 G	4.26 G	4.21 G
Rx Rate (Fps)	1.47 M	4.34 M	2.33 M	1.22 M	509.68 K	404.39 K
Loss Rate (Percent)	92.18 %	59.23 %	59.19 %	58.71 %	66.22 %	66.62 %
Loss (Frames)	518,523,506	189,106,838	101,326,029	52,146,990	29,967,841	24,214,233
P-0-0-0						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	13,070	6,747,819	3,726,898	1,939,643	974,814	786,551
- Rx Rate (L1) (Bit/s)	292.77 K	266.31 M	274.3 M	275.17 M	271.39 M	272.67 M
- Rx Rate (Fps)	436	224,927	124,230	64,655	32,494	26,218
- Flood Count (Frames)	60	58	58	54	56	58
P-0-0-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,996	6,545,553	3,770,935	1,966,848	931,784	788,881
- Rx Rate (L1) (Bit/s)	134.31 K	258.33 M	277.54 M	279.03 M	259.41 M	273.48 M
- Rx Rate (Fps)	200	218,185	125,698	65,562	31,059	26,296
- Flood Count (Frames)	60	55	59	57	59	55
P-0-0-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,987	6,797,537	3,704,144	1,941,811	950,961	779,664
- Rx Rate (L1) (Bit/s)	134.11 K	268.28 M	272.62 M	275.48 M	264.75 M	270.28 M
- Rx Rate (Fps)	200	226,585	123,471	64,727	31,699	25,989
- Flood Count (Frames)	60	57	60	56	53	55
P-0-0-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	13,165	6,745,549	3,642,202	1,931,298	939,237	758,478



- Rx Rate (L1) (Bit/s)	294.9 K	266.22 M	268.07 M	273.99 M	261.48 M	262.94 N
- Rx Rate (Fps)	439	224,852	121,407	64,377	31,308	25,283
- Flood Count (Frames)	57	58	57	55	53	56
P-0-0-4						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	13,364	6,719,455	3,541,034	1,860,224	957,226	732,56
- Rx Rate (L1) (Bit/s)	299.35 K	265.19 M	260.62 M	263.9 M	266.49 M	253.96 N
- Rx Rate (Fps)	445	223,982	118,034	62,007	31,908	24,419
- Flood Count (Frames)	58	59	56	55	53	55
P-0-0-5						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	13,502	6,624,993	3,491,301	1,849,879	925,666	751,955
- Rx Rate (L1) (Bit/s)	302.44 K	261.47 M	256.96 M	262.44 M	257.71 M	260.68 N
- Rx Rate (Fps)	450	220,833	116,377	61,663	30,856	25,065
- Flood Count (Frames)	56	54	58	55	55	59
P-0-2-0						
- Tx (Frames)	31,249,995	17,736,474	9.510.854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 N
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,513,099	6,797,379	3,793,999	2,012,831	564,994	430,126
- Rx Rate (L1) (Bit/s)	123.49 M	268.27 M	279.24 M	285.55 M	157.29 M	149.11 N
- Rx Rate (LT) (Bil/s)	123.49 M	226,579	126.467	67,094	157.29 M	149.1110
- Flood Count (Frames)	58	226,579 51	53	54	10,033	14,330 42
P-0-2-1	36	10	33	54	44	42
-	21 240 005	17 726 474	0.510.054	4 024 400	2 514 251	2 040 220
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,513,172	6,931,298	3,925,715	1,989,581	558,516	442,607
- Rx Rate (L1) (Bit/s)	123.5 M	273.56 M	288.93 M	282.26 M	155.49 M	153.44 M
- Rx Rate (Fps)	183,772	231,043	130,857	66,319	18,617	14,754
- Flood Count (Frames)	60	49	56	53	37	36
P-0-2-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,503,091	7,152,309	3,801,223	1,996,825	564,613	451,238
- Rx Rate (L1) (Bit/s)	123.27 M	282.28 M	279.77 M	283.28 M	157.19 M	156.43 M
- Rx Rate (Fps)	183,436	238,410	126,707	66,561	18,820	15,041
- Flood Count (Frames)	58	51	52	53	44	46
P-0-2-3						
- Tx (Frames)	31,249,995	17,736,474	9.510.854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,513,159	7,402,898	3,847,620	2,077,959	565,004	459,472
- Rx Rate (L1) (Bit/s)	123.49 M	292.17 M	283.18 M	294.79 M	157.3 M	159.28 M
- Rx Rate (Fps)	183,772	246,763	128,254	69,265	18,833	15,316
- Flood Count (Frames)	59	49	50	52	45	40
P-0-2-4		7.5	30	52	70	
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx (Frames) - Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (LT) (Bivs)	1,041,667	591,216				
	, ,		317,028	164,473	83,812	67,308
- Rx (Frames)	7,989	7,660,244	3,761,061	1,967,880	742,064	570,520
- Rx Rate (L1) (Bit/s)	178.95 K	302.32 M	276.81 M	279.18 M	206.59 M	197.78 N
- Rx Rate (Fps)	266	255,341	125,369	65,596	24,735	19,017
- Flood Count (Frames)	52	51	51	54	48	43
P-0-2-5	04 040	47 -00 :=:	0.510.5=:	4.004.455	0.511.55	
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	7,831	7,381,101	3,720,045	1,872,924	752,276	534,657
- Rx Rate (L1) (Bit/s)	175.41 K	291.31 M	273.8 M	265.71 M	209.43 M	185.35 N
- Rx Rate (Fps)	261	246,037	124,002	62,431	25,076	17,822
- Flood Count (Frames)	49	52	54	56	46	45
P-0-4-0						
P-0-4-0 - Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
	31,249,995 700 M	17,736,474 700 M	9,510,854 700 M	4,934,199 700 M	2,514,351 700 M	2,019,226 700 M



- Rx (Frames)	7,825	7,521,444	4,051,862	2,126,330	769,376	600,023
- Rx Rate (L1) (Bit/s)	175.28 K	296.85 M	298.22 M	301.66 M	214.19 M	208.01 M
- Rx Rate (Fps)	261	250,715	135,062	70,878	25,646	20,001
- Flood Count (Frames)	50	51	53	51	45	45
P-0-4-1						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	7,958	7,712,282	4,108,415	2,127,338	782,978	600,974
- Rx Rate (L1) (Bit/s)	178.26 K	304.38 M	302.38 M	301.8 M	217.98 M	208.34 M
- Rx Rate (Fps)	265	257,076	136,947	70,911	26,099	20,032
- Flood Count (Frames)	49	52	56	51	51	39
P-0-4-2						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,461,741	7,847,511	4,194,617	2,275,208	1,141,095	923,550
- Rx Rate (L1) (Bit/s)	122.34 M	309.72 M	308.72 M	322.78 M	317.68 M	320.16 M
- Rx Rate (Fps)	182,058	261,584	139,821	75,840	38,037	30,785
- Flood Count (Frames)	51	54	57	50	49	55
P-0-4-3						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,461,974	7,893,646	4,243,808	2,260,449	1,082,665	884,730
- Rx Rate (L1) (Bit/s)	122.35 M	311.54 M	312.34 M	320.68 M	301.41 M	306.71 M
- Rx Rate (Fps)	182,066	263,122	141,460	75,348	36,089	29,491
- Flood Count (Frames)	51	50	53	49	47	56
P-0-4-4						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,434,650	7,834,694	4,255,953	2,228,469	1,102,903	838,033
- Rx Rate (L1) (Bit/s)	121.74 M	309.21 M	313.24 M	316.15 M	307.05 M	290.52 M
- Rx Rate (Fps)	181,155	261,156	141,865	74,282	36,763	27,934
- Flood Count (Frames)	54	52	57	50	51	55
P-0-4-5						
- Tx (Frames)	31,249,995	17,736,474	9,510,854	4,934,199	2,514,351	2,019,226
- Tx Rate (L1) (Bit/s)	700 M	700 M	700 M	700 M	700 M	700 M
- Tx Rate (Fps)	1,041,667	591,216	317,028	164,473	83,812	67,308
- Rx (Frames)	5,478,831	7,833,982	4,288,511	2,243,095	984,305	797,811
- Rx Rate (L1) (Bit/s)	122.73 M	309.18 M	315.63 M	318.22 M	274.03 M	276.57 M
- Rx Rate (Fps)	182,628	261,133	142,950	74,770	32,810	26,594
- Flood Count (Frames)	50	55	57	52	49	53

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	70 %
Tx Rate (L1) (Bit/s)	12.6 G
Tx Rate (Fps)	1,024,049
Rx Rate (Percent)	10.47 %
Rx Rate (L1) (Bit/s)	1.88 G
Rx Rate (Fps)	153.12 K
Loss Rate (Percent)	85.05 %
Loss (Frames)	26,127,962
P-0-0-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	237,685
- Rx Rate (L1) (Bit/s)	97.48 M
- Rx Rate (Fps)	7,923
- Flood Count (Frames)	31
P-0-0-1	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	242,115
- Rx Rate (L1) (Bit/s)	99.3 M




Dy Roto (Eng.)	9.071
- Rx Rate (Fps) - Flood Count (Frames)	8,071 27
P-0-0-2	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	217,082
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	89.03 M 7,236
- Flood Count (Frames)	24
P-0-0-3	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	232,638
- Rx Rate (L1) (Bit/s)	95.41 M
- Rx Rate (Fps) - Flood Count (Frames)	7,755 37
P-0-0-4	31
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	232,095
- Rx Rate (L1) (Bit/s)	95.19 M
- Rx Rate (Fps)	7,737
- Flood Count (Frames)	24
P-0-0-5 - Tx (Frames)	1 706 740
- Tx (Flames) - Tx Rate (L1) (Bit/s)	1,706,749 699.99 M
- Tx Rate (Eps)	56,892
- Rx (Frames)	251,590
- Rx Rate (L1) (Bit/s)	103.19 M
- Rx Rate (Fps)	8,386
- Flood Count (Frames)	26
P-0-2-0	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps) - Rx (Frames)	56,892 327,623
- Rx Rate (L1) (Bit/s)	134.37 M
- Rx Rate (Fps)	10,921
- Flood Count (Frames)	29
P-0-2-1	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	312,485
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	128.16 M 10,416
- Flood Count (Frames)	28
P-0-2-2	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	308,835
- Rx Rate (L1) (Bit/s)	126.66 M
- Rx Rate (Fps)	10,295 29
- Flood Count (Frames) P-0-2-3	29
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	306,571
- Rx Rate (L1) (Bit/s)	125.73 M
- Rx Rate (Fps)	10,219
- Flood Count (Frames)	32
P-0-2-4	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M 56,892
- Tx Rate (Fps) - Rx (Frames)	248,033
Tax (Trainico)	٠,٠٠٥



D D 1 (14) (D;(/)	404 70 14
- Rx Rate (L1) (Bit/s)	101.73 M
- Rx Rate (Fps)	8,268
- Flood Count (Frames)	33
P-0-2-5	4 700 740
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	259,495
- Rx Rate (L1) (Bit/s)	106.43 M
- Rx Rate (Fps)	8,650
- Flood Count (Frames) P-0-4-0	31
- Tx (Frames)	1,706,749
- Tx (Frames) - Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	270,164
	110.8 M
- Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	9,005
- Flood Count (Frames) P-0-4-1	29
- Tx (Frames)	1,706,749
- Tx (Frames) - Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	242,870
- Rx (Frames)	99.61 M
	8,096
- Rx Rate (Fps)	
- Flood Count (Frames) P-0-4-2	32
- Tx (Frames)	1,706,749
	699.99 M
- Tx Rate (L1) (Bit/s)	56,892
- Tx Rate (Fps)	198,222
- Rx (Frames)	· · · · · · · · · · · · · · · · · · ·
- Rx Rate (L1) (Bit/s)	81.3 M 6,607
- Rx Rate (Fps) - Flood Count (Frames)	34
P-0-4-3	<u> </u>
- Tx (Frames)	1,706,749
- Tx (Frames)	699.99 M
- Tx Rate (ET) (Blus)	56,892
- Rx (Frames)	228,161
- Rx Rate (L1) (Bit/s)	93.58 M
- Rx Rate (Fps)	7,605
- Flood Count (Frames)	27
P-0-4-4	
- Tx (Frames)	1,706,749
- Tx (Frames)	699.99 M
- Tx Rate (E1) (Blus)	56,892
- Rx (Frames)	226,729
- Rx (Frames) - Rx Rate (L1) (Bit/s)	92.99 M
- Rx Rate (E1) (Blus)	7,558
- Flood Count (Frames)	32
P-0-4-5	
- Tx (Frames)	1,706,749
- Tx Rate (L1) (Bit/s)	699.99 M
- Tx Rate (Fps)	56,892
- Rx (Frames)	251,127
- Rx Rate (L1) (Bit/s)	103 M
- Rx Rate (Fps)	8,371
- Flood Count (Frames)	29
. 1004 Count (1 funics)	23



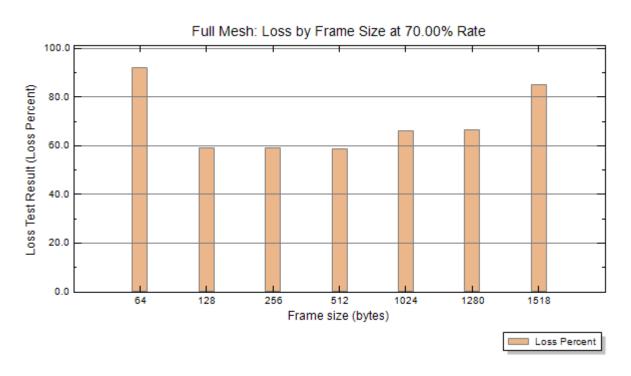

#### Results for 80.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Tx Rate (L1) (Bit/s)	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G	14.4 G
Tx Rate (Fps)	21,428,568	12,162,154	6,521,737	3,383,452	1,724,137	1,384,609
Rx Rate (Percent)	2.29 %	26.87 %	29.9 %	30.06 %	24.95 %	23.97 %
Rx Rate (L1) (Bit/s)	412.46 M	4.84 G	5.38 G	5.41 G	4.49 G	4.31 G
Rx Rate (Fps)	613.77 K	4.08 M	2.44 M	1.27 M	537.63 K	414.85 K
Loss Rate (Percent)	97.14 %	66.42 %	62.62 %	62.42 %	68.82 %	70.04 %
Loss (Frames)	624,443,842	242,329,701	122,521,797	63,358,061	35,595,101	29,092,908
P-0-0-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	12,522	4,457,749	3,834,011	2,051,577	1,043,923	742,570
- Rx Rate (L1) (Bit/s)	280.49 K	175.93 M	282.18 M	291.05 M	290.63 M	257.42 M
- Rx Rate (Fps)	417	148,592	127,800	68,386	34,797	24,752
- Flood Count (Frames)	59	57	57	57	60	54
P-0-0-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	12,396	4,619,672	3,914,298	1,999,928	1,004,187	753,883
- Rx Rate (L1) (Bit/s)	277.67 K	182.32 M	288.09 M	283.72 M	279.57 M	261.35 M
- Rx Rate (Fps)	413	153,989	130,477	66,664	33,473	25,129
- Flood Count (Frames)	61	59	56	60	58	54
P-0-0-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	12,705	4,725,359	3,830,303	2,053,737	1,019,407	754,605
- Rx Rate (L1) (Bit/s)	284.59 K	186.49 M	281.91 M	291.36 M	283.8 M	261.6 M
- Rx Rate (Fps)	424	157,512	127,677	68,458	33,980	25,154
- Flood Count (Frames)	57	58	59	60	59	59
P-0-0-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	16,209	4,797,429	3,760,431	2,068,790	988,967	744,012



- Rx Rate (L1) (Bit/s)	363.08 K	189.34 M	276.77 M	293.49 M	275.33 M	257.92 M
- Rx Rate (Fps)	540	159,914	125,348	68,960	32,966	24,800
- Flood Count (Frames)	58	57	54	58	57	51
P-0-0-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	19,491	5,007,304	3,782,719	1,882,027	997,211	793,611
- Rx Rate (L1) (Bit/s)	436.6 K	197.62 M	278.41 M	267 M	277.62 M	275.12 M
- Rx Rate (Fps)	650	166,910	126,091	62,734	33,240	26,454
- Flood Count (Frames)	61	59	58	56	55	53
P-0-0-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	110,985	4,765,475	3,785,938	1,964,506	1,008,168	794,476
- Rx Rate (L1) (Bit/s)	2.49 M	188.08 M	278.65 M	278.7 M	280.67 M	275.42 M
- Rx Rate (Fps)	3,700	158,849	126,198	65,484	33,606	26,483
- Flood Count (Frames)	58	55	58	59	57	54
P-0-2-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	3,920,510	7,542,303	4,025,590	2,136,176	536,113	430,583
- Rx Rate (L1) (Bit/s)	87.82 M	297.67 M	296.28 M	303.05 M	149.25 M	149.27 M
- Rx Rate (Fps)	130,684	251,410	134,186	71,206	17,870	14,353
- Flood Count (Frames)	62	53	55	56	33	32
P-0-2-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	4,017,556	7,576,238	4,095,269	2,033,643	608,657	446,700
- Rx Rate (L1) (Bit/s)	89.99 M	299.01 M	301.41 M	288.51 M	169.45 M	154.86 M
- Rx Rate (Fps)	133,919	252,541	136,509	67,788	20,289	14,890
- Flood Count (Frames)	60	51	57	56	41	38
P-0-2-2		-				
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	4,094,876	7,598,864	4,063,500	2,142,989	609,369	456,272
- Rx Rate (L1) (Bit/s)	91.73 M	299.9 M	299.07 M	304.02 M	169.65 M	158.17 M
- Rx Rate (Fps)	136,496	253,295	135,450	71,433	20,312	15,209
- Flood Count (Frames)	59	50	54	54	37	36
P-0-2-3				<b>.</b>	0.	
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	4,089,924	7,569,427	4,051,819	2,056,117	555,104	483,313
- Rx Rate (L1) (Bit/s)	91.61 M	298.74 M	298.21 M	291.69 M	154.54 M	167.55 M
- Rx Rate (Fps)	136,331	252,314	135,061	68,537	18,503	16,110
- Flood Count (Frames)	57	50	52	56	36	34
P-0-2-4	51	30	52	50	30	J-1
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	2,673,501 800 M	2,307,002 800 M
- Tx Rate (ET) (Blus)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	49,369	7,433,773		1,994,112	809,743	566,592
- Rx (Flames)	1.11 M	293.39 M	3,956,651	282.9 M	225.43 M	
	1,646		291.21 M	66,470		196.42 M 18,886
- Rx Rate (Fps)		247,792	131,888		26,991	
- Flood Count (Frames)	55	55	54	54	49	49
P-0-2-5	25 744 200	20 270 250	40.000.500	F C20 007	0.070.504	0.007.000
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	638,126	7,470,268	3,956,327	2,027,186	762,566	595,690
- Rx Rate (L1) (Bit/s)	14.29 M	294.83 M	291.19 M	287.59 M	212.3 M	206.51 M
- Rx Rate (Fps)	21,271	249,009	131,878	67,573	25,419	19,856
- Flood Count (Frames)	52	55	50	53	48	43
P-0-4-0						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
		'				
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	800 M 1,190,476	800 M 675,675	800 M 362,319	800 M 187,970	800 M 95,785	800 M 76,923



- Rx (Frames)	631,738	7,785,997	4,162,530	2,208,284	762,787	615,004
- Rx Rate (L1) (Bit/s)	14.15 M	307.29 M	306.36 M	313.28 M	212.36 M	213.2 M
- Rx Rate (Fps)	21,058	259,533	138,751	73,609	25,426	20,500
- Flood Count (Frames)	53	56	50	53	46	42
P-0-4-1						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	634,600	7,969,805	4,105,029	2,201,986	748,750	629,813
- Rx Rate (L1) (Bit/s)	14.22 M	314.54 M	302.13 M	312.39 M	208.45 M	218.34 M
- Rx Rate (Fps)	21,153	265,660	136,834	73,400	24,958	20,994
- Flood Count (Frames)	54	56	54	56	47	44
P-0-4-2						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	22,760	8,105,877	4,423,365	2,310,165	1,230,638	1,002,717
- Rx Rate (L1) (Bit/s)	509.82 K	319.91 M	325.56 M	327.74 M	342.61 M	347.61 M
- Rx Rate (Fps)	759	270,196	147,446	77,006	41,021	33,424
- Flood Count (Frames)	50	61	55	57	59	55
P-0-4-3						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	22,831	8,182,557	4,411,381	2,300,169	1,161,394	927,534
- Rx Rate (L1) (Bit/s)	511.41 K	322.94 M	324.68 M	326.32 M	323.33 M	321.55 M
- Rx Rate (Fps)	761	272,752	147,046	76,672	38,713	30,918
- Flood Count (Frames)	48	61	58	53	60	54
P-0-4-4						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	19,228	8,368,958	4,435,288	2,308,982	1,152,086	857,567
- Rx Rate (L1) (Bit/s)	430.71 K	330.29 M	326.44 M	327.57 M	320.74 M	297.29 M
- Rx Rate (Fps)	641	278,965	147,843	76,966	38,403	28,586
- Flood Count (Frames)	53	62	58	58	59	55
P-0-4-5						
- Tx (Frames)	35,714,280	20,270,256	10,869,562	5,639,087	2,873,561	2,307,682
- Tx Rate (L1) (Bit/s)	800 M	800 M	800 M	800 M	800 M	800 M
- Tx Rate (Fps)	1,190,476	675,675	362,319	187,970	95,785	76,923
- Rx (Frames)	87,372	8,557,852	4,535,870	2,405,131	1,129,927	850,426
- Rx Rate (L1) (Bit/s)	1.96 M	337.75 M	333.84 M	341.21 M	314.57 M	294.81 M
- Rx Rate (Fps)	2,912	285,262	151,196	80,171	37,664	28,348
- Flood Count (Frames)	57	59	57	58	59	52

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx Rate (L1) (Bit/s)	14.4 G
Tx Rate (Fps)	1,170,348
Rx Rate (Percent)	11.37 %
Rx Rate (L1) (Bit/s)	2.05 G
Rx Rate (Fps)	166.38 K
Loss Rate (Percent)	85.78 %
Loss (Frames)	30,119,142
P-0-0-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	182,072
- Rx Rate (L1) (Bit/s)	74.67 M
- Rx Rate (Fps)	6,069
- Flood Count (Frames)	27
P-0-0-1	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	228,792
- Rx Rate (L1) (Bit/s)	93.84 M




D D ( ( )	7 000
- Rx Rate (Fps)	7,626
- Flood Count (Frames) P-0-0-2	30
- Tx (Frames)	1,950,580
- Tx (Frames) - Tx Rate (L1) (Bit/s)	1,950,560 800 M
- Tx Rate (ET) (Blus)	65,019
- Rx (Frames)	227,402
- Rx Rate (L1) (Bit/s)	93.27 M
- Rx Rate (Fps)	7,580
- Flood Count (Frames)	31
P-0-0-3	01
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	257,635
- Rx Rate (L1) (Bit/s)	105.66 M
- Rx Rate (Fps)	8,588
- Flood Count (Frames)	32
P-0-0-4	-
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	290,688
- Rx Rate (L1) (Bit/s)	119.22 M
- Rx Rate (Fps)	9,690
- Flood Count (Frames)	31
P-0-0-5	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	295,745
- Rx Rate (L1) (Bit/s)	121.29 M
- Rx Rate (Fps)	9,858
- Flood Count (Frames)	32
P-0-2-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	380,022
- Rx Rate (L1) (Bit/s)	155.86 M
- Rx Rate (Fps)	12,667
- Flood Count (Frames)	34
P-0-2-1	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	362,461
- Rx Rate (L1) (Bit/s)	148.66 M
- Rx Rate (Fps)	12,082
- Flood Count (Frames)	33
P-0-2-2	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	350,791
- Rx Rate (L1) (Bit/s)	143.87 M
- Rx Rate (Fps)	11,693
- Flood Count (Frames)	34
P-0-2-3	1 050 500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	336,901
- Rx Rate (L1) (Bit/s)	138.17 M
- Rx Rate (Fps)	11,230
- Flood Count (Frames)	37
P-0-2-4 - Ty (Frames)	1 050 500
- Tx (Frames)	1,950,580 800 M
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps) - Rx (Frames)	65,019 261,513
ita (i idilica)	201,010



- Rx Rate (L1) (Bit/s)	107.26 M
- Rx Rate (Fps)	8,717
- Flood Count (Frames)	27
P-0-2-5	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	264,730
- Rx Rate (L1) (Bit/s)	108.57 M
- Rx Rate (Fps)	8,824
- Flood Count (Frames)	31
P-0-4-0	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	276,515
- Rx Rate (L1) (Bit/s)	113.41 M
- Rx Rate (Fps)	9,217
- Flood Count (Frames)	21
P-0-4-1	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	309,421
- Rx Rate (L1) (Bit/s)	126.9 M
- Rx Rate (Fps)	10,314
- Flood Count (Frames)	31
P-0-4-2	
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	228,853
- Rx Rate (L1) (Bit/s)	93.86 M
- Rx Rate (Fps)	7,628
- Flood Count (Frames)	30
P-0-4-3	- 30
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	1,930,380 800 M
	65,019
- Tx Rate (Fps)	253,778
- Rx (Frames) - Rx Rate (L1) (Bit/s)	104.08 M
	8,459
- Rx Rate (Fps) - Flood Count (Frames)	
P-0-4-4	21
	1 050 500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	249,158
- Rx Rate (L1) (Bit/s)	102.19 M
- Rx Rate (Fps)	8,305
- Flood Count (Frames)	25
P-0-4-5	4.050.500
- Tx (Frames)	1,950,580
- Tx Rate (L1) (Bit/s)	800 M
- Tx Rate (Fps)	65,019
- Rx (Frames)	234,821
- Rx Rate (L1) (Bit/s)	96.31 M
- Rx Rate (Fps)	7,827
- Flood Count (Frames)	28



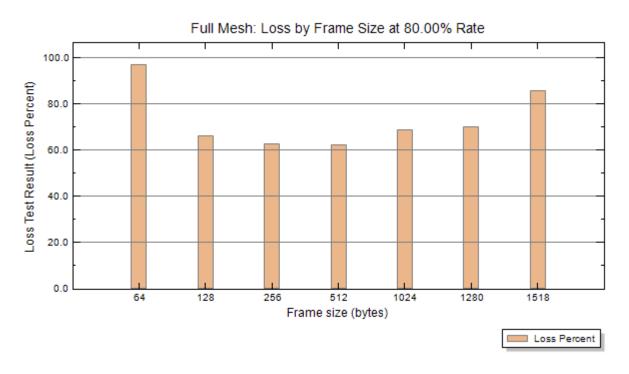

#### Results for 90.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90 %	90 %	90 %	90 %	90 %	90 %
Tx Rate (L1) (Bit/s)	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G	16.2 G
Tx Rate (Fps)	24,107,139	13,682,423	7,336,952	3,806,385	1,939,652	1,557,683
Rx Rate (Percent)	0.01 %	14.52 %	28.67 %	23.4 %	23.16 %	18.42 %
Rx Rate (L1) (Bit/s)	2.47 M	2.61 G	5.16 G	4.21 G	4.17 G	3.32 G
Rx Rate (Fps)	3.68 K	2.21 M	2.34 M	989.8 K	499.19 K	318.75 K
Loss Rate (Percent)	99.98 %	83.87 %	68.14 %	74 %	74.26 %	79.54 %
Loss (Frames)	723,103,897	344,247,957	149,992,364	84,497,526	43,213,869	37,167,960
P-0-0-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,372	20,776	3,894,947	1,999,834	1,101,776	707,939
- Rx Rate (L1) (Bit/s)	142.73 K	819.96 K	286.67 M	283.71 M	306.73 M	245.42 M
- Rx Rate (Fps)	212	693	129,832	66,661	36,726	23,598
- Flood Count (Frames)	58	58	58	58	58	56
P-0-0-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,657	7,959	4,052,612	2,060,177	1,054,838	649,015
- Rx Rate (L1) (Bit/s)	149.12 K	314.12 K	298.27 M	292.27 M	293.67 M	224.99 M
- Rx Rate (Fps)	222	265	135,087	68,673	35,161	21,634
- Flood Count (Frames)	59	62	59	55	58	59
P-0-0-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	7,001	20,098	4,016,586	2,119,367	1,072,453	0
- Rx Rate (L1) (Bit/s)	156.82 K	793.2 K	295.62 M	300.67 M	298.57 M	0
- Rx Rate (Fps)	233	670	133,886	70,646	35,748	0
- Flood Count (Frames)	59	60	58	57	57	1
P-0-0-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	7,060	19,826	3,952,707	2,125,746	1,046,960	760,828



- Rx Rate (L1) (Bit/s)	158.14 K	782.47 K	290.92 M	301.57 M	291.47 M	263.75 M
- Rx Rate (Fps)	235	661	131,757	70,858	34,899	25,361
- Flood Count (Frames)	56	60	57	57	60	48
P-0-0-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,602	18,790	3,951,006	2,173,366	1,054,475	681,134
- Rx Rate (L1) (Bit/s)	147.88 K	741.58 K	290.79 M	308.33 M	293.57 M	236.13 M
- Rx Rate (Fps)	220	626	131,700	72,446	35,149	22,704
- Flood Count (Frames)	55	56	56	56	57	53
P-0-0-5						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,297	19,023	3,854,123	2,017,876	1,046,916	690,176
- Rx Rate (L1) (Bit/s)	141.05 K	750.77 K	283.66 M	286.27 M	291.46 M	239.26 M
- Rx Rate (Fps)	210	634	128,471	67,263	34,897	23,006
- Flood Count (Frames)	56	57	58	52	56	47
P-0-2-0						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,665	6,117,567	3,612,223	2,203,359	520,871	366,062
- Rx Rate (L1) (Bit/s)	126.9 K	241.44 M	265.86 M	312.58 M	145.01 M	126.9 M
- Rx Rate (Fps)	189	203.919	120,407	73,445	17,362	12,202
- Flood Count (Frames)	60	61	51	58	35	37
P-0-2-1		01	01			01
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (E1) (Blus)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,559	6,171,314	407,008	2,181,756	529,180	368,168
- Rx Rate (L1) (Bit/s)	124.52 K	243.56 M	0	309.52 M	147.32 M	127.63 M
- Rx Rate (Fps)	124.32 K	205,710	0	72,725	17,639	12,272
- Flood Count (Frames)	61	203,710	1	57	37	12,272
	01	60		5/	31	43
P-0-2-2	40 170 EGE	22 004 020	10 000 050	6 242 075	2 222 754	2 506 120
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,362	6,076,593	3,684,116	2,051,199	497,900	395,565
- Rx Rate (L1) (Bit/s)	120.11 K	239.82 M	271.15 M	291 M	138.62 M	137.13 M
- Rx Rate (Fps)	179	202,553	122,804	68,373	16,597	13,186
- Flood Count (Frames)	58	60	49	56	35	33
P-0-2-3	10 1=0 =0=	00.001.000	40.000.0=0	2 2 4 2 2 = =		0 =00 100
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,607	6,170,477	3,525,294	2,156,140	511,041	373,296
- Rx Rate (L1) (Bit/s)	125.6 K	243.53 M	259.46 M	305.88 M	142.27 M	129.41 M
- Rx Rate (Fps)	187	205,683	117,510	71,871	17,035	12,443
- Flood Count (Frames)	58	57	52	57	35	34
P-0-2-4			10.555			
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,435	0	4,286,168	0	607,065	544,515
- Rx Rate (L1) (Bit/s)	121.74 K	0	315.46 M	0	169.01 M	188.77 M
- Rx Rate (Fps)	181	0	142,872	0	20,236	18,151
- Flood Count (Frames)	60	1	60	1	45	38
P-0-2-5						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,388	7,510,616	4,241,333	0	0	479,435
- Rx Rate (L1) (Bit/s)	120.69 K	296.42 M	312.16 M	0	0	166.2 M
- IXX IXale (LT) (DIUS)	180	250,354	141,378	0	0	15,981
- Rx Rate (Fps)				-	-	45
	61	55	57	1	1	40
- Rx Rate (Fps)		55	57	1	1	43
- Rx Rate (Fps) - Flood Count (Frames) P-0-4-0	61					
- Rx Rate (Fps) - Flood Count (Frames)		22,804,038 900 M	12,228,253 900 M	6,343,975 900 M	3,232,754 900 M	2,596,138 899.99 M



- Rx (Frames)	5,493	6,967,116	4,287,436	1,598,365	692,151	505,276
- Rx Rate (L1) (Bit/s)	123.04 K	274.97 M	315.56 M	226.75 M	192.69 M	175.16 M
- Rx Rate (Fps)	183	232,237	142,915	53,279	23,072	16,843
- Flood Count (Frames)	55	57	53	52	38	36
P-0-4-1						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	5,244	6,734,660	4,194,245	1,530,132	644,341	525,694
- Rx Rate (L1) (Bit/s)	117.47 K	265.79 M	308.7 M	217.07 M	179.38 M	182.24 M
- Rx Rate (Fps)	175	224,489	139,808	51,004	21,478	17,523
- Flood Count (Frames)	60	54	59	55	46	41
P-0-4-2						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,242	6,948,597	4,654,435	1,756,778	1,187,616	851,534
- Rx Rate (L1) (Bit/s)	139.82 K	274.24 M	342.57 M	249.23 M	330.63 M	295.2 M
- Rx Rate (Fps)	208	231,620	155,148	58,559	39,587	28,384
- Flood Count (Frames)	58	56	55	57	59	63
P-0-4-3						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,130	6,920,983	4,743,257	1,808,819	1,156,071	815,685
- Rx Rate (L1) (Bit/s)	137.31 K	273.15 M	349.1 M	256.61 M	321.85 M	282.77 M
- Rx Rate (Fps)	204	230,699	158,109	60,294	38,536	27,190
- Flood Count (Frames)	57	51	51	55	57	58
P-0-4-4						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	6,133	0	4,687,923	1,911,110	1,155,537	848,202
- Rx Rate (L1) (Bit/s)	137.38 K	0	345.03 M	271.12 M	321.7 M	294.04 M
- Rx Rate (Fps)	204	0	156,264	63,704	38,518	28,273
- Flood Count (Frames)	59	1	53	58	57	63
P-0-4-5						
- Tx (Frames)	40,178,565	22,804,038	12,228,253	6,343,975	3,232,754	2,596,138
- Tx Rate (L1) (Bit/s)	900 M	900 M	900 M	900 M	900 M	899.99 M
- Tx Rate (Fps)	1,339,286	760,135	407,608	211,466	107,758	86,538
- Rx (Frames)	8,026	6,500,332	4,477,779	0	1,096,512	0
- Rx Rate (L1) (Bit/s)	179.78 K	256.55 M	329.56 M	0	305.27 M	0
- Rx Rate (Fps)	268	216,678	149,259	0	36,550	0
- Flood Count (Frames)	59	59	54	2	58	2

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	90 %
Tx Rate (L1) (Bit/s)	16.2 G
Tx Rate (Fps)	1,316,636
Rx Rate (Percent)	9.33 %
Rx Rate (L1) (Bit/s)	1.68 G
Rx Rate (Fps)	136.56 K
Loss Rate (Percent)	89.63 %
Loss (Frames)	35,402,442
P-0-0-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	203,778
- Rx Rate (L1) (Bit/s)	83.58 M
- Rx Rate (Fps)	6,793
- Flood Count (Frames)	22
P-0-0-1	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	199,075
- Rx Rate (L1) (Bit/s)	81.65 M




D D ( ( )	0.000
- Rx Rate (Fps)	6,636
- Flood Count (Frames) P-0-0-2	30
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	226,250
- Rx Rate (L1) (Bit/s)	92.79 M
- Rx Rate (Fps)	7,542
- Flood Count (Frames)	24
P-0-0-3	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	210,443
- Rx Rate (L1) (Bit/s)	86.31 M
- Rx Rate (Fps)	7,015
- Flood Count (Frames)	25
P-0-0-4 - Tx (Frames)	2 104 204
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,194,394 899.99 M
- Tx Rate (ET) (Blus)	73,146
- Rx (Frames)	212,167
- Rx Rate (L1) (Bit/s)	87.02 M
- Rx Rate (Fps)	7,072
- Flood Count (Frames)	32
P-0-0-5	ÜZ.
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	210,995
- Rx Rate (L1) (Bit/s)	86.54 M
- Rx Rate (Fps)	7,033
- Flood Count (Frames)	28
P-0-2-0	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	279,321
- Rx Rate (L1) (Bit/s)	114.56 M
- Rx Rate (Fps)	9,311
- Flood Count (Frames) P-0-2-1	34
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	279,233
- Rx Rate (L1) (Bit/s)	114.52 M
- Rx Rate (Fps)	9,308
- Flood Count (Frames)	32
P-0-2-2	
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	291,318
- Rx Rate (L1) (Bit/s)	119.48 M
- Rx Rate (Fps)	9,711
- Flood Count (Frames)	31
P-0-2-3	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	266,428
- Rx Rate (L1) (Bit/s)	109.27 M
- Rx Rate (Fps) - Flood Count (Frames)	8,881 31
P-0-2-4	JI
- Tx (Frames)	2,194,394
- Tx (Harries)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	241,151
( )	,



- Rx Rate (L1) (Bit/s)	98.9 M
- Rx Rate (Fps)	8,038
- Flood Count (Frames)	20
P-0-2-5	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	240,634
- Rx Rate (L1) (Bit/s)	98.69 M
- Rx Rate (Fps)	8,021
- Flood Count (Frames)	32
P-0-4-0	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	242,827
- Rx Rate (L1) (Bit/s)	99.59 M
- Rx Rate (Fps)	8,094
- Flood Count (Frames)	24
P-0-4-1	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	240,754
- Rx Rate (L1) (Bit/s)	98.74 M
- Rx Rate (Fps)	8,025
- Flood Count (Frames)	22
P-0-4-2	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	188,631
- Rx Rate (L1) (Bit/s)	77.36 M
- Rx Rate (Fps)	6,288
- Flood Count (Frames)	20
P-0-4-3	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	176,516
- Rx Rate (L1) (Bit/s)	72.4 M
- Rx Rate (Fps)	5,884
- Flood Count (Frames)	25
P-0-4-4	0.404.004
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	193,576
- Rx Rate (L1) (Bit/s)	79.39 M
- Rx Rate (Fps)	6,453
- Flood Count (Frames)	22
P-0-4-5	0.404.001
- Tx (Frames)	2,194,394
- Tx Rate (L1) (Bit/s)	899.99 M
- Tx Rate (Fps)	73,146
- Rx (Frames)	193,553
- Rx Rate (L1) (Bit/s)	79.38 M
- Rx Rate (Fps)	6,452
- Flood Count (Frames)	20



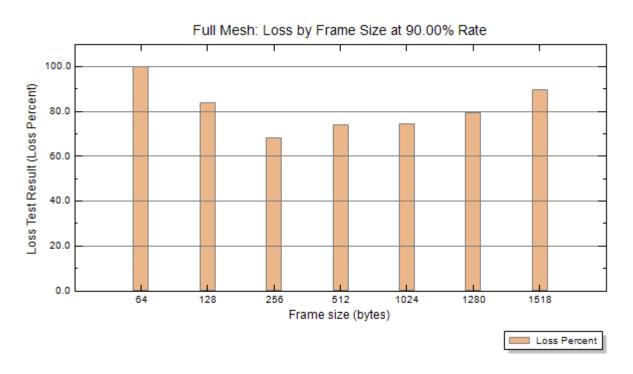

#### Results for 100.00% Rate

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx Rate (L1) (Bit/s)	18 G	18 G	18 G	18 G	18 G	18 G
Tx Rate (Fps)	26,785,710	15,202,702	8,152,166	4,229,318	2,155,168	1,730,767
Rx Rate (Percent)	0.89 %	11.7 %	21.35 %	28.11 %	20.66 %	23.21 %
Rx Rate (L1) (Bit/s)	161.02 M	2.11 G	3.84 G	5.06 G	3.72 G	4.18 G
Rx Rate (Fps)	239.61 K	1.78 M	1.74 M	1.19 M	445.16 K	401.73 K
Loss Rate (Percent)	99.11 %	88.3 %	78.65 %	71.89 %	79.34 %	76.79 %
Loss (Frames)	796,383,002	402,739,025	192,358,636	91,210,989	51,300,263	39,871,238
P-0-0-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,431	4,452,417	0	2,137,287	983,464	886,110
- Rx Rate (L1) (Bit/s)	144.05 K	175.72 M	0	303.21 M	273.8 M	307.18 M
- Rx Rate (Fps)	214	148,414	0	71,243	32,782	29,537
- Flood Count (Frames)	59	59	1	56	55	56
P-0-0-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,707	0	3,832,909	1,984,246	0	810,682
- Rx Rate (L1) (Bit/s)	150.24 K	0	282.1 M	281.5 M	0	281.04 M
- Rx Rate (Fps)	224	0	127,764	66,142	0	27,023
- Flood Count (Frames)	58	1	55	56	1	46
P-0-0-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,863	0	3,746,776	0	998,262	785,736
- Rx Rate (L1) (Bit/s)	153.73 K	0	275.76 M	0	277.92 M	272.39 M
- Rx Rate (Fps)	229	0	124,893	0	33,275	26,191
- Flood Count (Frames)	56	1	57	2	57	67
P-0-0-3						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	8,251	4,468,959	3,691,539	1,921,853	1,019,249	695,583



- Rx Rate (L1) (Bit/s)	184.82 K	176.37 M	271.7 M	272.65 M	283.76 M	241.14 M
- Rx Rate (Fps)	275	148,965	123,051	64,062	33,975	23,186
- Flood Count (Frames)	60	56	55	55	55	52
P-0-0-4	44.040.050	05 007 007	40 500 044	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	7,779	4,468,444	3,619,254	1,937,963	1,037,333	731,809
- Rx Rate (L1) (Bit/s)	174.25 K	176.35 M	266.38 M	274.93 M	288.79 M	253.69 M
- Rx Rate (Fps)	259	148,948	120,642	64,599	34,578	24,394
- Flood Count (Frames)	57	57	55	56	56	53
P-0-0-5	44040050	05 007 007	10 500 011	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	7,490	4,468,613	3,436,868	1,916,374	1,003,008	760,380
- Rx Rate (L1) (Bit/s)	167.78 K	176.36 M	252.95 M	271.87 M	279.24 M	263.6 M
- Rx Rate (Fps)	250	148,954	114,562	63,879	33,434	25,346
- Flood Count (Frames)	58	56	55	55	54	55
P-0-2-0	44.040.050	05 007 007	40.500.044	7.040.000	2 504 047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,205	8,680	0	2,305,992	479,722	0
- Rx Rate (L1) (Bit/s)	138.99 K	342.57 K	0	327.14 M	133.55 M	0
- Rx Rate (Fps)	207	289	0	76,866	15,991	0
- Flood Count (Frames)	61	52	1	53	37	0
P-0-2-1	44040050	05 007 007	10 500 011	7.040.000	0.504.047	0.004.044
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,693	8,340	3,604,718	2,251,631	434,208	369,193
- Rx Rate (L1) (Bit/s)	149.92 K	329.15 K	265.31 M	319.43 M	120.88 M	127.99 M
- Rx Rate (Fps)	223	278	120,157	75,054	14,474	12,306
- Flood Count (Frames)	60	51	72	52	38	35
P-0-2-2			10 -00 011		0 -01 01-	
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	5,724	7,678	3,857,390	2,207,713	451,316	354,850
- Rx Rate (L1) (Bit/s)	128.22 K	303.03 K	283.9 M	313.2 M	125.65 M	123.01 M
- Rx Rate (Fps)	191	256	128,580	73,590	15,044	11,828
- Flood Count (Frames)	60	52	52	51	45	29
P-0-2-3			10 -00 011		0 -01 01-	
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,071	7,674	3,828,692	2,329,375	465,256	362,794
- Rx Rate (L1) (Bit/s)	135.99 K	302.87 K	281.79 M	330.46 M	129.53 M	125.77 M
- Rx Rate (Fps)	202	256	127,623	77,646	15,509	12,093
- Flood Count (Frames)	61	49	53	52	31	31
P-0-2-4						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	0	2,386,588	583,664	549,490
- Rx Rate (L1) (Bit/s)	0	0	0	338.58 M	162.49 M	190.49 M
- Rx Rate (Fps)	0	0	0	79,553	19,455	18,316
- Flood Count (Frames)	1	1	1	78	49	42
P-0-2-5						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	0	0	3,913,366	2,484,158	0	552,962
- Rx Rate (L1) (Bit/s)	0	0	288.02 M	352.42 M	0	191.69 M
- Rx Rate (Fps)	0	0	130,446	82,805	0	18,432
- Flood Count (Frames)	1	1	53	78	1	42
P-0-4-0						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
T. D-4- (L4) (D:4/-)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (L1) (Bit/s) - Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154



- Rx (Frames)	2,630,744	3,025,750	3,865,385	2,501,451	568,997	570,763
- Rx Rate (L1) (Bit/s)	58.93 M	119.42 M	284.49 M	354.87 M	158.41 M	197.86 M
- Rx Rate (Fps)	87,691	100,858	128,846	83,382	18,967	19,025
- Flood Count (Frames)	59	51	52	56	39	40
P-0-4-1						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	2,630,685	3,283,366	3,774,947	2,670,224	622,963	593,681
- Rx Rate (L1) (Bit/s)	58.93 M	129.58 M	277.84 M	378.82 M	173.43 M	205.81 M
- Rx Rate (Fps)	87,690	109,446	125,832	89,007	20,765	19,789
- Flood Count (Frames)	57	53	53	56	39	43
P-0-4-2						
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	6,168	7,275,370	3,783,611	2,321,828	1,233,440	1,018,635
- Rx Rate (L1) (Bit/s)	138.16 K	287.13 M	278.47 M	329.39 M	343.39 M	353.13 M
- Rx Rate (Fps)	206	242,512	126,120	77,394	41,115	33,955
- Flood Count (Frames)	58	54	53	54	60	56
P-0-4-3						
- Tx (Frames)	44.642.850	25,337,837	13.586.944	7.048.863	3,591,947	2.884.611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1.488.095	844,595	452.898	234,962	119,732	96,154
- Rx (Frames)	6,011	7,289,845	3,666,445	2,180,104	1,177,878	1,027,271
- Rx Rate (L1) (Bit/s)	134.65 K	287.71 M	269.85 M	309.28 M	327.92 M	356.12 M
- Rx Rate (Fps)	200	242,995	122,215	72,670	39,263	34,242
- Flood Count (Frames)	58	51	48	53	58	54
P-0-4-4						-
- Tx (Frames)	44,642,850	25,337,837	13.586.944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	5,773	7,121,852	0	2,131,758	1,153,711	997,895
- Rx Rate (L1) (Bit/s)	129.32 K	281.08 M	0	302.43 M	321.19 M	345.94 M
- Rx Rate (Fps)	192	237,395	0	71,059	38,457	33,263
- Flood Count (Frames)	60	67	1	57	58	57
P-0-4-5						-
- Tx (Frames)	44,642,850	25,337,837	13,586,944	7,048,863	3,591,947	2,884,611
- Tx Rate (L1) (Bit/s)	1000 M	1000 M	1000 M	1000 M	1000 M	1000 M
- Tx Rate (Fps)	1,488,095	844,595	452,898	234,962	119,732	96,154
- Rx (Frames)	1,840,703	7,455,053	3,584,456	0	1,142,312	983,926
- Rx Rate (L1) (Bit/s)	41.23 M	294.23 M	263.82 M	0	318.02 M	341.09 M
- Rx Rate (Fps)	61,357	248,502	119,482	0	38,077	32,798
- Flood Count (Frames)	59	51	53	1	62	71
	30	01			V-	

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	100 %
Tx Rate (L1) (Bit/s)	18 G
Tx Rate (Fps)	1,462,935
Rx Rate (Percent)	9.01 %
Rx Rate (L1) (Bit/s)	1.62 G
Rx Rate (Fps)	131.86 K
Loss Rate (Percent)	90.99 %
Loss (Frames)	39,932,343
P-0-0-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	234,441
- Rx Rate (L1) (Bit/s)	96.15 M
- Rx Rate (Fps)	7,815
- Flood Count (Frames)	29
P-0-0-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	226,012
- Rx Rate (L1) (Bit/s)	92.7 M




- Rx Rate (Fps)	7,534
- Flood Count (Frames)	27
P-0-0-2	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	196,069
- Rx Rate (L1) (Bit/s)	80.41 M
- Rx Rate (Fps)	6,536
- Flood Count (Frames)	25
P-0-0-3	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps) - Rx (Frames)	81,274 211,913
- Rx Rate (L1) (Bit/s)	86.91 M
- Rx Rate (Fps)	7,064
- Flood Count (Frames)	28
P-0-0-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	196,438
- Rx Rate (L1) (Bit/s)	80.57 M
- Rx Rate (Fps)	6,548
- Flood Count (Frames)	25
P-0-0-5	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	190,120
- Rx Rate (L1) (Bit/s)	77.97 M
- Rx Rate (Fps)	6,337
- Flood Count (Frames) P-0-2-0	26
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	269,013
- Rx Rate (L1) (Bit/s)	110.33 M
- Rx Rate (Fps)	8,967
- Flood Count (Frames)	28
P-0-2-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	258,774
- Rx Rate (L1) (Bit/s)	106.13 M
- Rx Rate (Fps)	8,626
- Flood Count (Frames)	22
P-0-2-2	2 420 225
- Tx (Frames) - Tx Rate (L1) (Bit/s)	2,438,225 1000 M
- Tx Rate (E1) (Bivs)	81,274
- Rx (Frames)	260,461
- Rx Rate (L1) (Bit/s)	106.82 M
- Rx Rate (Fps)	8,682
- Flood Count (Frames)	27
P-0-2-3	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	277,407
- Rx Rate (L1) (Bit/s)	113.77 M
- Rx Rate (Fps)	9,247
- Flood Count (Frames)	24
P-0-2-4	0.400.00=
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps) - Rx (Frames)	81,274 239,522
- 11x (1 1a111cs)	239,322



D D ( (14) (D)(( )	00.04.14
- Rx Rate (L1) (Bit/s)	98.24 M
- Rx Rate (Fps)	7,984
- Flood Count (Frames)	29
P-0-2-5	0.400.005
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	255,846
- Rx Rate (L1) (Bit/s)	104.93 M
- Rx Rate (Fps)	8,528
- Flood Count (Frames)	29
P-0-4-0	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	230,565
- Rx Rate (L1) (Bit/s)	94.56 M
- Rx Rate (Fps)	7,686
- Flood Count (Frames)	34
P-0-4-1	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	259,213
- Rx Rate (L1) (Bit/s)	106.31 M
- Rx Rate (Fps)	8,640
- Flood Count (Frames)	27
P-0-4-2	21
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	156,640
- Rx Rate (L1) (Bit/s)	64.24 M
- Rx Rate (Fps)	5,221
- Flood Count (Frames)	25
P-0-4-3	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	139,771
- Rx Rate (L1) (Bit/s)	57.32 M
- Rx Rate (Fps)	4,659
- Flood Count (Frames)	22
P-0-4-4	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	159,473
- Rx Rate (L1) (Bit/s)	65.41 M
- Rx Rate (Fps)	5,316
- Flood Count (Frames)	20
P-0-4-5	
- Tx (Frames)	2,438,225
- Tx Rate (L1) (Bit/s)	1000 M
- Tx Rate (Fps)	81,274
- Rx (Frames)	194,029
- Rx (Harries)	79.58 M
- Rx Rate (Er) (Blus)	6,468
- Flood Count (Frames)	21
- 1 1000 Count (Frames)	21



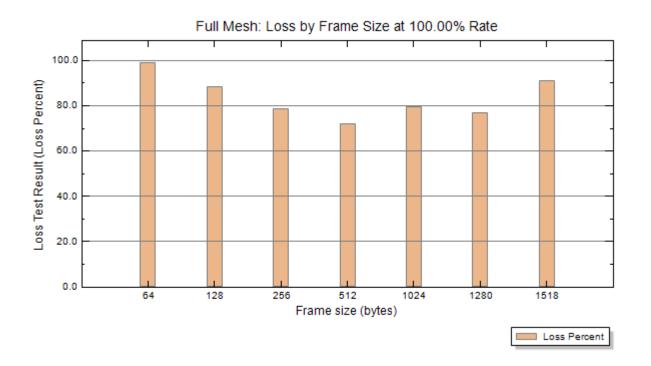



# **Congestion Control Results**

## **Test Setup**

Duration: 30 seconds Iteration: 1

Port ID	Port Role	
P-0-0-0	Source	
P-0-0-1	Source	
P-0-4-4	Destination	
P-0-4-5	Destination	

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	100 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	89,285,715	50,675,676	27,173,914	14,097,746	7,183,908	5,769,232
Uncongested Port: (P-0-4-4)						
- Tx (Frames)	22,321,429	12,668,919	6,793,479	3,524,437	1,795,977	1,442,308
- Rx (Frames)	13,529,892	3,792,798	1,918,984	3,313,398	1,346,084	1,362,413
- Loss (Frames)	8,791,537	8,876,121	4,874,495	211,039	449,893	79,895
- Loss (Percent)	39.39	70.06	71.75	5.99	25.05	5.54
Congested Port: (P-0-4-5)						
- Tx (Frames)	66,964,286	38,006,757	20,380,435	10,573,309	5,387,931	4,326,924
- Rx (Frames)	29,088,136	20,880,846	11,475,425	3,683,671	2,232,593	1,513,763
- Loss (Frames)	37,876,150	17,125,911	8,905,010	6,889,638	3,155,338	2,813,161
- Loss (Percent)	56.56	45.06	43.69	65.16	58.56	65.02

Frame Size	1518
Result State	FAIL
Iter. #	1
Tx Rate (Percent)	100 %
Tx (Frames)	4,876,464
Uncongested Port: (P-0-4-4)	
- Tx (Frames)	1,219,116
- Rx (Frames)	551,574
- Loss (Frames)	667,542
- Loss (Percent)	54.76
Congested Port: (P-0-4-5)	
- Tx (Frames)	3,657,348
- Rx (Frames)	1,880,644
- Loss (Frames)	1,776,704
- Loss (Percent)	48.58



## **Forward Pressure Results**

## **Test Setup**

Duration: 30 seconds

Iteration:

InterFrame Gap Delta: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx (Frames)	45,180,722	25,510,204	13,636,363	7,062,146	3,595,397	2,886,048
Tx Rate (Fps)	1,506,024	850,340	454,545	235,405	119,847	96,202
Tx IFG (Bytes)	20	20	20	20	20	20
Tx Max. Util. (Percent)	101.205	100.680	100.364	100.188	100.096	100.050
Rx (Frames)	42,613,551	24,671,032	13,392,872	6,996,305	3,578,293	2,875,032
Rx Rate (Fps)	1,420,448	822,365	446,426	233,208	119,274	95,858
Rx Max. Util. (Percent)	95.454	97.368	98.571	99.253	99.618	99.693
Loss (Frames)	2,567,171	839,172	243,491	65,841	17,104	11,016
Loss (Percent)	5.68	3.29	1.79	0.93	0.48	0.38

Frame Size	1518
Result State	PASS
Iter. #	1
Tx (Frames)	2,439,817
Tx Rate (Fps)	81,327
Tx IFG (Bytes)	20
Tx Max. Util. (Percent)	100.065
Rx (Frames)	2,431,956
Rx Rate (Fps)	81,063
Rx Max. Util. (Percent)	99.740
Loss (Frames)	7,861
Loss (Percent)	0.32



# **Maximum Forwarding Rate Results**

## **Test Setup**

Duration: 30 seconds Iteration: 1

P-0-0-0 Source
P-0-4-5 Destination

## **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	90.041 %	100 %	100 %	100 %	100 %	100 %
Tx (Frames)	40,196,901	25,337,837	13,586,956	7,048,872	3,591,954	2,884,615
Tx Rate (L1) (Bit/s)	900.41 M	1000 M	1000 M	1000 M	1000 M	1000 M
Tx Rate (Fps)	1,339,897	844,595	452,899	234,962	119,732	96,154
Rx (Frames)	40,050,411	24,671,036	13,392,868	6,996,303	3,578,293	2,875,818
Rx Rate (L1) (Bit/s)	897.13 M	973.68 M	985.72 M	992.54 M	996.2 M	996.95 M
Rx Rate (Fps)	1,335,014	822,368	446,429	233,210	119,276	95,861

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	80 %
Tx (Frames)	1,950,585
Tx Rate (L1) (Bit/s)	800 M
Tx Rate (Fps)	65,020
Rx (Frames)	1,950,585
Rx Rate (L1) (Bit/s)	800 M
Rx Rate (Fps)	65,020



## **Address Caching Capacity Results**

## **Test Setup**

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC

Address Initial Count: 100
Address Maximum Count: 2,048
Address Minimum Count: 100
Address Resolution: 100

Learning Rate:20 FpsToggle Port Sync State:NoSync. State Off Duration:1 seconds

Delay After Sync On: 0 seconds Switch Test Ports: Yes

DUT Aging Time: 350 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port

### **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	FAIL	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Duration (Seconds)	55	22	9	9	9	9
Address Count	1,074	404	160	160	160	160
TestPort Tx (Frames)	1,074	404	160	160	160	160
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	1,073	404	160	160	160	160
MonPort Rx (Frames)	0	0	0	0	0	0

Frame Size	1518
Result State	PASS
Iter. #	1
Duration (Seconds)	9
Address Count	160
TestPort Tx (Frames)	160
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	160
MonPort Rx (Frames)	0



## **Address Learning Rate Results**

## **Test Setup**

Iteration: 1

Test Port Address Mode: Use Port Native MAC Learn Port DMAC Mode: Use Test Port MAC

Learn Port Base Address: 02:F4:BC
Only Use Max. Capacity: No
Set End = Max. Capacity: Yes

 Base Learning Rate:
 100 Fps

 Initial Rate:
 20.00%

 Maximum Rate:
 100.00%

 Minimum Rate:
 20.00%

 Resolution:
 20.00%

Toggle Port Sync State: No

Sync. State Off Duration: 1 seconds
Delay After Sync On: 0 seconds
Switch Test Ports: Yes

DUT Aging Time: 330 seconds

Port ID	Port Role
P-0-0-0	Test Port
P-0-4-4	Learning Port
P-0-4-5	Monitoring Port


### **Test Results**

#### **Results for 100 Addresses**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Learning Rate (Percent)	80 %	80 %	80 %	80 %	80 %	80 %
Learning Rate (Fps)	80	80	80	80	80	80
Duration (Seconds)	3	3	3	3	3	3
Address Count	100	100	100	100	100	100
TestPort Tx (Frames)	100	100	100	100	100	100
TestPort Rx (Frames)	0	0	0	0	0	0
LearnPort Rx (Frames)	100	100	100	100	100	100
MonPort Rx (Frames)	0	0	0	0	0	0

1518
PASS
1
80 %
80
3
100
100
0
100
0




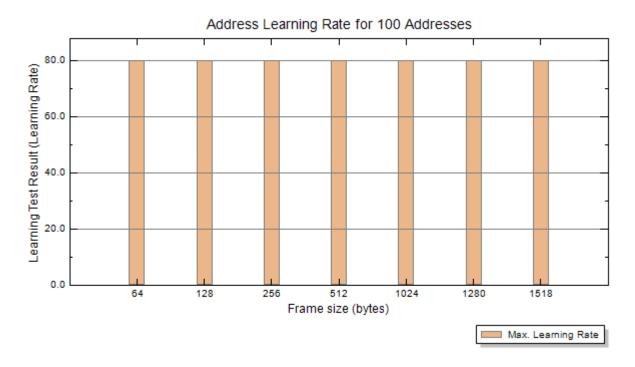

#### **Results for 612 Addresses**

Frame Size	64
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	32
Address Count	612
TestPort Tx (Frames)	612
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	606
MonPort Rx (Frames)	12




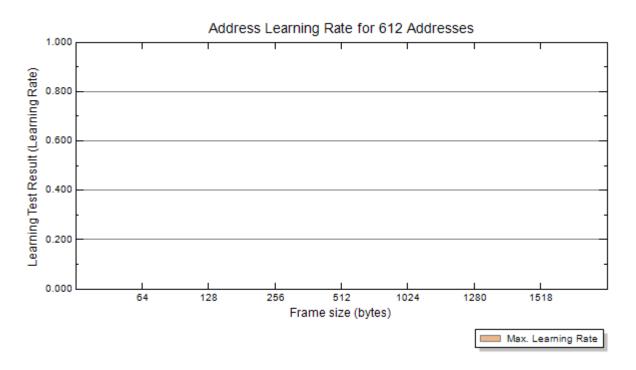

## Results for 1,124 Addresses

Frame Size	64
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	58
Address Count	1,124
TestPort Tx (Frames)	1,124
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1,085
MonPort Rx (Frames)	44




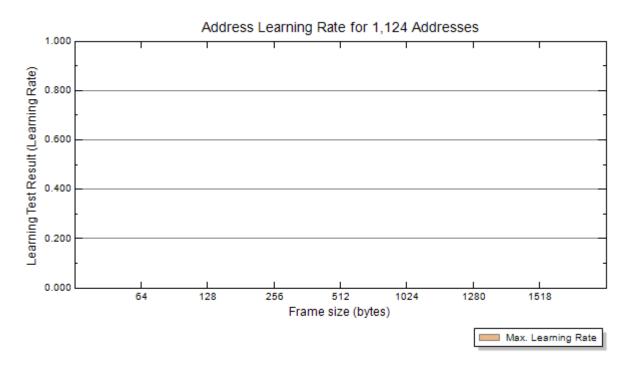

## Results for 1,636 Addresses

Frame Size	64
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	83
Address Count	1,636
TestPort Tx (Frames)	1,636
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	1,597
MonPort Rx (Frames)	3




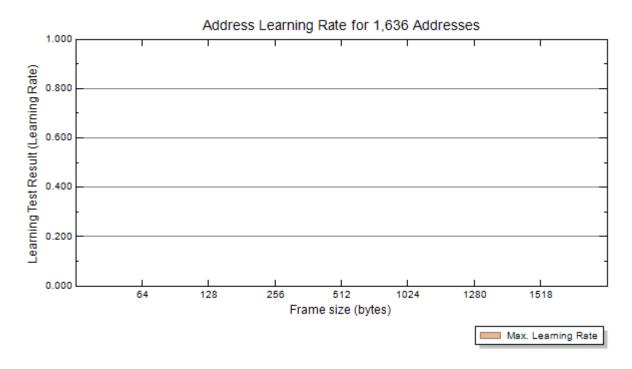

## Results for 2,048 Addresses

Frame Size	64
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	104
Address Count	2,048
TestPort Tx (Frames)	2,048
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	2,047
MonPort Rx (Frames)	68




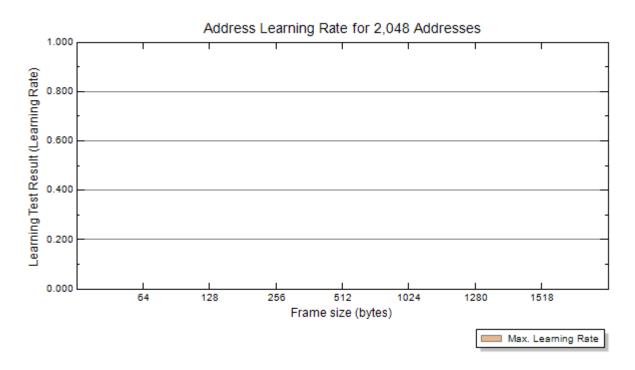

#### **Results for 404 Addresses**

Frame Size	128
Result State	FAIL
Iter. #	1
Learning Rate (Percent)	20 %
Learning Rate (Fps)	20
Duration (Seconds)	22
Address Count	404
TestPort Tx (Frames)	404
TestPort Rx (Frames)	0
LearnPort Rx (Frames)	403
MonPort Rx (Frames)	0




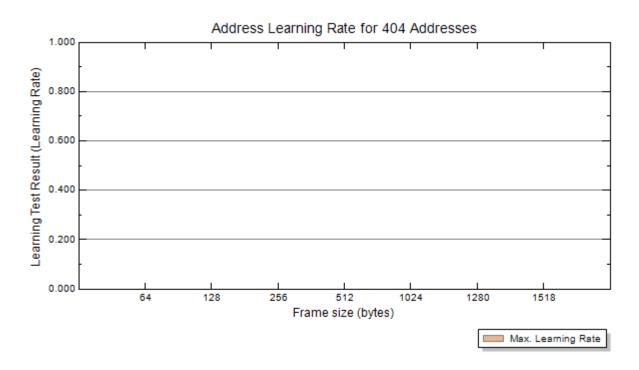

#### **Results for 160 Addresses**

Frame Size	256	512	1024	1280	1518
Result State	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1
Learning Rate (Percent)	80 %	80 %	80 %	80 %	80 %
Learning Rate (Fps)	80	80	80	80	80
Duration (Seconds)	3	3	3	3	3
Address Count	160	160	160	160	160
TestPort Tx (Frames)	160	160	160	160	160
TestPort Rx (Frames)	0	0	0	0	0
LearnPort Rx (Frames)	160	160	160	160	160
MonPort Rx (Frames)	0	0	0	0	0



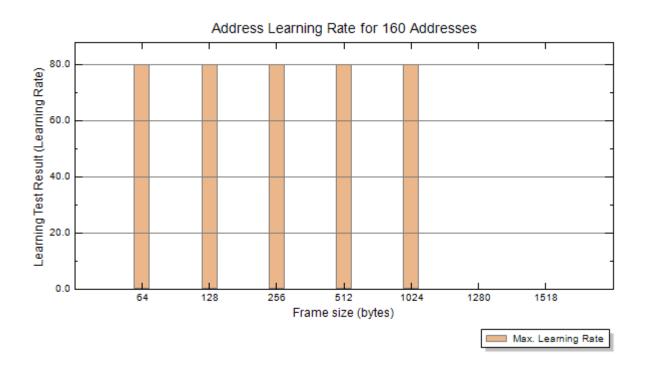



# **Errored Frames Filtering Results**

## **Test Setup**

Duration: 30 seconds

Iteration: 1

Oversize Test Enabled: Yes
Max. Valid Frame Size: 1518 bytes
Min. Valid Frame Size: 64 bytes
Oversize Frame Span: 1 bytes
Undersize Frame Span: 1 bytes

Port ID	Port Role	
P-0-0-0	Source	
P-0-4-5	Destination	

### **Test Results**

Tx Rate (Percent)	10 %	20 %	30 %	40 %	50 %	60 %
Result State	FAIL	FAIL	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1	1	1
Tx Rate (L1) (Bit/s)	100 M	200 M	300 M	399.96 M	500 M	600 M
Tx (Frames)	1,741,343	3,482,752	5,224,128	6,965,419	8,706,880	10,448,257
Rx (Frames)	1,740,465	3,480,930	5,221,495	6,961,801	8,702,374	10,442,887
Tx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Rx Valid (Frames)	154,130	308,261	462,392	616,522	770,653	924,784
Tx Oversize (Frames)	81,214	162,443	243,664	324,801	406,107	487,329
Rx Oversize (Frames)	81,214	162,443	243,664	324,801	406,107	487,329
Tx Undersize (Frames)	1,505,999	3,012,048	4,518,072	6,024,096	7,530,120	9,036,144
Rx Undersize (Frames)	1,505,121	3,010,226	4,515,439	6,020,478	7,525,614	9,030,774
Tx FCS Error (Frames)	58	58	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0	0	0

Tx Rate (Percent)	70 %	80 %	90 %	100 %
Result State	FAIL	FAIL	FAIL	FAIL
Iter. #	1	1	1	1
Tx Rate (L1) (Bit/s)	700 M	800 M	900 M	1000 M
Tx (Frames)	12,189,633	13,931,009	15,672,386	17,413,762
Rx (Frames)	12,183,437	13,923,924	15,663,306	13,732,361
Tx Valid (Frames)	1,078,914	1,233,045	1,387,176	1,541,307
Rx Valid (Frames)	1,078,914	1,233,045	1,387,176	1,477,951
Tx Oversize (Frames)	568,551	649,772	730,994	812,215
Rx Oversize (Frames)	568,551	649,772	730,994	632,652
Tx Undersize (Frames)	10,542,168	12,048,192	13,554,216	15,060,240
Rx Undersize (Frames)	10,535,972	12,041,107	13,545,136	11,621,758
Tx FCS Error (Frames)	58	58	58	58
Rx FCS Error (Frames)	0	0	0	0



# **Broadcast Forwarding Results**

## **Test Setup**

Duration: 30 seconds

Iteration: 1

Initial Rate: 10.00%
Maximum Rate: 100.00%
Minimum Rate: 10.00%
Resolution: 10.00%

Port ID	Port Role
P-0-0-0	Source
P-0-0-1	Destination
P-0-0-2	Destination
P-0-0-3	Destination
P-0-0-4	Destination
P-0-0-5	Destination
P-0-2-0	Destination
P-0-2-1	Destination
P-0-2-2	Destination
P-0-2-3	Destination
P-0-2-4	Destination
P-0-2-5	Destination
P-0-4-0	Destination
P-0-4-1	Destination
P-0-4-2	Destination
P-0-4-3	Destination
P-0-4-4	Destination
P-0-4-5	Destination

### **Test Results**

Frame Size	64	128	256	512	1024	1280
Result State	PASS	PASS	PASS	PASS	PASS	PASS
Iter. #	1	1	1	1	1	1
Tx Rate (Percent)	66.294 %	77.852 %	83.125 %	91.563 %	94.375 %	94.375 %
Tx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
Tx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
Tx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
Loss Rate (Percent)	0 %	0 %	0 %	0 %	0 %	0 %
Loss (Frames)	0	0	0	0	0	0
P-0-0-1						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	2.364	2.815	2.806	2.984	2.860	2.847
- Min Latency (micsec)	2.262	2.727	2.695	2.703	2.719	2.703
- Max Latency (micsec)	5.967	6.143	4.884	8.236	4.932	4.820
- Avg Jitter (micsec)	0.003	0.002	0.006	0.003	0.002	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.453	2.333	2.116	2.068	2.092	1.972
P-0-0-2						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	2.392	2.819	2.819	3.696	2.852	2.857
- Min Latency (micsec)	2.286	2.727	2.719	2.727	2.719	2.727
- Max Latency (micsec)	5.918	7.009	4.932	8.380	5.053	4.892
- Avg Jitter (micsec)	0.003	0.002	0.008	0.003	0.002	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.237	2.116	2.237	2.188	1.972
P-0-0-3						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	2.362	2.801	2.812	5.074	2.822	2.850



- Min Latency (micsec)	2.262	2.727	2.719	2.703	2.719	2.703
- Max Latency (micsec)	5.991	7.225	4.884	11.772	4.956	4.964
Avg Jitter (micsec)	0.003	0.002	0.006	0.002	0.003	0.002
Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
Max Jitter (micsec)	2.645	2.237	2.020	2.164	2.092	2.068
P-0-0-4						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	2.388	2.829	2.803	6.586	2.831	2.834
- Min Latency (micsec)	2.238	2.703	2.695	2.703	2.719	2.703
- Max Latency (micsec)						4.844
	6.183	6.215	4.860	17.448	4.884	
- Avg Jitter (micsec)	0.003	0.002	0.007	0.002	0.002	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.140	2.020	2.092	2.116	1.948
P-0-0-5						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	2.348	2.865	2.825	17.691	2.837	2.837
	2.238	2.703	2.695	2.703	2.719	2.727
- Min Latency (micsec) - Max Latency (micsec)		6.287				4.724
2 ( )	6.039		5.004	36.692	5.149	
- Avg Jitter (micsec)	0.003	0.002	0.006	0.002	0.002	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.766	2.116	2.212	2.164	2.333	1.876
P-0-2-0						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	3.978	4.910	4.885	5.115	4.925	4.912
						4.780
- Min Latency (micsec)	3.834	4.756	4.748	4.756	4.772	
- Max Latency (micsec)	8.717	8.316	6.889	11.780	7.105	6.993
- Avg Jitter (micsec)	0.011	0.010	0.009	0.007	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	1.996	2.092	2.092	2.044
P-0-2-1						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	3.964	4.910	4.858	5.081	4.888	4.879
- Min Latency (micsec)	3.810	4.756	4.748	4.756	4.772	4.756
- Max Latency (micsec)	9.366	8.316	6.889	11.708	6.985	6.873
, , , , , , , , , , , , , , , , , , ,						
- Avg Jitter (micsec)	0.003	0.012	0.005	0.002	0.002	0.002
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.140	1.996	2.212	2.092	2.044
P-0-2-2						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	3.984	4.928	4.885	5.110	4.915	4.910
- Min Latency (micsec)	3.810	4.732	4.724	4.708	4.748	4.732
- Max Latency (micsec)	8.765	9.013	6.961	11.756	6.961	6.921
- Avg Jitter (micsec)	0.014	0.010	0.012	0.007	0.003	0.002
		0.000			() ()()()	
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	
- Min Jitter (micsec) - Max Jitter (micsec)	0.000 2.621	0.000 2.116	0.000 2.116	2.309	2.092	
- Max Jitter (micsec) P-0-2-3						2.044
- Max Jitter (micsec) P-0-2-3 - Rx (Frames)	29,590,367	2.116 19,722,414	2.116	2.309 6,453,198	2.092	2.044 2,722,355
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s)	2.621 29,590,367 662.82 M	2.116 19,722,414 778.38 M	2.116 11,293,274 831.18 M	2.309 6,453,198 915.49 M	2.092 3,389,906 943.75 M	2.044 2,722,355 943.75 M
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps)	2,621 29,590,367 662.82 M 986,346	2.116 19,722,414 778.38 M 657,414	2.116 11,293,274 831.18 M 376,442	2.309 6,453,198 915.49 M 215,107	2.092 3,389,906 943.75 M 112,997	2.044 2,722,355 943.75 M 90,745
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec)	29,590,367 662.82 M 986,346 3.969	2.116 19,722,414 778.38 M 657,414 4.922	2.116 11,293,274 831.18 M 376,442 4.860	2.309 6,453,198 915.49 M 215,107 5.098	2.092 3,389,906 943.75 M 112,997 4.912	2.044 2,722,355 943.75 M 90,745 4.904
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec)	29,590,367 662.82 M 986,346 3.969 3.786	2.116 19,722,414 778.38 M 657,414 4.922 4.708	2.116 11,293,274 831.18 M 376,442 4.860 4.700	2.309 6,453,198 915.49 M 215,107 5.098 4.708	2.092 3,389,906 943.75 M 112,997 4.912 4.724	2,722,355 943.75 M 90,745 4.904 4.732
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec)	29,590,367 662.82 M 986,346 3.969 3.786 8.765	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057	2,722,355 943.75 M 90,745 4.904 4.732 6.945
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec)	29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003	2,722,355 943.75 M 90,745 4,904 4,732 6,945 0.002
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec) - Min Jitter (micsec)	29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022 0.000	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000	2,722,355 943.75 M 90,745 4.904 4.732 6.945 0.002 0.000
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Avg Jitter (micsec) - Min Jitter (micsec) - Max Jitter (micsec)	29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003	2,722,355 943.75 M 90,745 4.904 4.732 6.945 0.002 0.000
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec) - Max Jitter (micsec) - Max Jitter (micsec) - Max Jitter (micsec) P-0-2-4	29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022 0.000	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000	2,722,355 943.75 M 90,745 4,904 4,732 6,945 0,002 0,000
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Min Jitter (micsec) - Max Jitter (micsec) P-0-2-4	29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022 0.000	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000	2,044 2,722,355 943.75 M 90,745 4,904 4,732 6,945 0,002 0,000 2,044
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec) - Min Jitter (micsec) - Max Jitter (micsec) P-0-2-4 - Rx (Frames)	2,621 29,590,367 662.82 M 986,346 3,969 3,786 8,765 0,022 0,000 2,621 29,590,367	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000 2.140 19,722,414	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000 2.116	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000 2.212 6,453,198	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000 2.092 3,389,906	0.000 2.044 2,722,355 943.75 M 90,745 4.904 4.732 6.945 0.002 0.000 2.044 2,722,355 943.75 M
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec) - Min Jitter (micsec) - Max Jitter (micsec) - Max Jitter (micsec) - Rx (Frames) - Rx Rate (L1) (Bit/s)	2.621 29,590,367 662.82 M 986,346 3.969 3.786 8.765 0.022 0.000 2.621 29,590,367 662.82 M	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000 2.140 19,722,414 778.38 M	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000 2.116 11,293,274 831.18 M	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000 2.212 6,453,198 915.49 M	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000 2.092 3,389,906 943.75 M	2.044 2,722,355 943.75 M 90,745 4.904 4.732 6.945 0.002 0.000 2.044 2,722,355 943.75 M
- Max Jitter (micsec) P-0-2-3 - Rx (Frames) - Rx Rate (L1) (Bit/s) - Rx Rate (Fps) - Avg Latency (micsec) - Min Latency (micsec) - Max Latency (micsec) - Avg Jitter (micsec) - Min Jitter (micsec) - Max Jitter (micsec) P-0-2-4 - Rx (Frames)	2,621 29,590,367 662.82 M 986,346 3,969 3,786 8,765 0,022 0,000 2,621 29,590,367	2.116 19,722,414 778.38 M 657,414 4.922 4.708 8.292 0.012 0.000 2.140 19,722,414	2.116 11,293,274 831.18 M 376,442 4.860 4.700 6.961 0.011 0.000 2.116	2.309 6,453,198 915.49 M 215,107 5.098 4.708 11.732 0.007 0.000 2.212 6,453,198	2.092 3,389,906 943.75 M 112,997 4.912 4.724 7.057 0.003 0.000 2.092 3,389,906	2.044 2,722,355 943.75 M 90,745 4.904 4.732 6.945 0.002 0.000 2.044 2,722,355



- Max Latency (micsec)	10.978	10.986	9.655	14.426	9.727	9.615
- Avg Jitter (micsec)	0.017	0.012	0.011	0.005	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	2.116	2.212	2.116	2.044
P-0-2-5						
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	6.198	7.597	7.548	7.780	7.594	7.587
- Min Latency (micsec)	5.999	7.402	7.370	7.378	7.418	7.402
- Max Latency (micsec)	10.978	10.986	9.655	14.426	9.727	9.615
- Avg Jitter (micsec)	0.022	0.002	0.011	0.005	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	2.116	2.212	2.116	2.044
P-0-4-0	20 500 207	40 700 444	44 000 074	0.450.400	2 200 000	0.700.055
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	6.248	7.649	7.645	7.882	7.696	7.687
- Min Latency (micsec)	6.071	7.498	7.490	7.498	7.514	7.522
- Max Latency (micsec)	10.978	11.058	9.751	14.522	9.847	9.735
- Avg Jitter (micsec)	0.016	0.010	0.011	0.007	0.002	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	2.092	2.212	2.116	2.044
P-0-4-1	00 500 007	40.700.444	44 000 074	0.450.400	0.000.000	0.700.055
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	6.230	7.635	7.621	7.857	7.672	7.664
- Min Latency (micsec)	6.071	7.474	7.466	7.474	7.490	7.498
- Max Latency (micsec)	10.978	11.058	9.727	14.498	9.823	9.687
- Avg Jitter (micsec)	0.017	0.010	0.011	0.007	0.002	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	2.116	2.212	2.116	2.044
P-0-4-2	20 500 267	10 700 414	11 202 274	6 452 100	2 200 006	2 722 255
- Rx (Frames) - Rx Rate (L1) (Bit/s)	29,590,367 662.82 M	19,722,414 778.38 M	11,293,274 831.18 M	6,453,198 915.49 M	3,389,906 943.75 M	2,722,355 943.75 M
- Rx Rate (ET) (Bil/s)	986,346	657,414	376,442	215,107	112,997	943.75 M
- Avg Latency (micsec)	8.433	10.394	10.422	10.659	10.474	10.467
- Min Latency (micsec)	8.188	10.096	10.064	10.072	10.136	10.407
- Max Latency (micsec)	13.263	13.872	12.517	17.288	12.614	12.501
- Avg Jitter (micsec)	0.019	0.028	0.011	0.007	0.002	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.002	0.000
- Max Jitter (micsec)	2.645	2.237	2.116	2.212	2.116	2.044
P-0-4-3	2.043	2.201	2.110	2.212	2.110	2.044
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	8.447	10.371	10.406	10.646	10.458	10.445
- Min Latency (micsec)	8.236	10.096	10.088	10.096	10.136	10.144
- Max Latency (micsec)	13.287	13.800	12.445	17.312	12.638	12.501
- Avg Jitter (micsec)	0.019	0.018	0.012	0.007	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.621	2.140	2.044	2.116	2.116	2.044
P-0-4-4		20		20	20	
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	8.465	10.379	10.390	10.627	10.442	10.434
- Min Latency (micsec)	8.236	10.144	10.136	10.144	10.184	10.168
- Max Latency (micsec)	13.335	13.824	12.493	17.264	12.590	12.453
- Avg Jitter (micsec)	0.041	0.020	0.011	0.007	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.140	2.116	2.212	2.116	2.044
P-0-4-5	2.0.0	2			2	
- Rx (Frames)	29,590,367	19,722,414	11,293,274	6,453,198	3,389,906	2,722,355
- Rx Rate (L1) (Bit/s)	662.82 M	778.38 M	831.18 M	915.49 M	943.75 M	943.75 M
- Rx Rate (Fps)	986,346	657,414	376,442	215,107	112,997	90,745
- Avg Latency (micsec)	8.433	10.414	10.422	10.659	10.474	10.466
9 , ,						
- Min Latency (micsec)	8.260	10.168	10.160	10.168	10.208	10.192



- Avg Jitter (micsec)	0.022	0.020	0.009	0.007	0.003	0.003
- Min Jitter (micsec)	0.000	0.000	0.000	0.000	0.000	0.000
- Max Jitter (micsec)	2.645	2.140	2.116	2.212	2.116	2.044

Frame Size	1518
Result State	PASS
Iter. #	1
Tx Rate (Percent)	94.375 %
Tx (Frames)	2,300,642
Tx Rate (L1) (Bit/s)	943.57 M
Tx Rate (Fps)	76,688
Loss Rate (Percent)	0 %
Loss (Frames)	0
P-0-0-1	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	2.845
- Min Latency (micsec)	2.735
- Max Latency (micsec)	4.732
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.876
P-0-0-2	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	2.844
- Min Latency (micsec)	2.735
- Max Latency (micsec)	4.756
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-0-3	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	2.836
- Min Latency (micsec)	2.711
- Max Latency (micsec)	4.708
- Avg Jitter (micsec)	0.001
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.852
P-0-0-4	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	2.852
- Min Latency (micsec)	2.711
- Max Latency (micsec)	4.924
- Avg Jitter (micsec)	0.001
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	2.068
P-0-0-5	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	2.848
- Min Latency (micsec)	2.711
- Max Latency (micsec)	4.684
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.852
	1.002
P-0-2-0	0.200.040
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	4.932
- Min Latency (micsec)	4.788
- Max Latency (micsec)	6.808



A 196 / 1	0.000
- Avg Jitter (micsec) - Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.900
P-0-2-1	1.500
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	4.893
- Min Latency (micsec)	4.764
- Max Latency (micsec)	6.808
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.876
P-0-2-2	2 200 642
- Rx (Frames) - Rx Rate (L1) (Bit/s)	2,300,642 943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	4.918
- Min Latency (micsec)	4.740
- Max Latency (micsec)	6.881
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.900
P-0-2-3	1.000
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	4.913
- Min Latency (micsec)	4.740
- Max Latency (micsec)	6.760
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-2-4	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	7.592
- Min Latency (micsec)	7.410
- Max Latency (micsec)	9.454
- Avg Jitter (micsec) - Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.900
P-0-2-5	1.900
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	7.596
- Min Latency (micsec)	7.410
- Max Latency (micsec)	9.454
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-0	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	7.698
- Min Latency (micsec)	7.530
- Max Latency (micsec)	9.551
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-1	0.000.01-
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	7.673
- Min Latency (micsec) - Max Latency (micsec)	7.482 9.527
	0.002
- Avg Jitter (micsec)	



- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-2	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	10.476
- Min Latency (micsec)	10.224
<ul> <li>Max Latency (micsec)</li> </ul>	12.317
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-3	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	10.464
- Min Latency (micsec)	10.152
- Max Latency (micsec)	12.341
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-4	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76,688
- Avg Latency (micsec)	10.443
- Min Latency (micsec)	10.200
- Max Latency (micsec)	12.293
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.000
- Max Jitter (micsec)	1.900
P-0-4-5	
- Rx (Frames)	2,300,642
- Rx Rate (L1) (Bit/s)	943.57 M
- Rx Rate (Fps)	76.688
- Avg Latency (micsec)	10.475
- Min Latency (micsec)	10.224
- Max Latency (micsec)	12.317
- Avg Jitter (micsec)	0.002
- Min Jitter (micsec)	0.002
- Max Jitter (micsec)	1.900
- Max Jillei (IIIICSEC)	1.800



